
WEBSTORE REGISTRATION PROCESS

1. Go to: store.c-map.com

2. Existing users, enter E-MAIL and PASSWORD then LOG ON (A).

First time users, select **REGISTER** (B) to create a new account.

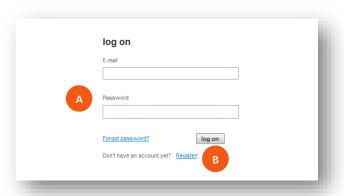

NEW REGISTRATION

- 1. Enter account details including: country, e-mail and password, then **Register.**
- **2.** The message "Your account has been successfully created. An e-mail has been sent to verify your identity and to provide you a link that will let you start." will be shown.
- **3.** To complete activation open the e-mail received from *C-MAP Web Store* and click on activation link.











ADDING C-MAP ESSENTIALS SD CARD TO WEBSTORE

- 1. Insert *C-MAP ESSENTIALS* card into an SD card reader.
- 2. Go to YOUR MAPS (A).
- 3. Click on **ADD SD CONTENT (B)**. Upon first use you will be prompted to **DOWNLOAD MAPS MANAGER**.
 - Select DOWNLOAD MAPS MANAGER (C) then RUN > INSTALL and FINISH.

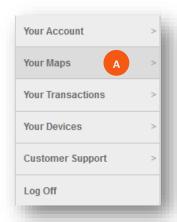

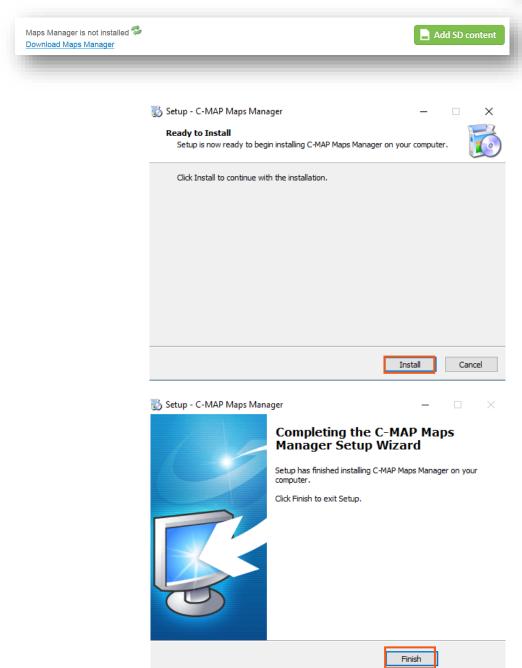










4. Once Maps Manager has been installed, click on **ADD SD CONTENT.** The following box will appear informing you that your C-MAP ESSENTIALS card has been registered, choose **CLOSE**.

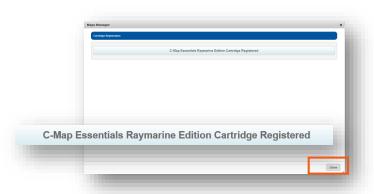

- 5. Return to YOUR MAPS then choose from the following:
 - I. **UNLOCK** ESSENTIALS MAPS (option not available for US and APAC Essentials card)
 - II. CONVERT TO A FREE C-MAP 4D LOCAL
 - III. **UPGRADE** TO A C-MAP 4D WIDE (40% DISCOUNT OFF RETAIL)













UNLOCK C-MAP ESSENTIALS COVERAGE AREA

This step is only necessary for the C-MAP Essentials cards covering EUROPE and THE REST OF THE WORLD.

1. Choose the chart to unlock then click on **UNLOCK SELECTED MAP (A).** Maps not selected will be removed from the SD card, to continue click **PROCEED (B)** or cancel to choose a different area.

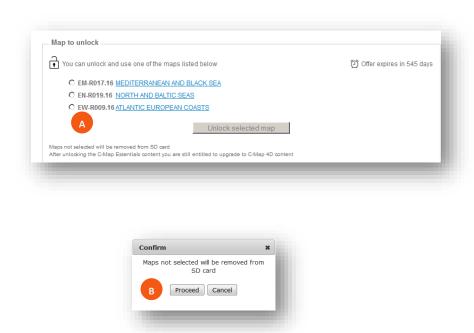

2. Maps Manager will launch showing the select chart **ON THE CLOUD** – click on **WRITE TO SD** (C). This will move the data **ON THE DEVICE** (D) and begin the unlocking procedure.

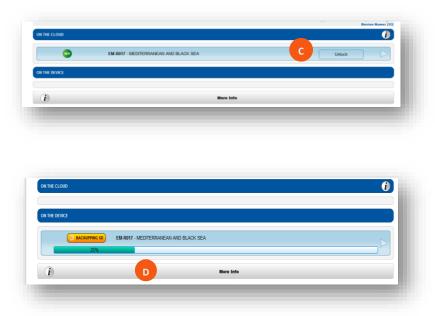









3. Once complete the card will show SD READY FOR CHART PLOTTER (E). You can now remove the SD card and begin your boating adventure.



C-MAP Essentials – Europe

Essentials coverage is locked.

Unlock C-MAP Essentials for FREE, choose from the following regions:

- Mediterranean and Black Sea (EM-R017.16)
- North and Baltic Seas (EN-R019.16)
- Atlantic European Coasts (EW-R009.16)

OR choose to:

- ✓ Convert to 4D LOCAL for FREE.
- ✓ Upgrade to 4D WIDE for 40% off retail price.

C-MAP Essentials - Rest of the World

Essentials coverage is locked.

Unlock C-MAP Essentials for FREE, choose from the following regions:

- Red Sea, Arab Gulf and Africa (AF-R010.16)
- Gulf of Thailand to Yellow Sea (AS-R010.16)
- South America (SA-R010.16)

OR choose to:

- ✓ Convert to 4D LOCAL for FREE.
- ✓ Upgrade to 4D WIDE for 40% off retail price.

C-MAP Essentials – US Lakes and Coast

Essentials coverage is unlocked, choose from:

- ✓ Convert to 4D LOCAL for FREE.
- ✓ Upgrade to 4D WIDE for 40% off retail price.

C-MAP Essentials - Australia and New Zealand

Essentials coverage is unlocked, choose from:

- ✓ Convert to 4D LOCAL for FREE.
- ✓ Upgrade to 4D WIDE for 40% off retail price.



Contact us

Country	Phone	E-Mail
Italy, Spain, Portugal, France, Croatia, Turkey, Holland, Belgium, Greece, UK & Ireland, Germany, Austria, Switzerland, Sweden, Finland, Africa & Middle East and other European countries not listed below.	+39 0585 794 800	EU-customersupport@c-map.com
Norway, Denmark, Iceland, Greenland	+47 51 46 47 99	
Poland	+48 58 765 40 90	
Asia and Australia	+ 61 2 9420 3800	apac-customersupport@c-map.com
The Americas and Caribbean	Toll free: +1 800.424.2627	US-customersupport@c-map.com







