 
 


DOUBLE & KING

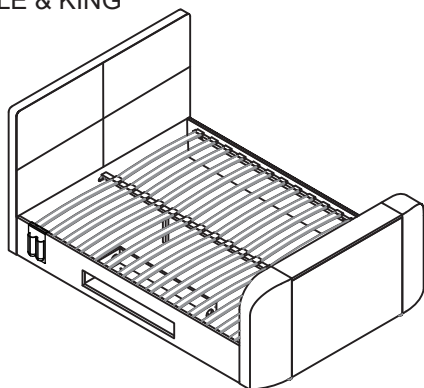

SUPER KING

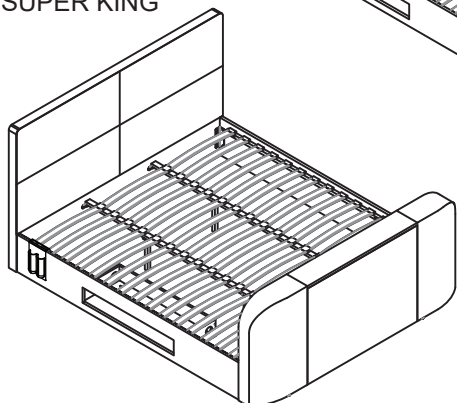

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list.

 
Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

Please ensure that the packaging is disposed of in a safe environmentally friendly way.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children during assembly, to avoid the danger of choking.

IMPORTANT: BEFORE STARTING TO ASSEMBLE THE BED - PLEASE READ THESE INSTRUCTIONS CAREFULLY.

 

 

 


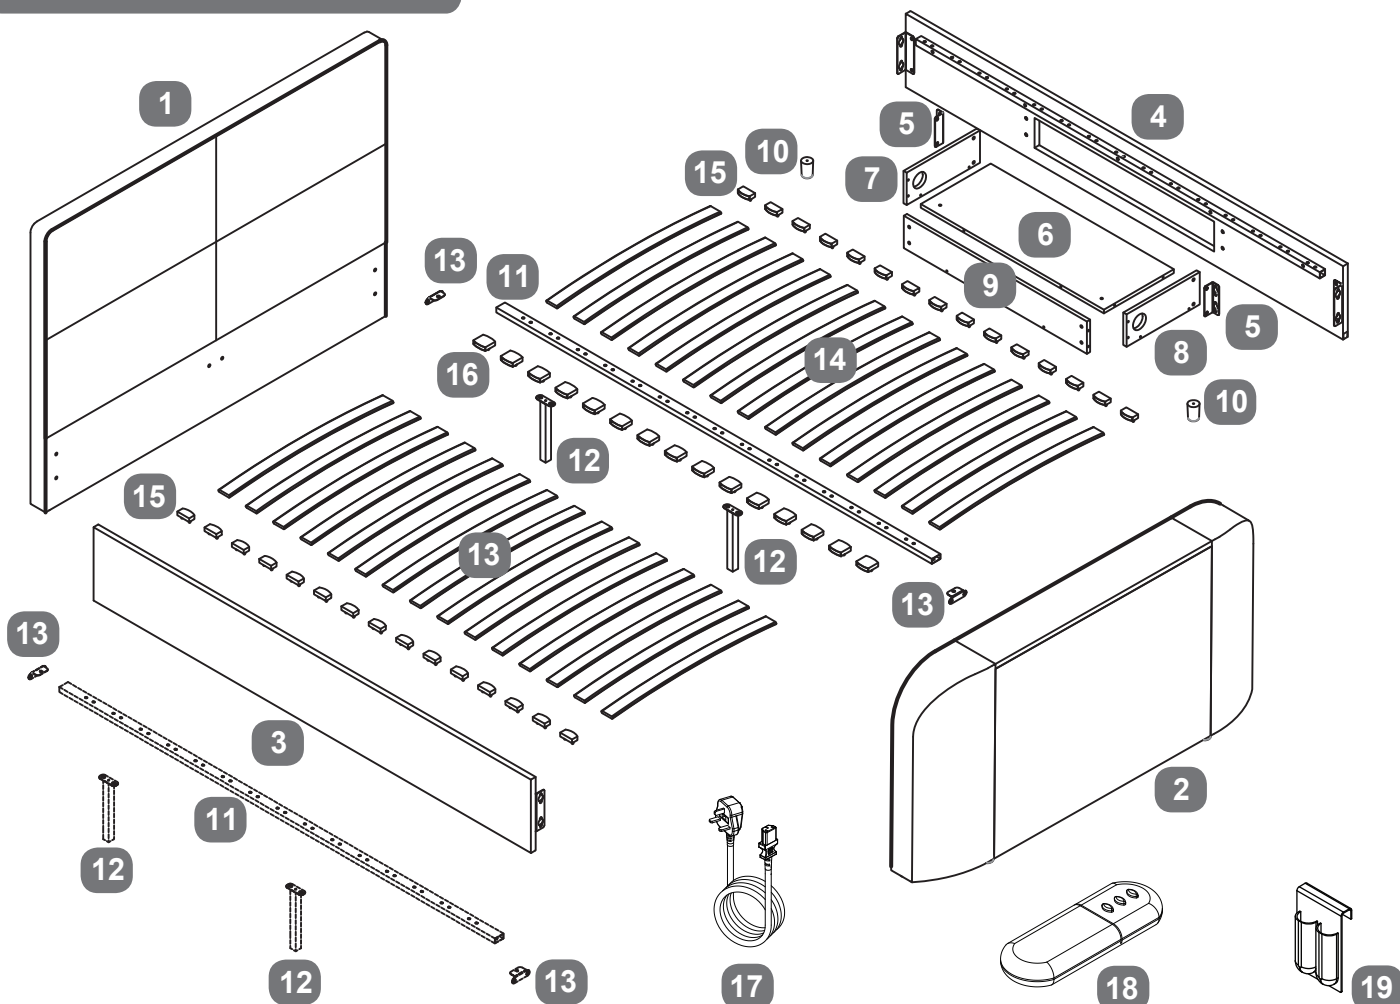
### Parts Identification







## Parts Checklist

Ref.	Description	Qty	Ref.	Description	Qty
1	Headboard	1	11	Centre Support Rail	Double&King/Super King 1/2
2	Footboard	1	12	Centre Support Rail Legs	Double&King/Super King 2/4
3	Side Rail - with Media Tray	1	13	Metal 'L' Bracket	Double&King/Super King 2/4
4	Side Rail - Plain, no tray	1	14	Bentwood Slats	Double/King/Super King 28/30/45
5	'L' Bracket for Media Tray	2	15	Single Plastic Caps	Double/King&Super King 28/30
6	Media Tray Base Panel	1	16	Double Plastic Caps	Double/King/Super King 14/15/30
7	Media Tray Side Panel - RH	1	17	Mains Power Lead - 3 mt	1
8	Media Tray Side Panel - LH	1	18	TV Lift Remote Control	1
9	Media Tray Back Panel	1	19	Holster for Remote Control	1
10	Media Tray Support Legs	2			

 
## Fittings Checklist

Ref.	Description	Qty	Ref.	Description	Qty
A	Bolt (Large head) (M8x25mm) 	Double & King x12 Super King x16	E	Screw (M5x50mm) 	x10
B	Bolt (Large head) (M8x16mm) 	Double & King x14 Super King x20	F	Plastic Barrel Nuts 	x10
C	Bolt (M6x30mm) 	x2	G	Cable Clips 	x3
D	Allen Key 	x1	H	Cable Ties 	x3


### TV INSTALLATION KIT - Inside main hardware pack

    a	Counter-Sunk Screws (M4x12mm) 	x2	b	Allen Key (2.5mm) 	x1
	Counter-Sunk Screws (M6x12mm) 	x2			
	Bolt Sets (M8x25mm) 	x2			

## Additional Tools Required

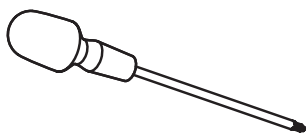 

Cross-head Screwdriver

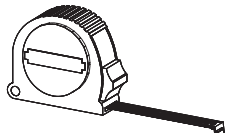 

Tape Measure



Please retain your assembly instruction and tools provided for future use. Periodically check that all bolts are still tight.

## Care & Maintenance

 
 
In the unlikely event of missing or damaged parts, please contact your retailer. Please have this guide at hand quoting the part code reference numbers shown when requesting spare or replacement parts.






Approximate time to assemble this product

1 1/2 Hrs


Stage  
1

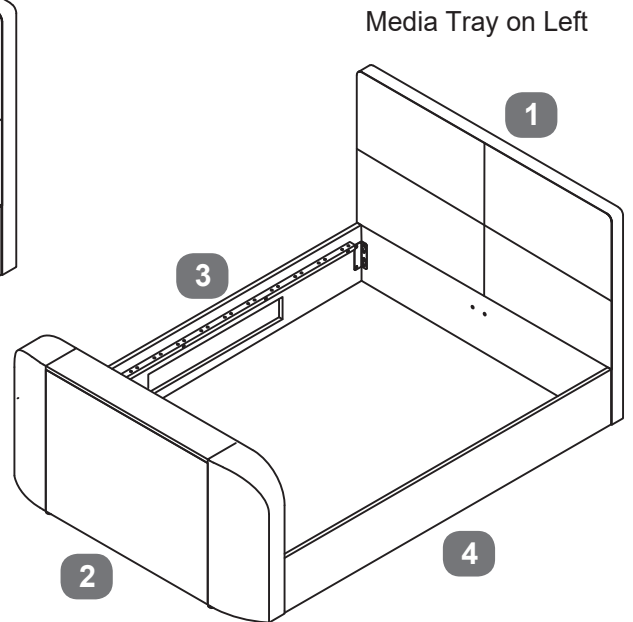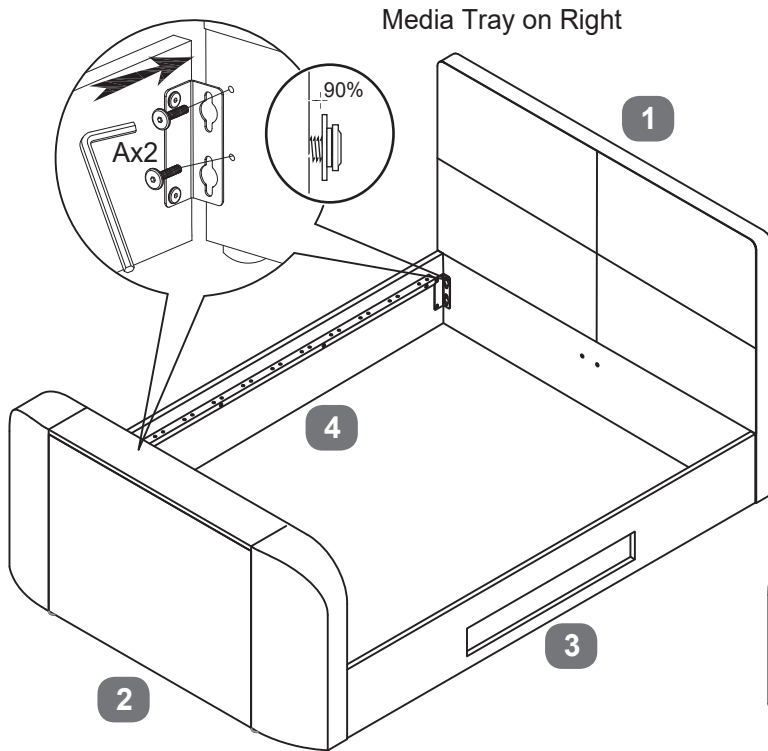

Stage  
2

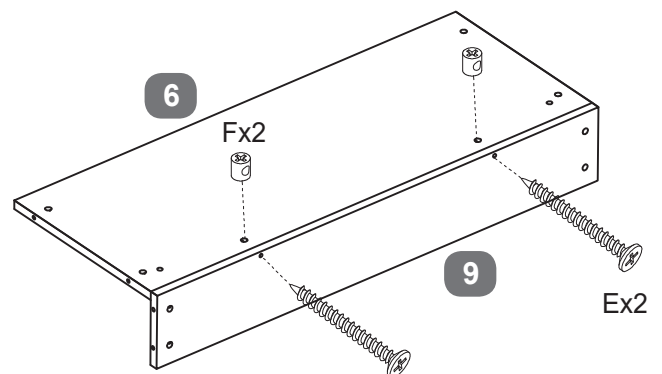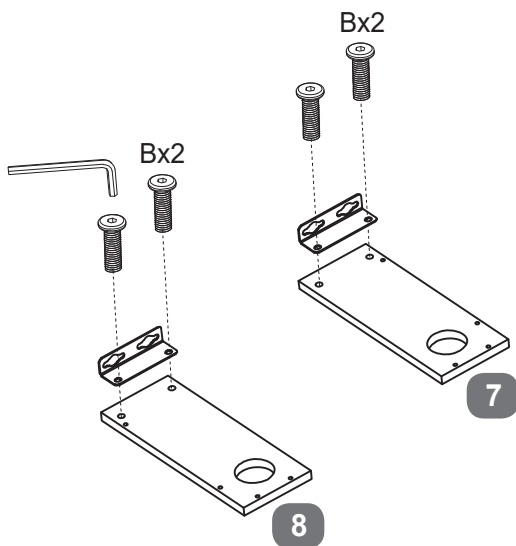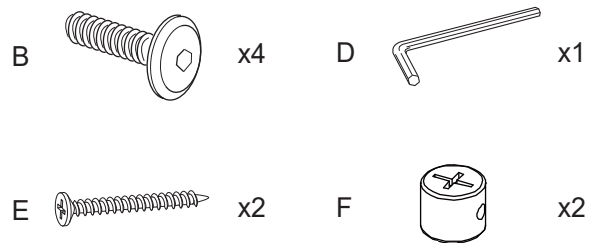   

 **IMPORTANT:**  
MAKE SURE WHEN FITTING  
THE BARREL NUTS THAT  
THE HOLE IS IN CORRECT  
ALIGNMENT WITH THE  
HOLE IN THE PANEL EDGE.

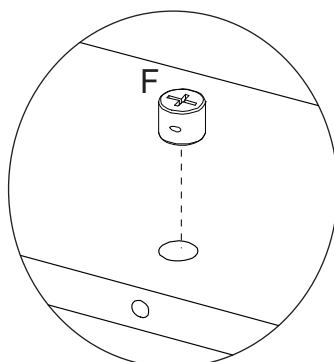


Stage  
3

C  x2 D  x1


E  x8

 F  x8

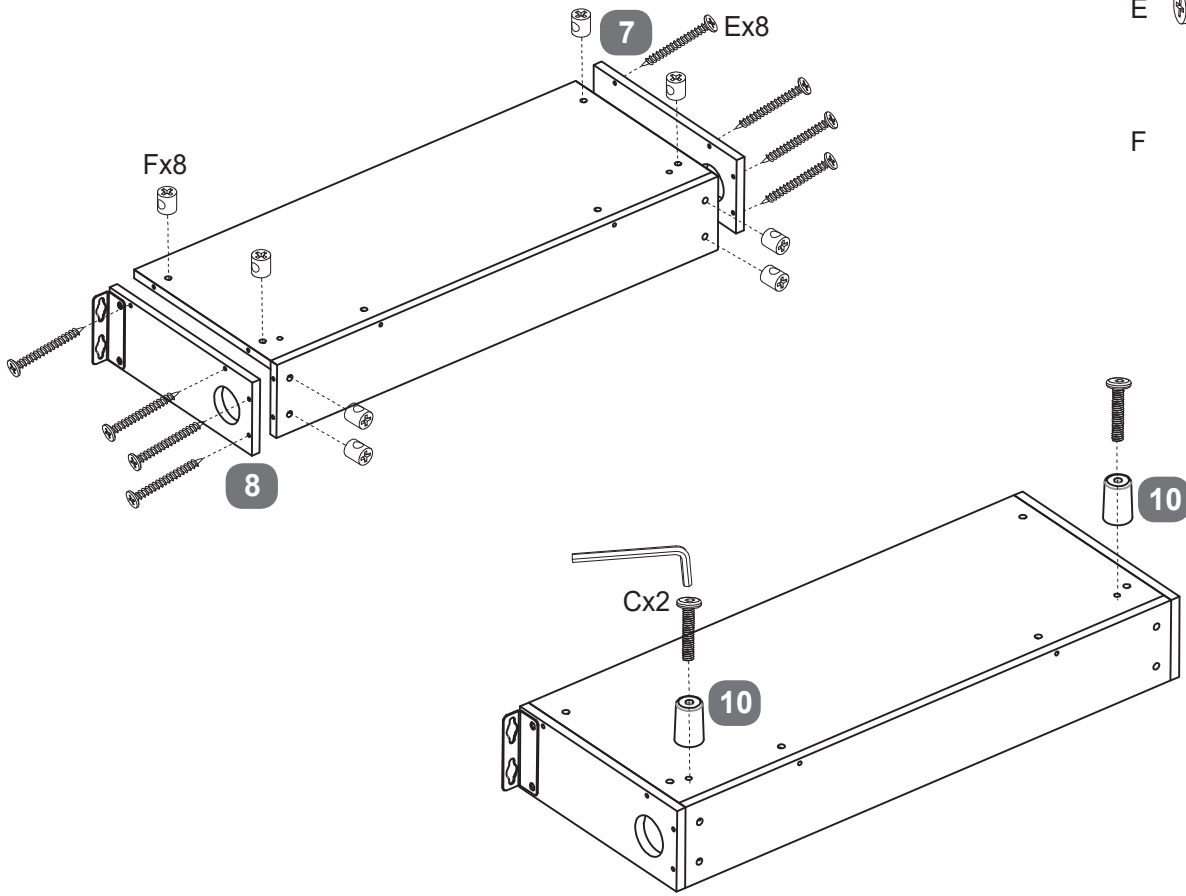

Stage  
4

 
B  x4 D  x1

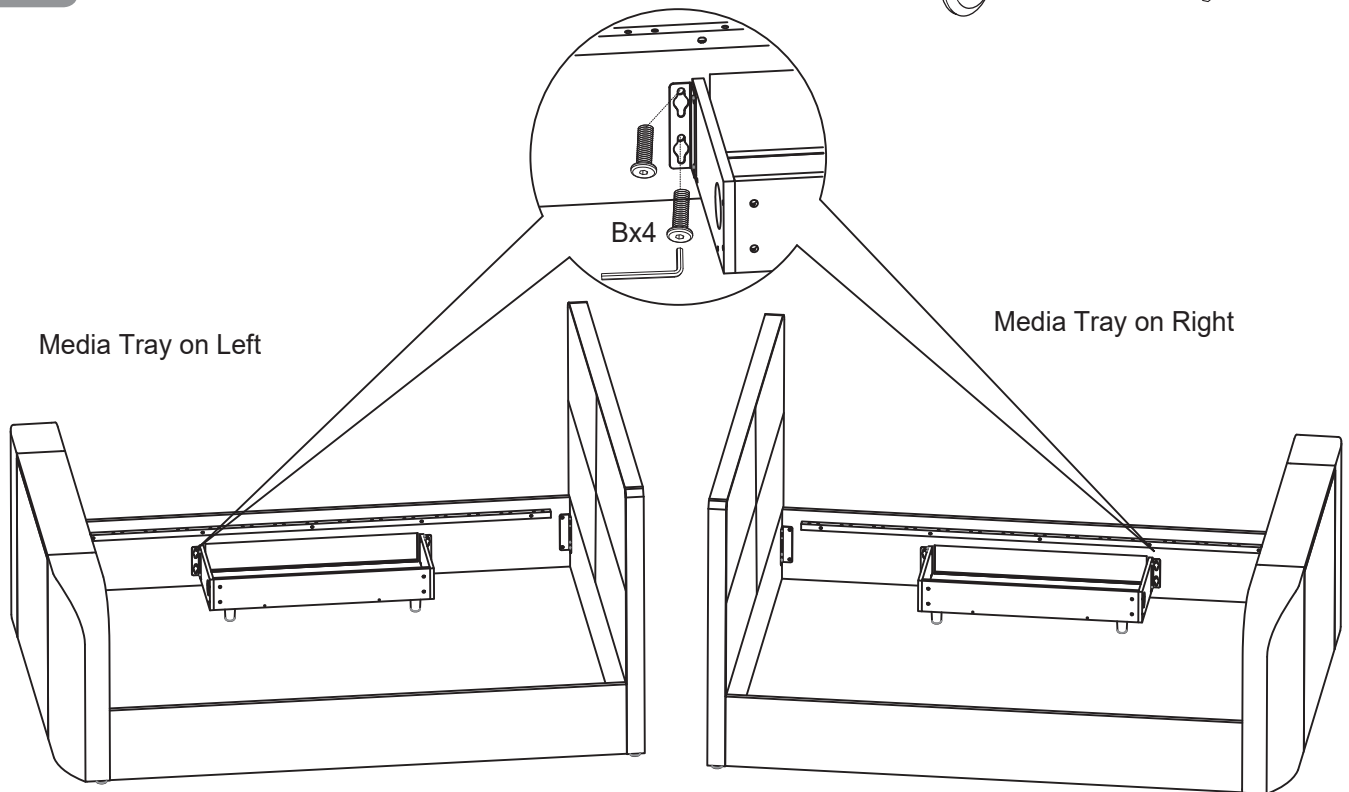

Stage  
5

Double & King Size x1  
Super King Size x2

 B




Double & King Size x6  
Super King Size x12

D



 
x1

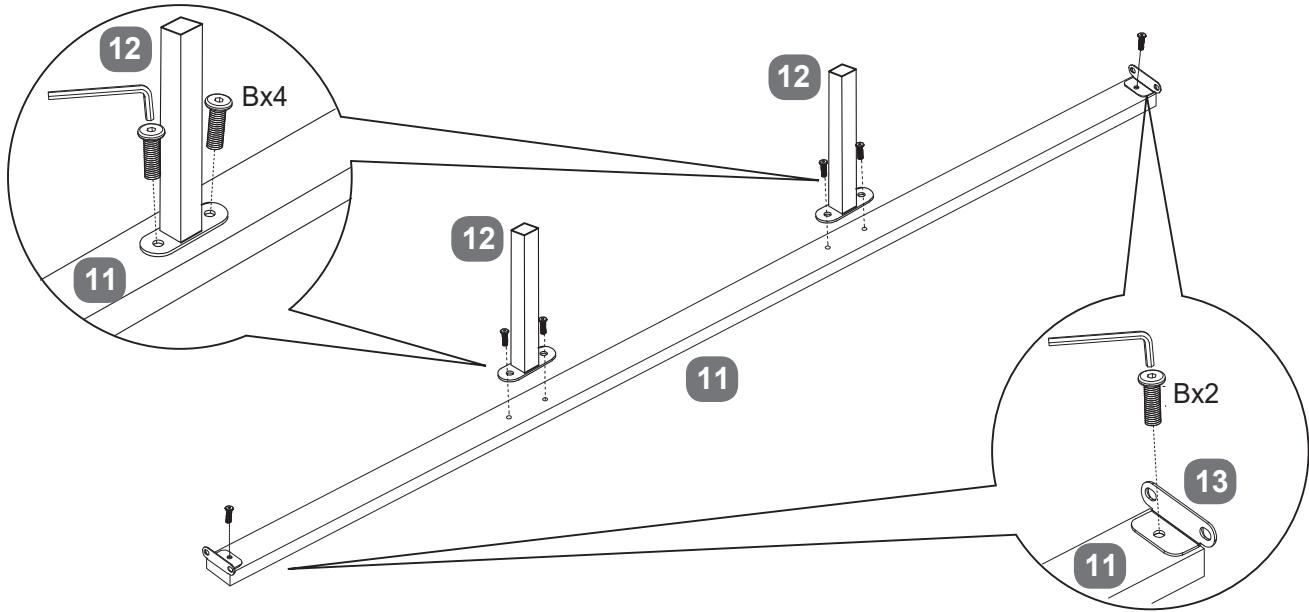

Stage  
6

Double & King Size

 A




Double & King Size x4  
Super King Size x8


D



 x1

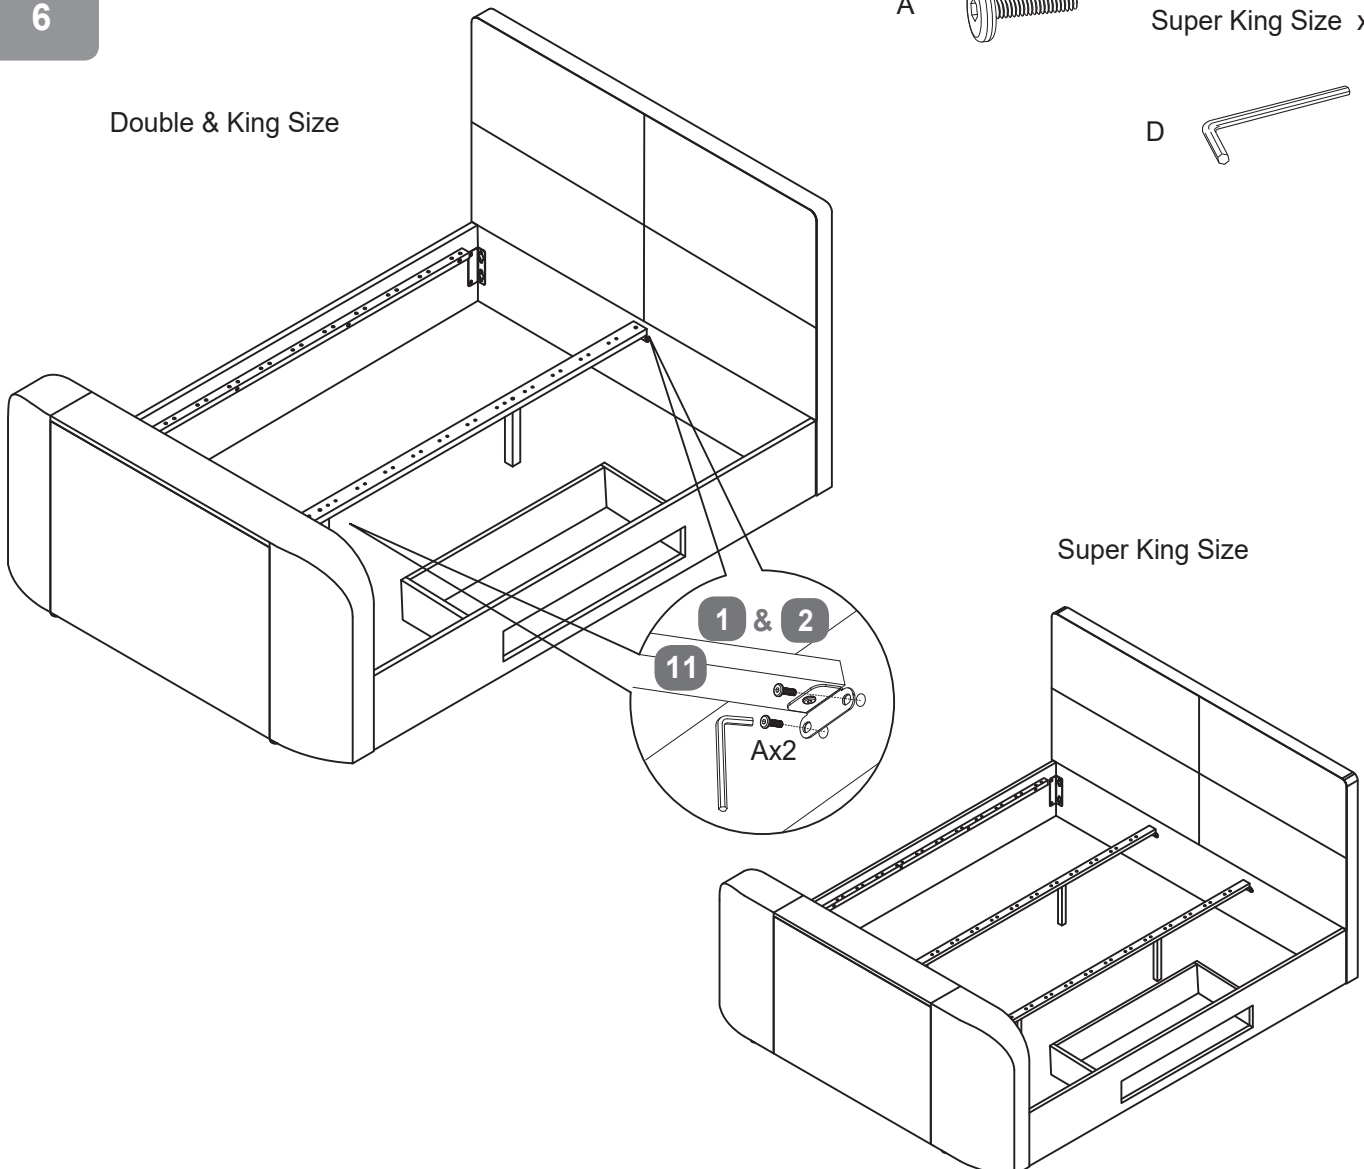


Stage  
7

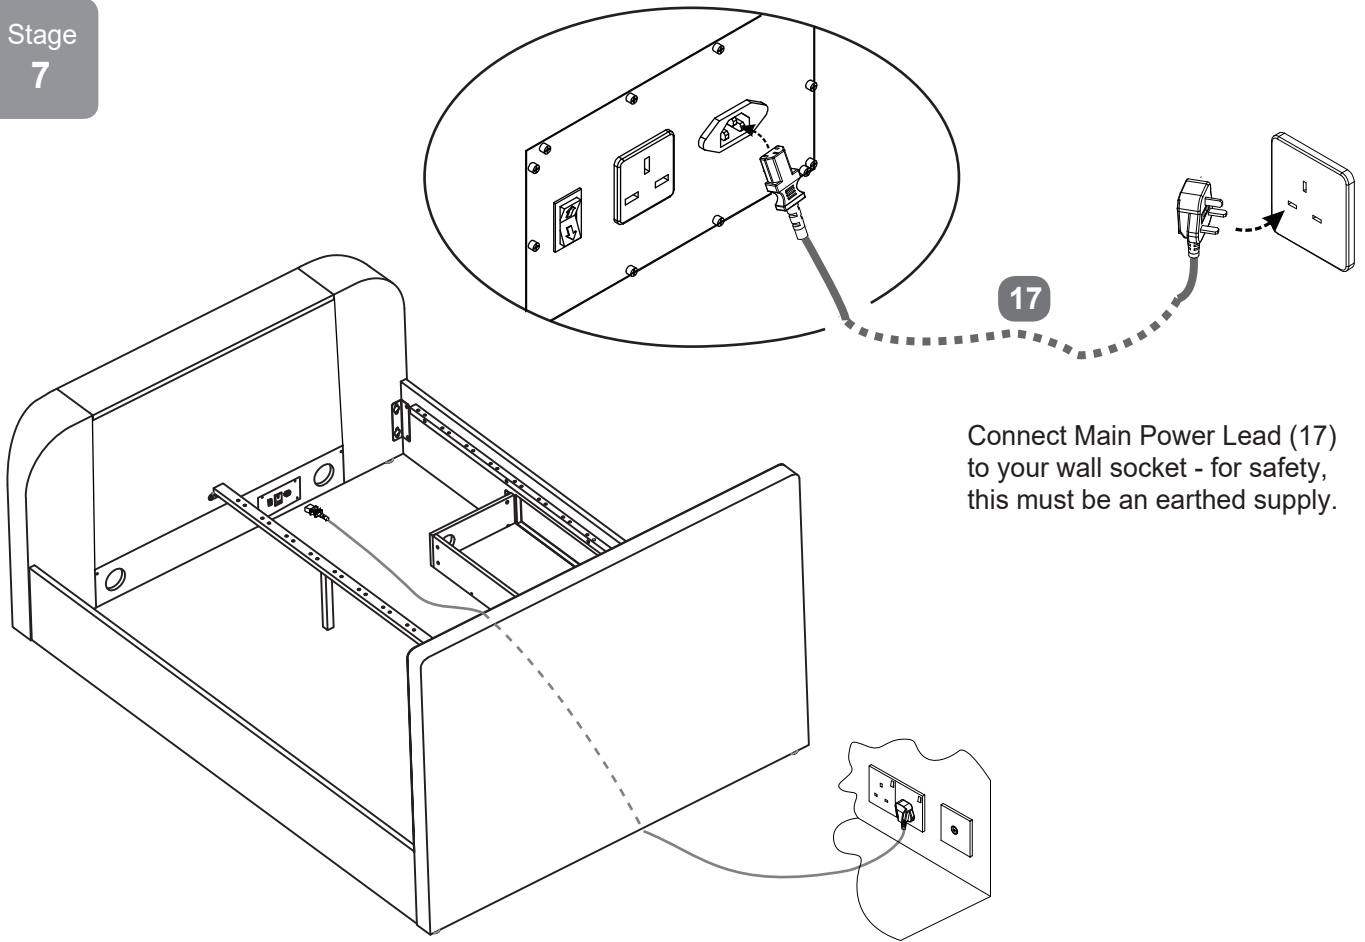 

Connect Main Power Lead (17) to your wall socket - for safety, this must be an earthed supply.

 Stage  
8

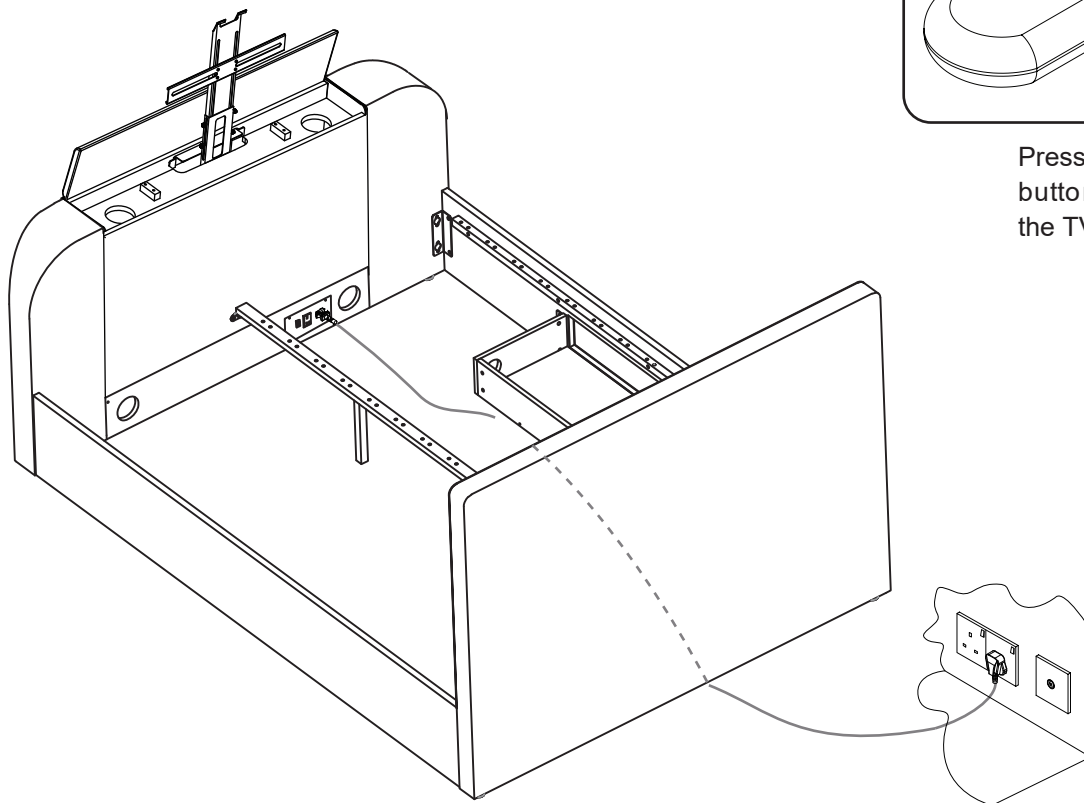


Press the "UP" button to raise the TV lift.

Stage  
9

**Note: For illustration purposes only, TV connections may vary.**

 TV Power Lead supplied with your TV

**TIP:**  
BEFORE FITTING THE TV, PUSH CABLES THROUGH EACH DUCT FROM THE TOP. CHOOSE THE BEST SIDE TO USE DEPENDING ON WHERE THE CONNECTION PORTS ARE, ON BACK OF YOUR TV. NEVER CROSS CABLES FROM ONE SIDE TO THE OTHER.

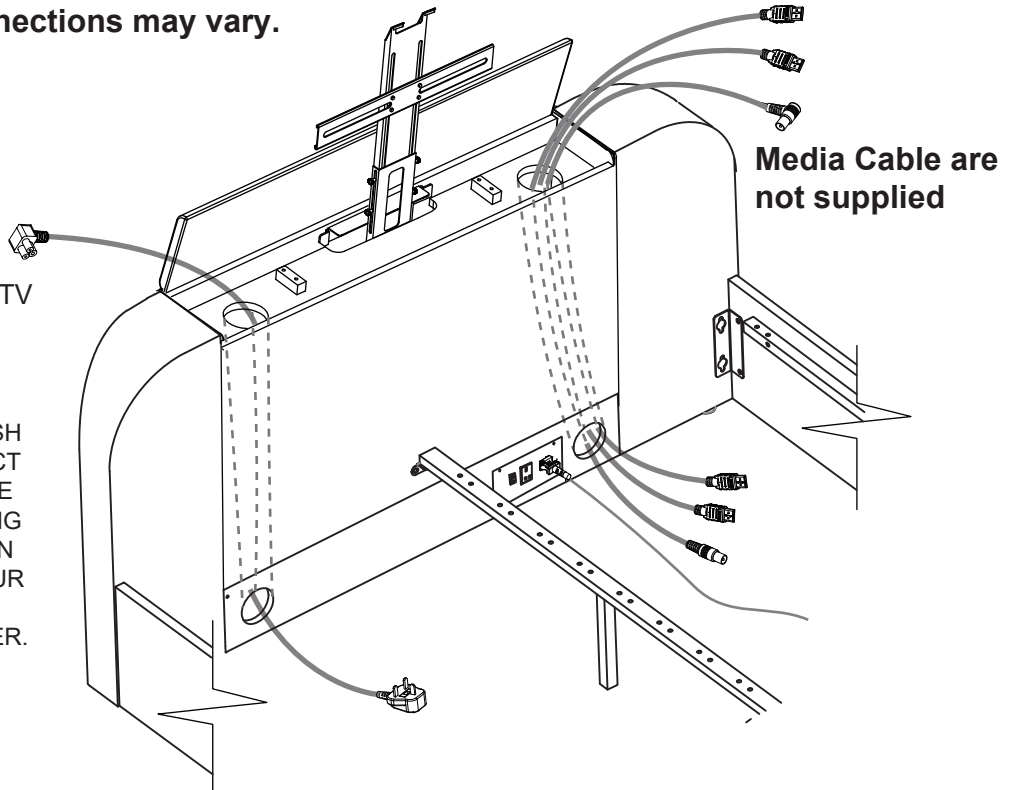


Stage  
10


**TV Installation - Normal Vesa Fixing**

 IF SCREWS ARE SUPPLIED WITH TV, PLEASE USE THOSE IN PREFERENCE


a x2 Bolt sets  
M8 x 25mm




Counter-sunk screw sets  
(M6x12mm)

 








Counter-sunk screw sets  
(M4x12mm)

 

b x2 Allen Key (4mm)

 


Allen Key (2.5mm)

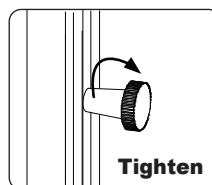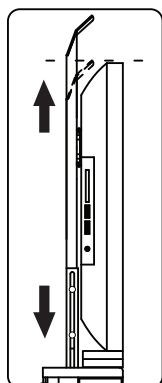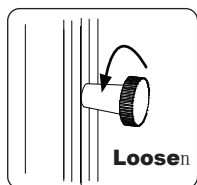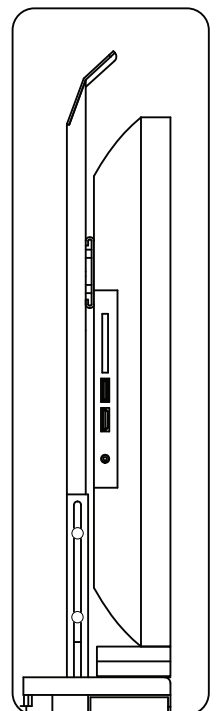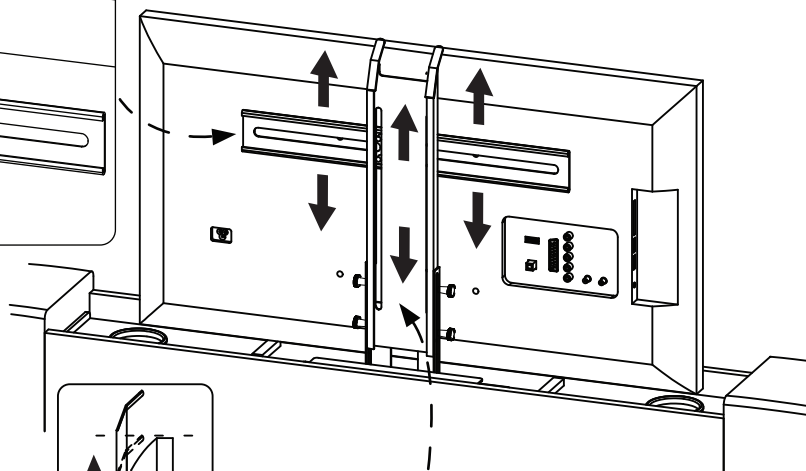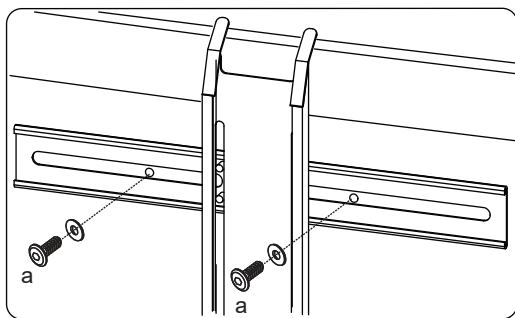       

Stage  
11a



# TV Installation - 100x100 Vesa Fixing

 REMOVE CROSS-BRACKET  
AND FIX IT DIRECTLY TO BACK OF TV

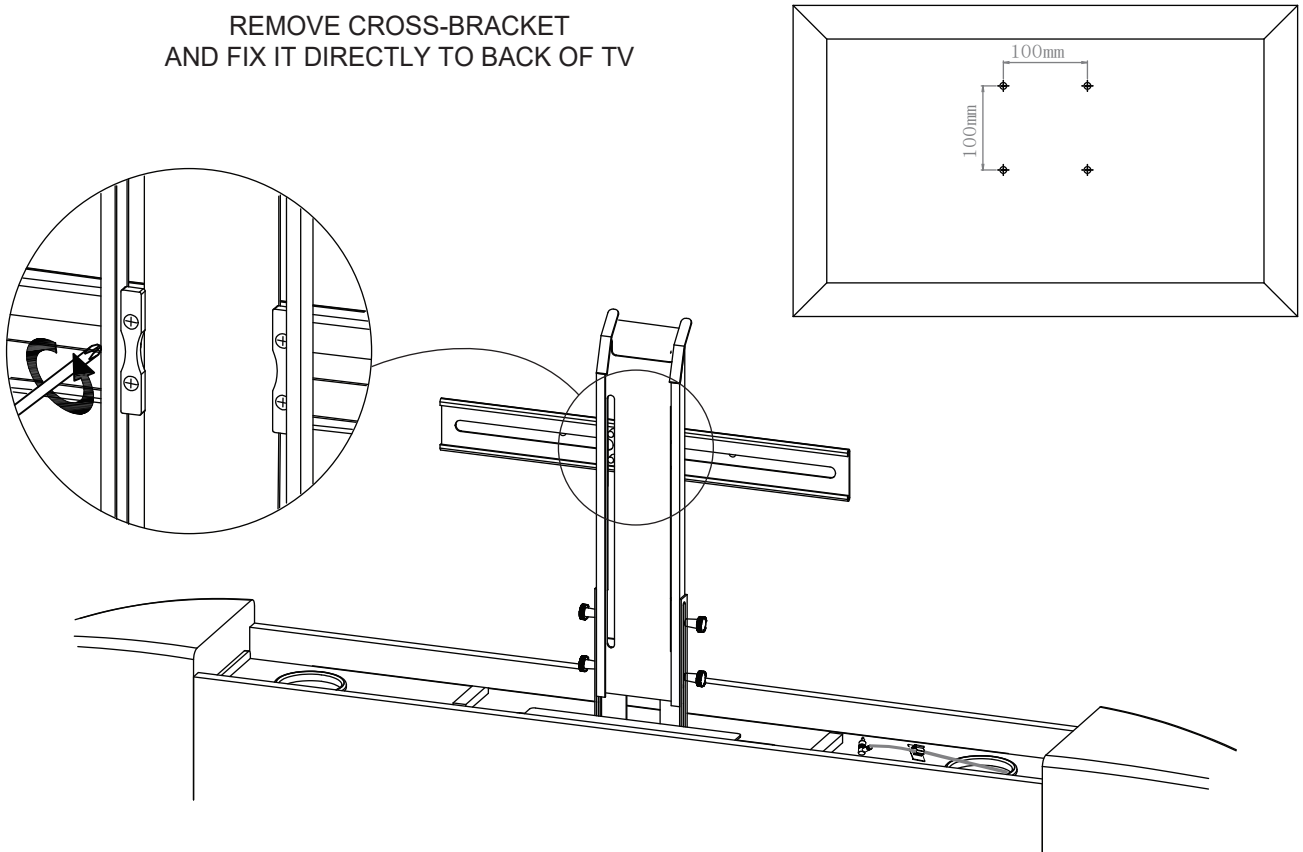


Stage  
11b

   IF SCREWS ARE SUPPLIED WITH TV, PLEASE USE THOSE IN PREFERENCE

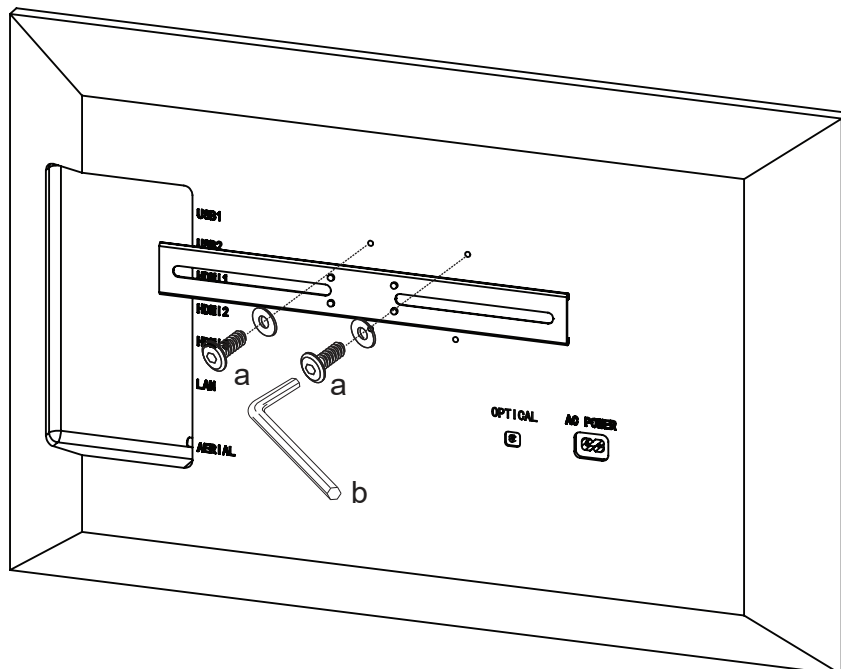
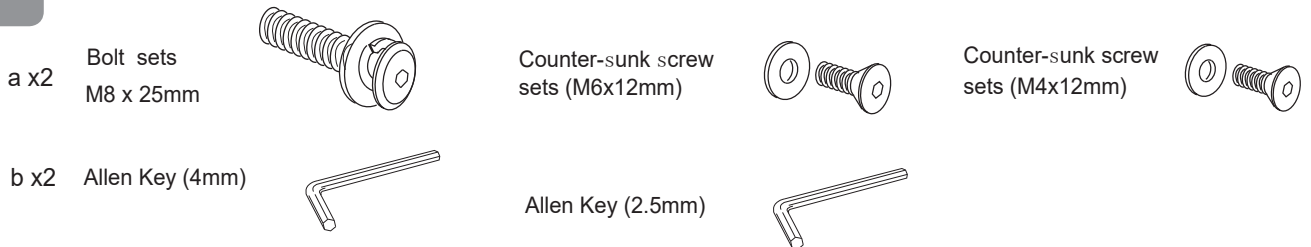






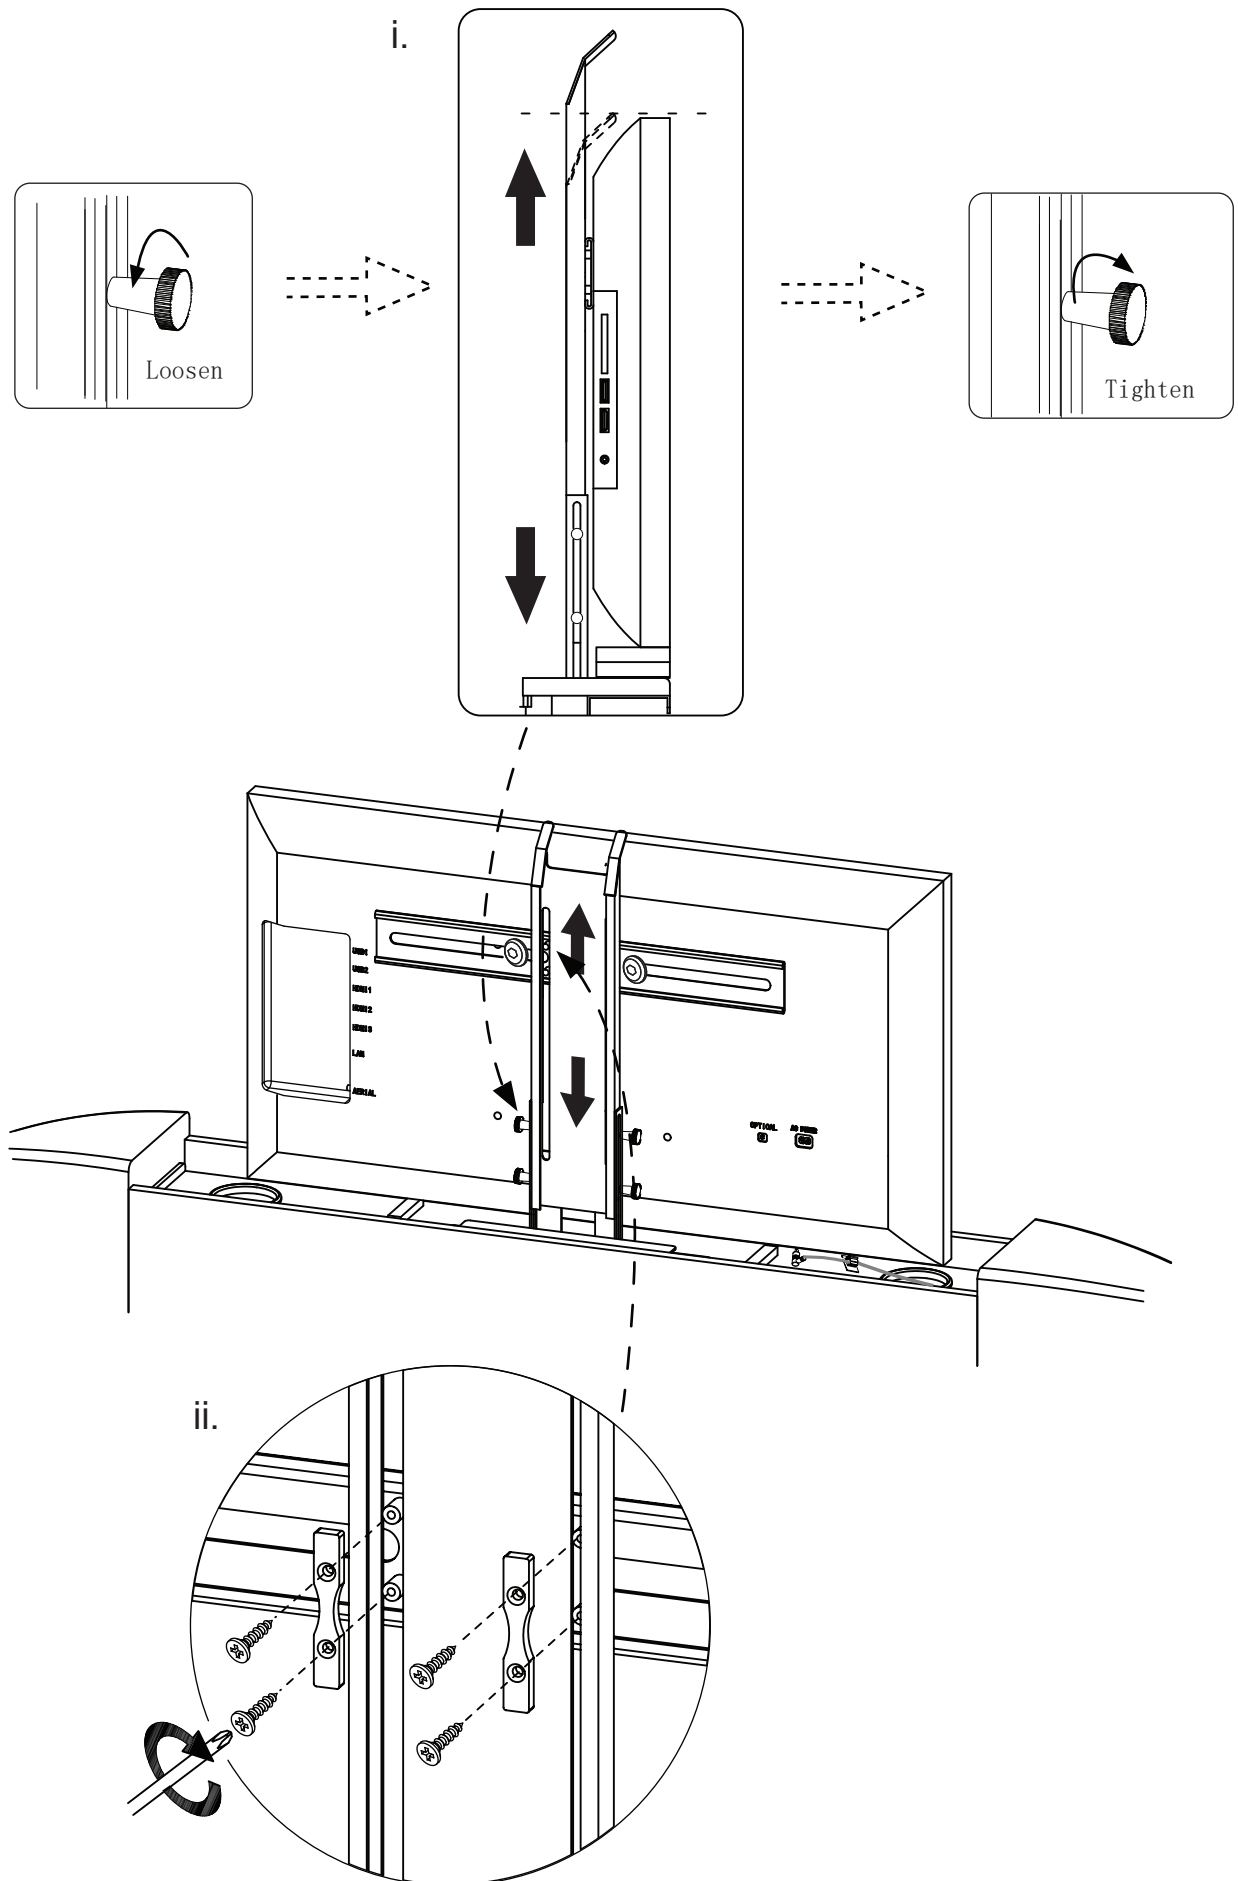


**Note: For illustration purposes only, TV connections may vary.**

 
 
TV Power Lead  
supplied with your TV

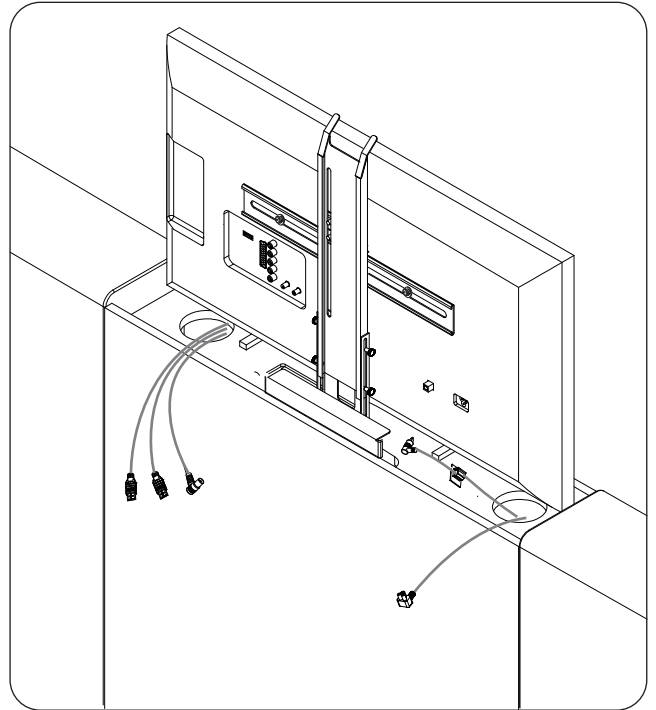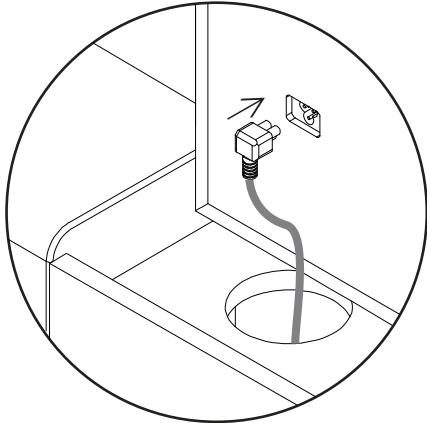

**⚠️ 90° ADAPTOR**

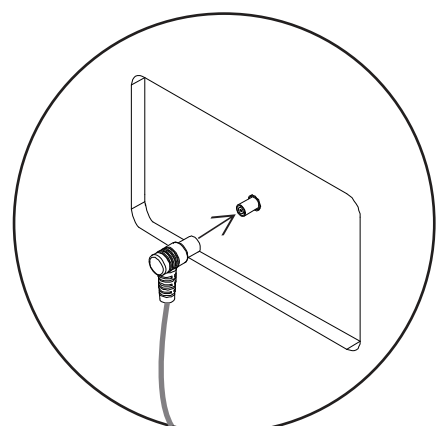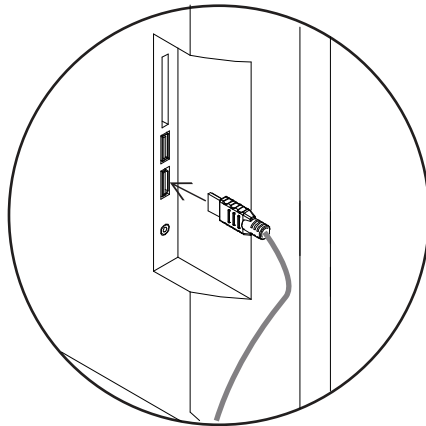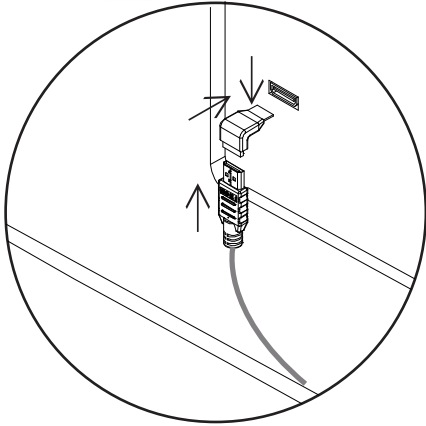   


**PLUG IN - KEEP ALL CABLES TIGHT  
- USE CLIPS & TIES PROVIDED.**

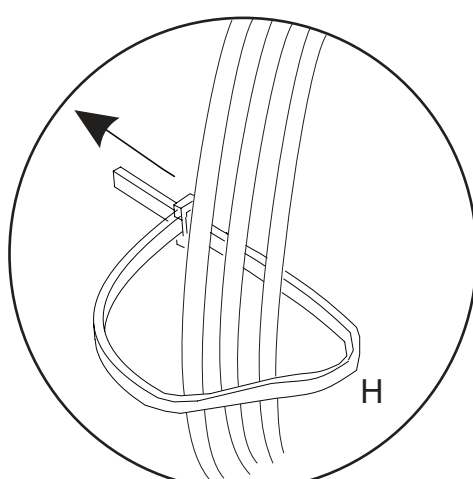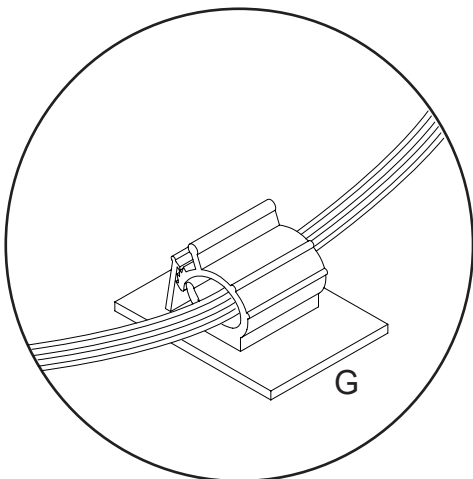  


Keep wires tight - peel  
off cover from cable clips  
& adhere to back of TV.

 Stage  
13

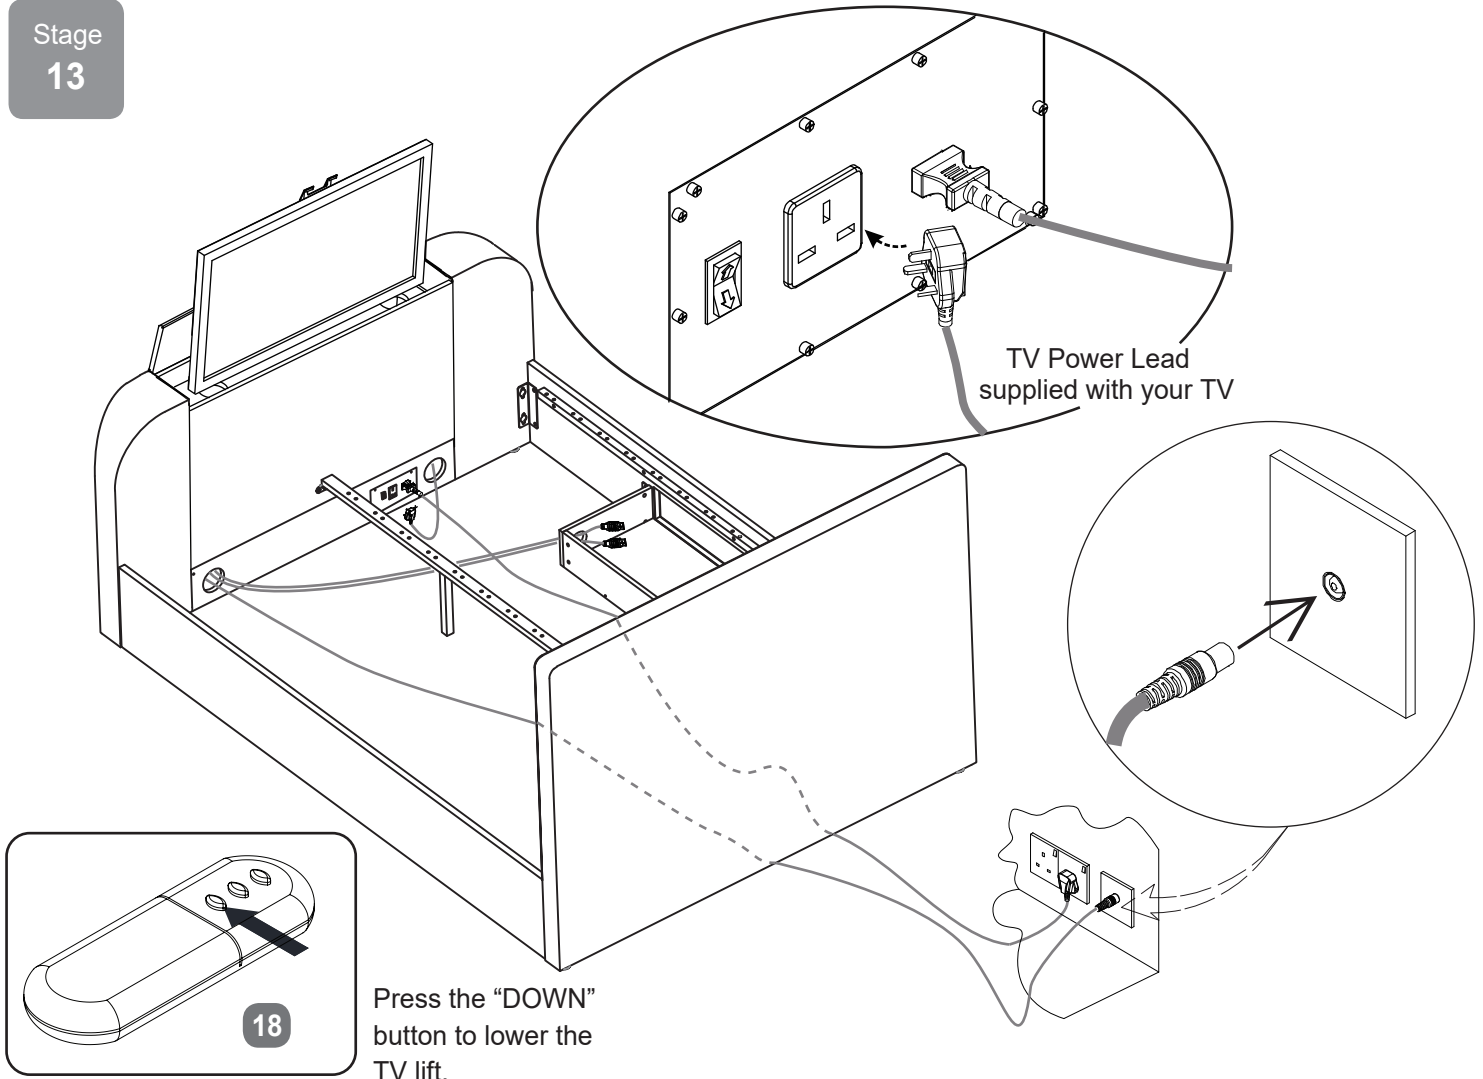


Stage  
14a

 For Double & King Size

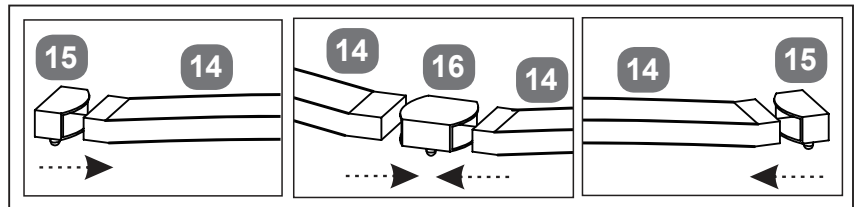


 Fit RC holster (19) to left or right side.


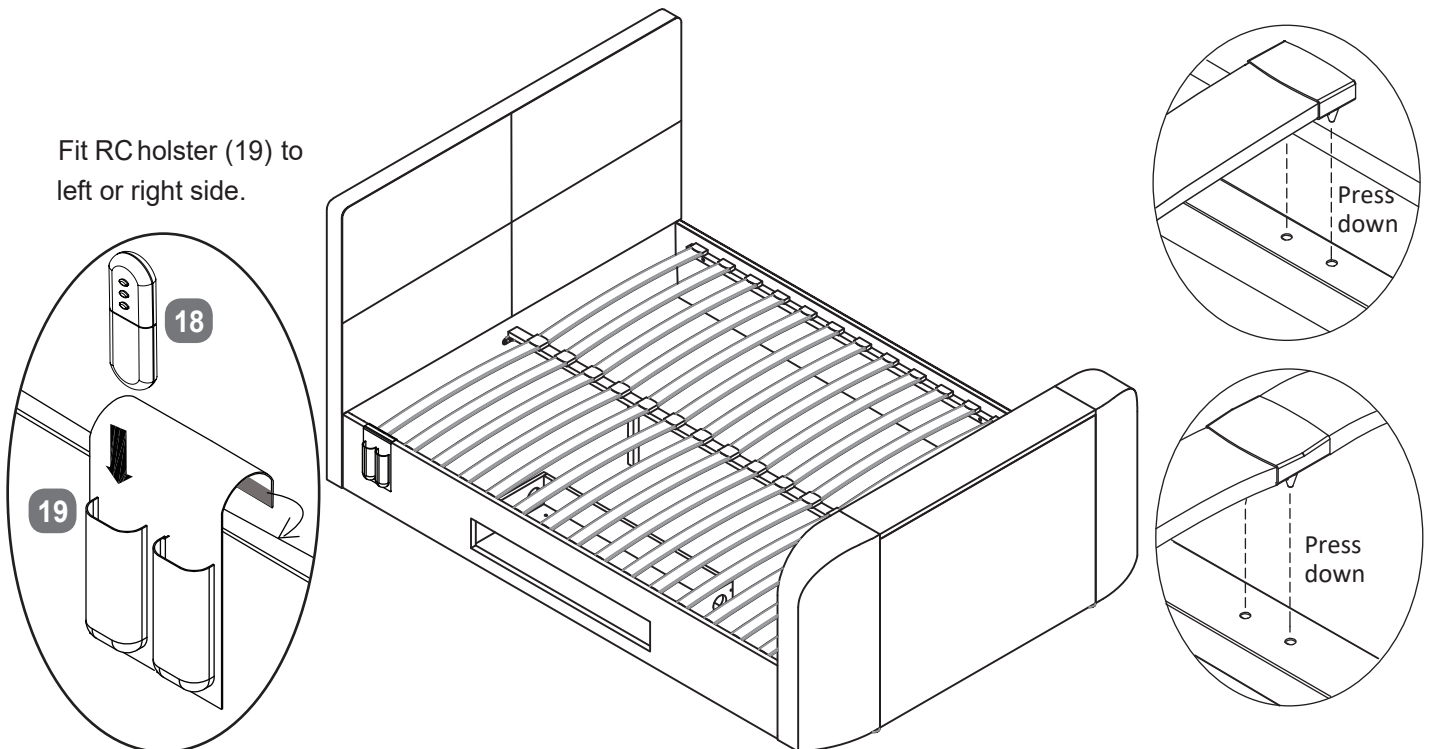


Stage  
14b

 For Super King Size

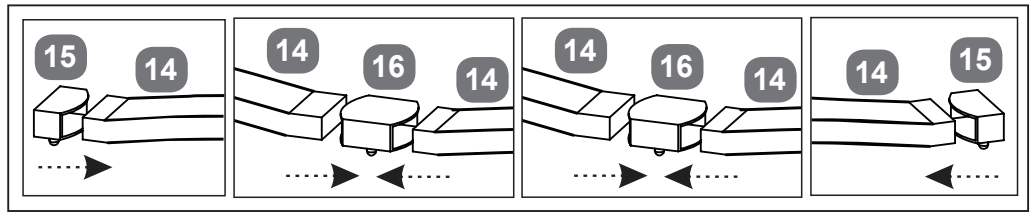

  Fit RC holster (19) to left or right side.

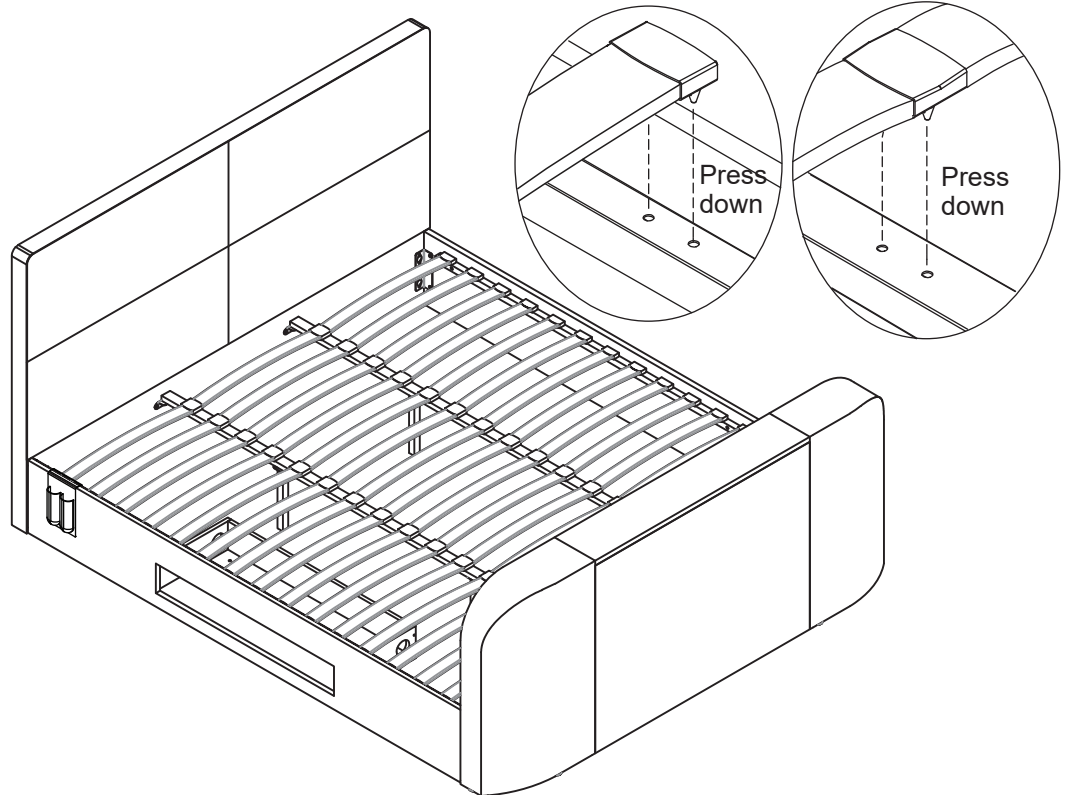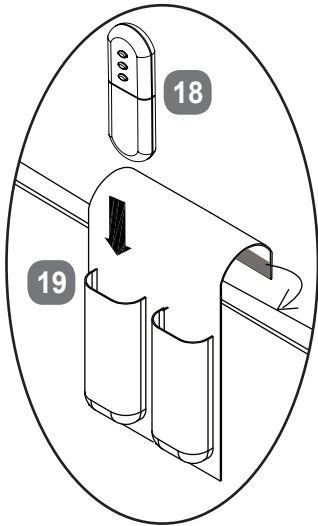

Overall Dimensions (LWH mm)

Double: 2210 x 1445 x 1140

King: 2310 x 1595 x 1140

Super King: 2310 x 1895 x 1140

Internal Dimensions (LW mm)

Double: 1930 x 1380

King: 2030 x 1530

Super King: 2030 x 1830

Distance between slats (mm)

 
Double, King & Super King: 70

Slat Dimensions (LWH mm)

Double: 685 x 53 x 9

King: 760 x 53 x 9

Super King: 605 x 53 x 9

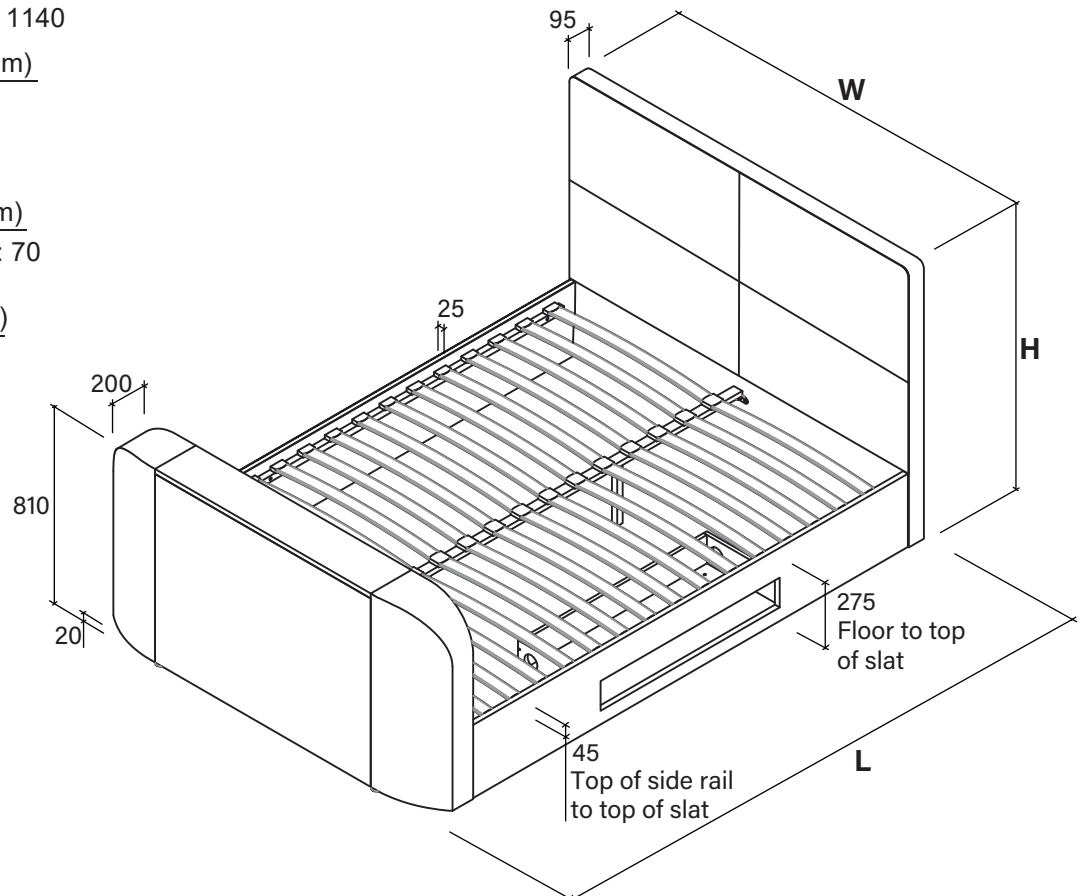



### GENERAL INFORMATION

It is very important not to place any vessel containing liquids, e.g. drinks or vase of flowers, on top of the TV footboard which may accidentally spill and enter the TV compartment as this could cause damage to the TV and/or the TV lifting equipment.

If this happens, please contact your retailer.

Do not expose the bed to an undue level of heat - keep away from radiators.

Never allow anyone to sit on the foot end of the bed - keep children well away from moving parts.

To keep bed clean, we recommend that it be wiped over with a slightly dampened cloth or if fabric, use a light vacuum cleaner; disconnect power before cleaning.

Supplied with the bed is a remote control to operate the TV lift and when you fit your own TV there is a remote control to operate it as well. Both these remotes use batteries - there are no batteries in the rest of the equipment.

There are strict controls for disposal of batteries - your local council can advise on how to safely dispose of them.

Never burn batteries on an open fire as they could explode.

### IMPORTANT POWER INFORMATION

It is essential that the Mains Power Lead is connected to an earthed socket be it a wall socket or extension lead - otherwise there is risk of damage or even electric-shock.

The socket providing the power must be accessible at all times in case you need to switch off the power quickly.

During an electrical or lightning storm - disconnect the power completely as a precaution.

Always un-plug the power when going on holiday or when the bed is not used for an extended period.

If you have young children in the home always disconnect the power at the wall socket for extra safety.

Power outlets, extension leads or adapters must not be overloaded beyond their limit - this can result in fire or electric shock.

Leads supplied with this bed, or other approved mains powered extension leads used to power the equipment, must not be placed where they can be walked on - this is dangerous and could lead to accidents.

Do not interfere with or modify any cables already fitted and do not add any extra media leads unless they are routed through the ducts as shown. All leads must be tightly connected to back of TV, never hanging loose.

Never touch moving parts or any part of the equipment - if something needs to be checked, disconnect the power first.

Do not insert anything into the footboard as this could seriously damage the TV and/or the TV lifting equipment and could, if done carelessly, cause serious damage or injury.

If the equipment doesn't operate normally or if there is an unusual noises, disconnect the power.

### TELEVISION INSTALLATION

Before fixing the mattress base boards to the bed, please follow the television installation instructions below.

Raise the TV lift by pressing the top UP button of the remote control.

Connect TV to the mounting bracket using the TV installation kit packed with the main hardware in the accessory box inside carton 2. If screws are supplied with your TV, use those in preference.

If necessary mounting plate can easily be adjusted to move up or down to align with VESA holes in the TV.

Connect the TV power lead (supplied with TV) by passing plug down one of the ducts, plugging it into the TV power adapter if supplied with your TV, then into the TV power socket which is on the face of footboard. This socket is only to be used for the TV as the supply is not permanent.

If required, connect your own aerial & HDMI cable by passing down the appropriate duct.

If required, connect your own media cables through either of the ducts - connecting your media equipment when ready.

Please use the cable clips & cable ties to make certain there are no loose wires to snag or get trapped.

The TV can now be operated following the TV operation guide supplied with your TV.

When finished viewing, lower the TV back into the footboard by pressing DOWN button of the remote control.

The TV will retract into the footboard automatically - for safety, power shall be turned off to the TV when it reaches the bottom rest position.

Note that when the TV is operating and Bluetooth is selected, the TV picture will stay on screen - either turn off TV or press down button to lower to the resting position, TV is turned off but music will still play.

When the up button is pressed - the TV lifting column rises and power to the TV turns back on automatically.

### TROUBLE SHOOTING

 
If your equipment does not operate please check all the power connections, to the wall and to the socket in the footboard. Make sure TV is switched on. (Note: TV will only work when it is in the up position).

Follow instruction at the top of Page 14 to make certain pairing of the remote control & TV lift has not been lost.

If the television or TV Lift still fails to operate contact your retailer.

**IMPORTANT** Care should be taken when connecting electrical items. If in any doubt please consult an approved electrician to advise you on the electrical supply to achieve safe connections, to the electrical equipment of the TV Bed.

Occasionally you may find the radio wave connection between remote control and TV Lift is lost, probably due to atmospheric conditions. In that case please follow these simple instructions:

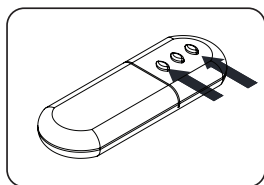

- ①. Disconnect all mains electric power to the bed, for at least 60 seconds.
- ②. Press UP or DOWN Button on Remote Control and keep holding button down, simultaneously re-connect mains electric power to bed keeping button down for at least a further 5 seconds. TV Lift unit receives signal from Remote Control and lift will begin to move UP or DOWN whichever direction is appropriate.
- ③. Re-connection is now completed.

### **Product Information**

- Upholstered Bed conforms to BS EN 1725 & BS 5852.
- TV Lift system has a maximum load capacity of 14 Kg
- Compatible with slimline LED television with a screen size up to a maximum of 42"
- Maximum TV dimensions W98 x H58 x D8.5 cm

### **Care Instructions**

- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking and deterioration of the colour.
- Periodically check & re-tighten any fastener.
- Periodically remove dust by using a light vacuum cleaner or if your bed is PU, use a soft damp cloth.
- Do not use silicone based furniture polish.
- Any spills should be removed immediately with a soft damp cloth.
- TAKE CARE WHEN MOVING THE FURNITURE AND NEVER DRAG THE PIECES ACROSS THE FLOOR, AS THIS WILL CAUSE DAMAGE TO THE JOINTS.

We cannot be held responsible for any damage caused to the TV, TV cabling or the TV Bed itself due to incompatibility of any equipment installed by the end-user or due to loose and poorly installed cables. Please read this Assembly Instruction carefully and follow the recommendations.

CE TV LIFT REF: LA08 CONFORMS TO STANDARD FOR UK & LED CONFORMS TO STD FOR UK (EMC, LVD & ROHS)

TV LIFT: EN 60335-1:2012+A11: 2014  
EN 60950-1:2006+A11:2009+A1:2010

+A12:2011+A2: 2013  
EN 301 489-1 V2.2.0: 2017

EN 301 489-3 V2.1.1: 2017

EN 55014-1:2006+A1:2009+A2:2011

EN 61000-3-2: 2014 EN 61000-3-3: 2013

EN 62233: 2008 EN 55014-2: 2015

EN 300 440 V2.1.1: 2017 EN 301 489-3

V2.1.1: 2017 EN 62479: 2010

EMC CERT NO. HTT170911240E

LVD CERT NO. HTT170911240L

ROHS CERT NO. HTT170911240R

POWER SUPPLY: FDD-009

EMC CERT NO. BST14010531Y-1EC-1

LVD CERT NO. BST14010531Y-1SC-2

ROHS CERT NO. BST14010531Y-1RC-4

DIRECTIVE: 2014/30/EU

DIRECTIVE: 2014/35/EU

DIRECTIVE: 2011/65/EU

DIRECTIVE: 2004/108/EC

DIRECTIVE: 2006/95/EC

DIRECTIVE: 2011/65/EU