

MODEL:CF 8765 (5') ⊳ D В Side Rail Center Rail ootboard Leg 1 pc 4 pcs 1 pc Step 1 : Tighten the legs (D) to both headboard (A) and footboard (B) as shown. ⊞ ASSEMBLY INSTRUCTION 3 Step 2: Attach Side Rail (C) to Headboard (A) and Footboard (B) by pushing the bracket down to fit it. ď

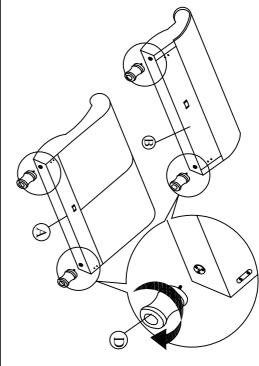

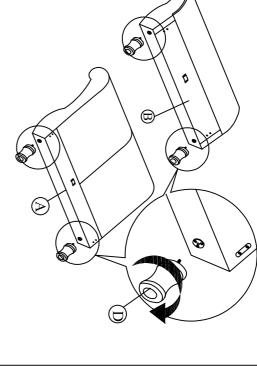



Η

Middle Holder

14 pcs

 \nearrow

End Holder

28 pcs

JCBC M6 X 40

2 pcs


G

Slat

28 pcs

Support Leg

2 pcs

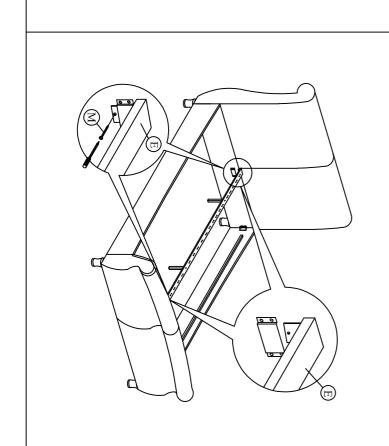

0

Stiffener Slat (3 Holes)

2 pcs

ATTENTION: Please keep the adjuster around 5 to 8 mm distant away from the floor.

Adjuster

2 pcs

z

CSK M4 x 32mm

6 pcs

 \leq

CSK M4 x 25mm

2 pcs


l pc

 \mathbb{Z}

1 pc

Step 4 : Slide the center rail (D) to the headboard (A) and footboard (B). Tighten screws (M) using screw driver (not included) to the headboard (A) and footboard (B).

(B)

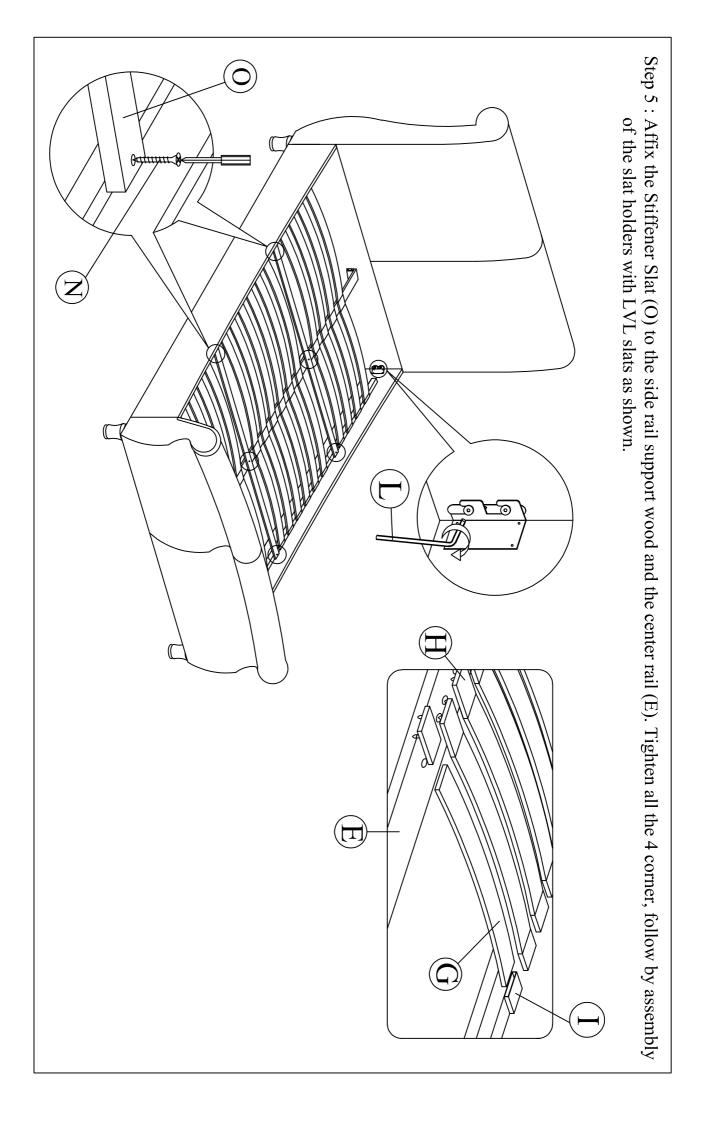

Important Information

Please note that the recommended process for adjusting centre legs when assembling your bed.

Before placing the mattress on the base, please ensure that the <u>SUPPORT LEGS</u> <u>ARE NOT QUITE TOUCHING THE FLOOR</u>. When the bed is then in use the support legs will sit firmly on the solid surface.

PLEASE ENSURE THAT THE LEGS ARE VERTICAL.

DUE TO THE NATURE OF LAMINATE / WOODEN FLOORING WE RECOMMEND THAT YOU PLACE A SMALL PIECE OF NON SLIP MATERIAL UNDER THE LEGS WHICH WILL GIVE YOU THE FLEXIBILITY THE ADJUSTERS NEED.

When moving the bed it is essential that it is <u>LIFTED</u> into the new position. <u>NEVER DRAG</u> the bed as this will move the legs from the vertical position thus weakening the support of the centre rail.

Adhering to the recommended process should ensure that your bed gives you years of trouble free service.