




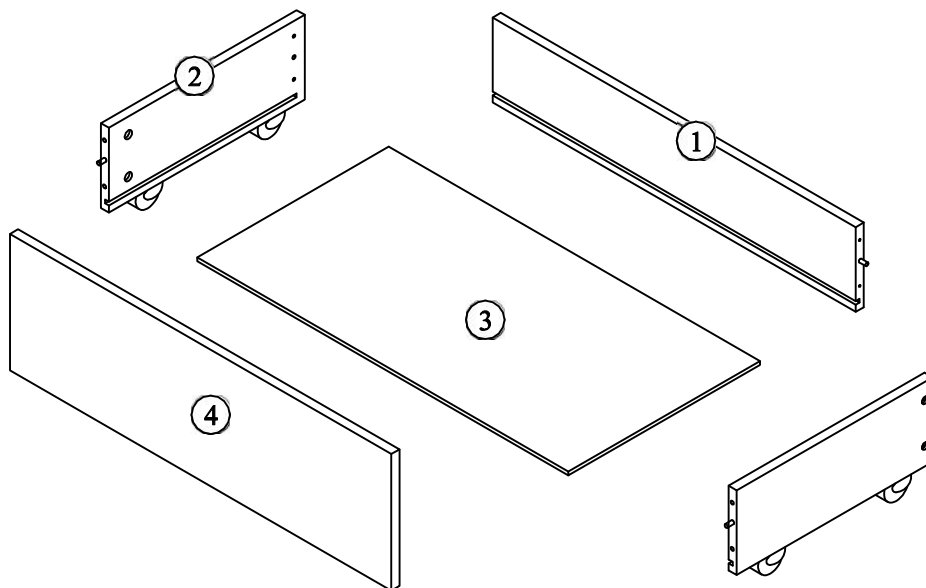


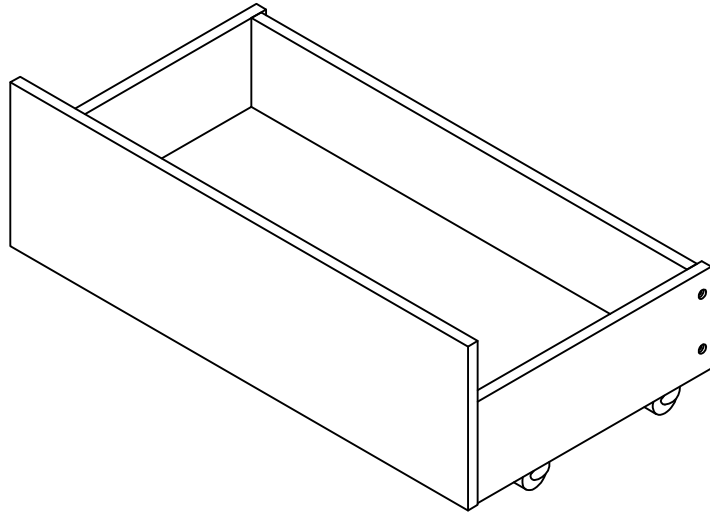

ASSEMBLY INSTRUCTION UNDERBED DRAWERS




	H 1	4 PCS Ø6 x 41		H 3	4 PCS Ø6 x 40
	H 2	4 PCS Ø15 x 12.5		H 4	1 PC Ø 4




Step 1:

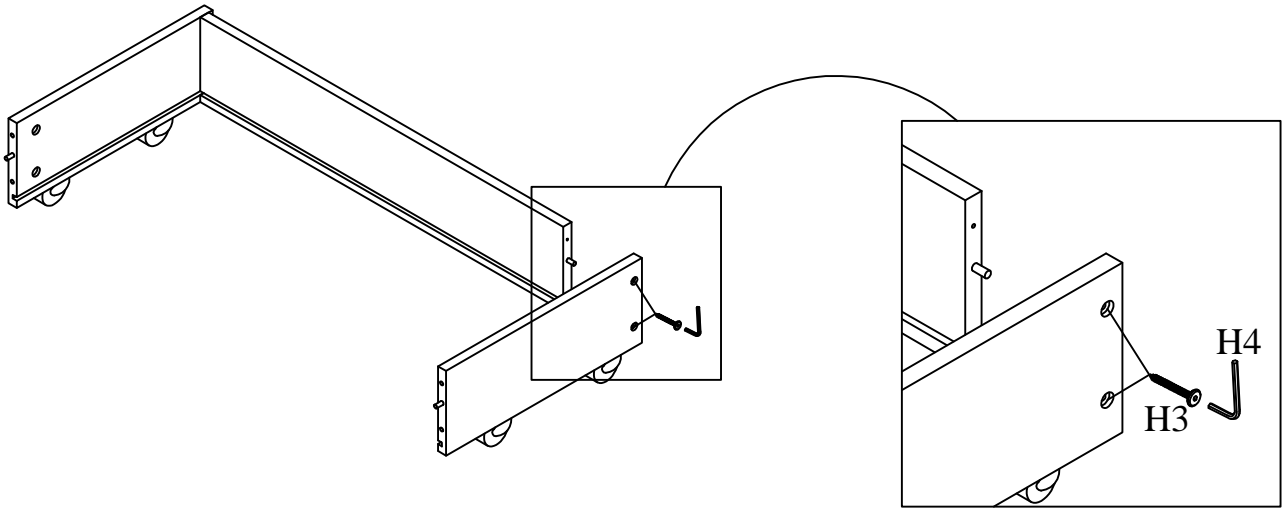


	
H3 x 4	H4 4

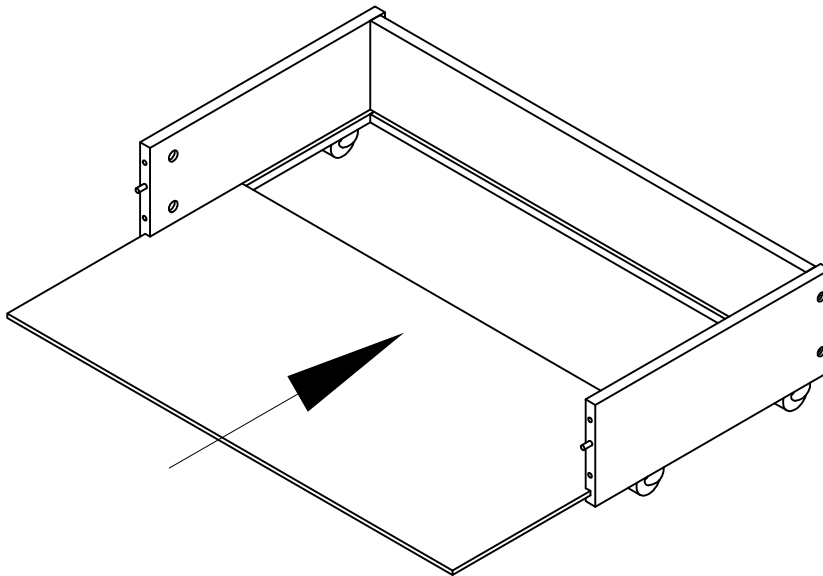

Step 2:



Step 3:

		
H1 x 4	H2 x 4	H4 4

