

UCM6200 Series - User Manual

Welcome

Thank you for purchasing Grandstream UCM6200 series IP PBX appliance. The UCM6200 series IP PBX appliance is designed to bring enterprise-grade voice, video, data, and mobility features to small-to-medium businesses (SMBs) in an easy-to-manage fashion. This IP PBX series allows businesses to unify multiple communication technologies, such comprehensive voice, video calling, video conferencing, video surveillance, data tools and facility access management onto one common network that that can be managed and/or accessed remotely. The secure and reliable UCM6200 series delivers enterprise-grade features without any licensing fees, costs-per-feature or recurring fees.

Caution

Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty.

Warning

Please do not use a different power adaptor with the UCM6200 as it may cause damage to the product and void the manufacturer warranty.

This document is subject to change without notice. The latest electronic version of this user manual is available for download here:

<http://www.grandstream.com/support>

Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.

Product Overview

Technical Specifications

The following table resumes all the technical specifications including the protocols / standards supported, voice codecs, telephony features, languages and upgrade/provisioning settings for UCM6200 series.

Table 1: Technical Specifications

Interfaces	
Analog Telephone FXS Ports	2x RJ11 ports with lifeline support Each port supports 2 REN
PSTN Line FXO Ports	<ul style="list-style-type: none">◦ UCM6202: 2 ports◦ UCM6204: 4 ports◦ UCM6208: 8 ports

Network Interfaces	UCM6202/6204/6208: 1x Gigabit WAN port 1x Gigabit LAN port with PoE Plus (IEEE 802.3at-2009)
NAT Router	Yes
Peripheral Ports	USB 2.0, SD
LED Indicators	Power/Ready, Network, PSTN Line, USB, SD
LCD Display	128×32 graphic LCD with DOWN and OK button
Reset Switch	Yes
Voice/Video Capabilities	
Voice-over-Packet Capabilities	128ms tail-length carrier-grade Line Echo Cancellation with NLP Packetized Voice Protocol Unit, dynamic jitter buffer, modem detection, and auto-switch to G.711.
Voice and Fax Codecs	G.711 A-law/U-law, G.722, G.723.1 5.3K/6.3K, G.726, G.729A/B, iLBC (30ms only), GSM, AAL2-G.726-32, RTX, ADPCM; T.38
Video Codecs	H.264, H, H.263, H.263+, VP8
QoS	Layer 3 QoS, Layer 2 QoS
Signaling and Control	
DTMF Methods	Inband, RFC4733, and SIP INFO
Provisioning Protocol and Plug-and-Play	TFTP/HTTP/HTTPS, auto-discovery and auto-provisioning of Grandstream IP endpoints via ZeroConfig (DHCP Option 66/multicast SIP SUBSCRIBE/mDNS), Eventlist between local and remote trunk
Network Protocols	TCP/UDP/IP, RTP/RTCP, ICMP, ARP, DNS, DDNS, DHCP, NTP, TFTP, SSH, HTTP/HTTPS, PPPoE, SIP (RFC3261), STUN, SRTP, TLS, LDAP/LDAPS
Disconnect Methods	Call Progress Tone, Polarity Reversal, Hook Flash Timing, Loop Current Disconnect, Busy Tone
Security	

Media	SRTP, TLS1.2, HTTPS, SSH
Advanced Defense	Fail2ban, alert events, whitelist, blacklist and strong password requirement.
Physical	
Universal Power Supply	<ul style="list-style-type: none"> ◦ Output: 12VDC, 1.5A ◦ Input: 100-240VAC, 50-60Hz
Dimensions	<ul style="list-style-type: none"> ◦ UCM6202/6204: 226mm (L) x 155mm (W) x 34.5mm (H) ◦ UCM6208: 440mm (L) x 185mm (W) x 44mm (H)
Environmental	<ul style="list-style-type: none"> ◦ Operating: 32 – 104°F / 0 – 40°C, 10-90% (non-condensing) ◦ Storage: 14 – 140°F / -10 – 60°C
Mounting	<ul style="list-style-type: none"> ◦ UCM6202/6204: Wall mount and Desktop ◦ UCM6208: Rack mount and Desktop
Weight	<ul style="list-style-type: none"> ◦ UCM6202: Unit weight 0.51kg, Package weight 0.94kg ◦ UCM6204: Unit weight 0.51kg, Package weight 0.94kg ◦ UCM6208: Unit weight 2.23kg, Package weight 3.09kg
Additional Features	
Multi-language Support	<p>English/Simplified Chinese/Traditional Chinese/Spanish/French/ Portuguese/German/Russian/Italian/Polish/Czech for Web GUI; Customizable IVR/voice prompts for English, Chinese, British English, German, Spanish, Greek, French, Italian, Dutch, Polish, Portuguese, Russian, Swedish, Turkish, Hebrew, Arabic;</p> <p>Customizable language pack to support any other languages</p>
Caller ID	Bellcore/Telcordia, ETSI-FSK, ETSI-DTMF, SIN 227 – BT
Polarity Reversal/ Wink	Yes, with enable/disable option upon call establishment and termination
Call Center	Multiple configurable call queues, automatic call distribution (ACD) based on agent skills/availability busy level, in-queue announcement
Customizable Auto Attendant	Up to 5 layers of IVR (Interactive Voice Response)

Maximum Call Capacity	<ul style="list-style-type: none"> ◦ UCM6202: Concurrent audio calls up to 50, concurrent WebRTC calls up to 25. ◦ UCM6204: Concurrent audio calls up to 75, concurrent WebRTC calls up to 35. ◦ UCM6208: Concurrent audio calls up to 100, concurrent WebRTC calls up to 50. Or up to 66% performance if calls are SRTP encrypted
SIP Devices	<ul style="list-style-type: none"> ◦ UCM6202/6204 up to 500 registered SIP endpoints. ◦ UCM6208 up to 800 registered SIP endpoints.
Conference Rooms	<ul style="list-style-type: none"> ◦ UCM6202/6204: Up to 3 password-protected conference rooms allowing up to 25 simultaneous PSTN or IP participants ◦ UCM6208: Up to 6 password-protected conference rooms allowing up to 32 simultaneous PSTN or IP participants
Call Features	Call park, call forward, call transfer, DND, ring/hunt group, paging/intercom and etc.
Compliance	<ul style="list-style-type: none"> ◦ FCC: Part 15 (CFR 47) Class B, Part 68 ◦ CE: EN55022 Class B, EN55024, EN61000-3-2, EN61000-3-3, EN60950-1, TBR21, RoHS ◦ A-TICK: AS/NZS CISPR 22 Class B, AS/NZS CISPR 24, AS/NZS 60950, AS/ACIF S002 and ITU-T K.21 (Basic Level) ◦ UL 60950 (power adapter)

UCM6200 FXS ports lifeline functionality:

The UCM6200 FXS interfaces are metallic through to the FXO interfaces. If there is power outage, FXS1 port will fail over to FXO 1 port, FXS 2 port will fail over to FXO 2 port. The user can still access the PSTN connected with the FXO interfaces from FXS interfaces.

Installation

Before deploying and configuring the UCM6200 series, the device needs to be properly powered up and connected to a network. This section describes detailed information on installation, connection and warranty policy of the UCM6200 series.

Equipment Packaging

Main Case	1x
Power Adaptor	1x
Ethernet Cable	1x

Quick Installation Guide	1x
GPL License	1x

Table 2: UCM6200 Equipment Packaging

Connect Your UCM6200

Connect the UCM6202

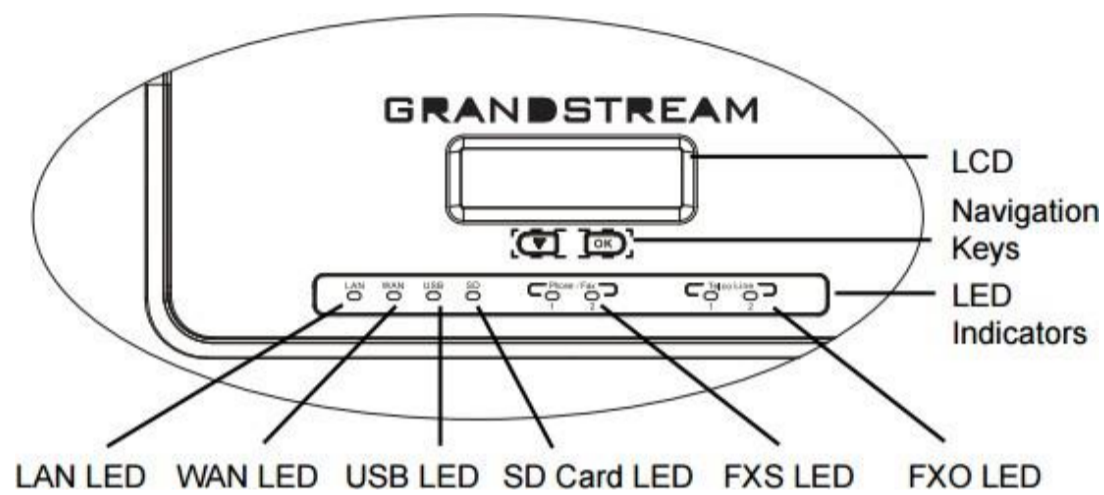


Figure 1: UCM6202 Front View

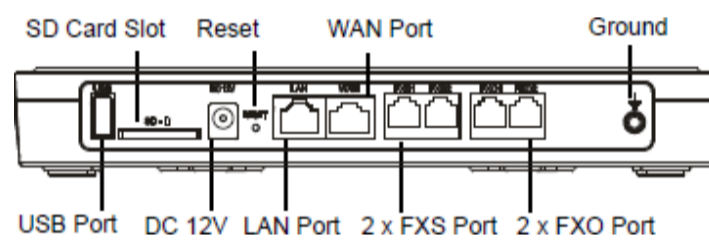


Figure 2: UCM6202 Back View

To set up the UCM6202, follow the steps below:

1. Connect one end of an RJ-45 Ethernet cable into the WAN port of the UCM6202.
2. Connect the other end of the Ethernet cable into the uplink port of an Ethernet switch/hub.
3. Connect the 12V DC power adapter into the power jacks located on the back of the UCM6202. It is highly recommended to connect the other end of the plug to a surge protected power outlet.
4. Wait for the UCM6202 to boot up. The LCD in the front will show the device hardware information when the boot process is done.
5. Once the UCM6202 is successfully connected to network, the LED indicator for WAN in the front will be solid green and the LCD will display the IP address.
6. (Optional) Connect PSTN lines from the wall jack to the FXO ports; connect analog lines (phone and Fax) to the FXS ports.

The ground screw needs to be connected.

Connect the UCM6204

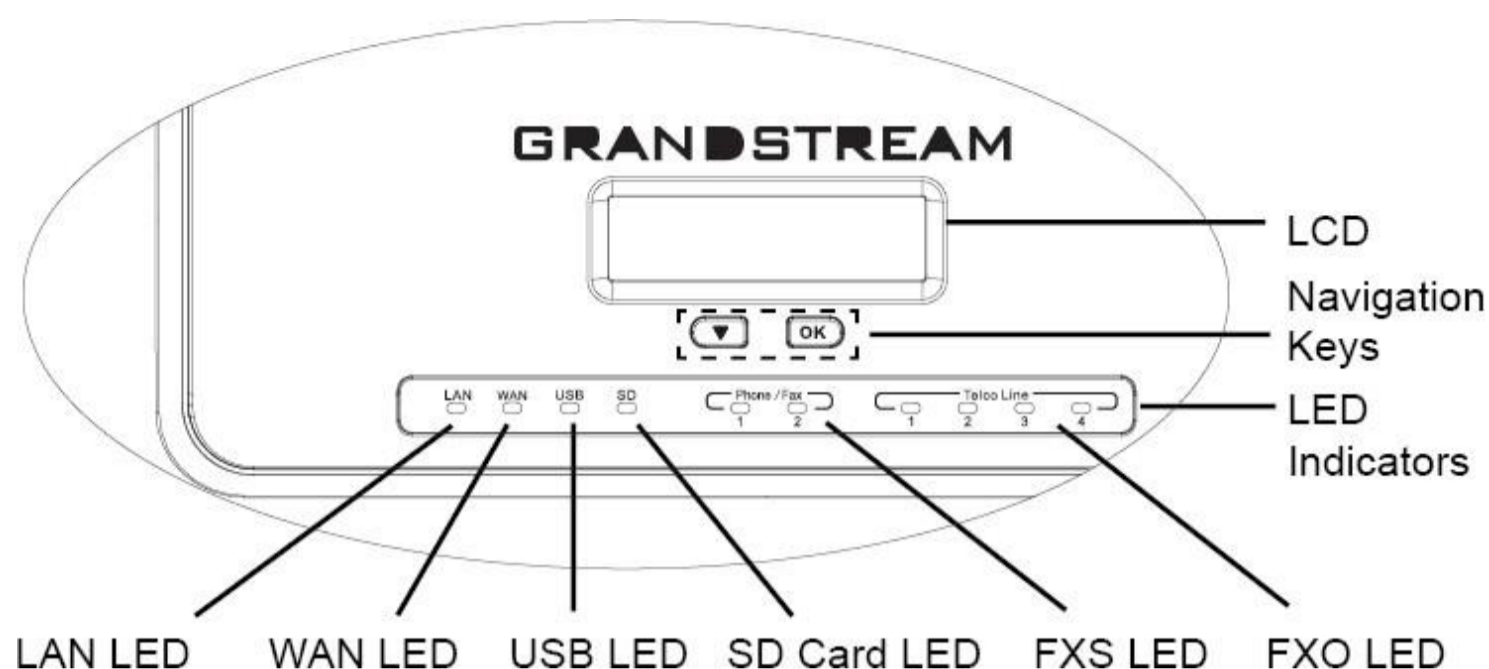


Figure 3: UCM6204 Front View

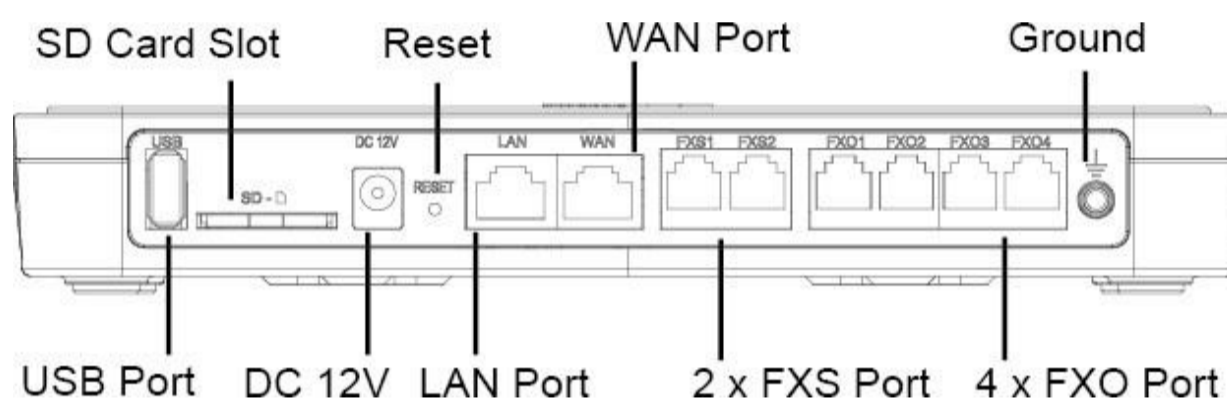


Figure 4: UCM6204 Back View

To set up the UCM6204, follow the steps below:

1. Connect one end of an RJ-45 Ethernet cable into the WAN port of the UCM6204.
2. Connect the other end of the Ethernet cable into the uplink port of an Ethernet switch/hub.
3. Connect the 12V DC power adapter into the power jacks located on the back of the UCM6204. It is highly recommended to connect the other end of the plug to a surge protected power outlet.
4. Wait for the UCM6204 to boot up. The LCD in the front will show the device hardware information when the boot process is done.
5. Once the UCM6204 is successfully connected to network, the LED indicator for WAN in the front will be solid green and the LCD will display the IP address.
6. (Optional) Connect PSTN lines from the wall jack to the FXO ports; connect analog lines (phone and Fax) to the FXS ports.

The ground screw needs to be connected.

Connect the UCM6208

To set up the UCM6208, follow the steps below:

1. Connect one end of an RJ-45 Ethernet cable into the WAN port of the UCM6208.
2. Connect the other end of the Ethernet cable into the uplink port of an Ethernet switch/hub.
3. Connect the 12V DC power adapter into the power jacks located on the back of the UCM6208. It is highly recommended to connect the other end of the plug to a surge protected power outlet.

4. Wait for the UCM6208 to boot up. The LCD in the front will show the device hardware information when the boot process is done.
5. Once the UCM6208 is successfully connected to network, the LED indicator for NETWORK in the front will be solid green and the LCD will display the IP address.
6. (Optional) Connect PSTN lines from the wall jack to the FXO ports; connect analog lines (phone and Fax) to the FXS ports.

The ground screw needs to be connected.

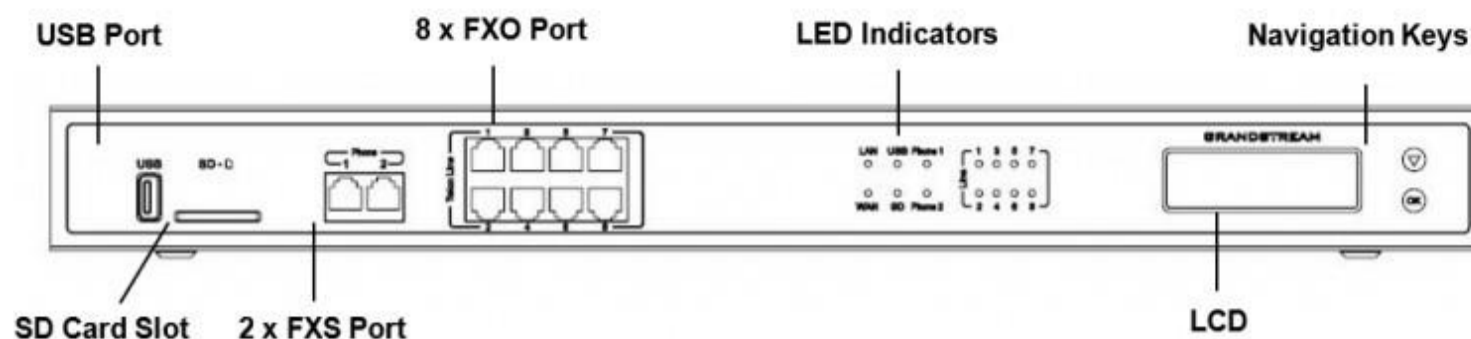


Figure 5: UCM6208 Front View



Figure 6: UCM6208 Back View

Safety Compliances

The UCM6200 series IP PBX complies with FCC/CE and various safety standards. The UCM6200 power adapter is compliant with the UL standard. Use the universal power adapter provided with the UCM6200 package only. The manufacturer's warranty does not cover damages to the device caused by unsupported power adapters.

Warranty

If the UCM6200 series IP PBX was purchased from a reseller, please contact the company where the device was purchased for replacement, repair or refund. If the device was purchased directly from Grandstream, contact our Technical Support Team for an RMA (Return Materials Authorization) number before the product is returned. Grandstream reserves the right to remedy warranty policy without prior notification.

Warning:

Use the power adapter provided with the UCM6200 series IP PBX. Do not use a different power adapter as this may damage the device. This type of damage is not covered under warranty.

Getting Started

To get started with the UCM6200 setup process, use the following available interfaces: LCD display, LED indicators, and web portal.

- The LCD display shows hardware, software, and network information and can be navigated via the DOWN and OK buttons next to the display. From here, users can configure basic network settings, run diagnostic tests, and factory reset.
- The LED indicators at the front of the device provides interface connection and activity status.
- The web portal (may also be referred to as web UI in this guide) is the primary method of configuring the UCM.

This section will provide step-by-step instructions on how to use these interfaces to quickly set up the UCM and start making and receiving calls with it.

Use the LCD Menu

◦ Idle Screen

Once the device has booted up completely, the LCD will show the UCM model, hardware version (e.g., V1.4A), and IP address. Upon menu key press timeout (15 seconds), the screen will default back to this information. Pressing the DOWN button will show the system time.

◦ Menu

Pressing the OK button will show the main menu. All available menu options are found in *[Table 3: LCD Menu Options]*.

◦ Menu Navigation

Pressing the DOWN button will scroll through the menu options. Press the OK button to select an option.

◦ Exit

Selecting the Back option will return to the previous menu. For the Device Info, Network Info, and Web Info screens that have no Back option, pressing the OK button will return to the previous menu.

◦ LCD Backlight

The LCD backlight will turn on upon button press and will go off when idle for 30 seconds.

The following table summarizes the layout of the LCD menu of UCM.

Table 3: LCD Menu Options

View Events	<ul style="list-style-type: none"> ◦ Critical Events ◦ Other Events
Device Info	<ul style="list-style-type: none"> ◦ Hardware: Hardware version number ◦ Software: Software version number ◦ P/N: Part number ◦ WAN MAC: WAN side MAC address ◦ LAN MAC: LAN side MAC address ◦ Uptime: System uptime

Network Info	<ul style="list-style-type: none"> ◦ WAN Mode: DHCP, Static IP, or PPPoE ◦ WAN IP: IP address ◦ WAN Subnet Mask ◦ LAN IP: IP address ◦ LAN Subnet Mask
Network Menu	<ul style="list-style-type: none"> ◦ WAN Mode: Select WAN mode as DHCP, Static IP or PPPoE ◦ Static Route Reset: Select this to reset static route settings.
Factory Menu	<ul style="list-style-type: none"> ◦ Reboot ◦ Factory Reset ◦ LCD Test Patterns <p>Press DOWN and OK buttons to scroll through and select different LCD patterns to test. Once a test is done, press the OK button to return to the previous menu.</p> <ul style="list-style-type: none"> ◦ Fan Mode <p>Select Auto or On.</p> <ul style="list-style-type: none"> ◦ LED Test Patterns <p>All On, All Off, and Blinking are the available options. Selecting Back in the menu will revert the LED indicators back to their actual status.</p> <ul style="list-style-type: none"> ◦ RTC Test Patterns <p>Select either 2022-02-22 22:22 or 2011-01-11 11:11 to start the RTC (Real-Time Clock) test pattern. Check the system time from either the LCD idle screen or in the web portal System Status->System Information->General page. To revert back to the correct time, manually reboot the device.</p> <ul style="list-style-type: none"> ◦ Hardware Testing <p>Select Test SVIP to verify hardware connections within the device. The result will display on the LCD when the test is complete.</p>
Web Info	<ul style="list-style-type: none"> ◦ Protocol: Web access protocol (HTTP/ HTTPS). HTTPS is used by default. ◦ Port: Web access port number, which is 8089 by default.
SSH Switch	<ul style="list-style-type: none"> ◦ Enable SSH ◦ Disable SSH <p>SSH access is disabled by default</p>

Use the LED Indicators

The UCM6200 has LED indicators in the front to display connection status. The following table shows the status definitions.

LED Indicator	LED Status
LAN	Solid: Connected Flashing: Data Transferring OFF: Not Connected
WAN	
USB	
SD	
FXS (Phone/Fax)	
FXO (Telco Line)	

Table 4: UCM6202/UCM6204 LED Indicators

LED	LED Status
NETWORK	Solid: Connected OFF: Not Connected
ACT	Solid: Connected Flashing: Data Transferring OFF: Not Connected
USB	
SD	
Phone (FXS)	
Line (FXO)	

Table 5: UCM6208 LED Indicators

Using the Web UI

Accessing the Web UI

The UCM's web server responds to HTTP/HTTPS GET/POST requests. Embedded HTML pages allow users to configure the device through a web browser such as Microsoft IE (version 8+), Mozilla Firefox, Google Chrome, etc. To access the UCM's web portal, follow the steps below:

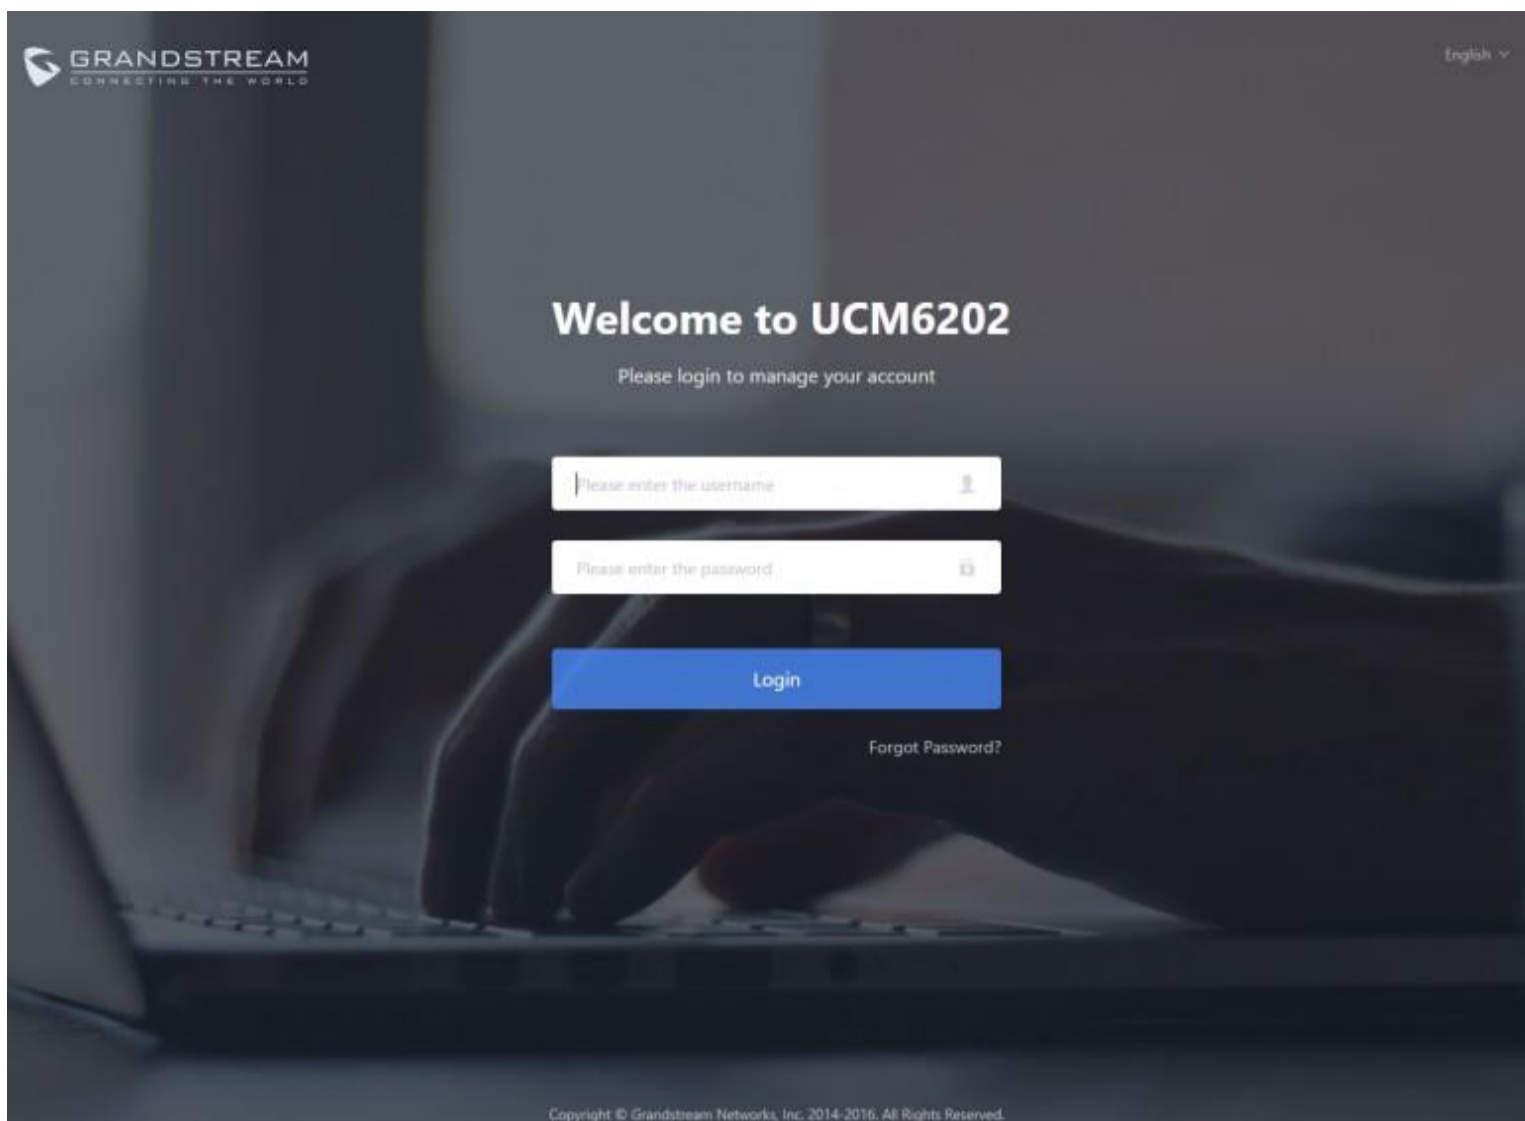


Figure 7: UCM6202 Web GUI Login Page

1. Make sure your computer is on the same network as the UCM.
2. Make sure that the UCM's IP address is displayed on its LCD.
3. Enter the UCM's IP address into a web browser's address bar. The login page should appear (please see the above image).
4. Enter default administrator username "admin" and password.

Units manufactured starting January 2017 have a unique random password printed on the sticker located on the back of the unit. It is highly recommended to change the default password after logging in for the first time. Older units have default password "admin".

By default, the UCM6200 has **Redirect From Port 80** enabled. As such, if users type in the UCM6200 IP address in the web browser, the web page will be automatically redirected to the page using HTTPS and port 8089. For example, if the LCD shows 192.168.40.167, and 192.168.40.167 is entered into the web browser, the web page will be redirected to: <https://192.168.40.167:8089>

The option **Redirect From Port 80** can be found in the **System Settings**→**HTTP Server** page.

Setup Wizard

After logging into the UCM web portal for the first time, the setup wizard will guide the user through basic configurations such as time zone, network settings, trunks, and routing rules.

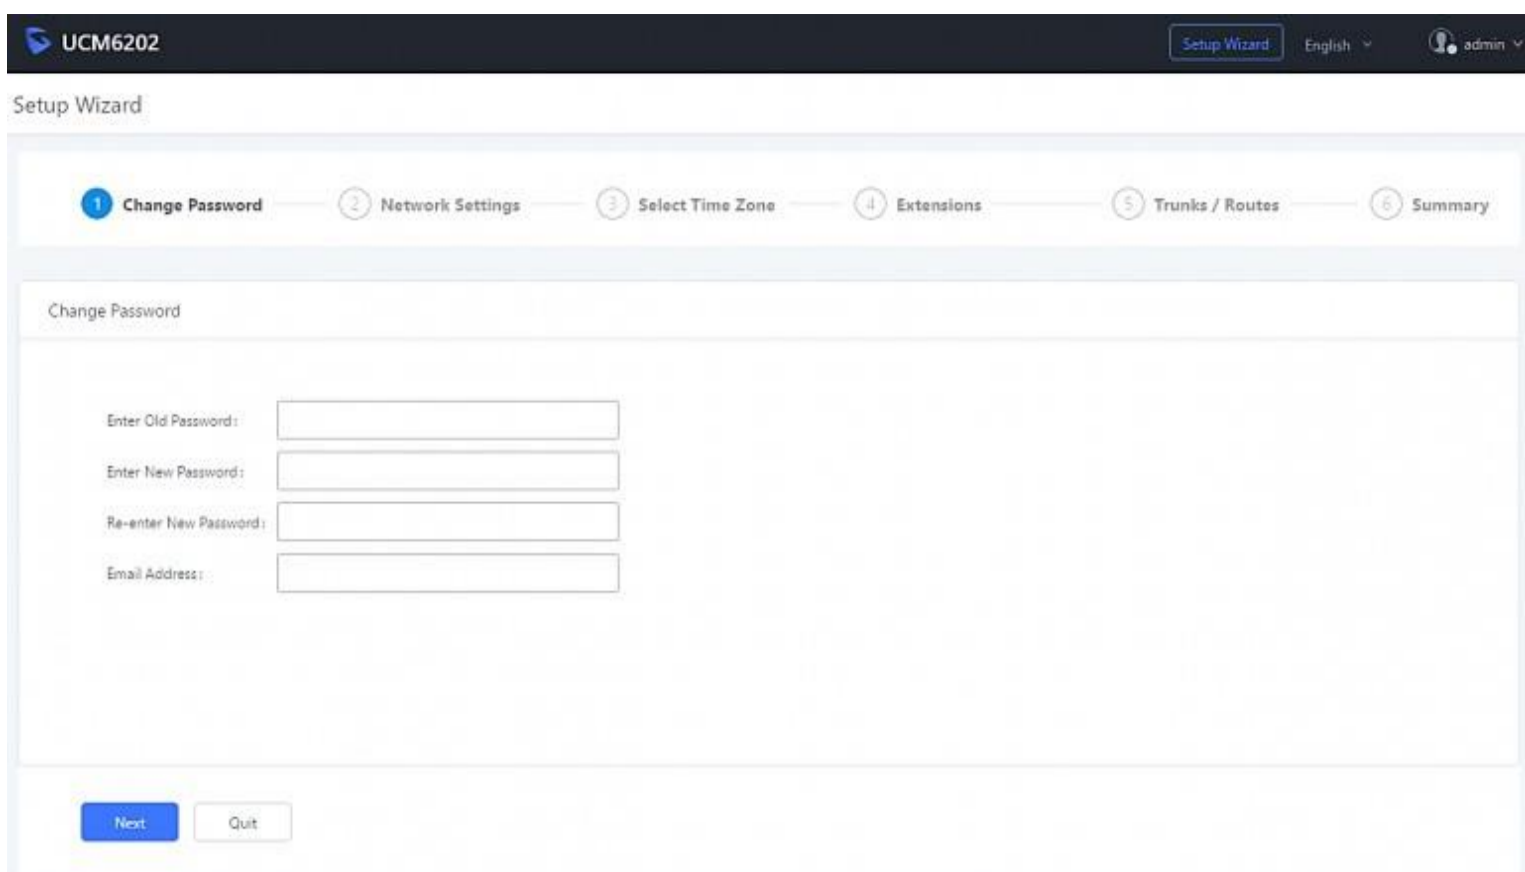


Figure 8: UCM6200 Setup Wizard

The setup wizard can be closed and reopened at any time. At the end of the wizard, a summary of the pending configuration changes can be reviewed before applying them.

Main Settings


There are 8 main sections in the web portal to manage various features of the UCM.

- **System Status:** Displays the dashboard, system information, current active calls, and network status.
- **Extensions/Trunks:** Manages extensions, trunks, and routing rules.
- **Call Features:** Manages various features of the UCM such as the IVR and voicemail.
- **PBX Settings:** Manages the settings related to PBX functionality such as SIP settings and interface settings.
- **System Settings:** Manages the settings related to the UCM system itself such as network and security settings.
- **CDR:** Contains the call detail records, statistics, and audio recordings of calls processed by the UCM.
- **Value-Added Features:** Manages the settings of features unrelated to core PBX functionality such as Zero Config provisioning and CRM/PMS integrations.
- **Maintenance:** Manages settings and logs related to system management and maintenance such as user management, activity logs, backup settings, upgrade settings and troubleshooting tools.

Web GUI Languages

Currently the UCM6200 series Web GUI supports *English, Simplified Chinese, Traditional Chinese, Spanish, French, Portuguese, Russian, Italian, Polish, German, Turkish and Czech.*

Users can select the UCM's web UI display language in the top-right corner of the page.

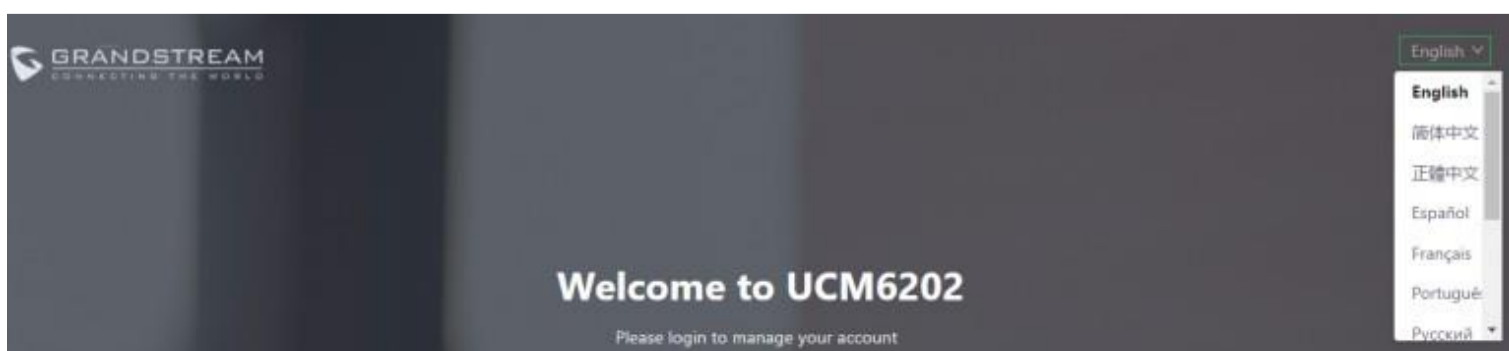

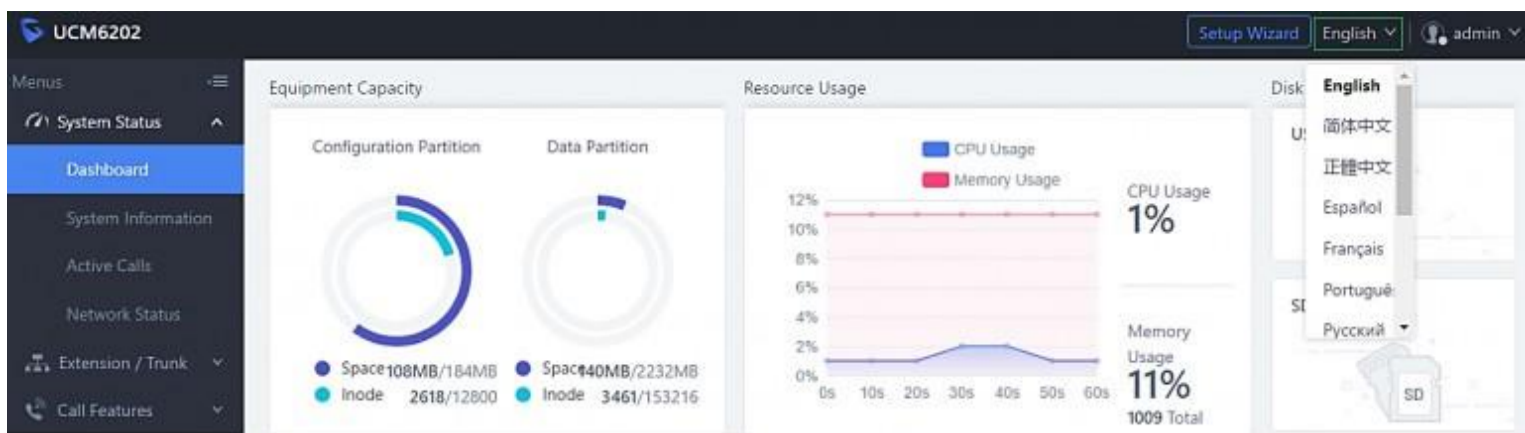


Figure 9: UCM6200 Web GUI Language

Web GUI Search Bar

Users can search for options in the web portal with the search bar on the top right of the page.

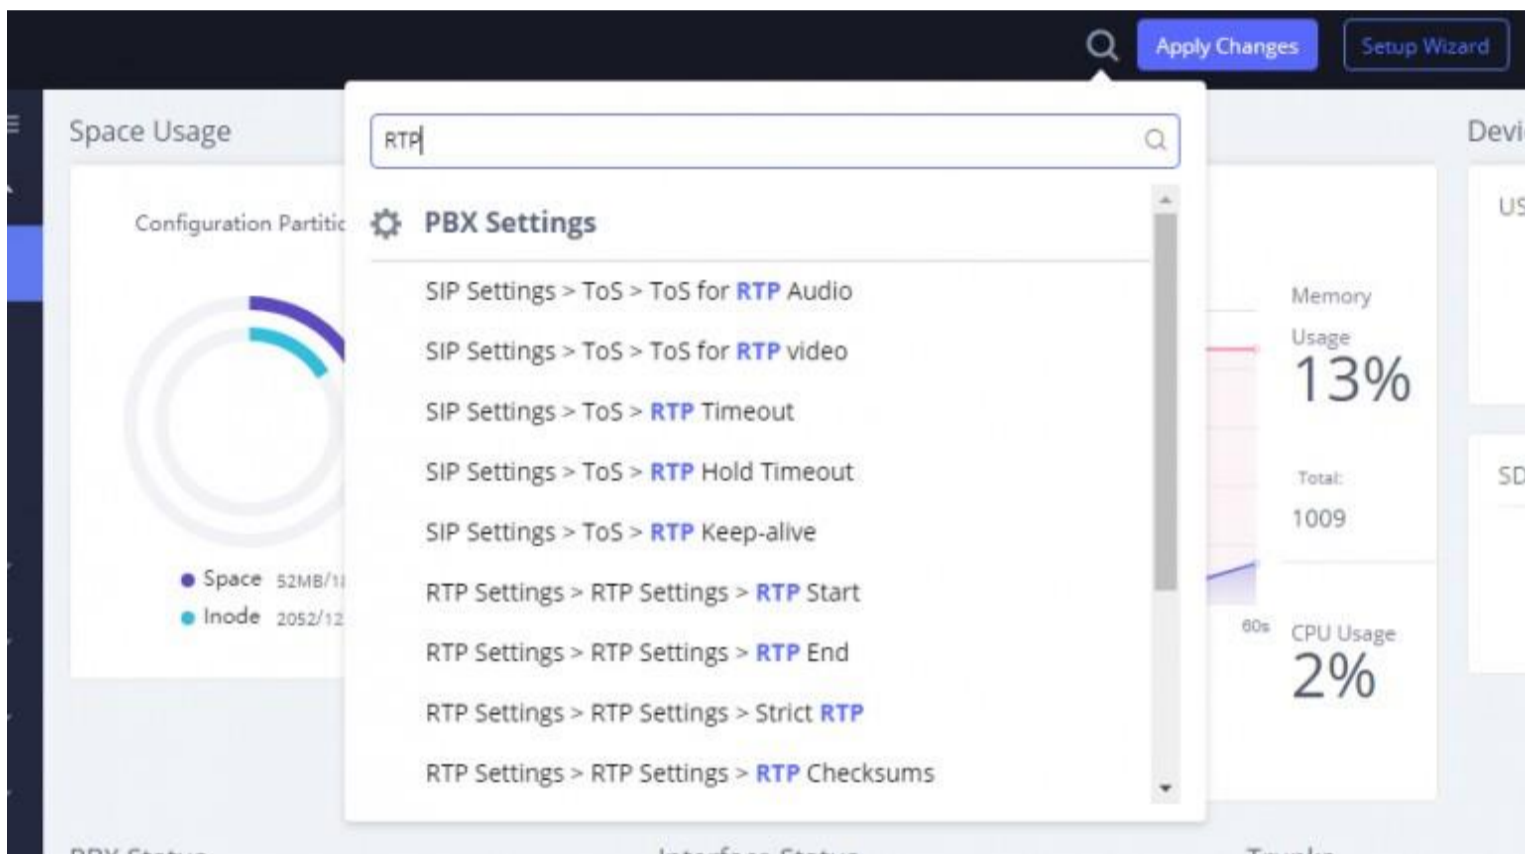


Figure 10: Web GUI Search Bar

Saving and Applying Changes

After making changes to a page, click on the “Save” button to save them and then the “Apply Changes” button that appears to finalize the changes. If a modification requires a reboot, a prompt will appear asking to reboot the device.

Setting Up an Extension

Power on the UCM6200 and your SIP endpoint. Connect both devices to the same network and follow the steps below to set up an extension.

1. Log into the UCM web portal and navigate to **Extension/Trunk->Extensions**
2. Click on the “Add” button to start creating a new extension. The Extension and SIP/IAX Password information will be used to register to this extension. To set up voicemail, the Voicemail Password will be required.
3. To register an endpoint to this extension, go into your endpoint’s web UI and edit the desired account. Enter the newly created extension’s number, SIP user ID, and password into their corresponding fields on the endpoint. Enter the UCM’s IP address into the SIP server field. If setting up voicemail, enter *97 into the Voice Mail Access Number field. This field may be named differently on other devices.
4. To access the extension’s voicemail, use the newly registered extension to dial *97 and access the personal voicemail system. Once prompted, enter the voicemail password. If successful, you will now be prompted with various voicemail options.
5. You have now set up an extension on an endpoint.

System Settings

This section will explain the available system-wide parameters and configuration options on the UCM62xx. This includes settings for the following items: HTTP server, network, OpenVPN, DDNS, LDAP server and email server.

HTTP Server

The UCM6200's embedded web server responds to HTTP/HTTPS GET/POST requests and allows users to configure the UCM via web browsers such as Microsoft IE, Mozilla Firefox, and Google Chrome. By default, users can access the UCM by just typing its IP address into a browser address bar. The browser will automatically be redirected to HTTPS using port 8089. For example, typing in "192.168.40.50" into the address bar will redirect the browser to "https://192.168.40.50:8089". This behavior can be changed in the **System Settings->HTTP Server** page.

Table 6: HTTP Server Settings

Redirect From Port 80	Toggles automatic redirection to UCM's web portal from port 80. If disabled, users will need to manually add the UCM's configured HTTP/HTTPS port to the server address when accessing the UCM web portal via browser. Default is "Enabled".
Protocol Type	Select either HTTP or HTTPS as the protocol to access the UCM's HTTP server. This will also determine what is used when endpoints download config files from the UCM via Zero Config. Default is "HTTPS".
Port	Specifies the port number used to access the UCM HTTP server. Default is "8089".
Enable IP Whitelist	If enabled, only the server addresses in whitelist will be able to access the UCM's web portal. It is highly recommended to add the IP address currently used to access the UCM web page before enabling this option. Default is "Disabled".
Permitted IP(s)	List of addresses that can access the UCM web portal. Ex: 192.168.6.233 / 255.255.255.255
Certificate Options	Selects the method of acquiring SSL certificates for the UCM web server. Two methods are currently available: – Upload Certificate: Upload the appropriate files from one's own PC. – Request Certificate: Enter the domain for which to request a certificate for from Let's Encrypt.
TLS Private Key	Uploads the private key for the HTTP server. Note: Key file must be under 2MB in file size and in *.pem format. File name will automatically be changed to "private.pem".
TLS Cert	Uploads the certificate for the HTTP server. Note: Certificate must be under 2MB in file size and in *.pem format. This will be used for TLS connections and contains private key for the client and signed certificate for the server.
Domain	Enter the domain to request the certificate for and click on Request Certificate to request the certificate.

If the protocol or port has been changed, the user will be logged out and redirected to the new URL.

Network Settings

After successfully connecting the UCM6200 to the network for the first time, users could login the Web GUI and go to **System Settings**→**Network Settings** to configure the network parameters for the device.

- UCM6200 supports Route/Switch/Dual mode functions.

In this section, all the available network setting options are listed for all models. Select each tab in Web GUI→**System Settings**→**Network Settings** page to configure LAN settings, WAN settings, 802.1X and Port Forwarding.

Basic Settings

Please refer to the following tables for basic network configuration parameters on UCM6202, UCM6204 and UCM6208, respectively.

Table 7: UCM6200 Network Settings→Basic Settings

Method	Select “Route”, “Switch” or “Dual” mode on the network interface of UCM6200. The default setting is “Route”. <ul style="list-style-type: none">◦ Route WAN port will be used for uplink connection. LAN port will function similarly to a regular router port.◦ Switch WAN port will be used for uplink connection. LAN port will be used as a bridge for connections.◦ Dual Both WAN and LAN ports will be used for uplink connections labeled as LAN2 and LAN1, respectively. The port selected as the Default Interface will need to have a gateway IP address configured if it is using a static IP.
MTU	Specifies the maximum transmission unit value. Default is 1500.
IPv4 Address	
Preferred DNS Server	If configured, this will be used as the Primary DNS server.
WAN (when “Method” is set to “Route”)	
IP Method	Select DHCP, Static IP, or PPPoE. The default setting is DHCP.
IP Address	Enter the IP address for static IP settings. The default setting is 192.168.0.160.
Subnet Mask	Enter the subnet mask address for static IP settings. The default setting is 255.255.0.0.
Gateway IP	Enter the gateway IP address for static IP settings. The default setting is 0.0.0.0.
DNS Server 1	Enter the DNS server 1 address for static IP settings. The default setting is 0.0.0.0.

DNS Server 2	Enter the DNS server 2 address for static IP settings.
Username	Enter the username to connect via PPPoE.
Password	Enter the password to connect via PPPoE.
Layer 2 QoS 802.1Q/VLAN Tag	Assign the VLAN tag of the layer 2 QoS packets for WAN port. The default value is 0.
Layer 2 QoS 802.1p Priority Value	Assign the priority value of the layer 2 QoS packets for WAN port. The default value is 0.
LAN (when Method is set to "Route")	
IP Address	Enter the IP address assigned to LAN port. The default setting is 192.168.2.1.
Subnet Mask	Enter the subnet mask. The default setting is 255.255.255.0.
DHCP Server Enable	Enable or disable DHCP server capability. The default setting is "Yes".
DNS Server 1	Enter DNS server address 1. The default setting is 8.8.8.8.
DNS Server 2	Enter DNS server address 2. The default setting is 208.67.222.222.
Allow IP Address From	Enter the DHCP IP Pool starting address. The default setting is 192.168.2.100.
Allow IP Address To	Enter the DHCP IP Pool ending address. The default setting is 192.168.2.254.
Default IP Lease Time	Enter the IP lease time (in seconds). The default setting is 43200.
LAN (when Method is set to "Switch")	
IP Method	Select DHCP, Static IP, or PPPoE. The default setting is DHCP.
IP Address	Enter the IP address for static IP settings. The default setting is 192.168.0.160.
Subnet Mask	Enter the subnet mask address for static IP settings. The default setting is 255.255.0.0.
Gateway IP	Enter the gateway IP address for static IP settings. The default setting is 0.0.0.0.
DNS Server 1	Enter the DNS server 1 address for static IP settings. The default setting is 0.0.0.0.
DNS Server 2	Enter the DNS server 2 address for static IP settings.

Username	Enter the username to connect via PPPoE.
Password	Enter the password to connect via PPPoE.
Layer 2 QoS 802.1Q/VLAN Tag	Assign the VLAN tag of the layer 2 QoS packets for LAN port. The default value is 0.
Layer 2 QoS 802.1p Priority Value	Assign the priority value of the layer 2 QoS packets for LAN port. The default value is 0.
LAN 1 / LAN 2 (when Method is set to “Dual”)	
Default Interface	If “Dual” is selected as the Method, users must select either LAN 1 (WAN port) or LAN 2 (LAN port) to be used as the default interface. Default setting is LAN 2.
IP Method	Select DHCP, Static IP, or PPPoE. The default setting is DHCP.
IP Address	Enter the IP address for static IP settings. The default setting is 192.168.0.160.
Subnet Mask	Enter the subnet mask address for static IP settings. The default setting is 255.255.0.0.
Gateway IP	Enter the gateway IP address for static IP settings when the port is assigned as default interface. The default setting is 0.0.0.0.
DNS Server 1	Enter the DNS server 1 address for static IP settings. The default setting is 0.0.0.0.
DNS Server 2	Enter the DNS server 2 address for static IP settings.
Username	Enter the username to connect via PPPoE.
Password	Enter the password to connect via PPPoE.
Layer 2 QoS 802.1Q/VLAN Tag	Assign the VLAN tag of the layer 2 QoS packets for LAN port. The default value is 0.
Layer 2 QoS 802.1p Priority Value	Assign the priority value of the layer 2 QoS packets for LAN port. The default value is 0.
IPv6 Address	
WAN (when “Method” is set to “Route”)	

IP Method	Select Auto or Static. The default setting is Auto
IP Address	Enter the IP address for static IP settings.
IP Prefixlen	Enter the Prefix length for static settings. Default is 64
DNS Server 1	Enter the DNS server 1 address for static settings.
DNS Server 2	Enter the DNS server 2 address for static settings.
LAN (when Method is set to “Route”)	
DHCP Server	<p>Select Disable, Auto or DHCPv6.</p> <p>Disable: Disables the DHCPv6 server.</p> <p>Auto: Stateless address auto configuration using NDP protocol.</p> <p>DHCPv6: Stateful address auto configuration using DHCPv6 protocol.</p>
DHCP Prefix	Enter DHCP prefix. (Default is 2001:db8:2:2::)
DHCP prefixlen	Enter the Prefix length for static settings. Default is 64
DNS Server 1	Enter the DNS server 1 address for static settings. Default is (2001:4860:4860::8888)
DNS Server 2	Enter the DNS server 2 address for static settings. Default is (2001:4860:4860::8844)
Allow IP Address From	Configure starting IP address assigned by the DHCP prefix and DHCP prefixlen.
Allow IP Address To	Configure the ending IP address assigned by the DHCP Prefix and DHCP prefixlen.
Default IP Lease Time	Configure the lease time (in second) of the IP address.
LAN (when Method is set to “Switch”)	
IP Method	Select Auto or Static. The default setting is Auto
IP Address	Enter the IP address for static IP settings.
IP Prefixlen	Enter the Prefix length for static settings. Default is 64
DNS Server 1	Enter the DNS server 1 address for static settings.
DNS Server 2	Enter the DNS server 2 address for static settings.

LAN 1 / LAN 2 (when Method is set to “Dual”)	
Default Interface	Users must select either LAN 1 (WAN port) or LAN 2 (LAN port) to be used as the default interface. Default setting is LAN 2.
IP Method	Select Auto or Static. The default setting is Auto
IP Address	Enter the IP address for static IP settings.
IP Prefixlen	Enter the Prefix length for static settings. Default is 64
DNS Server 1	Enter the DNS server 1 address for static settings.
DNS Server 2	Enter the DNS server 2 address for static settings.

◦ **Method: Route**

When the UCM6200 has, method set to Route in network settings, WAN port interface is used for uplink connection and LAN port interface is used as a router. Please see the sample diagram below.

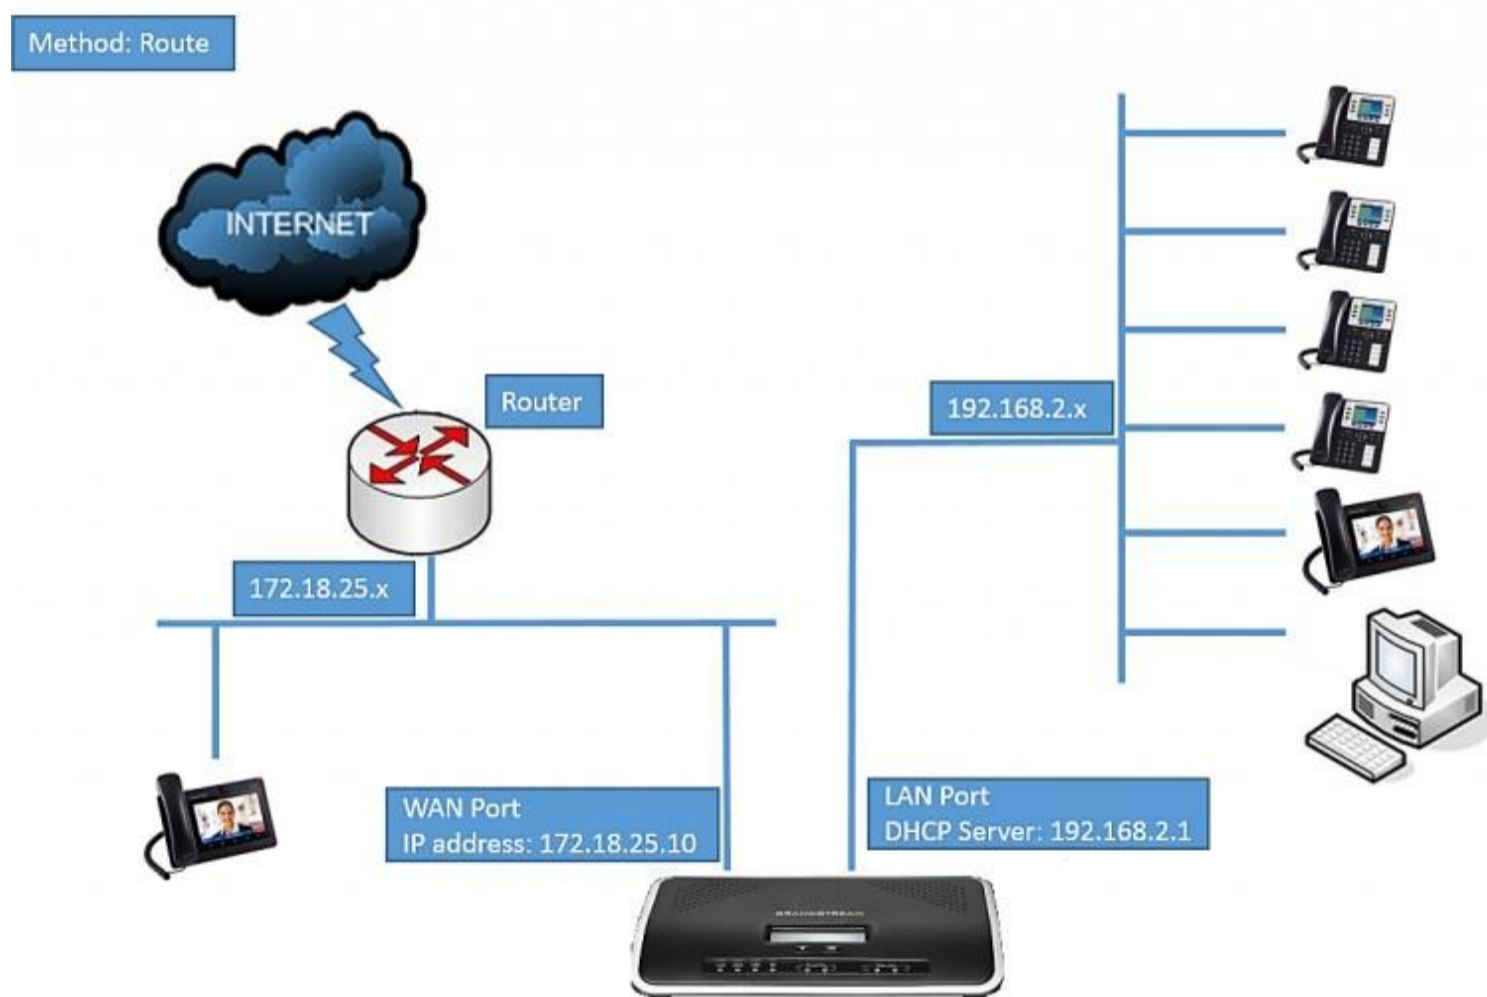


Figure 11: UCM6202 Network Interface Method: Route

◦ **Method: Switch**

WAN port interface is used for uplink connection; LAN port interface is used as room for PC connection.



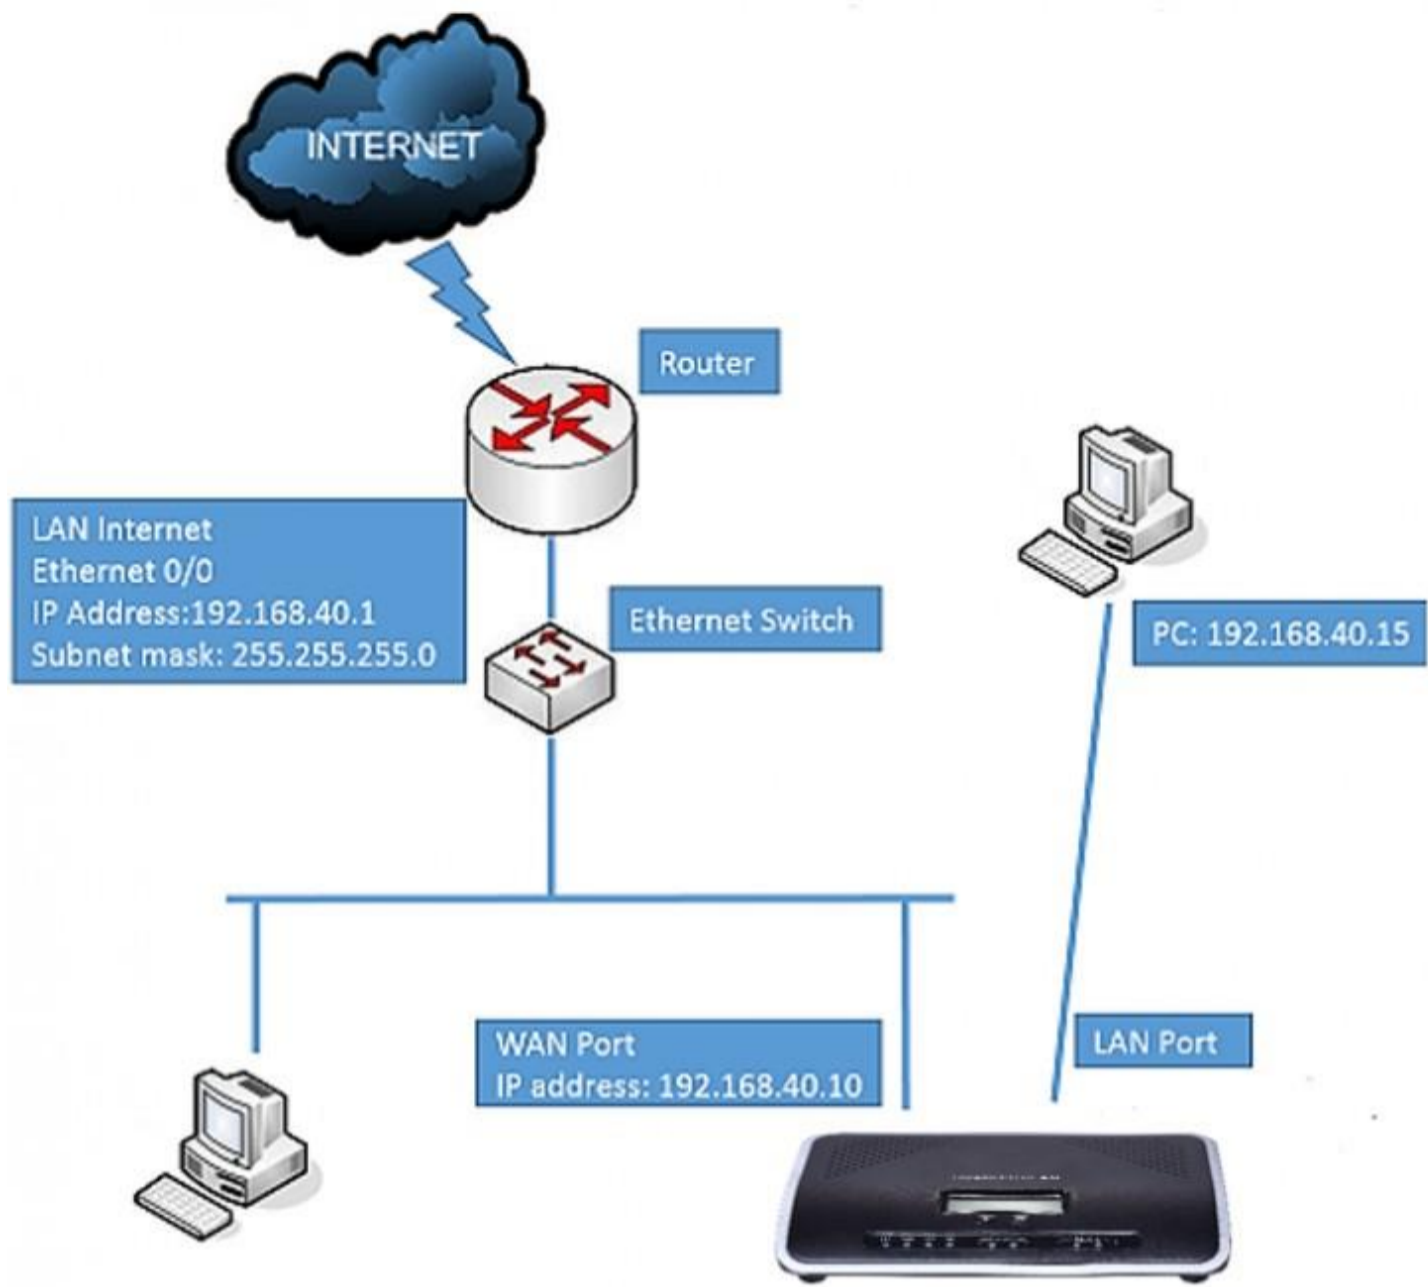


Figure 12: UCM6202 Network Interface Method: Switch

o **Method: Dual**

Both WAN port and LAN port are used for uplink connection. Users will need assign LAN 1 or LAN 2 as the default interface in option “Default Interface” and configure “Gateway IP” if static IP is used for this interface.

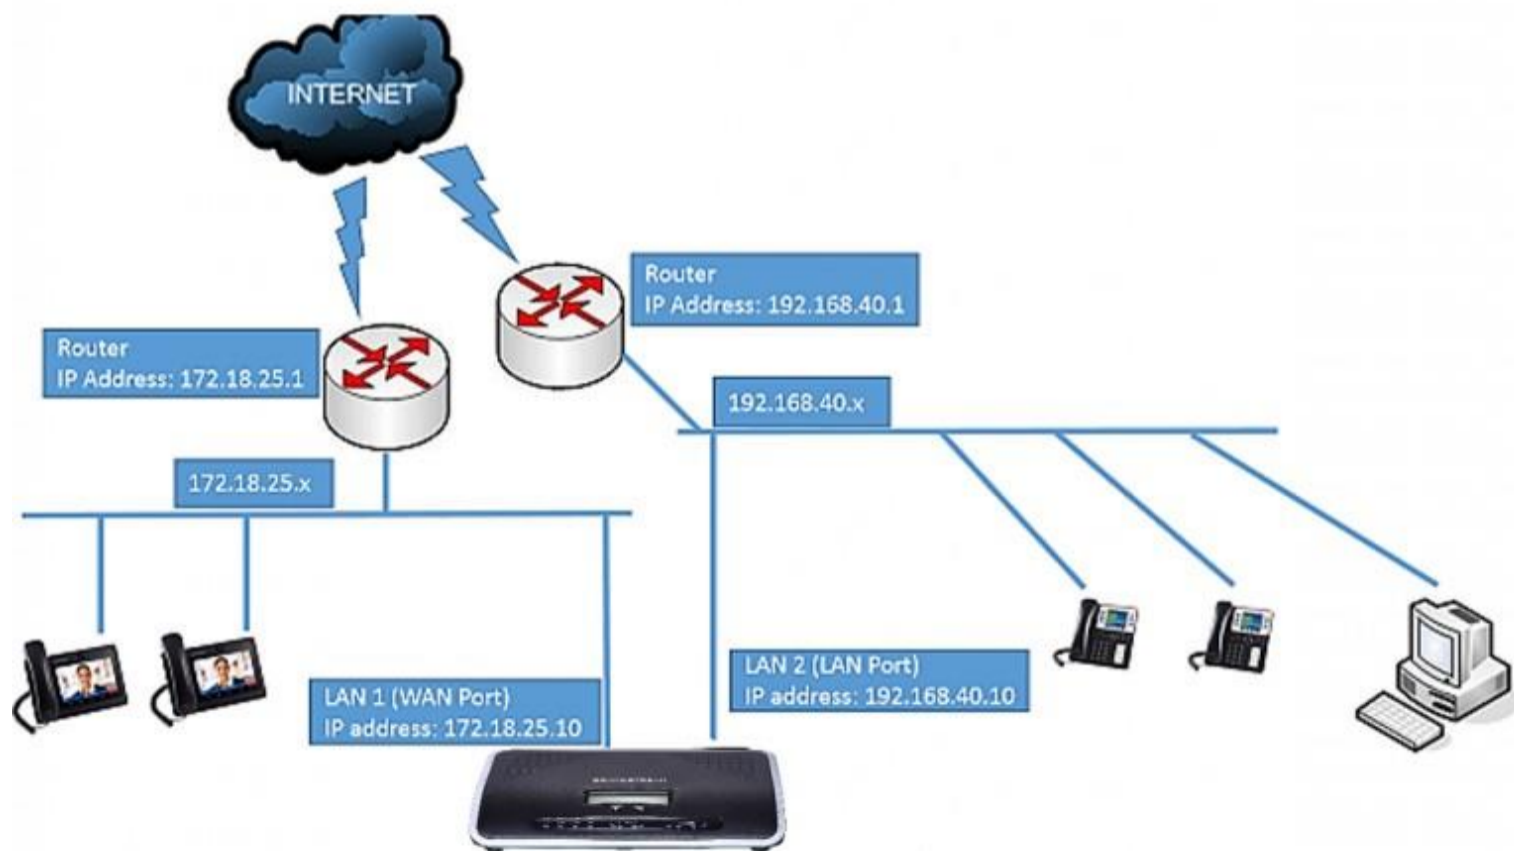


Figure 13: UCM6202 Network Interface Method: Dual

DHCP Client List

This page lists all the detected devices on the LAN and the IP addresses that were provided to them. Additionally, users can manually link a MAC address to an IP address.

When devices receive IP addresses from the UCM's DHCP server, they will be listed in the **System Settings->Network Settings->DHCP Client List** page as shown below.



Figure 14: DHCP Client List

To manually add and bind a MAC address to an IP address, click on **+ Add Mac Address Bind**. The following menu will then be displayed.

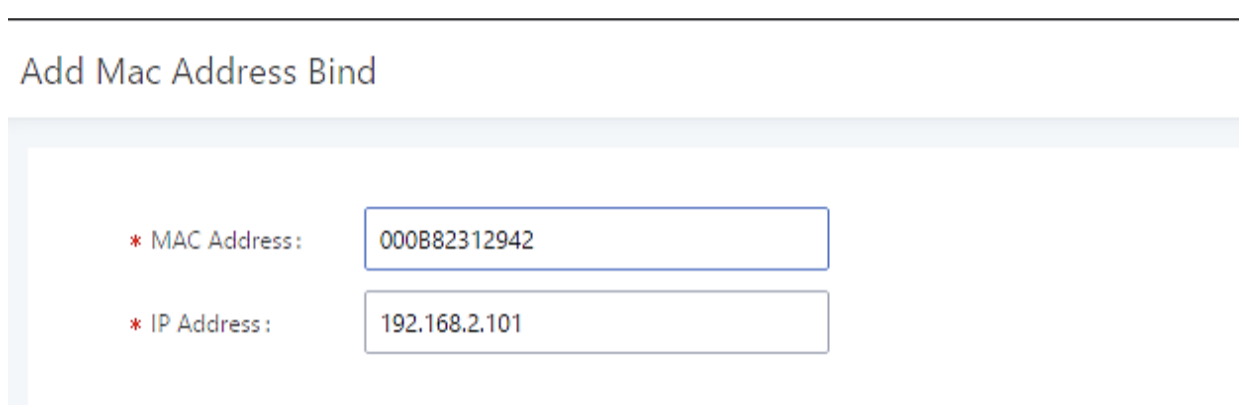


Figure 15: Add MAC Address Bind

Enter the device's MAC address and the IP address to bind it to. This IP address must be in the UCM's DHCP range.

To bind multiple existing MAC addresses that are in the list to their respective IP addresses, check the boxes next to each MAC address and click on the **Batch add MAC addresses to bind** button. A confirmation message will appear on the screen. Click **OK** to bind the addresses.

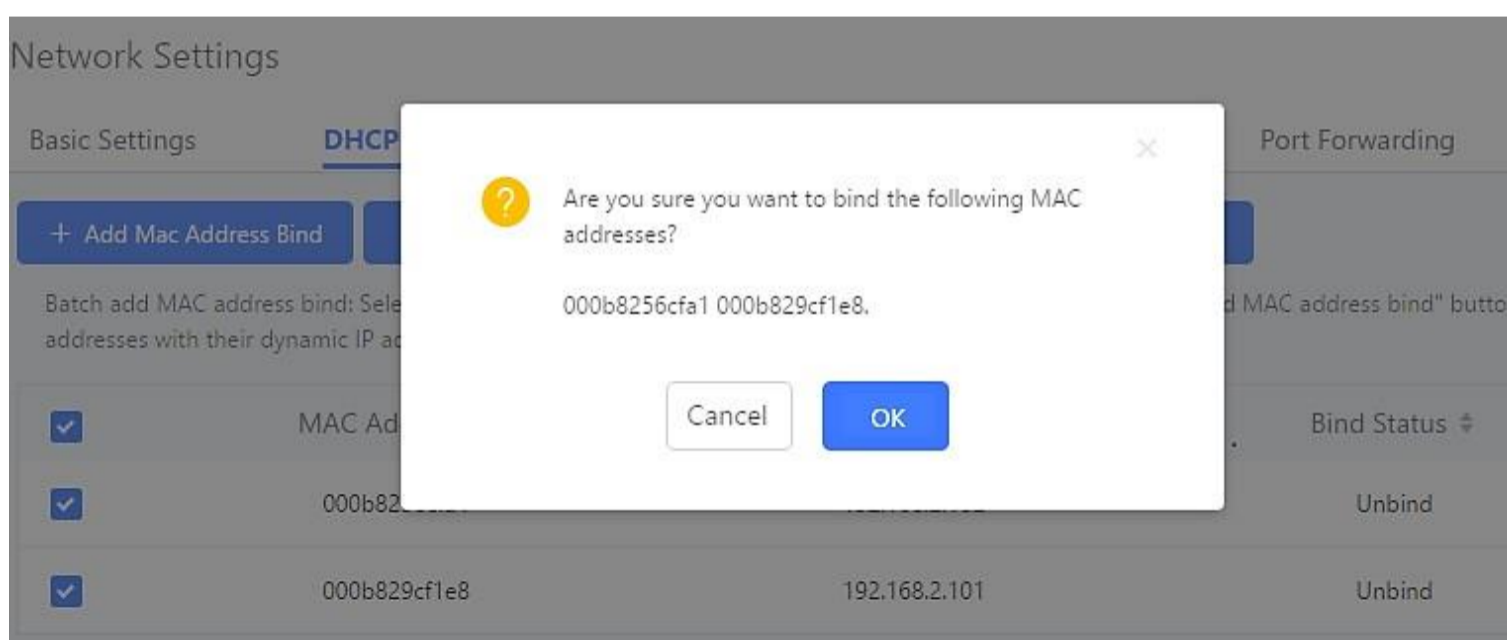


Figure 16: Batch Add MAC Address Bind

The Bind Status for the selected MAC addresses should now be changed from "Unbound" to "Bound".

802.1X

IEEE 802.1X is an IEEE standard for port-based network access control. It provides an authentication mechanism to device before the device can access Internet or other LAN resources. The UCM6200 supports 802.1X as a supplicant/client to be authenticated. The following diagram and figure show UCM6200 use 802.1X mode "EAP-MD5" on WAN port as client in the network to access Internet.

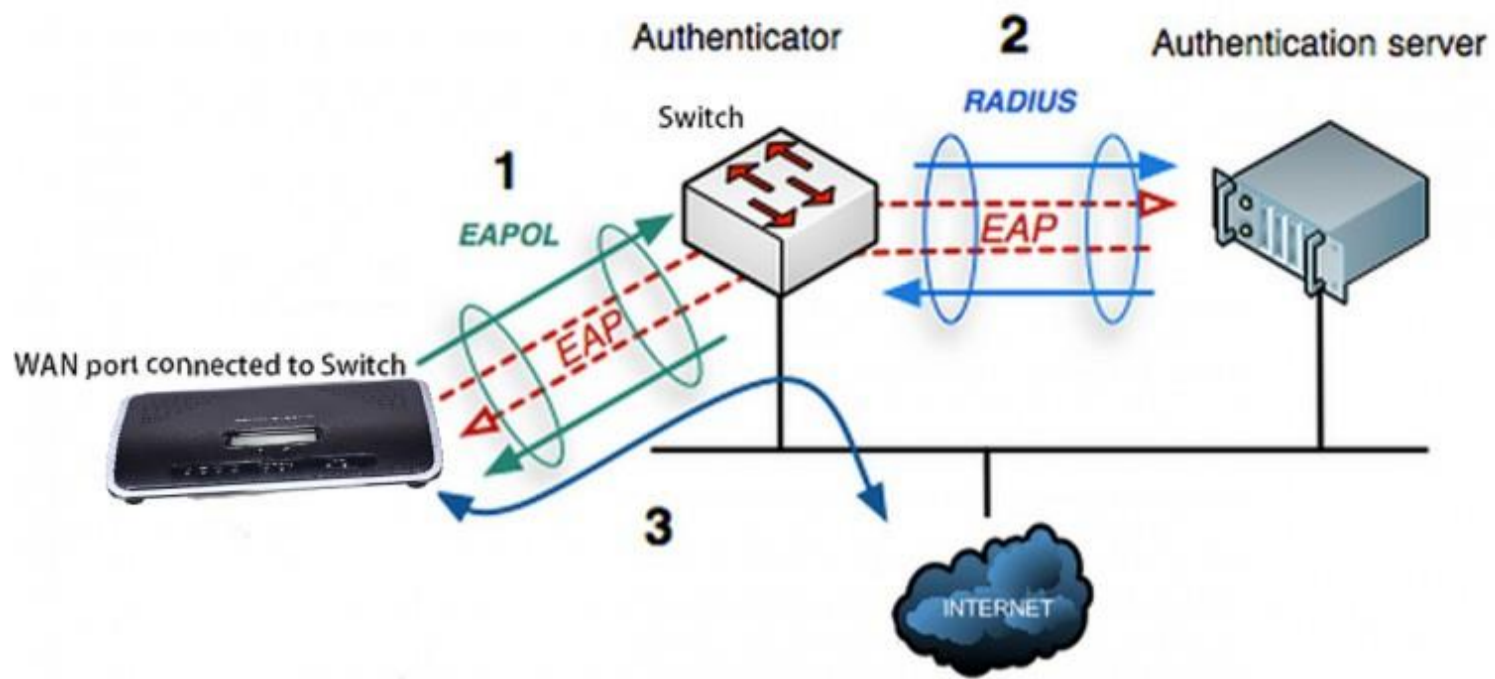


Figure 17: UCM6200 Using 802.1X as Client

Network Settings

Basic Settings DHCP Client List **802.1X Settings** Static Routes Port Forwarding

WAN

802.1X Mode:

* Identity:

* MD5 Password:

Figure 18: UCM6200 Using 802.1X EAP-MD5

The following table shows the configuration parameters for 802.1X on UCM6200. Identity and MD5 password are required for authentication, which should be provided by the network administrator obtained from the RADIUS server. If “EAP-TLS” or “EAP-PEAPv0/MSCHAPv2” is used as the 802.1X mode, users will also need to upload 802.1X CA Certificate and 802.1X Client Certificate, which should be also generated from the RADIUS server.

Table 8: UCM6200 Network Settings→802.1X

802.1X Mode	Select 802.1X mode. The default setting is “Disable”. The supported 802.1X modes are: <ul style="list-style-type: none"> ◦ EAP-MD5 ◦ EAP-TLS ◦ EAP-PEAPv0/MSCHAPv2
Identity	Enter 802.1X mode Identity information.
MD5 Password	Enter 802.1X mode MD5 password information.
802.1X Certificate	Select 802.1X certificate from local PC and then upload.
802.1X Client Certificate	Select 802.1X client certificate from local PC and then upload.

Static Routes

The UCM6200 provides users static routing capability that allows the device to use manually configured routes, instead of dynamically assigned routes or the default gateway. Static routes can be used to define a route when no others are available or can serve as complementary routes alongside existing routes as failover routes, with existing routing on the UCM6200 as a failover backup, etc.

- Click on [+ Create New IPv4 Static Route](#) to create a new IPv4 static route or click on [+ Create New IPv6 Static Route](#) to create a new IPv6 static route. The configuration parameters are listed in the table below.
- Once added, users can select [✎](#) to edit the static route.
- Select [🗑](#) to delete the static route.

Table 9: UCM6200 Network Settings→Static Routes

Destination	Configure the destination IPv4 address or the destination IPv6 subnet for the UCM6200 to reach using the static route. Example: IPv4 address – <i>192.168.66.4</i> IPv6 subnet – <i>2001:740:D::1/64</i>
Netmask	Configure the subnet mask for the above destination address. If left blank, the default value is 255.255.255.255. Example: <i>255.255.255.0</i>
Gateway	Configure the IPv4 or IPv6 gateway address so that the UCM6200 can reach the destination via this gateway. Gateway address is optional. Example: <i>192.168.40.5 or 2001:740:D::1</i>
Interface	Specify the network interface on the UCM6200 to reach the destination using the static route. LAN interface is eth0; WAN interface is eth1.

Static routes configuration can be reset from LCD menu→Network Menu.

The following diagram shows a sample application of static route usage on UCM6204.

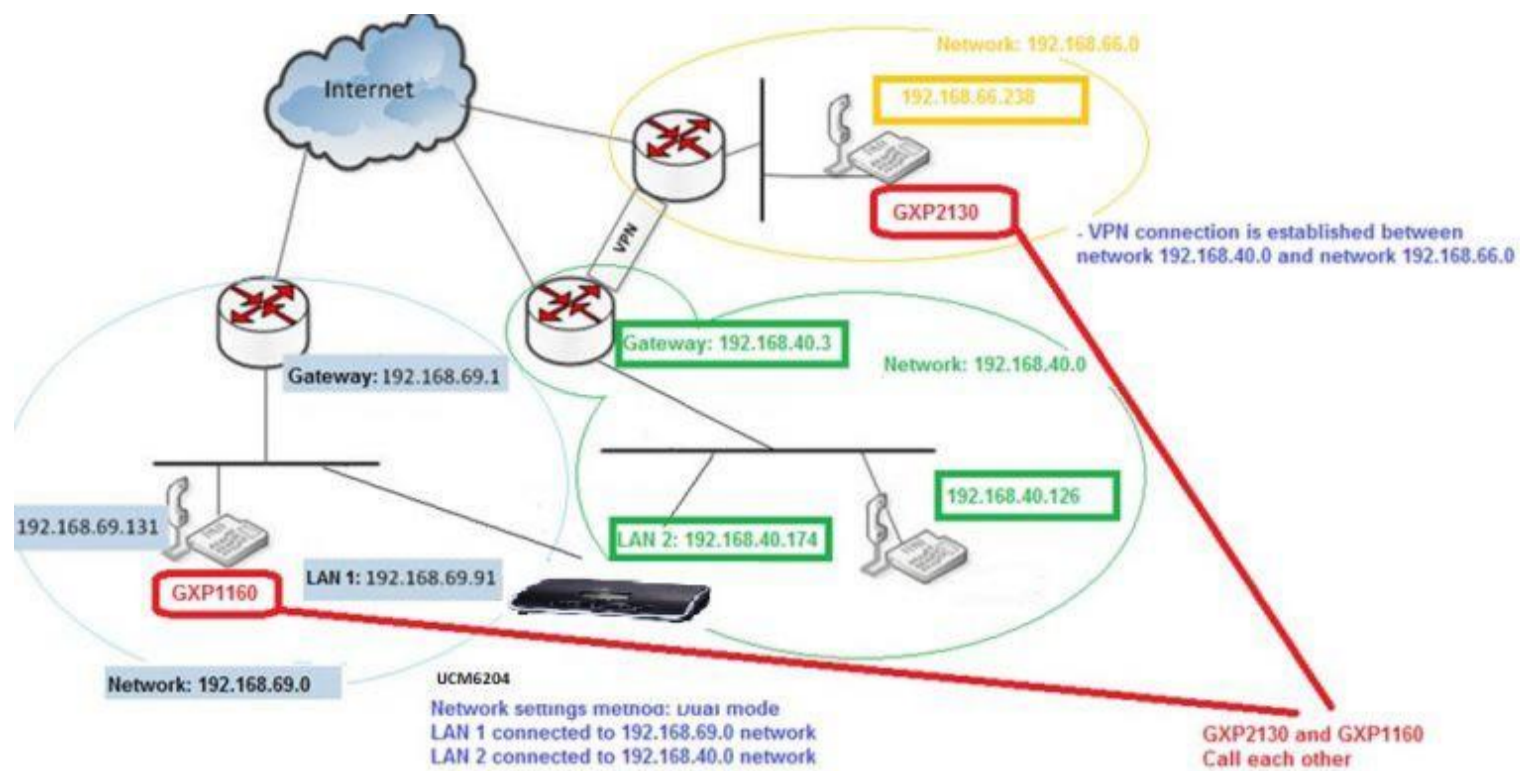


Figure 19: UCM6204 Static Route Sample

The network topology of the above diagram is as below:

- Network 192.168.69.0 has IP phones registered to UCM6204 LAN 1 address
- Network 192.168.40.0 has IP phones registered to UCM6204 LAN 2 address
- Network 192.168.66.0 has IP phones registered to UCM6204 via VPN
- Network 192.168.40.0 has VPN connection established with network 192.168.66.0

In this network, by default the IP phones in network 192.168.69.0 are unable to call IP phones in network 192.168.66.0 when registered on different interfaces on the UCM6204. Therefore, we need configure a static route on the UCM6204 so that the phones in isolated networks can make calls between each other.

Create New IPV4 Static Route

* Destination:	192.168.66.0
Subnet Mask:	255.255.255.0
Gateway:	192.168.40.3
* Protocol Type:	WAN

Figure 20: UCM6204 Static Route Configuration

Port Forwarding


The UCM network interface supports router functionality that allows users to configure port forwarding. If the UCM is set to “Route” in **System Settings->Network Settings->Basic Settings->Method**, the Port Forwarding tab will be available.

WAN Port	Specify the WAN port number or a range of WAN ports. Unlimited number of ports can be configured. Note: When set to a range, both the WAN port and LAN port must be configured with the same range (e.g., WAN port: 1000-1005, LAN port: 1000-1005). Access from the WAN port will be forwarded to the LAN port with the same port number.
LAN IP	Specify the LAN IP address.


LAN Port	Specify the LAN port number or a range of LAN ports. Please see the note for WAN Port .
Protocol Type	Select protocol type “UDP Only”, “TCP Only” or “TCP/UDP” for the forwarding in the selected port. The default setting is “UDP Only”.

Table 10: UCM6200 Network Settings→Port Forwarding

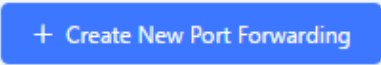Here is an example of an environment and how to configure port forwarding to an endpoint’s web portal.

- Configure the UCM as a router by selecting “Route” in **System Settings->Network Settings->Basic Settings->Method**.
- WAN port is connected to an uplink switch with a public IP address configured (e.g., 1.1.1.1).
- LAN port provides a DHCP pool for devices on the LAN network (gateway address is 192.168.2.1 by default).
- Connect a GXP2160 to the UCM’s LAN network. It should obtain an IP address from UCM’s DHCP pool.
- While still on the Network Settings page, navigate to the Port Forwarding tab.
-  Click on button to start setting up port forwarding.

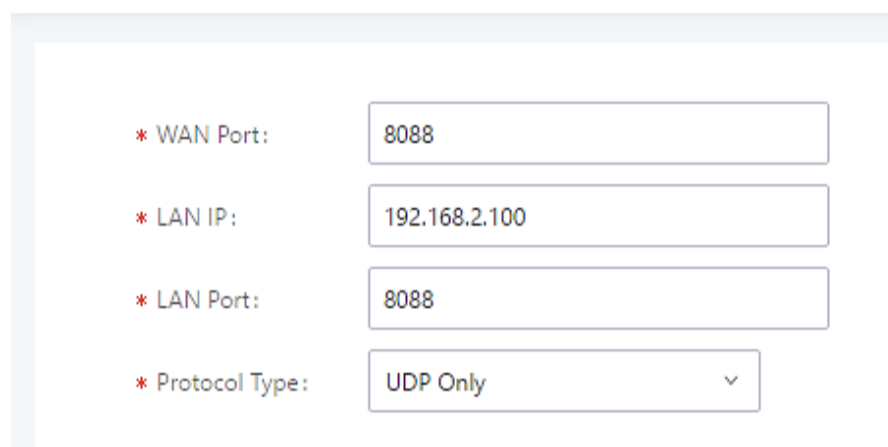Create New Port Forwarding



* WAN Port: 8088

* LAN IP: 192.168.2.100

* LAN Port: 8088

* Protocol Type: UDP Only

Figure 21: Create New Port Forwarding

WAN Port: Enter the port that will be opened on the WAN side to allow access.

LAN IP: Enter the GXP2160’s IP address.

LAN Port: Enter the port that will be opened on the GXP2160 to allow access.

Protocol Type: Select the protocol to use for this port forwarding.



Network Settings					
Basic Settings		DHCP Client List		802.1X Settings	
Static Routes		Port Forwarding			
+ Create New Port Forwarding					
<input type="checkbox"/>	WAN Port ↕	LAN IP ↕	LAN Port ↕	Protocol Type ↕	Options
<input type="checkbox"/>	8088	192.168.2.100	8088	UDP Only	 

Figure 22: UCM6200 Port Forwarding Configuration

This will allow users to access the GXP2160 web portal from an external network.

The screenshot displays the Grandstream GXP2160 web interface. At the top, the browser address bar shows '1.1.1.1:8088/#page:status_network'. The page header includes 'Grandstream GXP2160', 'Admin Logout | Reboot | Provision | Factory Reset', and a language dropdown set to 'English'. The main navigation menu contains 'STATUS', 'ACCOUNTS', 'SETTINGS', 'NETWORK', 'MAINTENANCE', and 'PHONEBOOK'. The 'Network Status' page is active, showing a sidebar with 'Status', 'Account Status', 'Network Status', and 'System Info'. The main content area lists network parameters: MAC Address (00:0B:82:59:A9:9A), IP Setting (DHCP), IPv4 Address (192.168.2.100), IPv6 Address (2001:470:d:10a2:20b:82ff:fe59:a99a), Subnet Mask (255.255.255.0), Gateway (192.168.2.1), DNS Server 1 (4.2.2.1), and DNS Server 2 (4.2.2.2). The IPv4 Address and Gateway fields are highlighted with red boxes.

Figure 23: GXP2160 Web Access using UCM6202 Port Forwarding

OpenVPN®

The UCM can be configured as an OpenVPN client.

Table 11: UCM6200 System Settings → Network Settings → OpenVPN®

Enable	Enable / Disable the OpenVPN® feature.
Configuration Method	Select OpenVPN® configuration method. Manual Configuration: Allows to configure OpenVPN settings manually. Upload Configuration File: Allows to upload .ovpn and .conf files to the UCM and to automatically configure OpenVPN settings.
OpenVPN® Server Address	Configures the hostname/IP and port of the server. For example: 192.168.1.2:22
OpenVPN® Server Protocol	Specify the protocol user, user should use the same settings as used on the server
OpenVPN® Device mode	Use the same setting as used on the server. Dev TUN: Create a routed IP tunnel. Dev TAP: Create an Ethernet tunnel.
OpenVPN® Use Compression	Compress tunnel packets using the LZO algorithm on the VPN link. Do not enable this unless it is also enabled in the server config file.
Allow Weak SSL Ciphers	Enable/Disable allowing Weak SSL Ciphers.
OpenVPN® Encryption Algorithm	Specify the cryptographic cipher. Users should make sure to use the same setting that they are using on the OpenVPN server.
OpenVPN® CA Cert	Upload as SSL/TLS root certificate. This file will be renamed as 'ca.crt' automatically.

OpenVPN® Client Cert	Upload a client certificate. This file will be renamed as 'cliend.crt' automatically.
OpenVPN® Client Key	Upload a client private key. This file will be renamed as 'client.key' automatically.

OpenVPN®

OpenVPN® Enable:

Configuration Method:

* OpenVPN® Server Address:

OpenVPN® Server Protocol:

OpenVPN® Device mode:

OpenVPN® Use Compression:

Allow Weak SSL Ciphers:

OpenVPN® Encryption Algorithm:

OpenVPN® CA Cert:

OpenVPN® Client Cert:

OpenVPN® Client Key:

Figure 24: Open VPN® feature on the UCM6200

DDNS Settings

Configuring UCM DDNS settings will allow the UCM to be accessed via domain name instead of IP address. UCM supports the following DDNS services:

- dydns.org
- noip.com
- freedns.afraid.org
- zoneedit.com
- oray.net

Here is an example of using noip.com for DDNS.

1. The UCM must be publicly accessible in order to work with the service provider.

Hostname Information		
Hostname:	haograndstream.ddns.net	✔
Host Type:	<input checked="" type="radio"/> DNS Host (A) <input type="radio"/> DNS Host (Round Robin) <input type="radio"/> DNS Alias (CNAME) <input type="radio"/> Port 80 Redirect <input type="radio"/> Web Redirect	✔
IP Address:	<input type="text" value="1.2.3.4"/> Last Update: 2015-01-07 17:29:20 PST	✔
Assign to Group:	<input type="text" value="- No Group -"/> <input type="button" value="Configure Groups"/>	✔
Enable Wildcard:	Wildcards are a Plus / Enhanced feature. Upgrade Now!	✔
Advanced Records:	TXT, SPF, and SRV records and the use of some special clients are Plus / Enhanced features. Upgrade now to use them.	✔

Figure 25: Register Domain Name on noip.com

1. Navigate to **System Settings->Network Settings->DDNS Settings**, check the Enable DDNS option, select your service provider, and configure all the displayed fields.

UCM6202

Menus

- System Status
- Extension / Trunk
- Call Features
- PBX Settings
- System Settings
 - HTTP Server
 - Network Settings
 - OpenVPN
 - DDNS Settings**

DDNS Settings

DDNS Server:

Enable DDNS:

* Username:

* Password:

* Host Name:

Figure 26: UCM6200 DDNS Setting

1. You can now use the configured domain to access the UCM web portal.

UCM6202

Apply Changes Setup Wizard

Menus

- System Status
- Dashboard**
- System Information
- Active Calls
- Network Status
- Extension / Trunk
- Call Features
- PBX Settings
- System Settings
- Maintenance
- CDR
- Value-added Features

Equipment Capacity

Partition	Space	Inode
Configuration Partition	116MB/184MB	2577/12800
Data Partition	96MB/2232MB	2600/153216

Resource Usage

Resource	Usage
CPU Usage	1%
Memory Usage	11%
Total	1009

PBX Status

System UpTime	2017-05-02 11:25:55
Active Calls	0
Extensions	0/3
Conference Rooms	0/0

Interface Status

USB	✖
SD Card	✖
LAN	✔
WAN	✔

Trunks

Total	0
-------	---

Security Settings

The UCM offers several methods of protection against malicious attacks and unauthorized access such as firewall rules, connection thresholds, and Fail2ban.

To get started on configuring security settings, navigate to the **System Settings**→**Security Settings** page.

Static Defense

On the Static Defense page, users can configure firewall rules and view the ports used by various UCM services and processes.

The following table shows a few examples of the information available on the Static Defense page.

Table 12: UCM6200 Firewall→Static Defense→Current Service

Port	Process	Type	Protocol or Service
7777	Asterisk	TCP/IPv4	SIP
389	Slapd	TCP/IPv4	LDAP
2000	Asterisk	TCP/IPv4	SCCP
22	Dropbear	TCP/IPv4	SSH
80	Lighthttpd	TCP/IPv4	HTTP
8089	Lighthttpd	TCP/IPv4	HTTPS
69	Opentftpd	UDP/IPv4	TFTP
9090	Asterisk	UDP/IPv4	SIP
6060	zero_config	UDP/IPv4	UCM6200 zero_config service
5060	Asterisk	UDP/IPv4	SIP
4569	Asterisk	UDP/IPv4	SIP
5353	zero_config	UDP/IPv4	UCM6200 zero_config service
37435	Syslogd	UDP/IPv4	Syslog

For general firewall defense mechanisms, UCM supports Ping Defense, SYN-Flood Defense, and Ping-of-Death Defense. These can be configured separately for the WAN interface and LAN interface.

Table 13: Typical Firewall Settings

Ping Defense Enable	If enabled, the UCM will not send ICMP messages in response to ping requests.
SYN-Flood Defense Enable	If enabled, the UCM will limit the amount of SYN packets accepted from one source to 10 packets per second, preventing the UCM web portal from becoming inaccessible. Excess packets will be discarded. There is no need to mention the WAN and LAN parts since it is already mentioned in sentence before the table.
Ping-of-Death Defense Enable	If enabled, the UCM will not be affected by ping of death attacks.

In the Custom Firewall Settings section, users can create rules to accept, reject, or drop specific traffic going through the UCM. To create a new rule, click on the [+ Create New Rule](#) button.

The following menu will appear. Here is an example firewall rule created to reject SSH access to the UCM from the WAN interface.

Create New Firewall Rule

* Rule Name:

* Action:

* Type:

* Interface:

* Service:



Figure 28: Create New Firewall Rule

Rule Name	Enter a name for the firewall rule.
Action	Select the action for the Firewall to perform. <ul style="list-style-type: none"> ○ ACCEPT ○ REJECT ○ DROP
Type	Select the traffic type. <ul style="list-style-type: none"> ○ IN <p>If selected, the Interface field will appear. Users must specify the interface that the inbound rule will be applied to.</p> <ul style="list-style-type: none"> ○ OUT

Service	Select the connection type the rule will apply to.
	<ul style="list-style-type: none"> ○ FTP ○ SSH ○ Telnet ○ TFTP ○ HTTP ○ LDAP ○ Custom <p>If selected, users must configure the Source IP and Port, Destination IP Address and Port, and the Protocol fields that appear. If the source and destination are left blank, the “Anywhere” values will be used.</p>

Table 14: Firewall Rule Settings

Save the change and click on “Apply” button. Then submit the configuration by clicking on “Apply Changes” on the upper right of the web page. The new rule will be listed at the bottom of the page with sequence number, rule name, action, protocol, type, source, destination and operation. More operations below:

- Click on  to edit the rule.
- Click on  to delete the rule.

Dynamic Defense

On the **Dynamic Defense** page, users can configure the UCM to monitor incoming TCP connections and prevent excessive traffic from hosts. The UCM must have “Route” configured in the **System Settings->Network Settings->Basic Settings** page. The blacklist on this page is automatically updated.

The following options are available:

Table 15: UCM6200 Firewall Dynamic Defense

Dynamic Defense Enable	Toggle dynamic defense on and off. This is disabled by default.
Blacklist Update Interval	Configure the blacklist update time interval (in seconds). The default setting is 120. For example, if set to “300”, blocked IP addresses will not be able to establish TCP connections with the UCM until after 300 seconds have passed.
Connection Threshold	Configure the connection threshold. Once a host exceeds this threshold, it will be added to the blacklist. Default setting is 100.

Dynamic Defense Whitelist	<p>Allowed IPs and ports range, multiple IP addresses and port range.</p> <p>For example:</p> <p><i>192.168.5.100-</i></p> <p><i>192.168.5.200 1500:2000</i></p>
----------------------------------	--

The following figure shows a configuration example like this:

- If a host at IP address 192.168.5.7 initiates more than 20 TCP connections to the UCM6200 within 1 minute, it will be added into UCM6200 blacklist.
- This host 192.168.5.7 will be blocked by the UCM6200 for 500 seconds.
- Since IP range 192.168.5.100-192.168.5.200 is in whitelist, if a host initiates more than 20 TCP connections to the UCM6200 within 1 minute, it will not be added into UCM6200 blacklist. It can still establish TCP connection with the UCM6200.

Dynamic Defense

Dynamic Defense Enable:

* Blacklist Update Interval (s):

* Connection Threshold:

Dynamic Defense Whitelist:

Figure 29: Configure Dynamic Defense

Fail2ban

Fail2Ban feature on the UCM6200 provides intrusion detection and prevention for authentication errors in SIP REGISTER, INVITE and SUBSCRIBE and prevents SIP brute force attacks on the PBX system.

Once an IP address exceeds the allowed number of login or SIP authentication attempts within the configured “Max Retry Duration” period, all SIP and HTTP requests from that IP address will be dropped, forbidding web access and blocking further authentication attempts.

Security Settings

Static Defense Dynamic Defense **Fail2ban** SSH Access

Global Settings

Enable Fail2Ban:

* Banned Duration:

* Max Retry Duration:

* MaxRetry:

Fail2ban Whitelist: ⊕

Local Settings

Asterisk Service:

Listening port number: UDP Port

* MaxRetry:

Login Attack Defense:

Listening port number: TCP Port

* MaxRetry:

Figure 30: Fail2ban Settings

Global Settings	
Enable Fail2Ban	Enable Fail2Ban. The default setting is disabled. Please make sure both “Enable Fail2Ban” and “Asterisk Service” are turned on to use Fail2Ban for SIP authentication on the UCM6200.
Banned Duration	Configure the duration (in seconds) for the detected host to be banned. The default setting is 600. If set to 0, the host will be always banned.
Max Retry Duration	If a host exceeds the maximum allowed number attempts configured for Max Retry within the configured Max Retry Duration window, the host will be banned. The default setting is 600 seconds.
MaxRetry	Configures the maximum number of allowed authentication failures within the configured Max Retry Duration window. The default setting is 5.
Fail2Ban Whitelist	Configures the IP addresses, CIDR masks, and DNS hosts in the Fail2Ban whitelist. Whitelisted entries will not be banned by Fail2Ban even after exceeding the allowed number of authentication failures. Up to 20 addresses can be added.
Local Settings	

Asterisk Service	Enable Asterisk service for Fail2Ban. The default setting is disabled. Please make sure both “Enable Fail2Ban” and “Asterisk Service” are turned on to use Fail2Ban for SIP authentication on the UCM6200.
Listening Port Number	Configure the listening port number for the service. By default, port 5060 will be used for UDP and TCP, and port 5061 will be used for TLS.
MaxRetry	Configures the maximum number of authentication failures before the host is banned. The default setting is 10. Please note that this will override the Global Settings->MaxRetry setting.
Login Attack Defense	Enables defense against excessive login attacks to the UCM’s web GUI. The default setting is disabled.
Listening Port Number	This is the Web GUI listening port number which is configured under System Settings->HTTP Server->Port . The default is 8089.
MaxRetry	Configures the maximum allowed number of failed login attempts from an IP address before it is added to the Fail2Ban blacklist.
Blacklist	
Blacklist	Users will be able to view the IPs that have been blocked by UCM.

Table 16: Fail2Ban Settings

TLS Security

TLS security to specify minimum and maximum TLS versions supported by the UCM.

Please log in UCM62xx web interface and go to **System Settings->Security Settings->TLS Security**.

By default, minimum TLS version is set to TLS1.1, and maximum TLS version is set to TLS1.2.

Supported versions are 1.0, 1.1 and 1.2

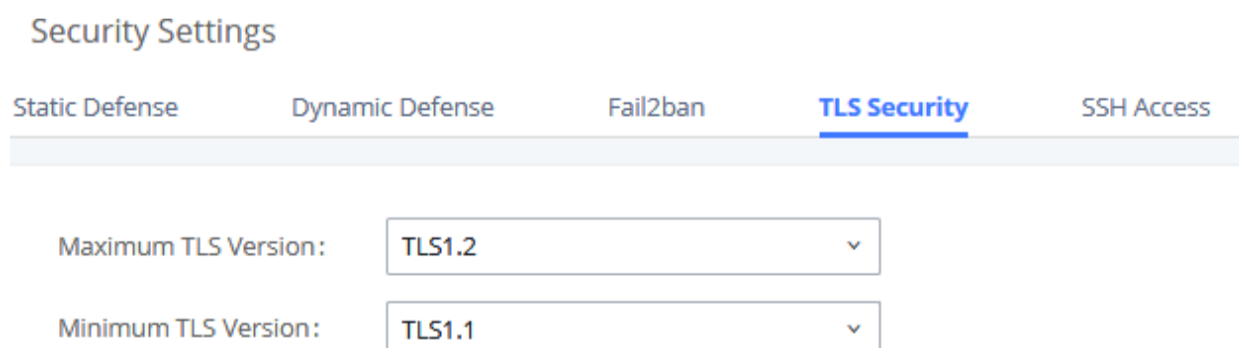


Figure 31: TLS Security

SSH Access

SSH access can be toggled from the UCM’s webUI and physical LCD screen. The webUI option can be found under System Settings->Security Settings->SSH Access. SSH access is disabled by default and should only be turned on for troubleshooting and debugging.

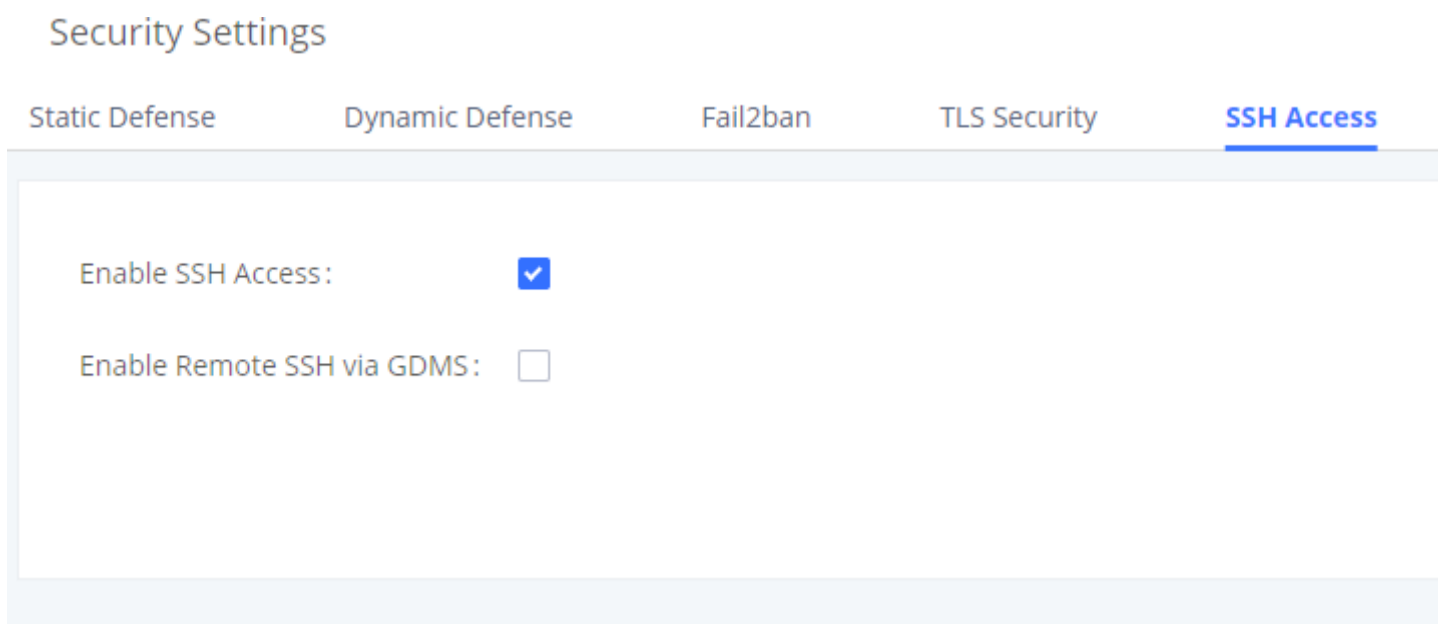


Figure 32: SSH Access

LDAP Server

The UCM6200 has an embedded LDAP/LDAPS server for users to manage corporate phonebooks in a centralized manner.

- The LDAP server automatically generates an initial phonebook with PBX DN “ou=pbx,dc=pbx,dc=com” based on the UCM6200’s existing extensions.
- Users could add new phonebook with a different **Phonebook DN** for other external contacts. For example, “ou=people,dc=pbx,dc=com”.
- All the phonebooks in the UCM6200 LDAP server have the same **Base DN** “dc=pbx,dc=com”.

Term Explanation:

cn= Common Name

ou= Organization Unit

dc= Domain Component

These are all parts of the LDAP data Interchange Format, according to RFC 2849, which is how the LDAP tree is filtered.

If users have the Grandstream phone provisioned by the UCM6200, the LDAP directory will be set up on the phone and can be used right away for users to access all phonebooks.

Additionally, users could manually configure the LDAP client settings to manipulate the built-in LDAP server on the UCM6200. If the UCM6200 has multiple LDAP phonebooks created, in the LDAP client configuration, users could use “dc=pbx,dc=com” as Base DN to have access to all phonebooks on the UCM6200 LDAP server, or use a specific phonebook DN, for example “ou=people,dc=pbx,dc=com”, to access to phonebook with Phonebook DN “ou=people,dc=pbx,dc=com ” only.

UCM can also act as a LDAP client to download phonebook entries from another LDAP server.

To access LDAP server and client settings, go to Web GUI→**Settings**→**LDAP Server**.

LDAP Server Configurations

The following figure shows the default LDAP server configurations on the UCM6200.

LDAP Server

LDAP Server Configurations LDAP Phonebook

* Base DN:	<input type="text" value="dc=pbx,dc=com"/>	
PBX DN:	<input type="text" value="ou=pbx"/>	,dc=pbx,dc=com
Root DN:	<input type="text" value="cn=admin"/>	,dc=pbx,dc=com
* Root Password:	<input type="password" value="•••••"/>	<input type="checkbox"/>
* Confirm Root Password:	<input type="password" value="•••••"/>	<input type="checkbox"/>
LDAP Cert:	<input type="text" value="server.crt"/>	<input type="button" value="Reset Certificates"/>
LDAP Private Key:	<input type="text" value="private.key"/>	<input type="button" value="Reset Certificates"/>
LDAP CA Cert:	<input type="text" value="server.ca"/>	<input type="button" value="Reset Certificates"/>

Figure 33: LDAP Server Configurations

The UCM6200 LDAP server supports anonymous access (read-only) by default. Therefore, the LDAP client does not have to configure username and password to access the phonebook directory. The “Root DN” and “Root Password” (limited with 64 and 32 characters respectively) here are for LDAP management and configuration where users will need provide for authentication purpose before modifying the LDAP information.

The default phonebook list in this LDAP server can be viewed and edited by clicking on  for the first phonebook under LDAP Phonebook.




Figure 34: Default LDAP Phonebook DN

Edit Phonebook: pbx

AccountNumber	CallerID Name	Options
1000	John DOE	<input type="checkbox"/> <input type="checkbox"/>
1001		<input type="checkbox"/> <input type="checkbox"/>
1002		<input type="checkbox"/> <input type="checkbox"/>
1003		<input type="checkbox"/> <input type="checkbox"/>
1004		<input type="checkbox"/> <input type="checkbox"/>
1005		<input type="checkbox"/> <input type="checkbox"/>

Figure 35: Default LDAP Phonebook Attributes

LDAP Phonebook

Users could use the default phonebook, edit the default phonebook, add new phonebook, import phonebook on the LDAP server as well as export phonebook from the LDAP server. The first phonebook with default phonebook dn “ou=pbx,dc=pbx,dc=com” displayed on the LDAP server page is for extensions in this PBX. Users cannot add or delete contacts directly. The contacts information will need to be modified via Web GUI → **Extension/Trunk** → **Extensions** first.

The default LDAP phonebook will then be updated automatically.

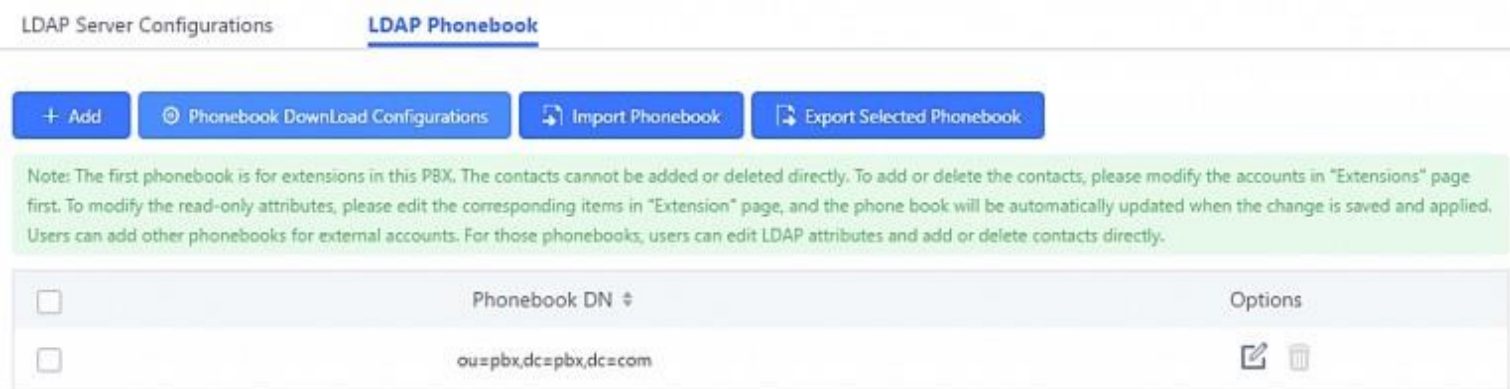


Figure 36: LDAP Server→LDAP Phonebook

- **Add new phonebook**

A new sibling phonebook of the default PBX phonebook can be added by clicking on “Add” under “LDAP Phonebook” section.

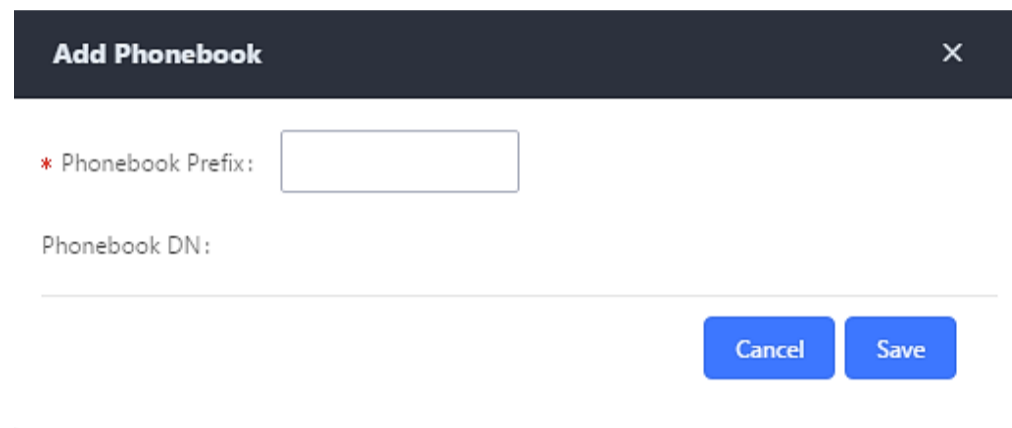


Figure 37: Add LDAP Phonebook

Configure the “Phonebook Prefix” first. The “Phonebook DN” will be automatically filled in. For example, if configuring “Phonebook Prefix” as “people”, the “Phonebook DN” will be filled with “ou=people,dc=pbx,dc=com”.

Once added, users can select  to edit the phonebook attributes and contact list (see figure below) or select  to delete the phonebook.

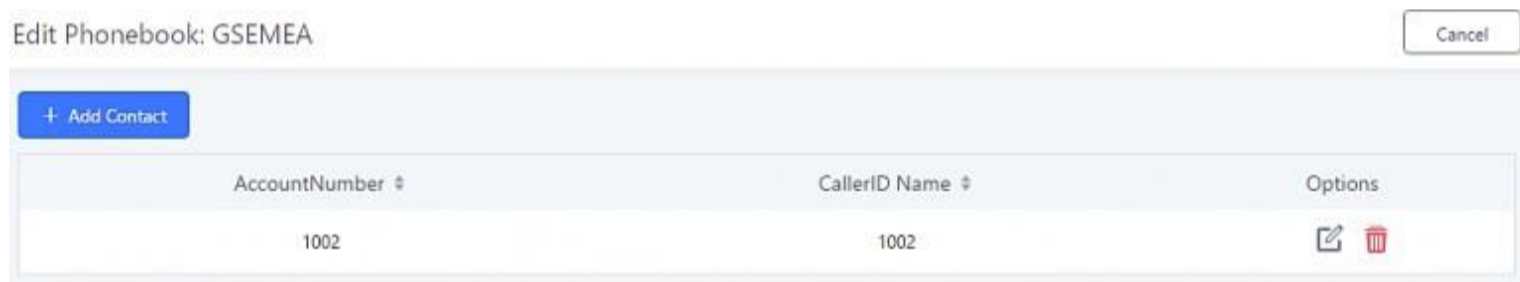


Figure 38: Edit LDAP Phonebook

- **Import phonebook from your computer to LDAP server**

Click on “Import Phonebook” and a dialog will prompt as shown in the figure below.

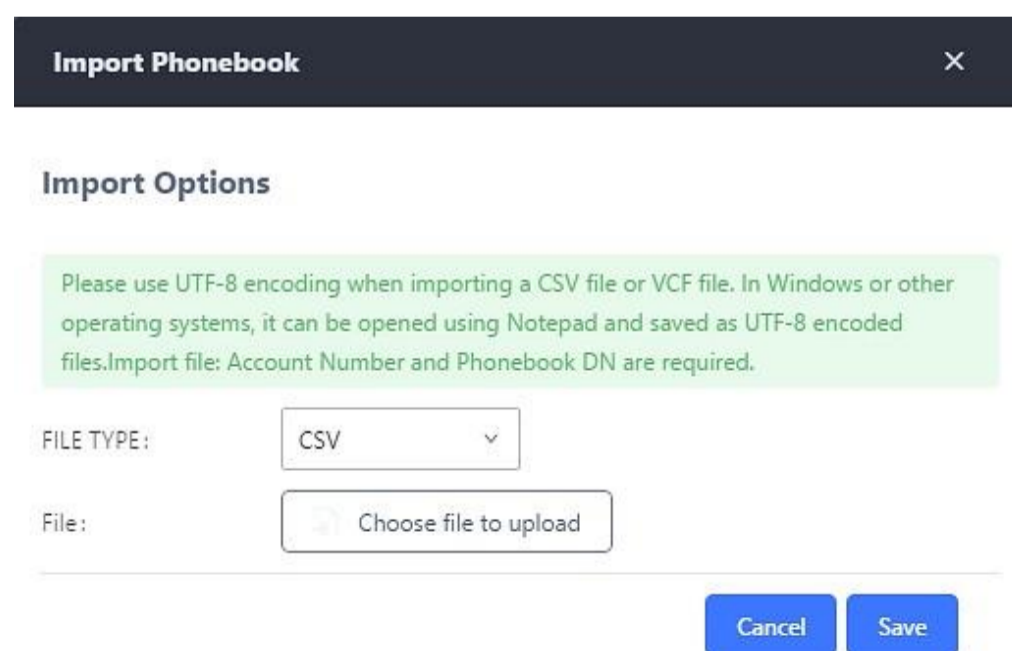


Figure 39: Import Phonebook

The file to be imported must be a CSV, VCF or XML file with UTF-8 encoding. Users can open the file with Notepad and save it with UTF-8 encoding.

Here is an example of CSV file. Please note “Account Number” and “Phonebook DN” fields are required. Users can export a phonebook file from the UCM’s LDAP phonebook section and use it as a template.

	A	B	C	D	E	F	G	H	I	J
1	First Name	Last Name	Account Number	CallerID Name	Email	Department	Mobile Number	Home Number	Fax	Phonebook DN
2	John	Doe	1001	1001		IT	1001000000			phonebook
3	Jane	Doe	1002	1002		Sales	1002000000			phonebook
4	William	Chung	1003	1003		Marketing	1003000000			phonebook
5	Linda	Kuo	1004	1004		Accounting	1004000000			phonebook
6	Steve	Chang	1005	1005		Support	1005000000			others

Figure 40: Phonebook CSV File Format

The Phonebook DN field is the same “Phonebook Prefix” entry as when the user clicks on “Add” to create a new phonebook. Therefore, if the user enters “phonebook” in “Phonebook DN” field in the CSV file, the actual phonebook DN “ou=phonebook,dc=pbx,dc=com” will be automatically created by the UCM6200 once the CSV file is imported.

In the CSV file, users can specify different phonebook DN fields for different contacts. If the phonebook DN already exists on the UCM6200 LDAP Phonebook, the contacts in the CSV file will be added into the existing phonebook. If the phonebook DN does not exist on the UCM6200 LDAP Phonebook, a new phonebook with this phonebook DN will be created.

The sample phonebook CSV file in above picture will result in the following LDAP phonebook in the UCM6200.

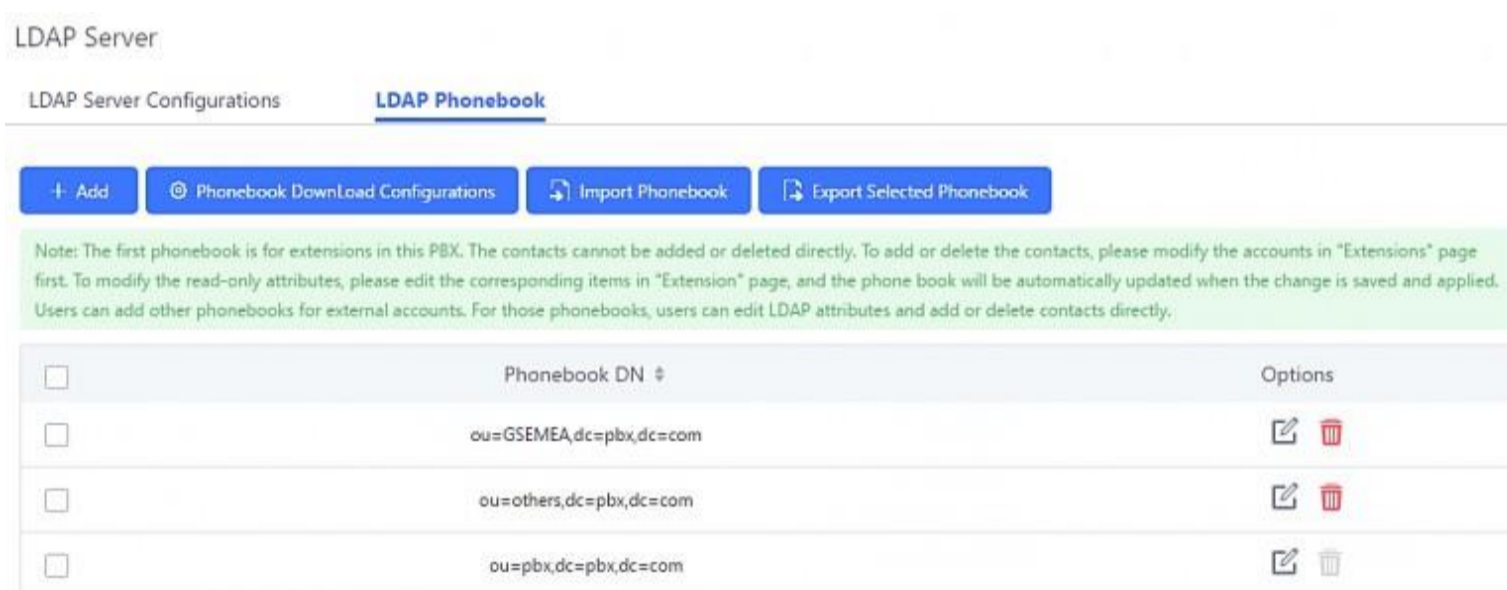


Figure 41: LDAP Phonebook After Import

As the default LDAP phonebook with DN “ou=pbx,dc=pbx,dc=com” cannot be edited or deleted in LDAP phonebook section, users cannot import contacts that have “pbx” in the Phonebook DN field of the CSV file.

◦ **Export phonebook to your computer from UCM6200 LDAP server**

Select the checkbox for the LDAP phonebook and then click on “Export Selected Phonebook” to export the selected phonebook. The exported phonebook can be used as a record or a sample CSV, VFC or XML file for the users to add more contacts in it and import to the UCM6200 again.



Figure 42: Export Selected LDAP Phonebook

LDAP Client Configurations

The configuration on LDAP client is useful when you use other LDAP servers. Here we provide an example on how to configure the LDAP client on the UCM.

Assuming the remote server base dn is “**dc=pbx,dc=com**”, configure the LDAP client as follows:

- **LDAP Server:** Enter a name for the remote LDAP server
- **Server Address:** Enter the IP address or domain name for remote LDAP server.
- **Base DN:** dc=pbx,dc=com
- **Username:** Enter username if authentication is required. This field cannot exceed 64 characters and can contain space.
- **Password:** Enter password if authentication is required.
- **Filter:** Enter the filter. Ex: ((CallerIDName=%)(AccountNumber=%))
- **Port:** Enter the port number. Ex:389
- **LDAP Name Attributes:** Enter the name attributes for remote server
- **LDAP Number Attributes:** Enter the number attributes for remote server
- **Client type:** Protocol of LDAP or LDAPS.
- **LDAP Client CA cert:** Upload LDAP client CA certificate, The following file types are supported: .crt .der and .pem.
- **LDAP Client Private Key:** Upload LDAP client private key.

The following figure gives a sample configuration for UCM acting as a LDAP client.

Field	Value
LDAP Server	ldapClient
Base DN	dc=pbx,dc=com
Password	
Port	389
Client Type	LDAP
LDAP Client CA Cert	client.ca
LDAP Client Private Key	client.key
Server Address	192.168.1.1
User Name	cn=admin,dc=pbx,dc=com
Filter	(objectClass=*)
LDAP Name Attributes	CallerIDName Email Department FirstName Last
LDAP Number Attributes	AccountNumber MobileNumber HomeNumber

Figure 43: LDAP Client Configurations

To configure Grandstream IP phones as the LDAP clients for UCM, please refer to the following example:

- **Server Address:** The IP address or domain name of the UCM6200
- **Base DN:** dc=pbx,dc=com
- **Username:** Please leave this field empty
- **Password:** Please leave this field empty
- **LDAP Name Attribute:** CallerIDName Email Department FirstName LastName
- **LDAP Number Attribute:** AccountNumber MobileNumber HomeNumber Fax
- **LDAP Number Filter:** (AccountNumber=%)
- **LDAP Name Filter:** (CallerIDName=%)
- **LDAP Display Name:** AccountNumber CallerIDName
- **LDAP Version:** If existed, please select LDAP Version 3
- **Port:** 389

The following figure shows the configuration information on a Grandstream GXP2170 to successfully use the LDAP server as configured in [Figure 33: LDAP Server Configurations].

LDAP

LDAP protocol	LDAP ▾
Server Address	192.168.40.134
Port	389
Base	dc=pbx,dc=com
User Name	
Password	
LDAP Number Filter	(AccountNumber=%)
LDAP Name Filter	(CallerIDName=%)
LDAP Version	<input type="radio"/> Version 2 <input checked="" type="radio"/> Version 3
LDAP Name Attributes	CallerIDName
LDAP Number Attributes	AccountNumber
LDAP Display Name	AccountNumber CallerIDName
Max. Hits	50
Search Timeout	30
Sort Results	<input checked="" type="radio"/> No <input type="radio"/> Yes
LDAP Lookup	<input checked="" type="checkbox"/> Incoming Calls <input checked="" type="checkbox"/> Outgoing Calls
Lookup Display Name	
<input type="button" value="Save"/> <input type="button" value="Save and Apply"/> <input type="button" value="Reset"/>	

Figure 44: GXP2170 LDAP Phonebook Configuration

Time settings

Automatic Date and Time

The current system time can be found under **System Status->Dashboard and System Information**.

To configure the UCM to automatically update time, navigate to **System Settings->Time Settings->Automatic Date and Time**.

Note:

The configurations under Web GUI→Settings→Time Settings→Automatic Date and Time page require reboot to take effect. Please consider configuring auto time updating related changes when setting up the UCM6200 for the first time to avoid service interrupt after installation and deployment in production.

Table 17: Time Auto Updating

Remote NTP Server	Specify the server address of the NTP server for the UCM6510 to sync date and time with. The default NTP server is pool.ntp.org.
Enable DHCP Option 2	If set to “Yes”, the UCM’s time zone can be provisioned via DHCP Option 2 from a local server automatically.

Enable DHCP Option 42	<p>If set to “Yes”, the UCM’s NTP server can be provisioned via DHCP Option 42 from a local server automatically. This will override the manually configured NTP server. The default setting is “Yes”.</p>
Time Zone	<p>Select the time zone for the UCM to use.</p> <p>If “Self-Defined Time Zone” is selected, please specify the time zone parameters in “Self-Defined Time Zone” field as described in below option.</p>
Self-Defined Time Zone	<p>If “Self-Defined Time Zone” is selected in “Time Zone” option, users will need define their own time zone following the format below.</p> <p>The syntax is: <i>std offset dst [offset], start [/time], end [/time]</i></p> <p>Default is set to: MTZ+6MDT+5,M4.1.0,M11.1.0</p> <p>MTZ+6MDT+5</p> <p>This indicates a time zone with 6 hours offset and 1 hour ahead for DST, which is U.S central time. If it is positive (+), the local time zone is west of the Prime Meridian (A.K.A: International or Greenwich Meridian); If it is negative (-), the local time zone is east.</p> <p>M4.1.0,M11.1.0</p> <p>The 1st number indicates Month: 1,2,3..., 12 (for Jan, Feb, ..., Dec).</p> <p>The 2nd number indicates the nth iteration of the weekday: (1st Sunday, 3rd Tuesday...). Normally 1, 2, 3, 4 are used. If 5 is used, it means the last iteration of the weekday.</p> <p>The 3rd number indicates weekday: 0,1,2,...,6 (for Sun, Mon, Tues, ... ,Sat).</p> <p>Therefore, this example is the DST which starts from the First Sunday of April to the 1st Sunday of November.</p>

Set Time Manually

To manually set the time on the UCM6200, go to Web GUI→System Settings→Time Settings→Set Date and Time. The format is YYYY-MM-DD HH:MM:SS.

The screenshot shows the 'Time Settings' page with the 'Set Date and Time' tab selected. Below the navigation tabs, there are three main settings:

- Current Date and Time:** Two buttons, 'Select date' (with a calendar icon) and 'Select time' (with a clock icon).
- Date Format:** A dropdown menu currently showing 'yyyy-mm-dd'.
- Time Format:** A dropdown menu currently showing 'Use 24-hour Format'.

Figure 45: Set Time Manually

Note:

Manually setup time will take effect immediately after saving and applying change in the Web GUI. If users would like to reboot the UCM6200 and keep the manually setup time setting, please make sure “Remote NTP Server”, “Enable DHCP Option 2” and “Enable DHCP Option 42” options under Web GUI→Settings→Time Settings→Auto Time Updating page are unchecked or set to empty. Otherwise, time auto updating settings in this page will take effect after reboot.

NTP Server

The UCM can act as an NTP server for clients to sync their system times with. To configure this, navigate to **System Settings->Time Settings->NTP Server** and set **Enable NTP Server** to “Yes”. On the client side, use the UCM’s IP address or hostname as the NTP server address.

Office Time

The system administrator can define office hours which can be used as conditions for call forwarding and inbound routing. To configure this, navigate to **System Settings->Time Settings->Office Time** and click on the Add button to create office hours.

The screenshot shows the 'Create New Office Time' configuration page in the UCM6510 web interface. The page has a dark sidebar menu on the left with 'Time Settings' highlighted. The main content area contains the following fields:

- Time:** Two time pickers set to 00:00 and 23:59.
- Week:** A grid of checkboxes for days of the week: Sun, Mon, Tue, Wed, Thu, Fri, Sat.
- Show Advanced Options:** A checked checkbox.
- Month:** A grid of checkboxes for months: Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sept, Oct, Nov, Dec.
- Day:** A calendar grid for days 1 through 31.

Figure 44: Create New Office Time

Start Time	Configure the start time for office hour.
End Time	Configure the end time for office hour
Week	Select the workdays in one week.
Show Advanced Options	Check this option to show advanced options. Once selected, please specify “Month” and “Day” below.
Month	Select the months for office time.
Day	Select the workdays in one month.

Table 18: Create New Office Time

Select “Start Time”, “End Time” and the day for the “Week” for the office time. The system administrator can also define month and day of the month as advanced options. Once done, click on “Save” and then “Apply Change” for the office time to take effect. The office time will be listed in the web page as the figure shows below.

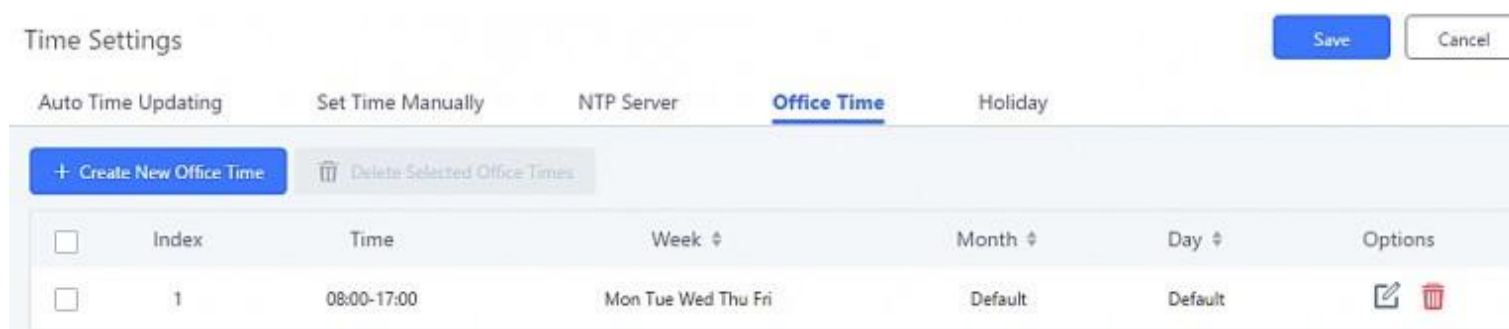


Figure 47: Settings→Time Settings→Office Time

- Click on to edit the office time.
- Click on to delete the office time.
- Click on “Delete Selected Office Times” to delete multiple selected office times at once.

Holiday

System administrators can define holidays which can be used as conditions for call forwarding and inbound routing. To configure this, navigate to **System Settings->Time Settings->Holiday** and click on the Add button to create a new holiday.

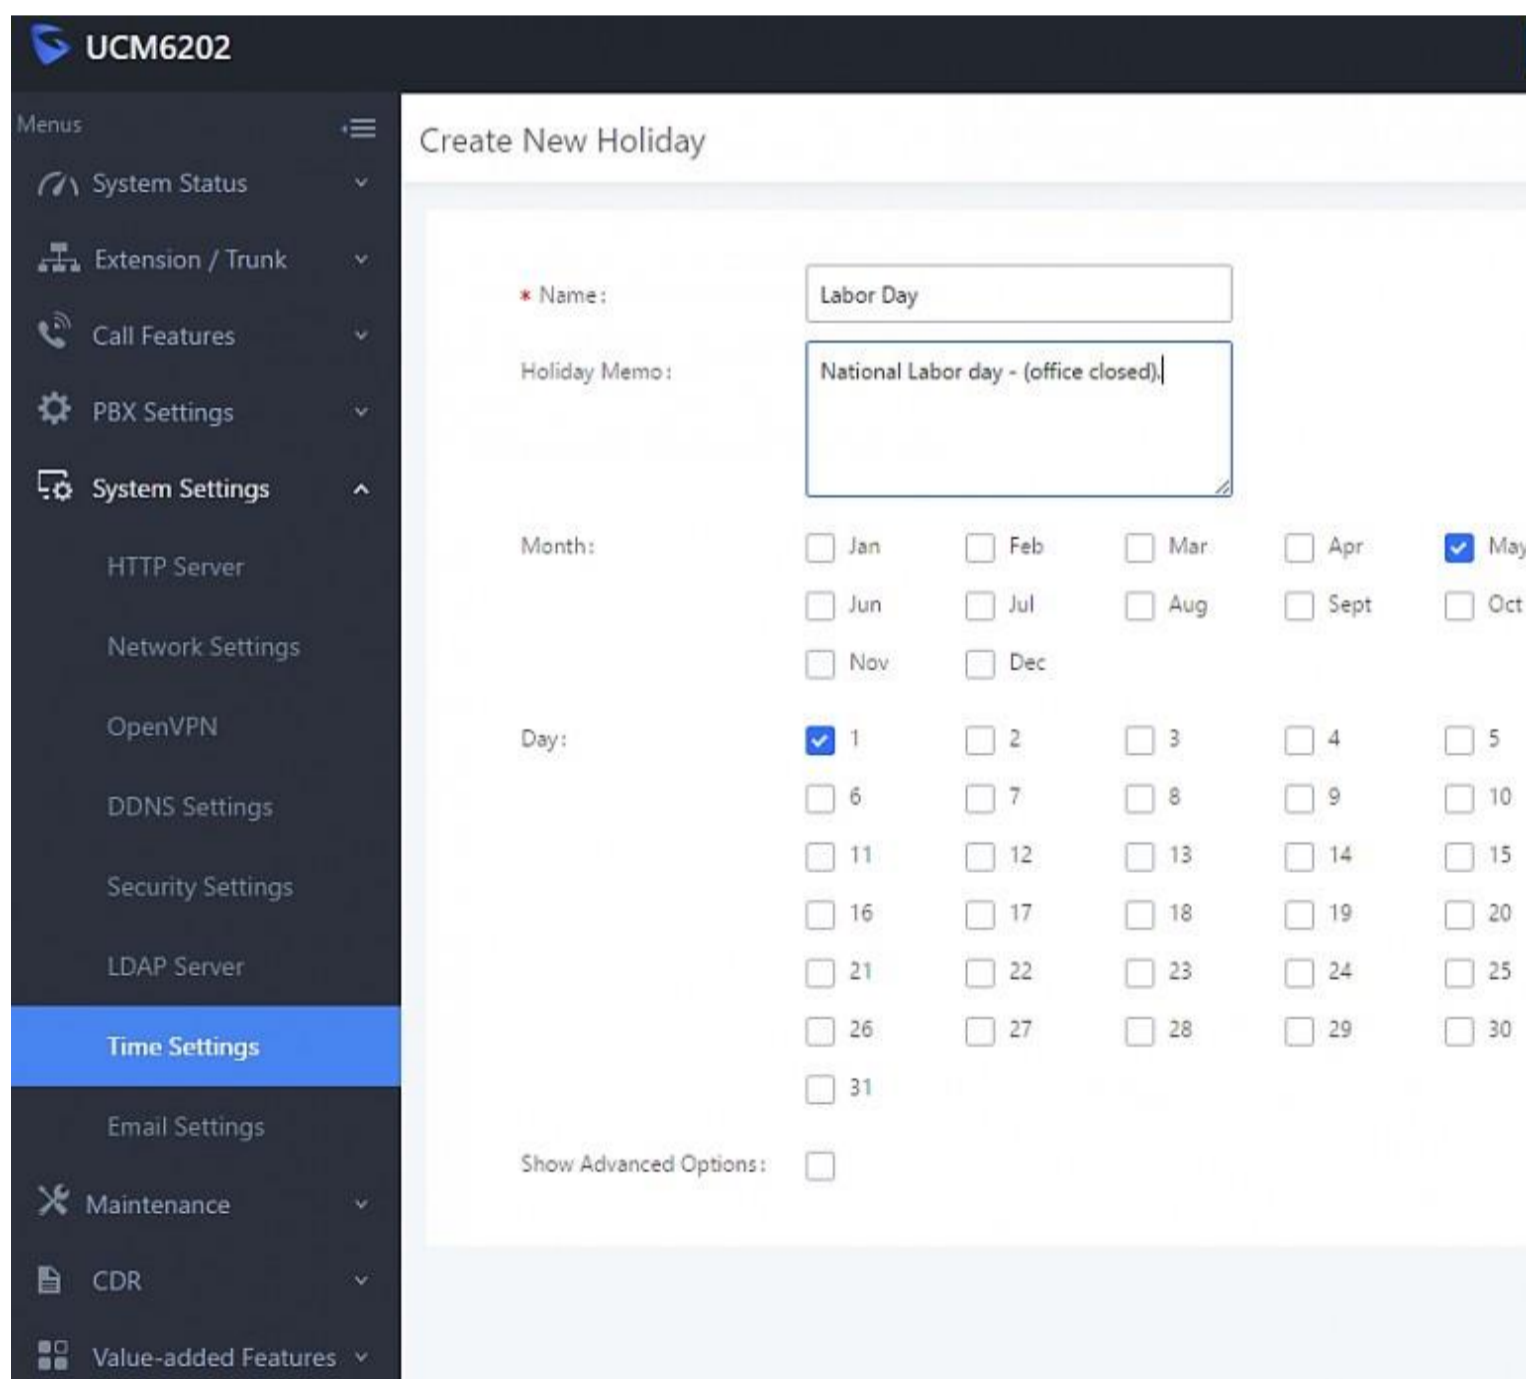


Figure 48: Create New Holiday

Table 19: Create New Holiday



Name	Specify the holiday name to identify this holiday.
-------------	--

Holiday Memo	Create a note for the holiday.
Year	Select the year of the Holiday. Note: Users can now configure holidays for the next 4 years.
Month	Select the month for the holiday.
Day	Select the day for the holiday.
Show Advanced Options	Check this option to show advanced options. If selected, please specify the days as holiday in one week below.
Week	Select the days as holiday in one week.

Enter holiday “Name” and “Holiday Memo” for the new holiday. Then select “Month” and “Day”. The system administrator can also define days in one week as advanced options. Once done, click on “Save” and then “Apply Change” for the holiday to take effect. The holiday will be listed in the web page as the figure shows below.



Figure 49: Settings→Time Settings→Holiday

- Click on  to edit the holiday.
- Click on  to delete the holiday.
- Click on “Delete Selected Holidays” to delete multiple selected holidays at once.

Note:

For more details on how to use office time and holiday, please refer to the link below:

<https://documentation.grandstream.com/knowledge-base/managing-office-time-holidays/>

Email Settings

Email settings

The UCM’s email module can send out alert event emails, fax (Fax-to-Email), voicemail (Voicemail-to-Email), etc. Email settings can be configured in **System Settings->Email Settings**.

Table 20: Email Settings

TLS Enable	Enable or disable TLS during transferring/submitted your Email to another SMTP server. The default setting is “Yes”.
-------------------	--

Type	<p>Select Email type.</p> <ul style="list-style-type: none"> ○ MTA: Mail Transfer Agent. UCM will act as a virtual mail server, and emails will be sent from the configured domain. There is no need to configure SMTP server settings, and no credentials will be required. However, emails sent using MTA may be considered as spam by destination SMPT servers. ○ Client: UCM will send emails to the configured SMTP server to forward to the final destination. Credentials for the SMTP server will be required.
Domain	Specify the domain name to be used in the Email when using type “MTA”.
Server	Specify the SMTP server when using type “Client”.
Username	Username is required when using type “Client”. This is typically the email address.
Password	Password for the entered Username .
Enable Email-to-Fax	<p>Toggles the Email-to-Fax feature.</p> <p>If enabled, the UCM will monitor the configured email inbox (using provided [Username] and [Password]) for emails with the subject “SendFaxMail To XXX” or “XXX”.</p> <p>Subject example: SendFaxMail To 7200 Or 7200.</p> <p>The UCM will extract the attachments of detected emails and send it to the XXX extension by fax. The attachment must be in PDF/TIF/TIFF format.</p> <p>Note: This field will appear when using Type “Client”.</p>
Email-to-Fax Blacklist/Whitelist	Enables the Email to fax Blacklist/Whitelist functionality.
Email-to-Fax Subject	Specify the Email subject format for fax sending, the subject can be either “ SendFaxMail To XXX ” or “ XXX ” with XXX the fax number.
Internal Blacklist/Whitelist	Specify the Email address blacklist/whitelist for local extensions. This feature prevents faxing from unauthorized email addresses. The internal list includes only contacts with local extensions.
External Blacklist/Whitelist	<p>Specify the Email address blacklist/whitelist for non-local contacts. This feature prevents faxing from unauthorized email addresses. The external list is for non-local contacts.</p> <p>Note: Multiple addresses can be separated with semicolon (;) i.e. ” XXX;YYY “.</p>
POP/POP3 Server Address	<p>Configure the POP/POP3 server address for the configured username</p> <p>Example: pop.gmail.com</p>

POP/POP3 Server Port	Configure the POP/POP3 server port for the configured username Example: 995
Display Name	Specify the display name in the FROM header in the Email.
Sender	Specify the sender's Email address. For example: pbx@example.mycompany.com.

The following figure shows example email settings, where 192.168.6.202 is the SMTP server.

Email Settings

Email Settings
Email Template
Email Send Log

TLS Enable:

Type:

Email Template Sending:

Format:

* SMTP Server:

* Enable SASL Authentication:

* Username:

* Password:

Enable Email-to-Fax:

Email-to-Fax:

Blacklist/Whitelist:

Email-to-Fax Subject:

Format:

* POP/POP3 Server Address:

* POP/POP3 Server Port:

* Display Name:

* Sender:

Figure 50: UCM6200 Email Settings

Once configuration is complete, click on the **Save** button first and then the **Test** button to verify that the settings work.

Email Templates

The UCM provides various email templates for different email notifications. Email templates can be accessed from **System Settings->Email Settings->Email Templates**.

Email Settings

Email Settings **Email Template** Email Send Log

[Upload Template Images](#) [Reset All Template Images](#)

TYPE	NAME	TIME	OPTIONS
Alert Events	alert_template.html	2019-11-14 15:20:52 UTC-05:00	✎
PMS	pms_template.html	2019-11-14 15:20:52 UTC-05:00	✎
Emergency Calls	emergency_template.html	2019-11-14 15:20:52 UTC-05:00	✎
Extension	account_template.html	2019-11-14 15:20:52 UTC-05:00	✎
Fax	fax_template.html	2019-11-14 15:20:52 UTC-05:00	✎
Video Conference	mcm_template.html	2019-11-14 15:20:52 UTC-05:00	✎
Conference Report	conferencereport_template.html	2019-11-14 15:20:52 UTC-05:00	✎
Call Queue Statistics	callqueuestatistics_template.html	2019-11-14 15:20:52 UTC-05:00	✎
Fax Sending	sendfax_template.html	2019-11-14 15:20:52 UTC-05:00	✎
CDR	cdr_template.html	2019-11-14 15:20:52 UTC-05:00	✎
Missed Calls	missedcall_template.html	2019-11-14 15:20:52 UTC-05:00	✎
Voicemail	voicemail_template.html	2019-11-14 15:20:52 UTC-05:00	✎
User Password	password_template.html	2019-11-14 15:20:52 UTC-05:00	✎
Conference Schedule	conference_template.html	2019-11-14 15:20:52 UTC-05:00	✎

Figure 51: Email Templates

Press on [Upload template pictures](#) to upload pictures to be used on email templates.

Press [Reset all template pictures](#) to reset all email templates to default ones.

To configure the email template, click the [✎](#) button under Options column, and edit the template as desired.

Edit Email Template: Conference Schedule [Save](#)

* Subject:

* Message in Text Format:

This is the information of the schedule conference which you will attendee.

 Topic:
 \${CNFR_TOPIC}

 Description:
 \${CNFR_DESCRIPTION}

 Schedule Time:
 \${CNFR_SCHEDULE}

[Restore Default Template](#)

Message in HTML Format:

B I U ABC X² X₂ A • [Icons] 段落 宋体 10px [Icons]

\${HELLO}
 \${CNFR_MSG}
 Conference Schedule Details
 This is the information of the schedule conference which you will attendee.

 Topic:
 \${CNFR_TOPIC}

 Description:
 \${CNFR_DESCRIPTION}

[Preview](#) [Restore Default Template](#) [Upload](#)

Figure 52: Conference Schedule Template

- Users have the ability to preview mail sample by clicking on [Preview](#) .
- Click on [Restore Default Template](#) in order to restore the default email template.
- Finally, users can click on [Upload](#) to upload a custom picture to the email template to display their own logo in the sent mails for example

Email Send Log

Under UCM Web GUI→System Settings→Email Settings→Email Send Log, users could search, filter and check whether the Email is sent out successfully or not. This page will also display the corresponding error message if the Email is not sent out successfully.

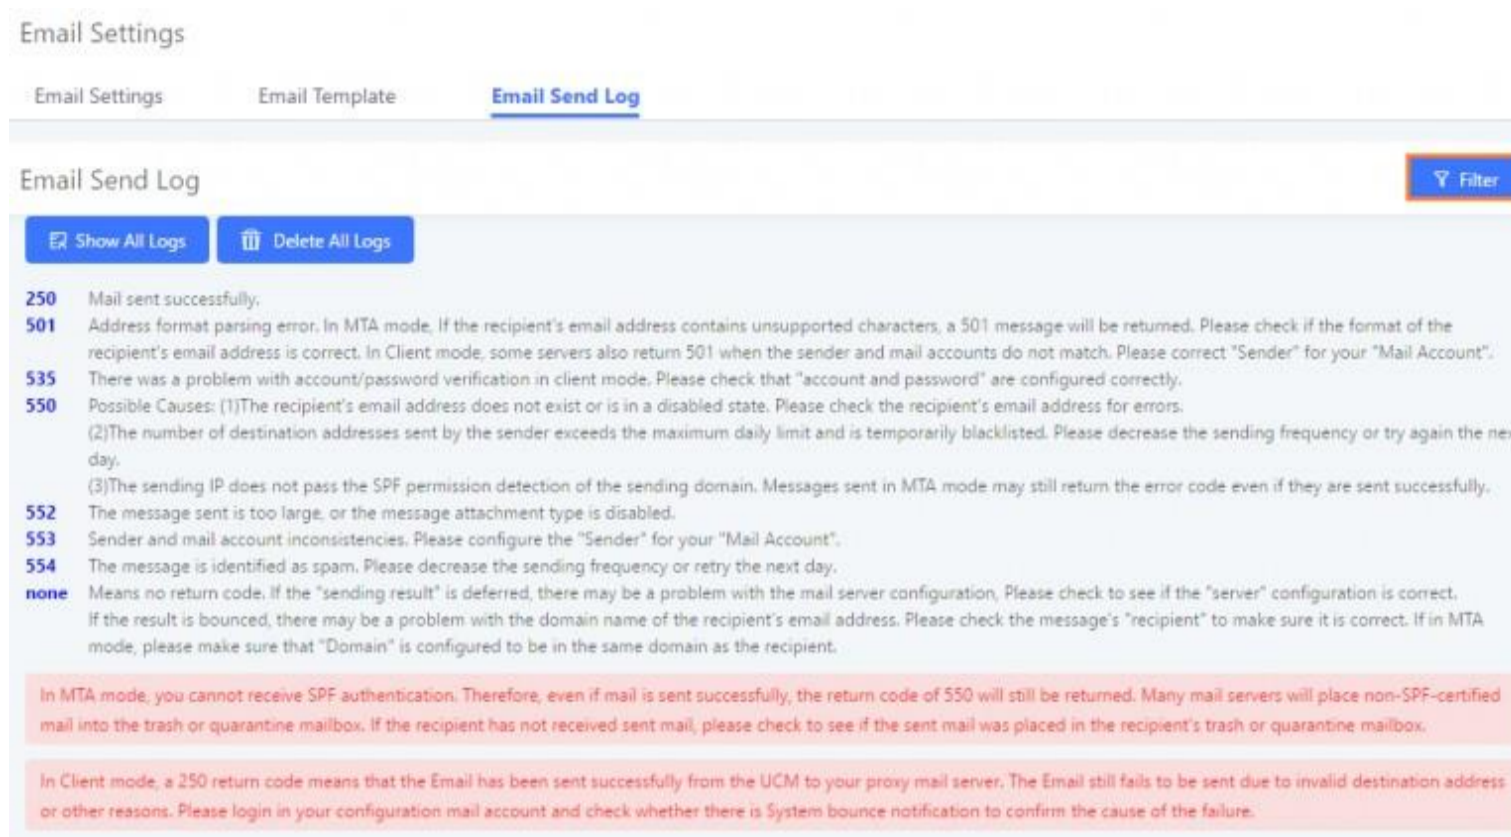


Figure 53: Email Send log

Table 21: Email Log

Field	Description
Start Time	Enter the start time for filter
End Time	Enter the end time for filter
Receivers	Enter the email recipient, while searching for multiple recipients, please separate them with comma and no spaces.
Send Result	Enter the status of the send result to filter with
Return Code	Enter the email code to filter with

Email Send Module	<p>Select the email module to filter with from the drop-down list, which contains:</p> <ul style="list-style-type: none"> ○ All Modules ○ Extension ○ Voicemail ○ Conference Schedule ○ Emergency calls ○ Video conference Schedule ○ User Password ○ Alert Events ○ CDR ○ Fax ○ Fax sending ○ Call Queue Statistics ○ Conference Reports ○ PMS ○ Test ○ Missed calls
-------------------	---

Email logs will be shown on bottom of the “Email Send Log” page, as shown on the following figure.



Email Generated Time	Email Send Module	Receivers	Last Send Time	Last Send Address	Send Result	Return Code	Options
2017-05-03 03:43:16	Test	mbaomar@grandstream.com	05-03 03:43:18	mbaomar@grandstream.com	sent	250	
2017-05-03 03:43:10	Test	mbaomar@grandstream.com	05-03 03:43:13	mbaomar@grandstream.com	sent	250	

Figure 54: Email Logs

Recordings Storage

The UCM supports both automatic and manual call recordings. Recordings can be saved to UCM’s local storage, external storage (SD/USB disks), and NAS.

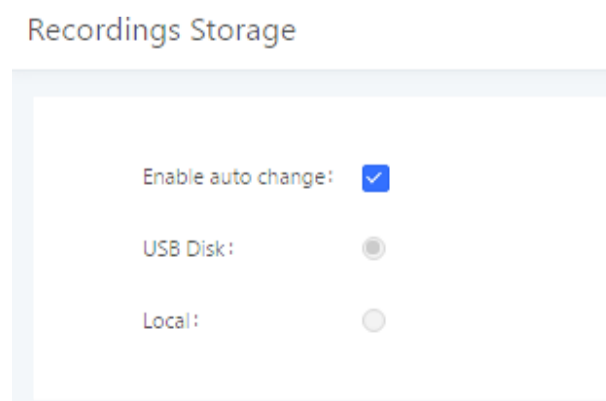


Figure 55: PBX Settings → Recordings Storage

- If **Enable Auto Change** is selected, the recording storage location will automatically change to NAS, USB Disk, or SD card if they are available. If all storage location types are available, the priority will be NAS->USB Disk->SD Card->Local storage.

- If “**Local**” is selected, the recordings will be stored in UCM62xx internal storage.
- If “**USB Disk**” or “**SD Card**” is selected, the recordings will be stored in the corresponding plugged in external storage device. Please note the options “USB Disk” and “SD Card” will be displayed only if they are plugged into the UCM62xx.

Once “USB Disk” or “SD Card” is selected, click on “OK”. The user will be prompted to confirm to copy the local files to the external storage device.

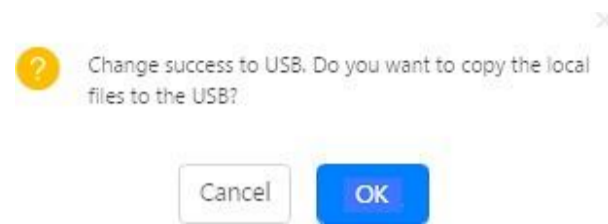


Figure 56: Recordings Storage Prompt Information

Click on “OK” to continue. The users will be prompted a new dialog to select the categories for the files to be copied over.

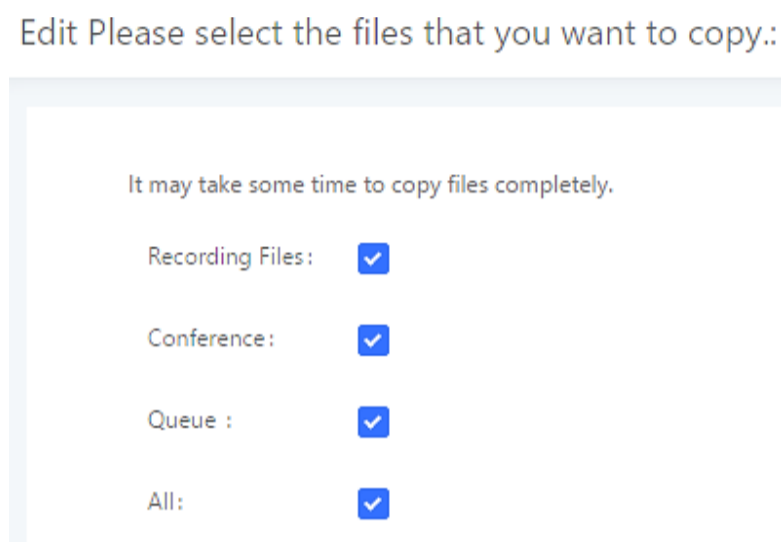


Figure 57: Recording Storage Category

On the UCM62xx, recording files are generated and exist in 3 categories: normal call recording files, conference recording files, and call queue recording files. Therefore, users have the following options when select the categories to copy the files to the external device:

- **Recording Files:** Copy the normal recording files to the external device.
- **Conference:** Copy the conference recording files to the external device.
- **Queue:** Copy the call queue recording files to the external device.
- **All:** Copy all recording files to the external device.

Provisioning

Overview

Grandstream SIP Devices can be configured via Web interface as well as via configuration file through TFTP/HTTP/HTTPS download. All Grandstream SIP devices support a proprietary binary format configuration file and XML format configuration file. The UCM6200 provides a Plug and Play mechanism to auto-provision the Grandstream SIP devices in a zero-configuration manner by generating XML config file and having the phone to download it within LAN area. This allows users to finish the installation with ease and properly manage SIP devices.

To provision a phone, three steps are involved, i.e., discovery, configuration and provisioning. This section explains how Zero Config works on the UCM6200. The settings for this feature can be accessed via Web GUI → **Value-added Features** → **Zero Config**.

Configuration Architecture for End Point Device

Started from firmware version 1.0.7.10, the end point device configuration in zero config is divided into the following three layers with priority from the lowest to the highest:

- **Global**

This is the lowest layer. Users can configure the most basic options that could apply to all Grandstream SIP devices during provisioning via Zero config.

- **Model**

In this layer, users can define model-specific options for the configuration template.

- **Device**

This is the highest layer. Users can configure device-specific options for the configuration for individual device here.

Each layer also has its own structure in different levels. Please see figure below. The details for each layer are explained in sections *[Global configuration]*, *[Model configuration]* and *[Device Configuration]*.

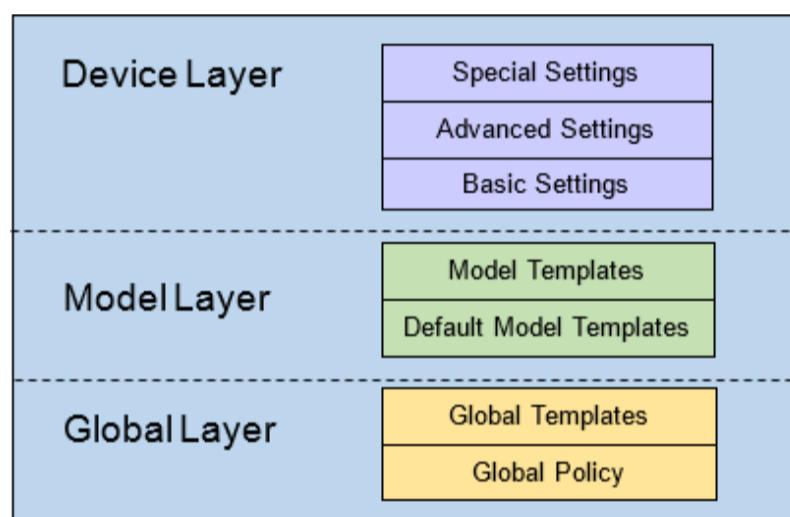


Figure 58: Zero Config Configuration Architecture for End Point Device

The configuration options in model layer and device layer have all the option in global layers already, i.e., the options in global layer is a subset of the options in model layer and device layer. If an option is set in all three layers with different values, the highest layer value will override the value in lower layer. For example, if the user selects English for Language setting in Global Policy and Spanish for Language setting in Default Model Template, the language setting on the device to be provisioned will use Spanish as model layer has higher priority than global layer. To sum up, **configurations in higher layer will always override the configurations for the same options/fields in the lower layer when presented at the same time.**

After understanding the zero-config configuration architecture, users could configure the available options for end point devices to be provisioned by the UCM6200 by going through the three layers. This configuration architecture allows users to set up and manage the Grandstream end point devices in the same LAN area in a centralized way.

Auto Provisioning Settings

By default, the Zero Config feature is enabled on the UCM6200 for auto provisioning. Three methods of auto provisioning are used.

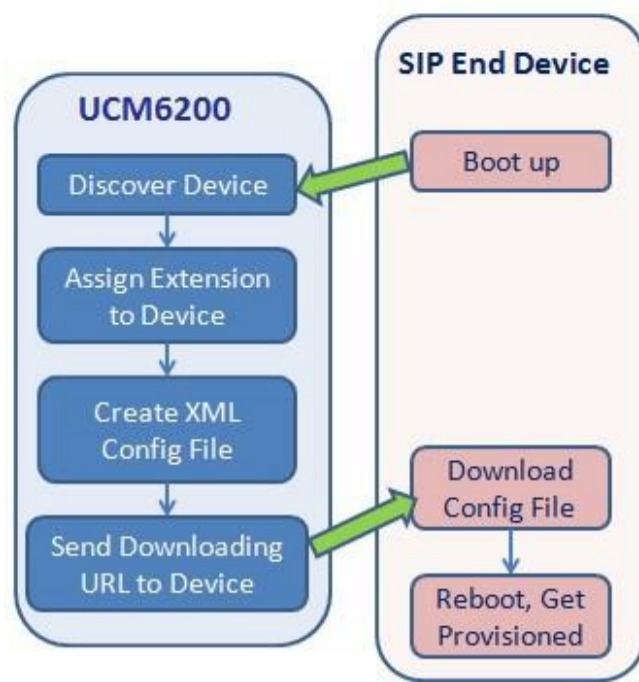


Figure 59: UCM6200 Zero Config

- **SIP SUBSCRIBE**

When the phone boots up, it sends out SUBSCRIBE to a multicast IP address in the LAN. The UCM6200 discovers it and then sends a NOTIFY with the XML config file URL in the message body. The phone will then use the path to download the config file generated in the UCM6200 and take the new configuration.

- **DHCP OPTION 66**

Route mode need to be set to use this feature. When the phone restarts (by default DHCP Option 66 is turned on), it will send out a DHCP DISCOVER request. The UCM6200 receives it and returns DHCP OFFER with the config server path URL in Option 66, for example, <https://192.168.2.1:8089/zccgi/>. The phone will then use the path to download the config file generated in the UCM6200.

- **mDNS**

When the phone boots up, it sends out mDNS query to get the TFTP server address. The UCM6200 will respond with its own address. The phone will then send TFTP request to download the XML config file from the UCM6200.

To start the auto provisioning process, under Web GUI→**Value-added Features**→**Zero Config**→**Zero Config Settings**, fill in the auto provision information.

Zero Config Global Policy Global Templates Model Templates Model Update **Zero Config Settings**

Basic Settings

Enable Zero Config:

Enable Automatic Configura...

Extension Assignment

Auto provision automatically provides an extension to the device.
There are two methods of auto provision: SIP SUBSCRIBE and DHCP Option 66.

For example, when the device boots up, it will send SIP SUBSCRIBE multicast in the LAN. The PBX will find it, create an account and return a URL of the config file for the device to download.

Auto Assign Extension:

Zero Config Extension Segm...5000 - 6299 [Zero Config Extension Segment](#)

Enable Pick Extension:

Pick Extension Segment: 4000 - 4999 [Pick Extension Segment](#)

Pick Extension Period (hour)...

Network Settings

Subnet Whitelist: [+](#)

Save

Figure 60: Auto Provision Settings

Table 22: Auto Provision Settings

Enable Zero Config	Enable or disable the zero-config feature on the PBX. The default setting is enabled.
Enable Automatic Configuration Assignment	By default, this is disabled. If disabled, when SIP device boots up, the UCM6200 will not send the SIP device the URL to download the config file and therefore the SIP device will not be automatically provisioned by the UCM6200. Note: When disabled, SIP devices can still be provisioned by manually sending NOTIFY from the UCM6200 which will include the XML config file URL for the SIP device to download.
Automatically Assign Extension	If enabled, when the device is discovered, the PBX will automatically assign an extension within the range defined in “Zero Config Extension Segment” to the device. The default setting is disabled.
Zero Config Extension Segment	Click on the link “Zero Config Extension Segment” to specify the extension range to be assigned if “Automatically Assign Extension” is enabled. The default range is 5000-6299. Zero Config Extension Segment range can be defined in Web GUI→ PBX Settings → General Settings → General page→Extension Preference section: “Auto Provision Extensions”.
Enable Pick Extension	If enabled, the extension list will be sent out to the device after receiving the device’s request. This feature is for the GXP series phones that support selecting extension to be provisioned via phone’s LCD. The default setting is disabled.

Pick Extension Segment	Click on the link “Pick Extension Segment” to specify the extension list to be sent to the device. The default range is 4000 to 4999. Pick Extension Segment range can be defined in Web GUI→ PBX Settings → General Settings → General page →Extension Preference section: “Pick Extensions”.
Pick Extension Period (hour)	Specify the number of minutes to allow the phones being provisioned to pick extensions.
Subnet Whitelist	This feature allows the UCM to provision devices in different subnets other than UCM network. Enter subnets IP addresses to allow devices within these subnets to be provisioned. The syntax is <i><IP>/<CIDR></i> . Examples: 10.0.0.1/8 192.168.6.0/24 Note: Only private IP ranges (10.0.0.0 172.16.0.0 192.168.0.0) are supported.

Please make sure an extension is manually assigned to the phone or “Automatically Assign Extension” is enabled during provisioning. After the configuration on the UCM6200 Web GUI, click on “Save” and “Apply Changes”. Once the phone boots up and picks up the config file from the UCM6200, it will immediately apply the configuration.

Discovery

Grandstream endpoints are automatically discovered after bootup. Users could also manually discover device by specifying the IP address or scanning the entire LAN network. Three methods are supported to scan the devices.

- PING
- ARP
- SIP Message (NOTIFY)

Click on “Auto Discover” under Web GUI→**Value-added Features**→**Zero Config**→**Zero Config**, fill in the “Scan Method” and “Scan IP”. The IP address segment will be automatically filled in based on the network mask detected on the UCM6200. If users need scan the entire network segment, enter 255 (for example, 192.168.40.255) instead of a specific IP address. Then click on “Save” to start discovering the devices within the same network. To successfully discover the devices, “Zero Config” needs to be enabled on the UCM6200 Web GUI→**Value-added Features**→**Zero Config**→**Auto Provisioning Settings**.

Auto Discover
✕

The PBX can automatically discover the new devices by ARP or PING. It can scan the entire network segment or a single IP address.

PBX LAN/LAN1 Address: 192.168.2.1

Network Segment: 192.168.2.0 - 192.168.2.255

Broadcast IP: 192.168.2.255

Scan Method: SIP-Message ▾

Scan IP: 192.168.6.137

Cancel
OK

Figure 61: Auto Discover

The following figure shows a list of discovered phones. The MAC address, IP Address, Extension (if assigned), Version, Vendor, Model, Connection Status, Create Config, Options (Edit /Delete /Update /Reboot /Access Device WebGUI) are displayed in the list.

Auto Discover can also search for devices located on other subnets, in condition for the subnet to be added under **Zero Config Settings> Subnet Whitelist**. The method allowed to auto discover other subnets then the UCM's is **SIP-Message** like shown below.

Auto Discover
✕

The PBX can automatically discover new devices via ARP, PING or SIP Message by scanning the entire network segment or a single IP address.

PBX LAN/LAN1 Address: 192.168.2.1

Network Segment: 192.168.2.0 - 192.168.2.255

Broadcast IP: 192.168.2.255

Scan Method: SIP-Message ▾

Subnet Whitelist: 192.168.5.0/24 ▾

Scan IP: 192 . 168 . 5 . 103

Figure 62: Auto Discover other subnets

<input type="checkbox"/>	MAC Address ↕	IP Address ↕	Extension	Version ↕	Vendor ↕	Model ↕	Create Config ↕	Options
<input type="checkbox"/>	0008825C6926	192.168.2.104	--	1.0.9.17	GRANDSTREAM	GXP2160	--	
<input type="checkbox"/>	000882836616	192.168.6.175	--	1.0.9.14	GRANDSTREAM	GXP2160	--	
<input type="checkbox"/>	000882866015	192.168.2.101	--	1.0.9.11	GRANDSTREAM	GXP2170	--	
<input type="checkbox"/>	000882A206D8	192.168.6.241	--	1.0.8.50	GRANDSTREAM	GXP2160	--	
<input type="checkbox"/>	00088275C888	192.168.6.137	--	1.0.8.50	GRANDSTREAM	GXP2130	--	

Figure 63: Discovered Devices

Uploading Devices List

Besides the built-in discovery method on the UCM, users could prepare a list of devices on .CSV file and upload it by clicking on the button Choose File to Upload, after which a success message prompt should be displayed.

Users need to make sure that the CSV file respects the format as shown on the following figure and that the entered information is correct (valid IP address, valid MAC address, device model and an existing account), otherwise the UCM will reject the file and the operation will fail:

	A	B	C	D	E
1	mac	model	ip	version	account
2	000b82ec21a5	GXP1630	192.168.2.103	1.0.3.132	5555
3	000b825c6927	GXP2160	192.168.5.108	1.0.9.135	5551

Figure 64: Device list – CSV file sample

Important Note

Please note that adding the account field is supported only for the following Granstream products: **GRP, GXP, GXV, GVC, GAC, GDS** and **DP750** devices.

Managing discovered devices

- **Sorting:** Press or to sort per MAC Address, IP Address, Version, Vendor, Model or Create Config columns from lower to higher or higher to lower, respectively.
- **Filter:** Select a filter to display corresponding results.
- **All:** Display all discovered devices.
- **Scan Results:** Display only manually discovered devices. [Discovery]
- **IP Address:** Enter device IP and press **Search** button.
- **MAC Address:** Enter device MAC and press **Search** button.
- **Model:** Enter a model name and press **Search** button. Example: GXP2130.

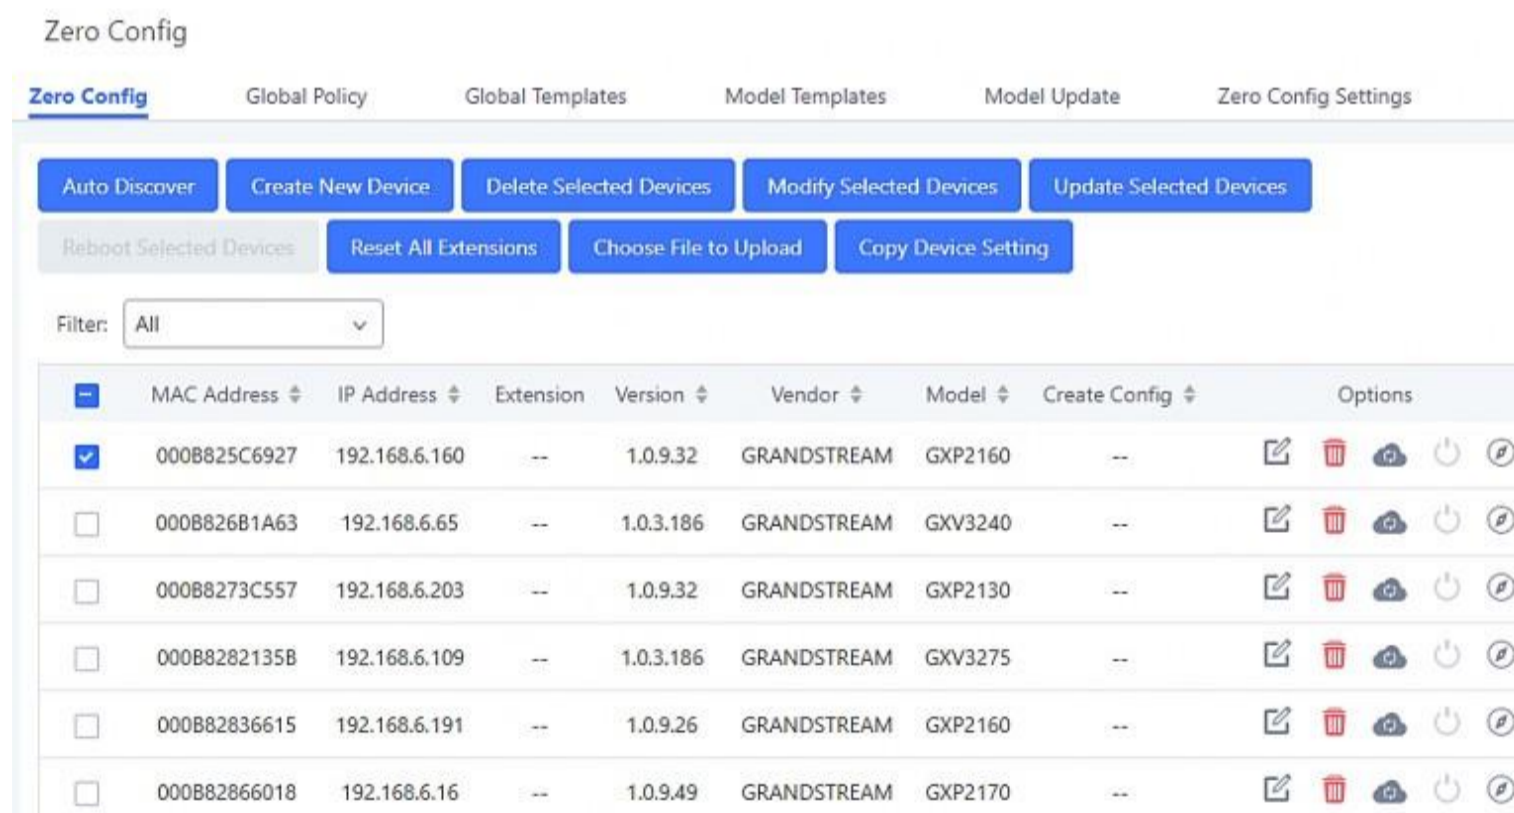


Figure 65: Managing Discovered Devices

From the main menu of zero config, users can perform the following operations:

- Click on **Auto Discover** in order to access to the discovery menu as shown on [Discovery] section.
- Click on **Create New Device** to add a new device to zero config database using its MAC address.
- Click on **Delete Selected Devices** to delete selected devices from the zero-config database.
- Click on **Modify Selected Devices** to modify selected devices.

- Click on **Update Selected Devices** to batch update a list of devices, the UCM on this case will send SIP NOTIFY message to all selected devices in order to update them at once.
- Click on **Reboot Selected Devices** to reboot selected devices (the selected devices, should have been provisioned with extensions since the phone will authenticate the server which is trying to send it reboot command).
- Click on **Reset All Extensions** to clear all devices configurations.
- Click on **Choose File to Upload** to upload CSV file containing list of devices.
- Click on **Copy Device Setting** to copy configuration from one device to another. This can be useful for easily replace devices and note that this feature works only between devices of same model.

All these operations will be detailed on the next sections.

Global configuration

Global policy

Global configuration will apply to all the connected Grandstream SIP end point devices in the same LAN with the UCM6200 no matter what the Grandstream device model it is. It is divided into two levels:

- Web GUI→**Value-added Features**→**Zero Config**→**Global Policy**
- Web GUI→**Value-added Features**→**Zero Config**→**Global Templates**.
- **Global Templates** configuration has higher priority to **Global Policy** configuration.

Global Policy can be accessed in Web GUI→**Value-added Features**→**Zero Config**→**Global Policy** page. On the top of the configuration table, users can select category in the “Options” dropdown list to quickly navigate to the category. The categories are:

- **Localization**: configure display language, data and time.
- **Phone Settings**: configure dial plan, call features, NAT, call progress tones and etc.
- **Contact List**: configure LDAP and XML phonebook download.
- **Maintenance**: configure upgrading, web access, Telnet/SSH access and syslog.
- **Network Settings**: configure IP address, QoS and STUN settings.
- **Customization**: customize LCD screen wallpaper for the supported models.
- **Communication Settings**: configure Email and FTP settings

Select the checkbox on the left of the parameter you would like to configure to activate the dropdown list for this parameter.

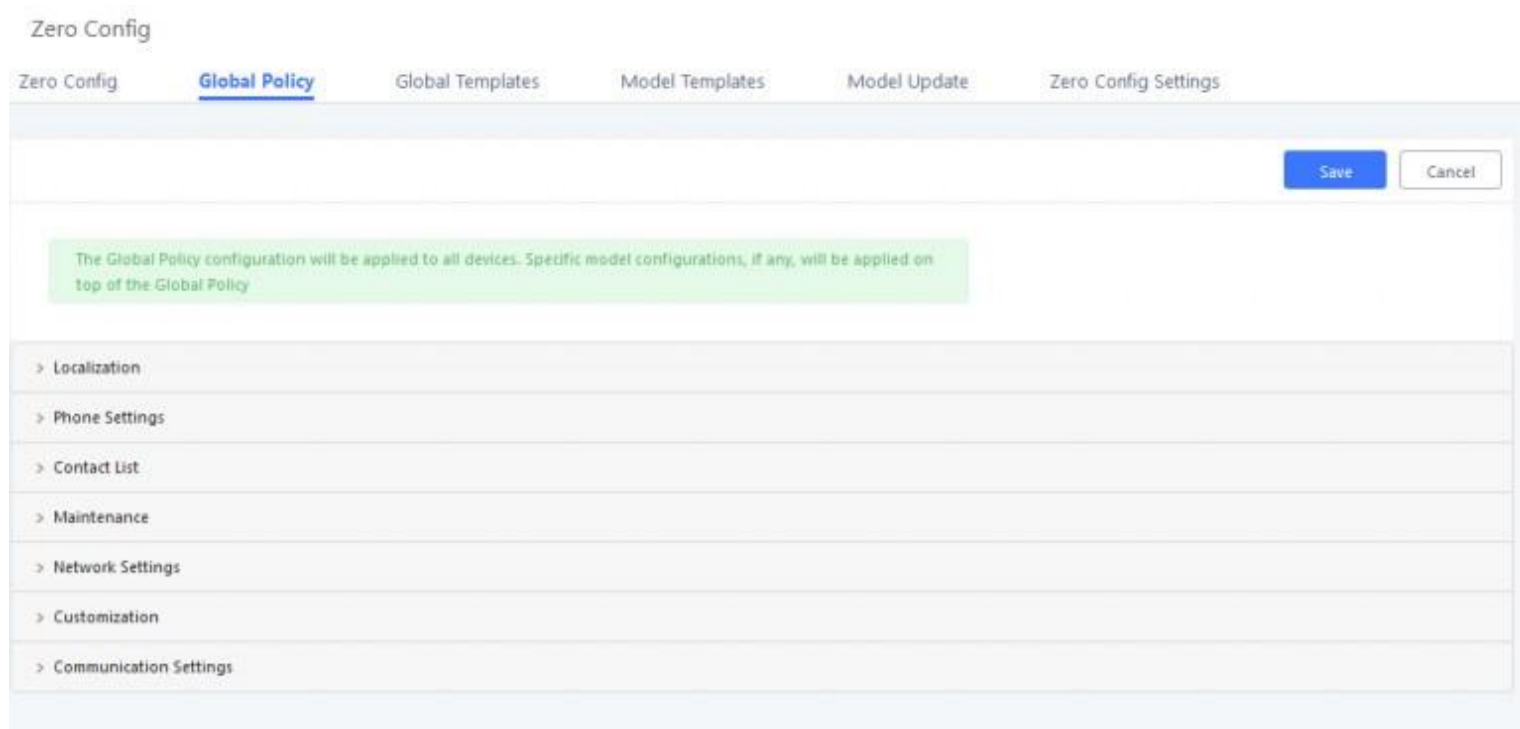


Figure 66: Global Policy Categories

The following tables list the Global Policy configuration parameters for the SIP end device.

Language settings	
Language	Select the LCD display language on the SIP end device.
Date and Time	
Date Format	Configure the date display format on the SIP end device's LCD.
Time Format	Configure the time display in 12-hour or 24-hour format on the SIP end device's LCD.
NTP Server	Configure the URL or IP address of the NTP server. The SIP end device may obtain the date and time from the server.
Time Zone	Configure the time zone used on the SIP end device.

Table 23: Global Policy Parameters – Localization

Default Call Settings	
Dial Plan	Configure the default dial plan rule. For syntax and examples, please refer to user manual of the SIP devices to be provisioned for more details.
Enable Call Features	When enabled, “Do Not Disturb”, “Call Forward” and other call features can be used via the local feature code on the phone. Otherwise, the ITSP feature code will be used.
Use # as Dial Key	If set to “Yes”, pressing the number key “#” will immediately dial out the input digits.
Auto Answer by Call-info	If set to “Yes”, the phone will automatically turn on the speaker phone to answer incoming calls after a short reminding beep, based on the SIP Call-Info header sent from the server/proxy. The default setting is enabled.

NAT Traversal	Configure if NAT traversal mechanism is activated.
User Random Port	If set to “Yes”, this parameter will force random generation of both the local SIP and RTP ports.
General Settings	
Call Progress Tones	<p>Configure call progress tones including ring tone, dial tone, second dial tone, message waiting tone, ring back tone, call waiting tone, busy tone and reorder tone using the following syntax:</p> <p>f1=val, f2=val[, c=on1/ off1[- on2/ off2[- on3/ off3]]];</p> <ul style="list-style-type: none"> o Frequencies are in Hz and cadence on and off are in 10ms). o “on” is the period (in ms) of ringing while “off” is the period of silence. Up to three cadences are supported. o Please refer to user manual of the SIP devices to be provisioned for more details
HEADSET Key Mode	Select “Default Mode” or “Toggle Headset/Speaker” for the Headset key. Please refer to user manual of the SIP devices to be provisioned for more details.

Table 24: Global Policy Parameters – Phone Settings

Table 25: Global Policy Parameters – Contact List

LDAP Phonebook	
Source	<p>Select “Manual” or “PBX” as the LDAP configuration source.</p> <ul style="list-style-type: none"> o If “Manual” is selected, the LDAP configuration below will be applied to the SIP end device. o If “PBX” is selected, the LDAP configuration built-in from UCM6200 Web GUI→System Settings→LDAP Server will be applied.
Address	Configure the IP address or DNS name of the LDAP server.
Port	Configure the LDAP server port. The default value is 389.
Base DN	<p>This is the location in the directory where the search is requested to begin. Example:</p> <ul style="list-style-type: none"> o dc=grandstream, dc=com o ou=Boston, dc=grandstream, dc=com
Username	Configure the bind “Username” for querying LDAP servers. The field can be left blank if the LDAP server allows anonymous binds.
Password	Configure the bind “Password” for querying LDAP servers. The field can be left blank if the LDAP server allows anonymous binds.

Number Filter	Configure the filter used for number lookups. Please refer to user manual for more details.
Name Filter	Configure the filter used for name lookups. Please refer to user manual for more details.
Version	Select the protocol version for the phone to send the bind requests. The default value is 3.
Name Attribute	Specify the “name” attributes of each record which are returned in the LDAP search result. Example: gn cn sn description
Number Attribute	Specify the “number” attributes of each record which are returned in the LDAP search result. Example: telephoneNumber telephoneNumber Mobile
Display Name	Configure the entry information to be shown on phone’s LCD. Up to 3 fields can be displayed. Example: %cn %sn %telephoneNumber
Max Hits	Specify the maximum number of results to be returned by the LDAP server. Valid range is 1 to 3000. The default value is 50.
Search Timeout	Specify the interval (in seconds) for the server to process the request and client waits for server to return. Valid range is 0 to 180. Default value is 30.
Sort Results	Specify whether the searching result is sorted or not. Default setting is No.
Incoming Calls	Configure to enable LDAP number searching when receiving calls. The default setting is No.
Outgoing Calls	Configure to enable LDAP number searching when making calls. The default setting is No.
Lookup Display Name	Configures the display name when LDAP looks up the name for incoming call or outgoing call. It must be a subset of the LDAP Name Attributes.
XML Phonebook	

Phonebook XML Server	<p>Select the source of the phonebook XML server.</p> <ul style="list-style-type: none"> ○ Disable <p>Disable phonebook XML downloading.</p> <ul style="list-style-type: none"> ○ Manual <p>Once selected, users need specify downloading protocol HTTP, HTTPS or TFTP and the server path to download the phonebook XML file. The server path could be IP address or URL, with up to 256 characters.</p> <ul style="list-style-type: none"> ○ Local UCM Server <p>Once selected, click on the Server Path field to upload the phonebook XML file. Please note after uploading the phonebook XML file to the server, the original file name will be used as the directory name and the file will be renamed as phonebook.xml under that directory.</p>
Phonebook Download Interval	<p>Configure the phonebook download interval (in Minute). If set to 0, automatic download will be disabled. Valid range is 5 to 720.</p>
Remove manually-edited entries on download	<p>If set to “Yes”, when XML phonebook is downloaded, manually added entries will be removed.</p>

Table 26: Global Policy Parameters – Maintenance

Upgrade and Provision

<p>Firmware Source</p>	<p>UCM can provision the firmware source to devices. The following options are available:</p> <p>Select a source to get the firmware file:</p> <ul style="list-style-type: none"> ○ URL <p>If selected, complete the configuration for the following four parameters: “Upgrade Via”, “Server Path”, “File Prefix” and “File Postfix”.</p> <ul style="list-style-type: none"> ○ Local UCM Server <p>Firmware can be uploaded to the UCM6200 internal storage for firmware upgrade. If selected, click on “Manage Storage” icon next to “Directory” option, upload firmware file and select directory for the end device to retrieve the firmware file.</p> <ul style="list-style-type: none"> ○ Local USB Media <p>If selected, the USB storage device needs to be plugged into the UCM6200 and the firmware file must be put under a folder named “ZC_firmware” in the USB storage root directory.</p> <ul style="list-style-type: none"> ○ Local SD Card Media <p>If selected, an SD card needs to be plugged into the UCM6200 and the firmware file must be put under a folder named “ZC_firmware” in the USB storage root directory.</p>
<p>Upgrade via</p>	<p>When URL is selected as firmware source, configure upgrade via TFTP, HTTP or HTTPS.</p>
<p>Server Path</p>	<p>When URL is selected as firmware source, configure the firmware upgrading server path.</p>
<p>File Prefix</p>	<p>When URL is selected as firmware source, configure the firmware file prefix. If configured, only the firmware with the matching encrypted prefix will be downloaded and flashed into the phone, if URL is selected as firmware source.</p>
<p>File Postfix</p>	<p>When URL is selected as firmware source, configure the firmware file postfix. If configured, only the configuration file with the matching encrypted postfix will be downloaded and flashed into the phone.</p>
<p>Allow DHCP Option 43/66</p>	<p>If DHCP option 43 or 66 is enabled on the LAN side, the TFTP server can be redirected.</p>
<p>Automatic Upgrade</p>	<p>If enabled, the end point device will automatically upgrade if a new firmware is detected. Users can select automatic upgrading by day, by week or by minute.</p> <ul style="list-style-type: none"> ○ By week <p>Once selected, specify the day of the week to check HTTP/TFTP server for firmware upgrades or configuration files changes.</p> <ul style="list-style-type: none"> ○ By day <p>Once selected, specify the hour of the day to check the HTTP/TFTP server for firmware upgrades or configuration files changes.</p> <ul style="list-style-type: none"> ○ By minute <p>Once selected, specify the interval X that the SIP end device will request for new firmware every X minutes.</p>

Firmware Upgrade Rule	Specifies how firmware upgrade and provision requests will be sent.
Web Access	
Admin Password	Configure the administrator password for admin level login.
End-User Password	Configure the end-user password for the end user level login.
Web Access Mode	Select HTTP or HTTPS as the web access protocol.
Web Server Port	Configure the port for web access. The valid range is 1 to 65535.
Security	
Disable Telnet/SSH	Enable Telnet/SSH access for the SIP end device. If the SIP end device supports Telnet access, this option controls the Telnet access of the device; if the SIP end device supports SSH access, this option controls the SSH access of the device.
Syslog	
Syslog Server	Configure the URL/IP address for the syslog server.
Syslog Level	Select the level of logging for syslog.
Send SIP Log	Configures whether SIP messages will be included in the syslog.

Table 27: Global Policy Parameters – Network Settings

Basic Settings	
IP Address	<p>Configures how the SIP endpoint will obtain IP addresses. The following options are available:</p> <ul style="list-style-type: none"> ◦ DHCP <p>Once selected, users can specify the Host Name (option 12) of the SIP end device as DHCP client, and Vendor Class ID (option 60) used by the client and server to exchange vendor class ID information.</p> <ul style="list-style-type: none"> ◦ PPPoE <p>Once selected, users need specify the Account ID, Password and Service Name for PPPoE.</p>
Advanced Setting	

Layer 3 QoS	Define the Layer 3 QoS parameter. This value is used for IP Precedence, Diff-Serv or MPLS. Valid range is 0-63.
Layer 2 QoS Tag	Assign the VLAN Tag of the Layer 2 QoS packets. Valid range is 0 -4095.
Layer 2 QoS Priority Value	Assign the priority value of the Layer 2 QoS packets. Valid range is 0-7.
STUN Server	Configure the IP address or Domain name of the STUN server. Only non-symmetric NAT routers work with STUN.
Keep Alive Interval	Specify how often the phone will send a blank UDP packet to the SIP server in order to keep the “ping hole” on the NAT router to open. Valid range is 10-160.

Table 28: Global Policy Parameters – Customization

Wallpaper	
Screen Resolution 1024 x 600	<p>Check this option if the SIP endpoint uses a 1024×600 resolution wallpaper.</p> <ul style="list-style-type: none"> ◦ Source <p>Configure the location where wallpapers are stored.</p> <ul style="list-style-type: none"> ◦ File <p>If “URL” is selected as source, specify the URL of the wallpaper file. If “Local UCM Server” is selected as source, click to upload wallpaper file to the UCM6200.</p>
Screen Resolution 800 x 400	<p>Check this option if the SIP endpoint uses a 800×400 resolution wallpaper.</p> <ul style="list-style-type: none"> ◦ Source <p>Configure the location where wallpapers are stored.</p> <ul style="list-style-type: none"> ◦ File <p>If “URL” is selected as source, specify the URL of the wallpaper file. If “Local UCM Server” is selected as source, click to upload wallpaper file to the UCM6200.</p>
Screen Resolution 480 x 272	<p>Check this option if the SIP endpoint uses a 480×272 resolution wallpaper.</p> <ul style="list-style-type: none"> ◦ Source <p>Configure the location where wallpapers are stored.</p> <ul style="list-style-type: none"> ◦ File <p>If “URL” is selected as source, specify the URL of the wallpaper file. If “Local UCM Server” is selected as source, click to upload wallpaper file to the UCM6200.</p>

<p>Screen Resolution 320 x 240</p>	<p>Check this option if the SIP endpoint uses a 320×240 resolution wallpaper.</p> <ul style="list-style-type: none"> ◦ Source <p>Configure the location where wallpapers are stored.</p> <ul style="list-style-type: none"> ◦ File <p>If “URL” is selected as source, specify the URL of the wallpaper file. If “Local UCM Server” is selected as source, click to upload wallpaper file to the UCM6200.</p>
---	--

Table 29: Global Policy Parameters – Communication Settings

<p>Email Settings</p>	
<p>SMTP Settings</p>	<p>Check this option to configure the email settings that will be sent to the provisioned phones:</p> <ul style="list-style-type: none"> ◦ Server <p>IP address of the SMTP server</p> <ul style="list-style-type: none"> ◦ Port <p>SMTP server port</p> <ul style="list-style-type: none"> ◦ From E-Mail address <p>Email address</p> <ul style="list-style-type: none"> ◦ Sender Username <p>Username of the sender</p> <ul style="list-style-type: none"> ◦ Password Recovery Email <p>Email where recovered password will be sent</p> <ul style="list-style-type: none"> ◦ Alarm receive Email 1 <p>Email address where alarms notifications will be sent</p> <ul style="list-style-type: none"> ◦ Alarm receive Email 2 <p>Email address where alarms notifications will be sent</p> <ul style="list-style-type: none"> ◦ Enable SSL <p>Enable SSL protocol for SMTP</p>
<p>FTP</p>	

FTP	Check this option to configure the FTP settings that will be sent to the provisioned phones:
	<ul style="list-style-type: none"> ◦ Storage Server Type
	Either FTP or Central Storage
	<ul style="list-style-type: none"> ◦ Server
	FTP server address
	<ul style="list-style-type: none"> ◦ Port
FTP port to be used	
<ul style="list-style-type: none"> ◦ Username 	
FTP username	
<ul style="list-style-type: none"> ◦ Path 	
FTP Directory path	

Global Templates

Global Templates can be accessed in Web GUI→**Value-added Features**→**Zero Config**→**Global Templates**. Users can create multiple global templates with different sets of configurations and save the templates. Later on, when the user configures the device in Edit Device dialog→Advanced Settings, the user can select to use one of the global templates for the device. Please refer to section *[Manage Devices]* for more details on using the global templates.

When creating global template, users can select the categories and the parameters under each category to be used in the template. The global policy and the selected global template will both take effect when generating the config file. However, the selected global template has higher priority to the global policy when it comes to the same setting option/field. If the same option/field has different value configured in the global policy and the selected global template, the value for this option/field in the selected global template will override the value in global policy.

Click on “Create New Template” to add a global template. Users will see the following configurations.

Table 30: Create New Template

Template Name	Create a name to identify this global template.
Description	Provide a description for the global template. This is optional.
Active	Check this option to enable the global template.

- Click on  to edit the global template.

The window for editing global template is shown in the following figure. In the “Options” field, after entering the option name key word, the options containing the key word will be listed. Users could then select the options to be modified and click on “Add Option” to add it into the global template.

Edit Global Templates: test

* Template Name :

Description :

Active :

Options:

Phone Settings

Default Call Settings

Dial Plan :

Enable Call Features :

Use # as Dial Key :

Auto Answer by Call :

Info:

Figure 67: Edit Global Template

The added options will show in the list. Users can then enter or select value for each option to be used in the global template. On the left side of each added option, users can click on to remove this option from the template. On the right side of each option, users can click on to reset the option value to the default value.

Click on “Save” to save this global template.

- The created global templates will show in the Web GUI→**Value-added Features**→**Zero Config**→**Global Templates** page. Users can click on to delete the global template or click on “Delete Selected Templates” to delete multiple selected templates at once.
- Click on “Toggle Selected Template(s)” to toggle the status between enabled/disabled for the selected templates.

Model configuration

Model templates

Model layer configuration allows users to apply model-specific configurations to different devices. Users could create/edit/delete a model template by accessing Web GUI, page **Value-added Features**→**Zero Config**→**Model Templates**. If multiple model templates are created and enabled, when the user configures the device in Edit Device dialog→Advanced Settings, the user can select to use one of the model templates for the device. Please refer to section *[Manage Devices]* for more details on using the model template.

For each created model template, users can assign it as default model template. If assigned as default model template, the values in this model template will be applied to all the devices of this model. There is always only one default model template that can be assigned at one time on the UCM6200.

The selected model template and the default model template will both take effect when generating the config file for the device. However, the model template has higher priority to default model template when it comes to the same setting option/field. If the same option/field has different value configured in the default model template and the selected model template, the value for this option/field in the selected model template will override the value in default model template.



- Click on “Create New Template” to add a model template.

Table 31: Create New Model Template

Model	Select a model to apply this template. The supported Grandstream models are listed in the dropdown list for selection.
Template Name	Create a name for the model template.
Description	Enter a description for the model template. This is optional.
Default Model Template	Select to assign this model template as the default model template. The value of the option in default model template will be overwritten if other selected model template has a different value for the same option.
Active	Check this option to enable the model template.

- Click on  to edit the model template.

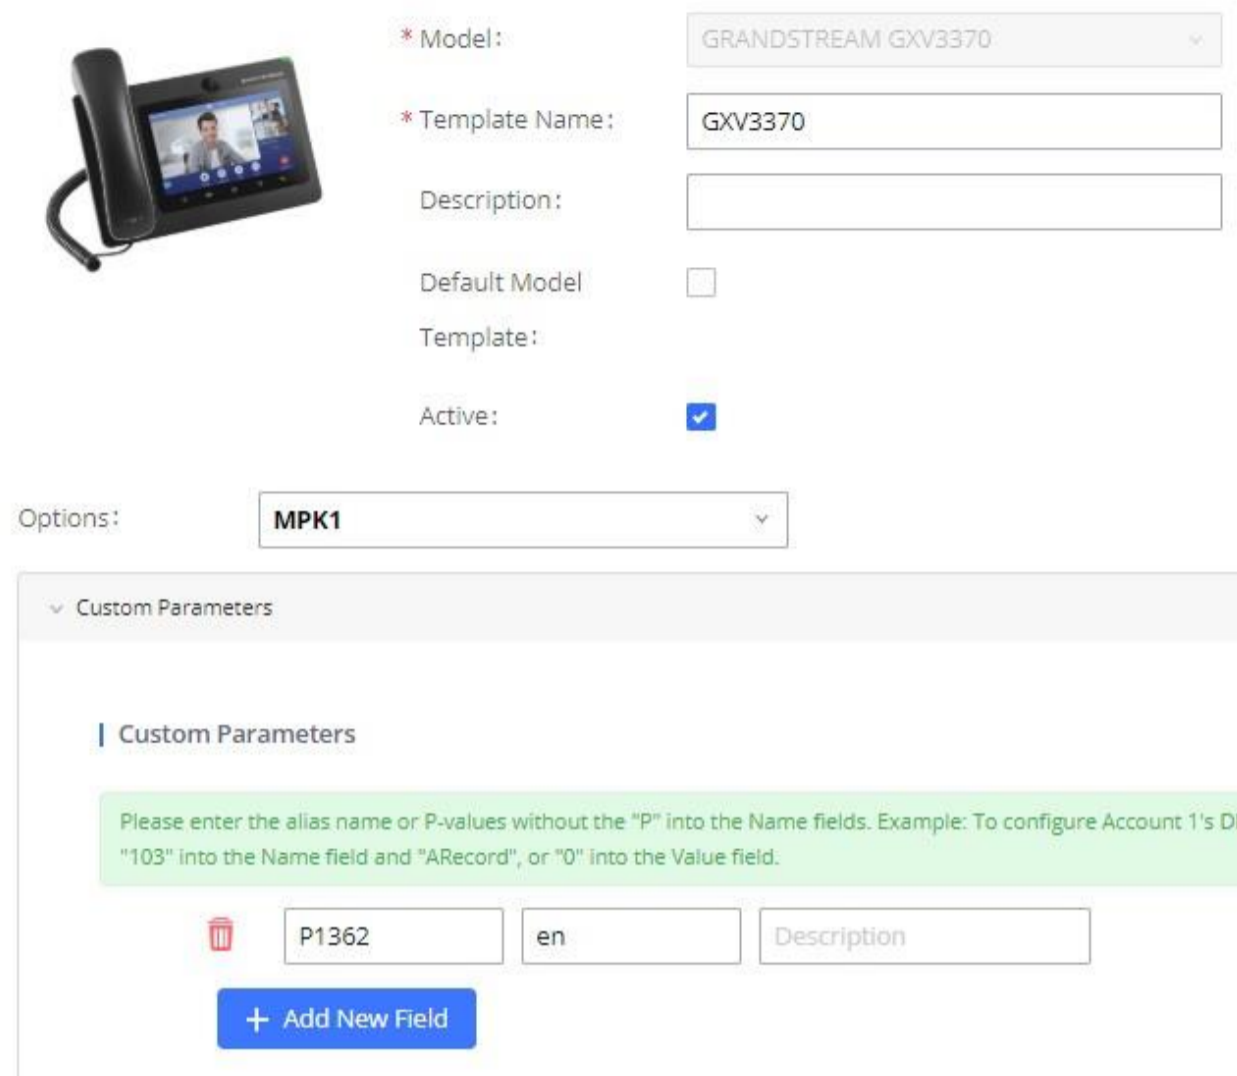
The editing window for model template is shown in the following figure. In the “Options” field, enter the option name key word, the option that contains the key word will be listed. User could then select the option and click on “Add Option” to add it into the model template.

Once added, the option will be shown in the list below. On the left side of each option, users can click on  to remove this option from the model template. On the right side of each option, users can click on  to reset the option to the default value.

User could also click on “Add New Field” to add a P value number and the value to the configuration. The following figure shows setting P value “P1362” to “en”, which means the display language on the LCD is set to English. For P value information of different models, please refer to configuration template here https://content.grandstream.com/hubfs/Grandstream_Feb_2021/Zip%20File/config-template.zip

Note: Some devices use Alias and not P-values.

Edit Model Templates: GXV3370



* Model: GRANDSTREAM GXV3370

* Template Name: GXV3370

Description:

Default Model

Template:


Active:

Options: MPK1

Custom Parameters


Custom Parameters

Please enter the alias name or P-values without the "P" into the Name fields. Example: To configure Account 1's DN "103" into the Name field and "ARecord", or "0" into the Value field.

	P1362	en	Description
---	-------	----	-------------

+ Add New Field

Figure 68: Edit Model Template


- Click on Save when done. The model template will be displayed on Web GUI→Value-added Features→Zero Config→Model Templates page.
- Click on  to delete the model template or click on “Delete Selected Templates” to delete multiple selected templates at once.
- Click on “Toggle Selected Template(s)” to toggle the status between enabled/disabled for the selected model templates.

Model Update

UCM6200 zero config feature supports provisioning all models of Grandstream SIP end devices including OEM device models.

OEM Models

Users can associate OEM device models with their original Grandstream-branded models, allowing these OEM devices to be provisioned appropriately.

- Click on  button.
- In the *Source Model* field, select the Grandstream device that the OEM model is based on from the dropdown list.
- For the *Destination Model* and *Destination Vendor* field, enter the custom OEM model name and vendor name.
- The newly added OEM model should now be selectable as an option in *Model* fields.

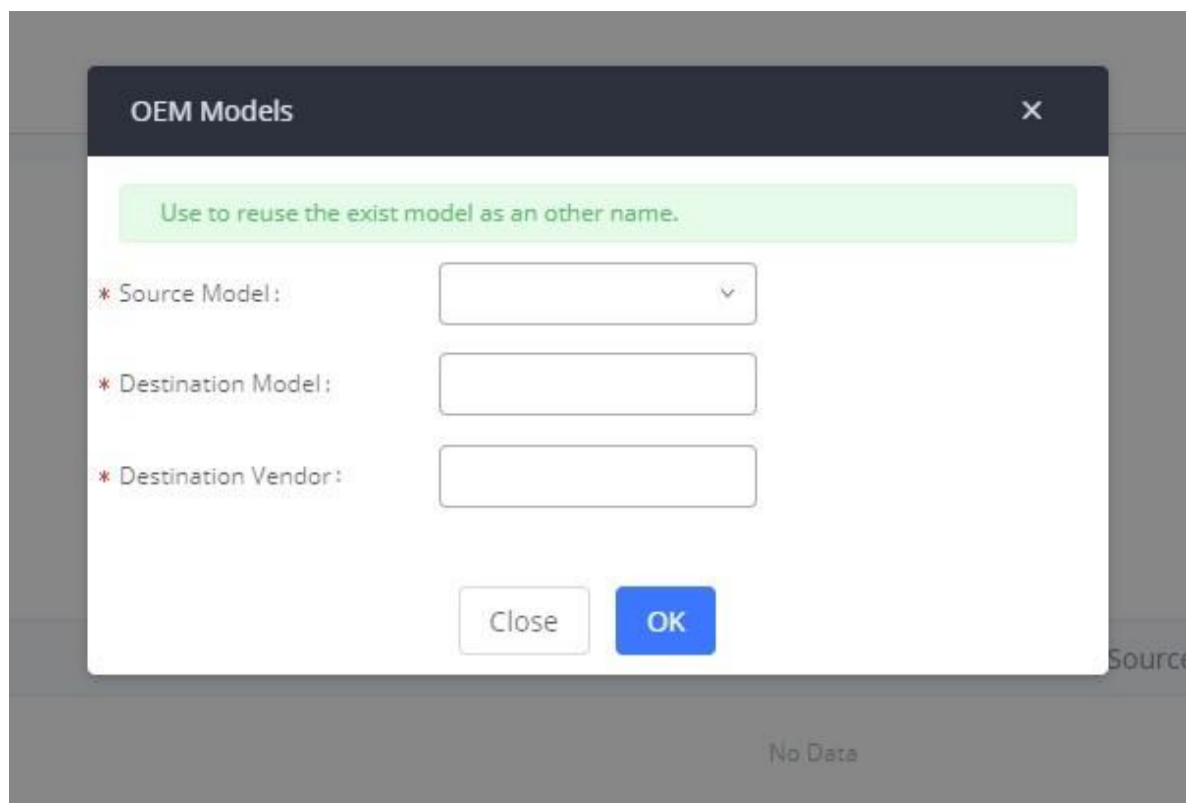




Figure 69: OEM Models

Model Template Package List

Templates for most of the Grandstream models are built in with the UCM6200 already. Templates for GS Wave and Grandstream surveillance products require users to download and install under Web GUI→**Value-added Features**→**Zero Config**→**Model Update** first before they are available in the UCM6200 for selection. After downloading and installing the model template to the UCM6200, it will show in the dropdown list for “Model” selection when editing the model template.

- Click on  to download the template.
- Click on  to upgrade the model template. Users will see this icon available if the device model has template updated in the UCM6200.

Model Template Package List











Vendor	Model	Version (Remote / Local)	Size	Options
Grandstream	DP750	1.0/-	271K	
Grandstream	GAC2500	1.0/-	25K	
Grandstream	GDS3705	1.0/-	55K	
Grandstream	GDS3710	1.0/-	97K	
Grandstream	GSWave	1.0/-	20K	
Grandstream	GVC3200	1.0/-	18K	
Grandstream	GVC3202	1.0/-	13K	
Grandstream	GVC3210	1.0/-	63K	
Grandstream	GXP1100	1.0/-	729K	
Grandstream	GXP1105	1.0/-	297K	

Figure 70: Template Management

Upload Model Template Package

In case the UCM6200 is placed in the private network and Internet access is restricted, users will not be able to get packages by downloading and installing from the remote server. Model template packages can be manually uploaded to the UCM.. Please contact Grandstream customer support if the model package is needed for manual uploading.

Upload Model Template Package

Choose Model Package to

Upload:

Figure 71: Upload Model Template Manually

Device Configuration

On Web GUI, page **Value-added Features**→**Zero Config**→**Zero Config**, users could create new device, delete existing device(s), make special configuration for a single device, or send NOTIFY to existing device(s).

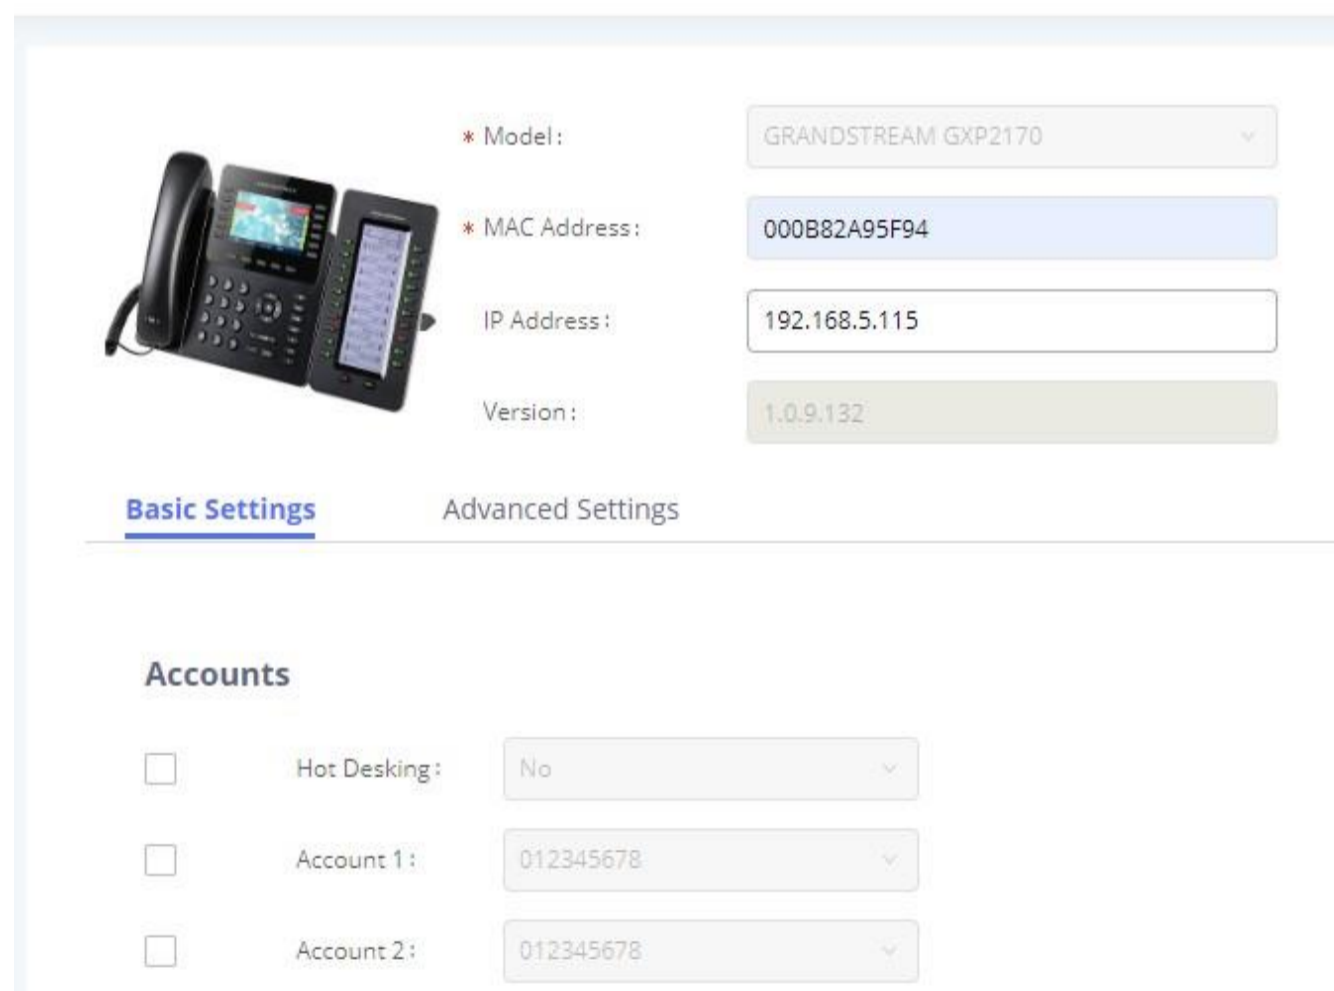
Create New Device

Besides configuring the device after the device is discovered, users could also directly create a new device and configure basic settings before the device is discovered by the UCM6200. Once the device is plugged in, it can then be discovered and provisioned. This gives the system administrator adequate time to set up each device beforehand.

Click on “Create New Device” and the following dialog will show. Follow the steps below to create the configurations for the new device.

1. Firstly, select a model for the device to be created and enter its MAC address, IP address and firmware version (optional) in the corresponding field.
2. Basic settings will show a list of settings based on the model selected in step 1. Users could assign extensions to accounts, assign functions to Line Keys and Multiple-Purposed Keys if supported on the selected model.
3. Click on “Create New Device” to save the configuration for this device.

Edit Device: 000B82A95F94



* Model: GRANDSTREAM GXP2170

* MAC Address: 000B82A95F94

IP Address: 192.168.5.115

Version: 1.0.9.132

Basic Settings Advanced Settings

Accounts

<input type="checkbox"/>	Hot Desking:	No
<input type="checkbox"/>	Account 1:	012345678
<input type="checkbox"/>	Account 2:	012345678

Figure 72: Create New Device

Manage Devices

The device manually created or discovered from Auto Discover will be listed in the Web GUI→**Value-added Features**→**Zero Config**→**Zero Config** page.

Users can see the devices with their MAC address, IP address, vendor, model etc.

<input type="checkbox"/>	000B825C6927	192.168.6.162	1.0.9.9	Grandstream	GXP2160	1	    
<input type="checkbox"/>	000B826B1958	192.168.6.115	1.0.3.167	Grandstream	GXV3240	1	    
<input type="checkbox"/>	000B826B1FF7	192.168.6.158	1.0.3.171	Grandstream	GXV3240	1	    

Figure 73: Manage Devices

- Click on  to access the Web GUI of the phone.

- Click on  to edit the device configuration.

A new dialog will be displayed for the users to configure “Basic” settings and “Advanced” settings. “Basic” settings have the same configurations as displayed when manually creating a new device, i.e., account, line key and MPK settings; “Advanced” settings allow users to configure more details in a five-level structure.

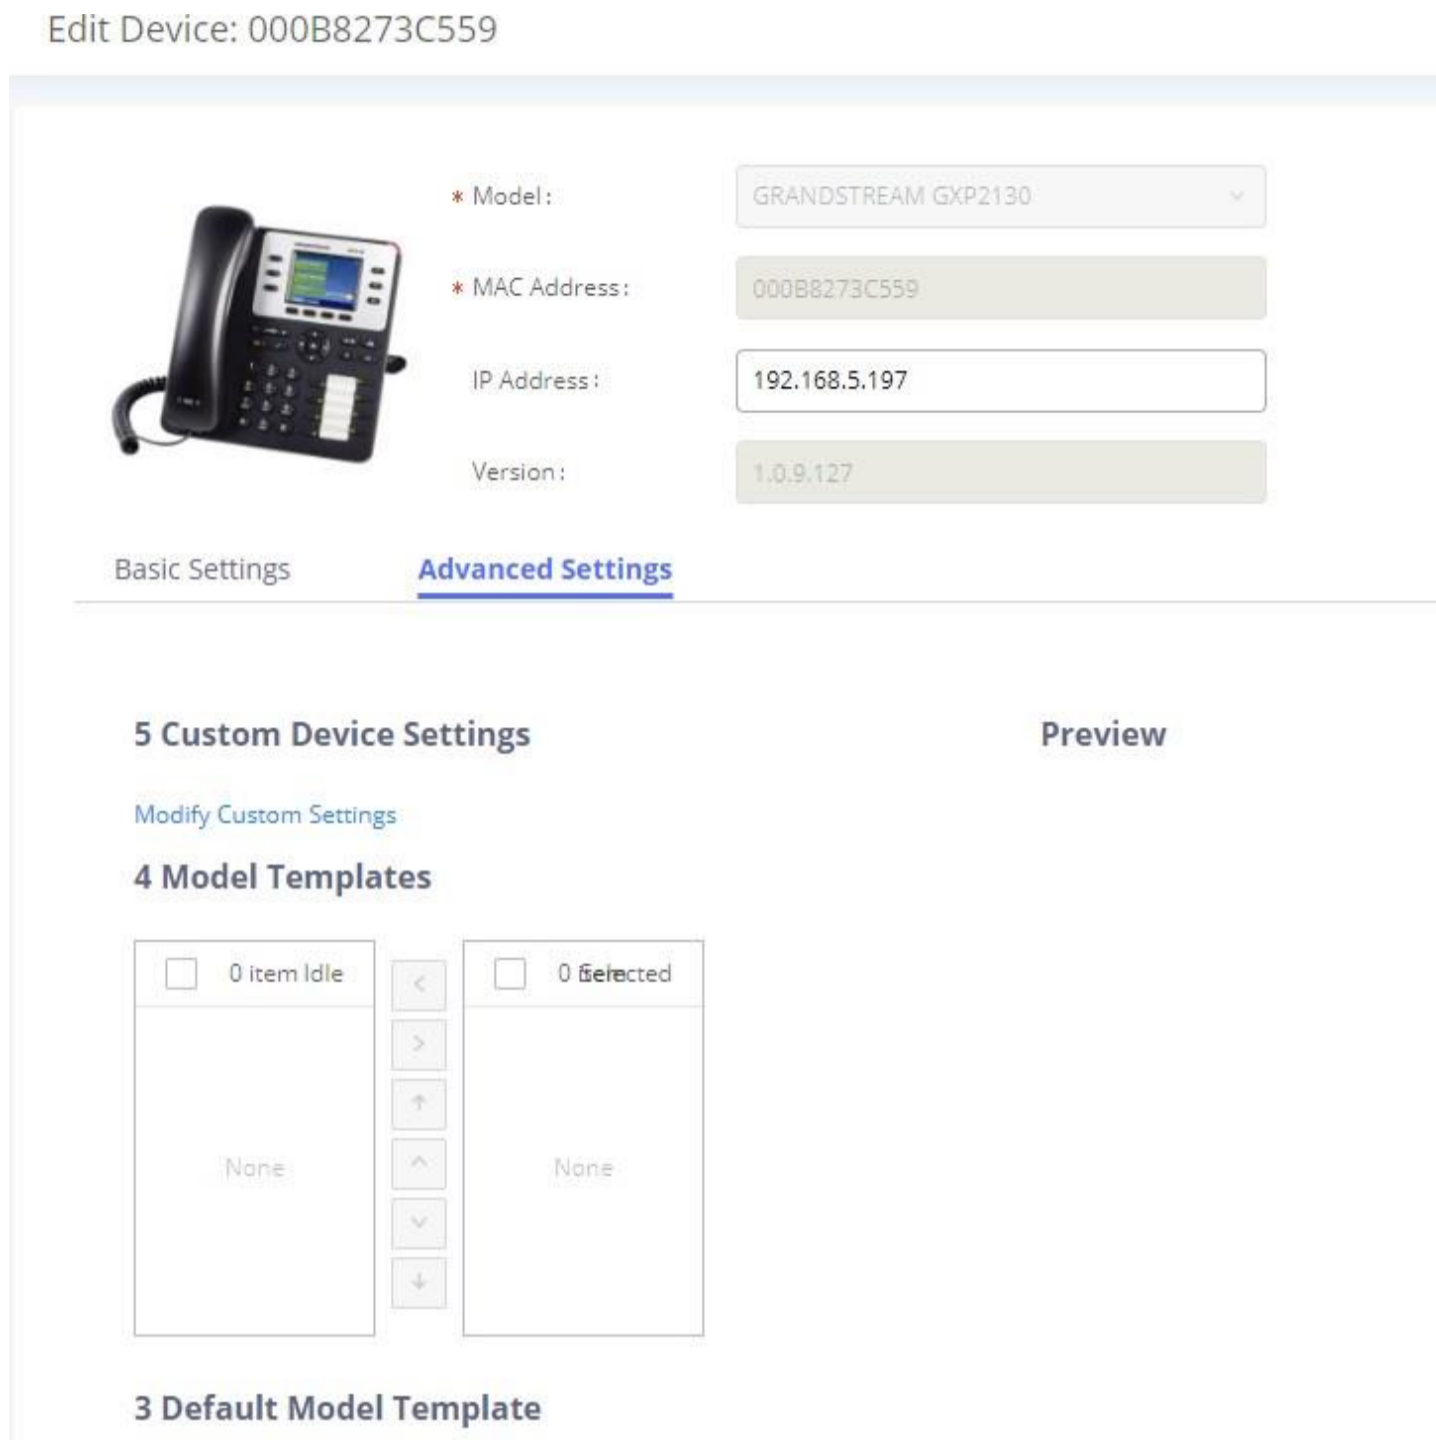


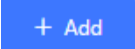



Figure 74: Edit Device

A preview of the “Advanced” settings is shown in the above figure. There are five levels configurations as described in (1) (2) (3) (4) (5) below, with priority from the lowest to the highest. The configurations in all levels will take effect for the device. If there are same options existing in different level configurations with different value configured, the higher-level configuration will override the lower level configuration.

1. Global Policy

This is the lowest level configuration. The global policy configured in Web GUI→Value-added Features→Zero Config→Global Policy will be applied here. Clicking on “Modify Global Policy” to redirect to page Value-added Features→Zero Config→Global Policy.

1. Global Templates

Select a global template to be used for the device and click on  to add. Multiple global templates can be selected, and users can arrange the priority by adjusting orders via  and . All the selected global templates will take effect. If the same option exists on multiple selected global templates, the value in the template with higher priority will override the one in the template with lower priority. Click on  to remove the global template from the selected list.

1. Default Model Template

Default Model Template will be applied to the devices of this model. Default model template can be configured in model template under Web GUI→**Value-added Features**→**Zero Config**→**Model Templates** page. Please see default model template option in [Table 31: Create New Model Template].

1. Model Templates

Select a model template to be used for the device and click on **+ Add** to add. Multiple global templates can be selected, and users can arrange the priority by adjusting orders via **^** and **v**. All the selected model templates will take effect. If the same option exists on multiple selected model templates, the value in the template with higher priority will override the one in the template with lower priority. Click on **🗑** to remove the model template from the selected list.

1. Customize Device Settings

This is the highest-level configuration for the device. Click on “Modify Customize Device Settings” and following dialog will show.

Edit Device: 000B8273C559

Model:	Grandstream GXP2130
MAC Address:	000B8273C559
IP Address:	192.168.5.197
Version:	1.0.9.127

Customize Fields

Customize Fields

Please use P-values for the Name fields.
Example: To configure Language, enter "P1362" into the Language Value field.

🗑 P1362 en Description Possible Match Exists

+ Add New Field

Figure 75: Edit Customize Device Settings

Scroll down in the dialog to view and edit the device-specific options. If the users would like to add more options which are not in the pre-defined list, click on “Add New Field” to add a P value number and the value to the configuration. The above figure shows setting P value “P1362” to “en”, which means the display language on the LCD is set to English. The warning information on right tells that the option matching the P value number exists and clicking on it will lead to the matching option. For P value information of different models, please refer to configuration template here <http://www.grandstream.com/sites/default/files/Resources/config-template.zip>.

- Select multiple devices that need to be modified and then click on **Modify Selected Devices** to batch modify devices.

If selected devices are of the same model, the configuration dialog is like the following figure. Configurations in five levels are all available for users to modify.

Modify Selected Devices

WARNING: Performing a batch operation will override all the existing device configurations on this page.



Model: GXP2130

MAC Address: 000B8273C556 ×

000B8273C559 ×

Basic Settings


Advanced Settings

Accounts

Hot Desking: No

Virtual Multi-Purpose Key Settings

Figure 76: Modify Selected Devices – Same Model

If selected devices are of different models, the configuration dialog is like the following figure. Click on  to view more devices of other models. Users are only allowed to make modifications in Global Templates and Global Policy level.

Modify Selected Devices

WARNING: Performing a batch operation will override all the existing device configurations on this page.

Model: GXP2160

MAC Address: 000B825C6927 ×

Basic Settings Advanced Settings

5 Custom Device Settings
Available only for single model

4 Model Templates
Available only for single model

3 Default Model Template
Available only for single model

2 Global Templates


Preview
Preview prepared for 000B825C6927

Save Cancel

Figure 77: Modify Selected Devices – Different Models

Note:

Performing batch operation will override all the existing device configuration on the page.

After the above configurations, save the changes and go back to Web GUI → Value-added Features → Zero Config → Zero Config page. Users could then click on  to send NOTIFY to the SIP end point device and trigger the provisioning process. The device will start downloading the generated configuration file from the URL contained in the NOTIFY message.

Zero Config

[Zero Config](#) [Global Policy](#) [Global Templates](#) [Model Templates](#) [Model Update](#) [Zero Config Settings](#)

Auto Discover Create New Device Delete Selected Devices Modify Selected Devices Reset All Extensions

Filter: All

<input type="checkbox"/>	MAC Address	IP Address	Extension	Version	Vendor	Model	Create Config	Options
<input type="checkbox"/>	0008823FBCB0	192.168.6.176	--	1.0.14.100	GRANDSTREAM	HT503	--	
<input type="checkbox"/>	000882415D27	192.168.6.72	--	1.0.7.80	GRANDSTREAM	GXV3140	--	
<input type="checkbox"/>	0008825C5806	192.168.6.218	--	1.0.8.50	GRANDSTREAM	GXP2140	--	
<input type="checkbox"/>	0008825C6926	192.168.2.104	--	1.0.9.17	GRANDSTREAM	GXP2160	--	
<input type="checkbox"/>	000882681052	192.168.6.146	--	1.0.3.177	GRANDSTREAM	GXV3240	--	
<input type="checkbox"/>	000882681FF7	192.168.6.144	--	1.0.3.144	GRANDSTREAM	GXV3240	--	
<input type="checkbox"/>	0008826824CD	192.168.6.45	--	1.0.3.177	GRANDSTREAM	GXV3275	--	
<input type="checkbox"/>	000882718249	192.168.6.119	--	1.0.4.60	GRANDSTREAM	GXP1625	--	
<input type="checkbox"/>	00088271B419	192.168.6.195	--	1.0.4.56	GRANDSTREAM	GXP1610	--	
<input type="checkbox"/>	00088275C8B8	192.168.6.137	--	1.0.8.50	GRANDSTREAM	GXP2130	--	
<input type="checkbox"/>	000882784681	192.168.6.224	--	0.6.9.61	GRANDSTREAM	GXP1628	--	

Figure 78: Device List in Zero Config

In this web page, users can also click on “Reset All Extensions” to reset the extensions of all the devices.

Example Application

Assuming in a small business office where there are 8 GXP2140 phones used by customer support and 1 GXV3370 phone used by customer support supervisor. 3 of the 8 customer support members speak Spanish and the rest speak English. We could deploy the following configurations to provisioning the office phones for the customer support team.

1. Go to Web GUI → Value-added Features → Zero Config → Zero Config Settings, select “Enable Zero Config”.
2. Go to Web GUI → Value-added Features → Zero Config → Global Policy, configure Date Format, Time Format and Firmware Source as follows.

Localization

Language Settings

* Language: English

Date and Time

Date Format: yyyy-mm-dd

Time Format: 24-hour Clock

Enable NTP: Disabled

NTP Server:

NTP Update Interval: 1440

Time Zone: GMT+08:00 (Beijing, Taipei, ...)

Enable Daylight Saving Time: Disabled

> Phone Settings

> Contact List

Maintenance

Upgrade and Provision

Firmware Source:

Source: URL

Upgrade via: TFTP

Server Path: fm.grandstream.com/gs

File Prefix:

File Postfix:


Config Server Path: 192.168.2.1:8089/zccgi/

Allow DHCP Option 43/66: No

Automatic Upgrade: Periodic option: Disabled

Firmware Upgrade Rule: Check new firmware only w...

Figure 79: Zero Config Sample – Global Policy

1. Go to Web GUI→Value-added Features→Zero Config→Model Templates, create a new model template “English Support Template” for GXP2140. Add option “Language” and set it to “English”. Then select the option “Default Model Template” to make it the default model template.
2. Go to Web GUI→Value-added Features→Zero Config→Model Templates, create another model template “Spanish Support Template” for GXP2140. Add option “Language” and set it to “Español”.
3. After 9 devices are powered up and connected to the LAN network, use “Auto Discover” function or “Create New Device” function to add the devices to the device list on Web GUI→Value-added Features→Zero Config→Zero Config.
4. On Web GUI→Value-added Features→Zero Config→Zero Config page, users could identify the devices by their MAC addresses or IP addresses displayed on the list. Click on  to edit the device settings.

5. For each of the 5 phones used by English speaking customer support, in “Basic” settings select an available extension for account 1 and click on “Save”. Then click on “Advanced” settings tab to bring up the following dialog. Users will see the English support template is applied since this is the default model template. A preview of the device settings will be listed on the right side.

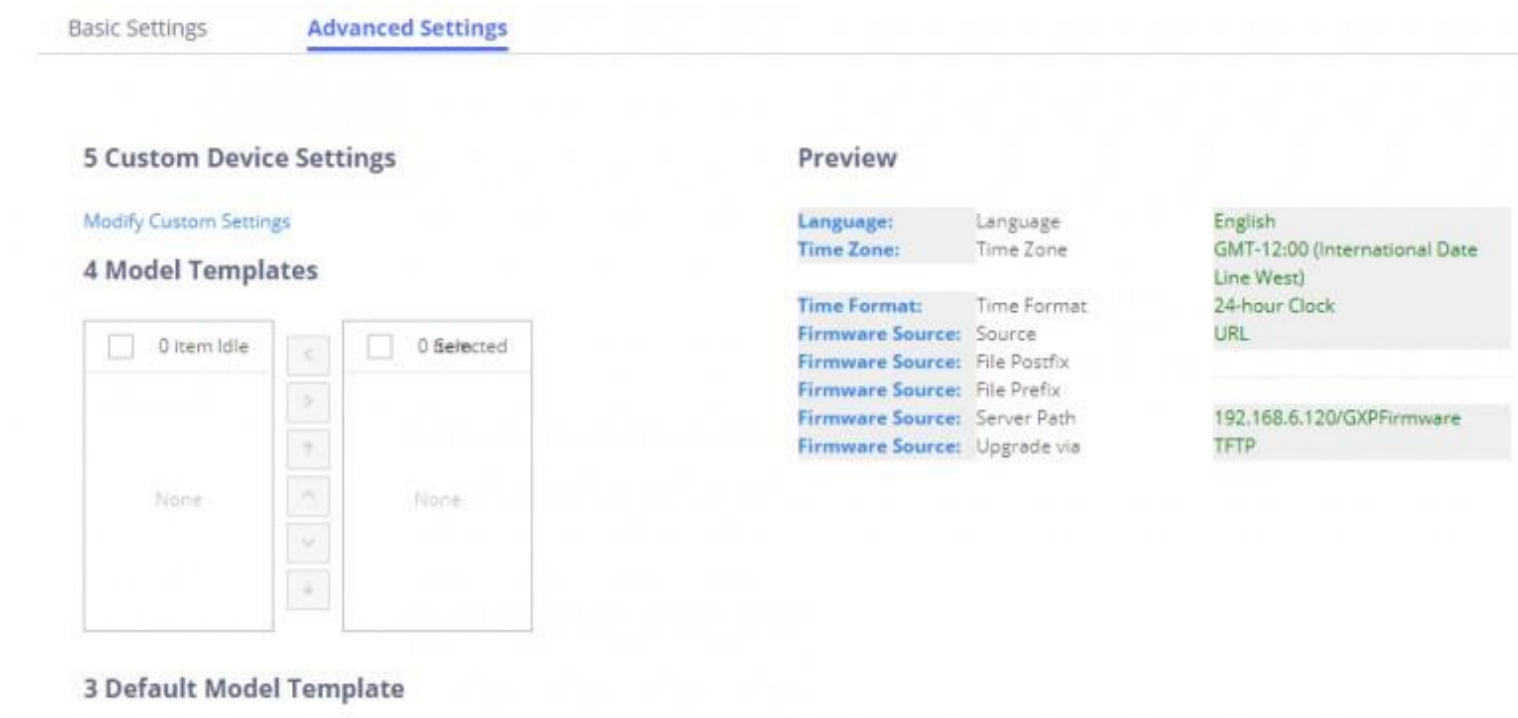


Figure 80: Zero Config Sample – Device Preview 1

1. For the 3 phones used by Spanish support, in “Basic” settings select an available extension for account 1 and click on “Save”. Then click on “Advanced” settings tab to bring up the following dialog.

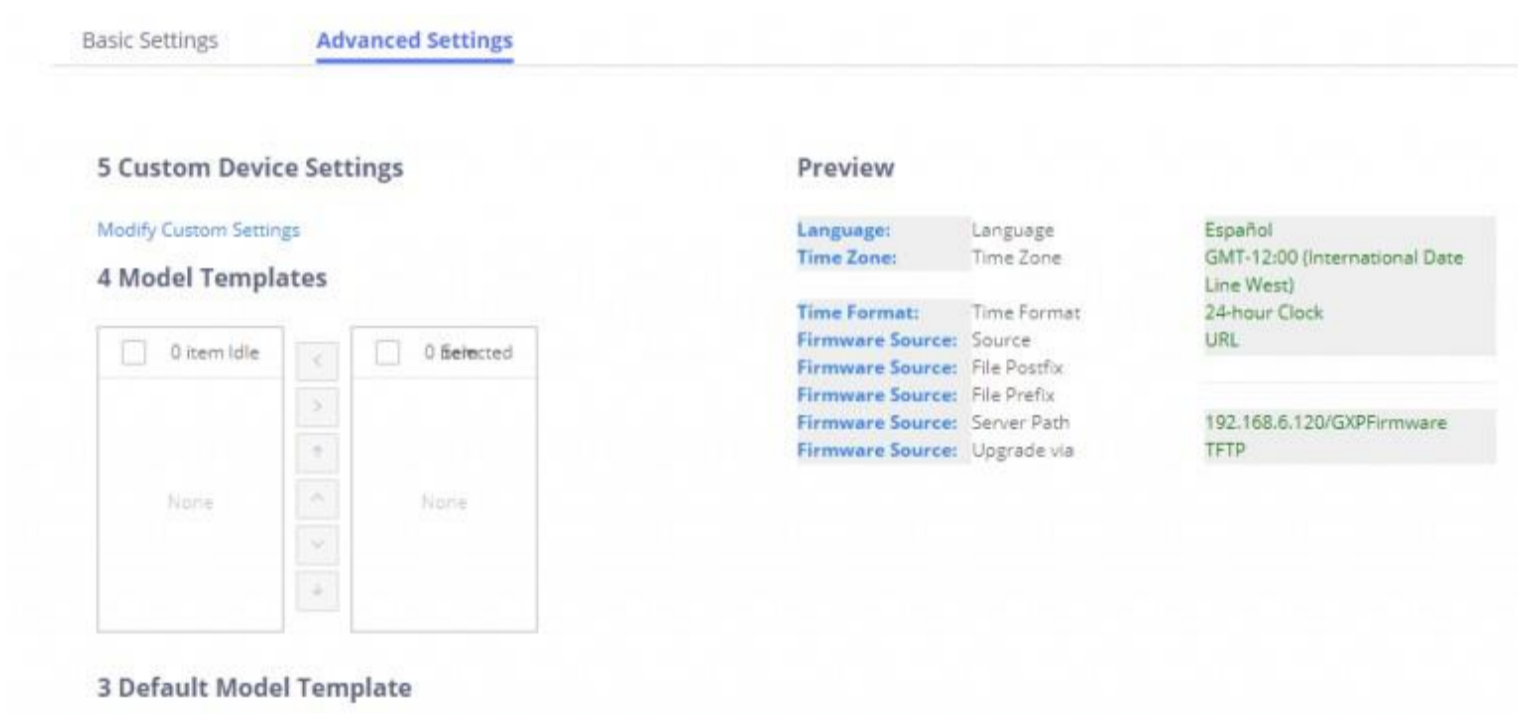



Figure 81: Zero Config Sample – Device Preview 2

Select “Spanish Support Template” in “Model Template”. The preview of the device settings is displayed on the right side and we can see the language is set to “Español” since Model Template has the higher priority for the option “Language”, which overrides the value configured in default model template.

1. For the GXV3370 used by the customer support supervisor, select an available extension for account 1 on “Basic” settings and click on “Save”. Users can see the preview of the device configuration in “Advanced” settings. There is no model template configured for GXV3370.

The screenshot shows the 'Advanced Settings' page. On the left, under '5 Custom Device Settings', there is a 'Modify Custom Settings' link and '4 Model Templates' section with two columns of templates, each showing '0 item Idle' and '0 Selected'. Below that is '3 Default Model Template'. On the right, the 'Preview' section displays various settings: Language (English), Time Zone (GMT-12:00 (International Date Line West)), Time Format (24-hour Clock), and Firmware Source (192.168.6.120/GXVFirmware via TFTP).

Figure 82: Zero Config Sample – Device Preview 3

1. Click on “Apply Changes” to apply saved changes.
2. On the Web GUI→**Value-added Features**→**Zero Config**→**Zero Config** page, click on  to send NOTIFY to trigger the device to download config file from UCM6200.

Now all the 9 phones in the network will be provisioned with a unique extension registered on the UCM6200. 3 of the phones will be provisioned to display Spanish on LCD and the other 5 will be provisioned to display English on LCD. The GXV3370 used by the supervisor will be provisioned to use the default language on LCD display since it is not specified in the global policy.

Extensions

Create New User

Create New SIP Extension

To create a new SIP extension, navigate to **Extension/Trunk**->**Extensions** and click on the Add button. The following window will appear:

The screenshot shows the 'Create New Extension' form. At the top right is a 'Save' button. Below the title bar are tabs for 'Basic Settings', 'Media', 'Features', 'Specific Time', and 'Follow Me'. The form contains the following fields:

- * Select Extension Type: SIP Extension (dropdown)
- Select Add Method: Single (dropdown)
- General**
 - * Extension: 1010
 - * Permission: Internal (dropdown)
 - AuthID: (text field)
 - * Voicemail Password: 5850164
 - Send Voicemail to Email: Default (dropdown)
 - Enable Keep-alive:
 - Disable This Extension:
 - Emergency Calls CID: (text field)
- CallerID Number: (text field)
- * SIP/IAX Password: X@mBWDI3
- Voicemail: Enable Local Voicemail (dropdown)
- Skip Voicemail Password Verification:
- Keep Voicemail after Emailing: Default (dropdown)
- * Keep-alive Frequency: 60
- Enable SCA:
- User Settings**
 - First Name: (text field)
 - Email Address: (text field)
 - * Language: Default (dropdown)
 - Last Name: (text field)
 - * User Password: EB579d
 - * Concurrent Registrations: 1

Extension options are divided into four categories:

- Basic Settings
- Media
- Features
- Specific Time
- Follow me

Select first which type of extension: SIP Extension, IAX Extension or FXS Extension. The configuration parameters are as follows.

Table 32: SIP Extension Configuration Parameters – Basic Settings

General	
Extension	The extension number associated with the user. Note: This field supports (+) sign.
CallerID Number	Configure the CallerID Number that would be applied for outbound calls from this user. Note: The ability to manipulate your outbound Caller ID may be limited by your VoIP provider.
Permission	Assign permission level to the user. The available permissions are "Internal", "Local", "National" and "International" from the lowest level to the highest level. The default setting is "Internal". Note: Users need to have the same level as or higher level than an outbound rule's privilege to make outbound calls using this rule.
SIP/IAX Password	Configure the password for the user. A random secure password will be automatically generated. It is recommended to use this password for security purpose.
Auth ID	Configure the authentication ID for the user. If not configured, the extension number will be used for authentication. Note: This field supports (+) sign.
Voicemail	Configure Voicemail. There are three valid options and the default option is "Enable Local Voicemail". Disable Voicemail: Disable Voicemail. Enable Local Voicemail: Enable voicemail for the user. Enable Remote Voicemail: Forward the notify message from remote voicemail system for the user, and the local voicemail will be disabled. Note: Remote voicemail feature is used only for Infomatec (Brazil).
Voicemail Password	Configure the password to access the extension's voicemail. A randomly generated password is used by default and is highly recommended for security. Only digits are supported.
Skip Voicemail Password Verification	If enabled, users can skip password verification when dialing in via the My Voicemail feature code. This option is disabled by default.
Send Voicemail Email Notification	<ul style="list-style-type: none"> • Default • Yes

	<ul style="list-style-type: none"> • No
Send Voicemail to Email	If enabled, the voicemail will be attached to the email notification that is sent when a voicemail is received. Note: When set to "Default", the global settings in Call Features->Voicemail->Voicemail Email Settings will be used.
Keep Voicemail after Emailing	Configure whether or not to retain the voicemail in local storage after sending the voicemail attachment in the email notification.
Enable Keep-alive	If enabled, empty SDP packet will be sent to the SIP server periodically to keep the NAT port open. The default setting is "Yes".
Keep-alive Frequency	Configure the Keep-alive interval (in seconds) to check if the host is up. The default setting is 60 seconds.
Disable This Extension	If selected, this extension will be disabled on the UCM6200. Note: The disabled extension still exists on the PBX but cannot be used on the end device.
User Settings	
First Name	Configure the user's first name. This field supports alphanumeric characters, underscores (_), and periods.
Last Name	Configures the user's last name. This field supports alphanumeric characters, underscores (_), and periods.
Email Address	Configure the user's email address. Email notifications will be sent to this address.
User Password	Configure the password for user portal access. A random password is automatically generated by default and is highly recommended for security.
Language	Select the voice prompt language that will be used for this extension. By default, the selected voice prompt language under PBX Settings->Voice Prompt->Language Settings will be used. To add more supported languages, please download the voice prompt language packages in the same page.
Concurrent Registrations	The maximum allowed number of endpoint registrations to this extension. Default value is 1.
Mobile Phone Number	Configure a phone number for the extension. Users can dial the Direct Dial Mobile Phone Prefix feature code (*88 by default) + extension number to directly dial this number. Example: Dial *881000 to call the mobile number associated with extension 1000.

Table 33: SIP Extension Configuration Parameters – Media

SIP Settings	
NAT	Use NAT when the UCM6200 is on a public IP communicating with devices hidden behind NAT (e.g., broadband router). If there is one-way audio issue, usually it is related to NAT configuration or Firewall's support of SIP and RTP ports. The default setting is enabled.
Enable Direct Media	By default, the UCM6200 will route the media streams from SIP endpoints through itself. If enabled, the PBX will attempt to negotiate with the endpoints to route the media stream directly. It is not always possible for the UCM6200 to negotiate endpoint-to-endpoint media routing. The default setting is "No".

DTMF Mode	Select DTMF mode for the user to send DTMF. The default setting is “RFC4733”. If “Info” is selected, SIP INFO message will be used. If “Inband” is selected, 64-kbit PCMU and PCMA are required. When “Auto” is selected, RFC4733 will be used if offered, otherwise “Inband” will be used.
TEL URI	If the phone has an assigned PSTN telephone number, this field should be set to “User=Phone”. “User=Phone” parameter will be attached to the Request-Line and “TO” header in the SIP request to indicate the E.164 number. If set to “Enable”, “Tel” will be used instead of “SIP” in the SIP request.
Alert-Info	Configure the Alert-Info, when UCM6200 receives an INVITE request, the Alert-Info header field specifies an alternative ring tone to the UAS.
Enable T.38 UDPTL	Enable or disable T.38 UDPTL support.
SRTP	Enable SRTP for the call. The default setting is disabled.
Fax Mode	Select Fax mode. The default setting is “None”. <ul style="list-style-type: none"> ◦ None: Disable Fax. ◦ Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under Web GUI→Call Features→Fax/T.38.
Fax to Email	<ul style="list-style-type: none"> ◦ Yes – Allow Fax to Email for this extension. Faxes will be sent to the user’s email address configured in the extension’s <i>Basic Settings</i>. ◦ No – Do not send any faxes to the user’s email address configured in the extension’s <i>Basic Settings</i>.
ACL Policy	Access Control List manages the IP addresses that can register to this extension. <ul style="list-style-type: none"> ◦ Allow All: Any IP address can register to this extension. ◦ Local Network Address: Only IP addresses in the configured network segments can register to this extension.
Local Network Address	Specifies allowed IP address or networks from where the extension can be registered. Up to 10 entries are allowed. Format: “xxx.xxx.xxx.xxx”, “xxx.xxx.xxx.xxx/32”, “[::]” or “[::]/128”.
Codec Preference	Select audio and video codec for the extension. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, OPUS, iLBC, ADPCM, H.264, H.263, H.263p and RTX.

Table 34: SIP Extension Configuration Parameters – Features

Call Transfer	
Presence Status	Select which presence status to set for the extension and configure call forward conditions for each status. Six possible options are possible: “ Available ”, “ Away ”, “ Chat ”, “ Custom ”, “ DND ” and “ Unavailable ”.

<p>Call Forward Unconditional</p>	<p>Enable and configure the Call Forward Unconditional target number. Available options for target number are:</p> <ul style="list-style-type: none"> ● “None”: Call forward deactivated. ● “Extension”: Select an extension from dropdown list as CFU target. ● “Custom Number”: Enter a customer number as target. For example: *97. ● “Voicemail”: Select an extension from dropdown list. Incoming calls will be forwarded to voicemail of selected extension. ● “Ring Group”: Select a ring group from dropdown list as CFU target. ● “Queues”: Select a queue from dropdown list as CFU target. ● “Voicemail Group”: Select a voicemail group from dropdown list as CFU target. <p>The default setting is “None”.</p>
<p>CFU Time Condition</p>	<p>Select time condition for Call Forward Unconditional. CFU takes effect only during the selected time condition. The available time conditions are “Office Time”, “Out of Office Time”, “Holiday”, “Out of Holiday”, “Out of Office Time or Holiday” and “Specific”.</p> <p>Notes:</p> <ul style="list-style-type: none"> ● “Specific” has higher priority to “Office Times” if there is a conflict in terms of time period. ● Specific Time can be configured in the Specific Time tab. ● Office Time and Holiday can be configured in System Settings→Time Settings→Office Time/Holiday page.
<p>Call Forward No Answer</p>	<p>Configure the Call Forward No Answer target number. Available options for target number are:</p> <ul style="list-style-type: none"> ● “None”: Call forward deactivated. ● “Extension”: Select an extension from dropdown list as CFN target. ● “Custom Number”: Enter a customer number as target. For example: *97. ● “Voicemail”: Select an extension from dropdown list. Incoming calls will be forwarded to voicemail of selected extension. ● “Ring Group”: Select a ring group from dropdown list as CFN target. ● “Queues”: Select a queue from dropdown list as CFN target. ● “Voicemail Group”: Select a voicemail group from dropdown list as CFN target.
<p>CFN Time Condition</p>	<p>Select time condition for Call Forward No Answer. The available time conditions are “Office Time”, “Out of Office Time”, “Holiday”, “Out of Holiday”, “Out of Office Time or Holiday” and “Specific”.</p> <p>Notes:</p> <ol style="list-style-type: none"> 1. “Specific” has higher priority to “Office Times” if there is a conflict in terms of time period. 2. Specific Time can be configured in the Specific Time tab. 3. Office Time and Holiday could be configured on page System Settings→Time Settings→Office Time/Holiday page.
<p>Call Forward Busy</p>	<p>Configure the Call Forward Busy target number. Available options for target number are:</p> <ul style="list-style-type: none"> ● “None”: Call forward deactivated. ● “Extension”: Select an extension from dropdown list as CFB target. ● “Custom Number”: Enter a customer number as target. For example: *97. ● “Voicemail”: Select an extension from dropdown list. Incoming calls will be forwarded to voicemail of selected extension. ● “Ring Group”: Select a ring group from dropdown list as CFB target. ● “Queues”: Select a queue from dropdown list as CFB target. ● “Voicemail Group”: Select a voicemail group from dropdown list as CFB target.
<p>CFB Time Condition</p>	<p>Select time condition for Call Forward Busy. The available time conditions are “Office Time”, “Out of Office Time”, “Holiday”, “Out of Holiday”, “Out of Office Time or Holiday” and “Specific”.</p>

	<p>Notes:</p> <ul style="list-style-type: none"> • “Specific” has higher priority to “Office Times” if there is a conflict in terms of time period. • Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. • Office Time and Holiday could be configured on page System Settings→Time Settings→Office Time/Holiday page.
Do Not Disturb	If enabled the extension will ignore all incoming calls
DND Time Condition	<p>Select time condition for Do Not Disturb. The available time conditions are “Office Time”, “Out of Office Time”, “Holiday”, “Out of Holiday”, “Out of Office Time or Holiday” and “Specific”.</p> <p>Notes:</p> <ul style="list-style-type: none"> • “Specific” has higher priority to “Office Times” if there is a conflict in terms of time period. • Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. • Office Time and Holiday could be configured on page System Settings→Time Settings→Office Time/Holiday page.
DND Whitelist	<p>If DND is enabled, all calls to this extension will be rejected except the numbers listed on this list.</p> <p>Note: The maximum number on the Whitelist is 10.</p>
FWD Whitelist	<p>If call forward is enabled, all calls to this extension will be forwarded except the calls coming from the specified numbers on this list.</p> <p>Note: The Maximum number on the whitelist is 10.</p>
CC Settings	
Enable CC	If enabled, UCM6200 will automatically alert this extension when a called party is available, given that a previous call to that party failed for some reason. By default, it is disabled.
CC Mode	<p>Two modes for Call Completion are supported:</p> <ul style="list-style-type: none"> • Normal: This extension is used as ordinary extension. • For Trunk: This extension is registered from a PBX. <p>The default setting is “Normal”.</p> <p>Note: The number of CC agents (for “Normal” mode) will now be limited by the extensions’ allowed number of concurrent registrations.</p>
CC Max Agents	Configure the maximum number of CCSS agents which may be allocated for this channel (when CC Mode is set to “For Trunk”). In other words, this number serves as the maximum number of CC requests this channel is allowed to make. Min. value is 1.
CC Max Monitors	Configure the maximum number of monitor structures which may be created for this device (when CC Mode is set to “For Trunk”). This number tells how many callers may request CC services for a specific device at one time. The minimum value is 1.
Ring Simultaneously	

Ring Simultaneously	Enable this option to have an external number ring simultaneously along with the extension. If a register trunk is used for outbound, the register number will be used to be displayed for the external number as caller ID number.
External Number	Set the external number to be rang simultaneously. '-' is the connection character which will be ignored. This field accepts only letters, numbers, and special characters + = * #.
Time Condition for Ring Simultaneously	Ring the external number simultaneously along with the extension based on this time condition.
Use callee DOD on FWD or Ring Simultaneously	Use the DOD number when calls are being diverted/forwarded to external destinations or when ring simultaneous is configured.
Monitor privilege control	
Allow call-barging	Add members from "Available Extensions" to "Selected Extensions" so that the selected extensions can spy on the used extension using feature code.
Seamless transfer privilege control	
Allowed to seamless transfer	Any extensions on the UCM can perform seamless transfer. When using Pickup Incall feature, only extensions available on the "Selected Extensions" list can perform seamless transfer to the edited extension.
Other Settings	
Ring Timeout	Configure the number of seconds to ring the user before the call is forwarded to voicemail (voicemail is enabled) or hang up (voicemail is disabled). If not specified, the default ring timeout is 60 seconds on the UCM6200, which can be configured in the global ring timeout setting under Web GUI→PBX Settings→General Settings: General Preference . The valid range is between 5 seconds and 600 seconds. Note: If the end point also has a ring timeout configured, the actual ring timeout used is the shortest time set by either device.
Auto Record	Enable automatic recording for the calls using this extension. The default setting is disabled. The recording files can be accessed under Web GUI→CDR→Recording Files .
Skip Trunk Auth	<ul style="list-style-type: none"> • If set to 'Yes', users can skip entering the password when making outbound calls. • If set to 'By Time', users can skip entering the password when making outbound calls during the selected time condition. • If set to 'No', users will be asked to enter the password when making outbound calls.
Time Condition for Skip Trunk Auth	If 'Skip Trunk Auth' is set to 'By Time', select a time condition during which users can skip entering password when making outbound calls.
Dial Trunk Password	Configure personal password when making outbound calls via trunk.
Support Hot-Desking Mode	If enabled, SIP Password will accept only alphabet characters and digits. Auth ID will be changed to the same as Extension.
Enable LDAP	If enabled, the extension will be added to LDAP Phonebook PBX list.

Enable WebRTC Support	Enable registration and call from Web RTC.
Music On Hold	Specify which Music On Hold playlist to suggest to the bridged channel when putting them on hold.
Enable Seamless Transfer	Enable the seamless transfer for this extension.
Permission	Set the permission for this extension when using the seamless transfer
Call Duration Limit	The maximum duration of call-blocking.
Maximum Call Duration	The maximum call duration (in seconds). The default value 0 means no limit.
Custom Call-info for Auto Answer	If enabled, when a call is sent to this extension from UCM, the SIP INVITE message will contain a Call-info header indicating auto answer.
Enable Call Waiting	If disabled, UCM will not ring the extension if it is already in a call and will give the caller a busy response.
Email Missed Calls	When enabled, the UCM sends a log of missed calls to the extension's email address.

Table 34: SIP Extension Configuration Parameters – Features

Specific Time	
Time Condition	Click to add Time Condition to configure specific time for this extension.

Table 35: SIP Extension Configuration Parameters – Specific Time

Create New IAX Extension

The UCM6200 supports Inter-Asterisk eXchange (IAX) protocol. IAX is used for transporting VoIP telephony sessions between servers and terminal devices. IAX is like SIP but also has its own characteristic. For more information, please refer to RFC 5465.

To manually create new IAX user, go to Web GUI→**Extension/Trunk**→**Extensions**. Click on “Add” and a new dialog window will show for users which need to make sure first to select the extension type to be IAX Extension before proceeding to fill in the extension information. The configuration parameters are as follows.

Table 36: IAX Extension Configuration Parameters – Basic Settings

General	
Extension	The extension number associated with the user.
CallerID Number	Configure the CallerID Number that would be applied for outbound calls from this user. Note: The ability to manipulate your outbound Caller ID may be limited by your VoIP provider.

Permission	<p>Assign permission level to the user. The available permissions are “Internal”, “Local”, “National” and “International” from the lowest level to the highest level. The default setting is “Internal”.</p> <p>Note: Users need to have the same level as or higher level than an outbound rule’s privilege to make outbound calls using this rule.</p>
SIP/IAX Password	<p>Configure the password for the user. A random secure password will be automatically generated. It is recommended to use this password for security purpose.</p>
Voicemail	<p>Configure Voicemail. There are three valid options and the default option is “Enable Local Voicemail”.</p> <ul style="list-style-type: none"> o Disable Voicemail: Disable Voicemail. o Enable Local Voicemail: Enable voicemail for the user.
Voicemail Password	<p>Configure the password to access the extension’s voicemail. A randomly generated password is used by default and is highly recommended for security. Only digits are supported.</p>
Skip Voicemail Password Verification	<p>If enabled, users can skip password verification when dialing in via the My Voicemail feature code. This option is disabled by default.</p>
Disable This Extension	<p>If selected, this extension will be disabled on the UCM6200.</p> <p>Note:</p> <p>The disabled extension still exists on the PBX but cannot be used on the end device.</p>
User Settings	
First Name	<p>Configure the user’s first name. This field supports alphanumeric characters, underscores (_), and periods.</p>
Last Name	<p>Configures the user’s last name. This field supports alphanumeric characters, underscores (_), and periods.</p>
Email Address	<p>Configure the user’s email address. Email notifications will be sent to this address.</p>
User Password	<p>Configure the password for user portal access. A random password is automatically generated by default and is highly recommended for security.</p>
Language	<p>Select the voice prompt language that will be used for this extension. By default, the selected voice prompt language under PBX Settings->Voice Prompt->Language Settings will be used. To add more supported languages, please download the voice prompt language packages in the same page.</p>

Table 37: IAX Extension Configuration Parameters – Media

IAX Settings

Max Number of Calls	Configure the maximum number of calls allowed for each remote IP address.
Require Call Token	Configure to enable/disable requiring call token. If set to “Auto”, it might lock out users who depend on backward compatibility when peer authentication credentials are shared between physical endpoints. The default setting is “Yes”.
SRTP	Enable SRTP for the call. The default setting is disabled.
Fax Mode	Select Fax Mode. The default setting is “None”. <ul style="list-style-type: none"> ◦ None: Disable Fax. This is the default setting. ◦ Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under Web GUI→Call Features→Fax/T.38.
ACL Policy	Access Control List manages the IP addresses that can register to this extension. <ul style="list-style-type: none"> ◦ Allow All: Any IP address can register to this extension. <p>Local Network Address: Only IP addresses in the configured network segments can register to this extension.</p>
Codec Preference	Select audio and video codec for the extension. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p, RTX and VP8.

Table 38: IAX Extension Configuration Parameters – Features

Call Transfer	
Call Forward Unconditional	Configure the Call Forward Unconditional target number. If not configured, the Call Forward Unconditional feature is deactivated. The default setting is deactivated.
CFU Time Condition	Select time condition for Call Forward Unconditional. CFU takes effect only during the selected time condition. The available time conditions are “ Office Time ”, “ Out of Office Time ”, “ Holiday ”, “ Out of Holiday ”, “ Out of Office Time or Holiday ” and “ Specific ”. <p>Notes:</p> <ul style="list-style-type: none"> ● “Specific” has higher priority to “Office Times” if there is a conflict in terms of time period. ● Specific Time can be configured in the Specific Time tab. ● Office Time and Holiday can be configured in System Settings→Time Settings→Office Time/Holiday page.
Call Forward No Answer	Configure the Call Forward No Answer target number. Available options for target number are:

<p>CFN Time Condition</p>	<p>Select time condition for Call Forward No Answer. The available time conditions are “Office Time”, “Out of Office Time”, “Holiday”, “Out of Holiday”, “Out of Office Time or Holiday” and “Specific”.</p> <p>Notes:</p> <ol style="list-style-type: none"> 1. “Specific” has higher priority to “Office Times” if there is a conflict in terms of time period. 2. Specific Time can be configured in the Specific Time tab. 3. Office Time and Holiday could be configured on page System Settings→Time Settings→Office Time/Holiday page.
<p>Call Forward Busy</p>	<p>Configure the Call Forward Busy target number. Available options for target number are:</p> <ul style="list-style-type: none"> ● “None”: Call forward deactivated. ● “Extension”: Select an extension from dropdown list as CFB target. ● “Custom Number”: Enter a customer number as target. For example: *97. ● “Voicemail”: Select an extension from dropdown list. Incoming calls will be forwarded to voicemail of selected extension. ● “Ring Group”: Select a ring group from dropdown list as CFB target. ● “Queues”: Select a queue from dropdown list as CFB target. ● “Voicemail Group”: Select a voicemail group from dropdown list as CFB target.
<p>CFB Time Condition</p>	<p>Select time condition for Call Forward Busy. The available time conditions are “Office Time”, “Out of Office Time”, “Holiday”, “Out of Holiday”, “Out of Office Time or Holiday” and “Specific”.</p> <p>Notes:</p> <ul style="list-style-type: none"> ● “Specific” has higher priority to “Office Times” if there is a conflict in terms of time period. ● Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. ● Office Time and Holiday could be configured on page System Settings→Time Settings→Office Time/Holiday page.
<p>Ring Simultaneously</p>	
<p>Ring Simultaneously</p>	<p>Enable this option to have an external number ring simultaneously along with the extension. If a register trunk is used for outbound, the register number will be used to be displayed for the external number as caller ID number.</p>
<p>External Number</p>	<p>Set the external number to be rang simultaneously. ‘-’ is the connection character which will be ignored.</p> <p>This field accepts only letters, numbers, and special characters + = * #.</p>
<p>Time Condition for Ring Simultaneously</p>	<p>Ring the external number simultaneously along with the extension based on this time condition.</p>
<p>Other Settings</p>	
<p>Ring Timeout</p>	<p>Configure the number of seconds to ring the user before the call is forwarded to voicemail (voicemail is enabled) or hang up (voicemail is disabled). If not specified, the default ring timeout is 60 seconds on the UCM6200, which can be configured in the global ring timeout setting under Web GUI→PBX Settings→General Settings: General Preference. The valid range is between 5 seconds and 600 seconds.</p> <p>Note: If the end point also has a ring timeout configured, the actual ring timeout used is the shortest time set by either device.</p>
<p>Auto Record</p>	<p>Enable automatic recording for the calls using this extension. The default setting is disabled. The recording files can be accessed under Web GUI→CDR→Recording Files.</p>

Skip Trunk Auth	<ul style="list-style-type: none"> • If set to ‘Yes’, users can skip entering the password when making outbound calls. • If set to ‘By Time’, users can skip entering the password when making outbound calls during the selected time condition. • If set to ‘No’, users will be asked to enter the password when making outbound calls.
Time Condition for Skip Trunk Auth	If ‘Skip Trunk Auth’ is set to ‘By Time’, select a time condition during which users can skip entering password when making outbound calls.
Dial Trunk Password	Configure personal password when making outbound calls via trunk.
Enable LDAP	If enabled, the extension will be added to LDAP Phonebook PBX list.
Music On Hold	Specify which Music On Hold playlist to suggest to the bridged channel when putting them on hold.
Call Duration Limit	The maximum duration of call-blocking.
Enable Call Waiting	If disabled, UCM will not ring the extension if it is already in a call and will give the caller a busy response.
Email Missed Calls	When enabled, the UCM sends a log of missed calls to the extension's email address.

Table 38: IAX Extension Configuration Parameters – Features

1. Table 39: IAX Extension Configuration Parameters – Specific Time

Specific Time	
Time Condition	Click to add Time Condition to configure specific time for this extension.

Create New FXS Extension

The UCM6200 supports Foreign eXchange Subscriber (FXS) interface. FXS is used when user needs to connect analog phone lines or FAX machines to the UCM6200.

To manually create new FXS user, go to Web GUI→**Extension/Trunk**→**Extensions**. Click on “Add” and a new dialog window will show for users which need to make sure first to select the extension type to be FXS Extension before proceeding to fill in the extension information. The configuration parameters are as follows.

Table 40: FXS Extension Configuration Parameters – Basic Settings

General	
Extension	The extension number associated with the user.
Analog Station	Select the FXS port to be assigned for this extension.

Caller ID Number	<p>Configure the CallerID Number that would be applied for outbound calls from this user.</p> <p>Note: The ability to manipulate your outbound Caller ID may be limited by your VoIP provider.</p>
Permission	<p>Assign permission level to the user. The available permissions are “Internal”, “Local”, “National” and “International” from the lowest level to the highest level. The default setting is “Internal”.</p> <p>Note:</p> <p>Users need to have the same level as or higher level than an outbound rule’s privilege to make outbound calls using this rule.</p>
Voicemail	<p>Configure Voicemail. There are three valid options and the default option is “Enable Local Voicemail”.</p> <ul style="list-style-type: none"> ○ Disable Voicemail: Disable Voicemail. ○ Enable Local Voicemail: Enable voicemail for the user.
Voicemail Password	<p>Configure the password to access the extension’s voicemail. A randomly generated password is used by default and is highly recommended for security. Only digits are supported.</p>
Skip Voicemail Password Verification	<p>If enabled, users can skip password verification when dialing in via the My Voicemail feature code. This option is disabled by default.</p>
Disable This Extension	<p>If selected, this extension will be disabled on the UCM6200.</p> <p>Note: The disabled extension still exists on the PBX but cannot be used on the end device.</p>
User Settings	
First Name	<p>Configure the user’s first name. This field supports alphanumeric characters, underscores (_), and periods.</p>
Last Name	<p>Configures the user’s last name. This field supports alphanumeric characters, underscores (_), and periods.</p>
Email Address	<p>Configure the user’s email address. Email notifications will be sent to this address.</p>
User Password	<p>Configure the password for user portal access. A random password is automatically generated by default and is highly recommended for security.</p>
Language	<p>Select the voice prompt language that will be used for this extension. By default, the selected voice prompt language under PBX Settings->Voice Prompt->Language Settings will be used. To add more supported languages, please download the voice prompt language packages in the same page.</p>

Table 41: FXS Extension Configuration Parameters – Media

Analog Settings

Call Waiting	Configure to enable/disable call waiting feature. The default setting is “No”.
User ‘#’ as SEND	If configured, the # key can be used as SEND key after dialing the number on the analog phone. The default setting is “Yes”.
RX Gain	Configure the RX gain for the receiving channel of analog FXS port. The valid range is -30dB to +6dB. The default setting is 0.
TX Gain	Configure the TX gain for the transmitting channel of analog FXS port. The valid range is -30dB to +6dB. The default setting is 0.
MIN RX Flash	Configure the minimum period of time (in milliseconds) that the hook-flash must remain unpressed for the PBX to consider the event as a valid flash event. The valid range is 30ms to 1000ms. The default setting is 200ms.
MAX RX Flash	Configure the maximum period of time (in milliseconds) that the hook-flash must remain unpressed for the PBX to consider the event as a valid flash event. The minimum period of time is 256ms and it cannot be modified. The default setting is 1250ms.
Enable Polarity Reversal	If enabled, a polarity reversal will be marked as received when an outgoing call is answered by the remote party. For some countries, a polarity reversal is used for signaling the disconnection of a phone line and the call will be considered as Hangup on a polarity reversal. The default setting is “Yes”.
Echo Cancellation	Specify “ON”, “OFF” or a value (the power of 2) from 32 to 1024 as the number of taps of cancellation. Note: When configuring the number of taps, the number 256 is not translated into 256ms of echo cancellation. Instead, 256 taps mean $256/8 = 32$ ms. The default setting is “ON”, which is 128 taps.
3-Way Calling	Configure to enable/disable 3-way calling feature on the user. The default setting is enabled.
Send CallerID After	Configure the number of rings before sending CID. Default setting is 1.
Fax Mode	For FXS extension, there are three options available in Fax Mode. The default setting is “None”. <ul style="list-style-type: none"> ◦ None: Disable Fax. ◦ Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under Web GUI→Call Features→Fax/T.38. ◦ Fax Gateway: If selected, the UCM6200 can support conversation and processing of Fax data from T.30 to T.38 or T.38 to T.30. only for FXS ports.

Table 42: FXS Extension Configuration Parameters – Features

Call Transfer

Call Forward Unconditional	<p>Configure the Call Forward Unconditional target number. If not configured, the Call Forward Unconditional feature is deactivated. The default setting is deactivated.</p>
CFU Time Condition	<p>Select time condition for Call Forward Unconditional. CFU takes effect only during the selected time condition. The available time conditions are “Office Time”, “Out of Office Time”, “Holiday”, “Out of Holiday”, “Out of Office Time or Holiday” and “Specific”.</p> <p>Notes:</p> <ul style="list-style-type: none"> • “Specific” has higher priority to “Office Times” if there is a conflict in terms of time period. • Specific Time can be configured in the Specific Time tab. • Office Time and Holiday can be configured in System Settings→Time Settings→Office Time/Holiday page.
Call Forward No Answer	<p>Configure the Call Forward No Answer target number. If not configured, the Call Forward No Answer feature is deactivated. The default setting is deactivated.</p>
CFN Time Condition	<p>Select time condition for Call Forward No Answer. The available time conditions are “Office Time”, “Out of Office Time”, “Holiday”, “Out of Holiday”, “Out of Office Time or Holiday” and “Specific”.</p> <p>Notes:</p> <ul style="list-style-type: none"> • “Specific” has higher priority to “Office Times” if there is a conflict in terms of time period. • Specific Time can be configured in the Specific Time tab. • Office Time and Holiday could be configured on page System Settings→Time Settings→Office Time/Holiday page.
Call Forward Busy	<p>Configure the Call Forward Busy target number. If not configured, the Call Forward Busy feature is deactivated. The default setting is deactivated.</p>
CFB Time Condition	<p>Select time condition for Call Forward Busy. The available time conditions are “Office Time”, “Out of Office Time”, “Holiday”, “Out of Holiday”, “Out of Office Time or Holiday” and “Specific”.</p> <p>Notes:</p> <ul style="list-style-type: none"> • “Specific” has higher priority to “Office Times” if there is a conflict in terms of time period. • Specific time can be configured on the bottom of the extension configuration dialog. Scroll down the add Time Condition for specific time. • Office Time and Holiday could be configured on page System Settings→Time Settings→Office Time/Holiday page.
CC Settings	
Enable CC	<p>If enabled, UCM6200 will automatically alert this extension when a called party is available, given that a previous call to that party failed for some reason. By default, it is disabled.</p>
Ring Simultaneously	
Ring Simultaneously	<p>Enable this option to have an external number ring simultaneously along with the extension. If a register trunk is used for outbound, the register number will be used to be displayed for the external number as caller ID number.</p>
External Number	<p>Set the external number to be rang simultaneously. ‘-’ is the connection character which will be ignored.</p> <p>This field accepts only letters, numbers, and special characters + = * #.</p>

Time Condition for Ring Simultaneously	Ring the external number simultaneously along with the extension based on this time condition.
Hotline	
Enable Hotline	If enabled, hotline dialing plan will be activated, a pre-configured number will be used based on the selected Hotline Type.
Hotline Number	Configure the Hotline Number
Hotline Type	Configure the Hotline Type: <ul style="list-style-type: none"> ● Immediate Hotline: When the phone is off-hook, UCM6200 will immediately dial the preset number ● Delay Hotline: When the phone is off-hook, if there is no dialing within 5 seconds, UCM6200 will dial the preset number.
Other Settings	
Ring Timeout	Configure the number of seconds to ring the user before the call is forwarded to voicemail (voicemail is enabled) or hang up (voicemail is disabled). If not specified, the default ring timeout is 60 seconds on the UCM6200, which can be configured in the global ring timeout setting under Web GUI→PBX Settings→General Settings: General Preference . The valid range is between 5 seconds and 600 seconds. <p>Note: If the end point also has a ring timeout configured, the actual ring timeout used is the shortest time set by either device.</p>
Auto Record	Enable automatic recording for the calls using this extension. The default setting is disabled. The recording files can be accessed under Web GUI→CDR→Recording Files .
Skip Trunk Auth	<ul style="list-style-type: none"> ● If set to ‘Yes’, users can skip entering the password when making outbound calls. ● If set to ‘By Time’, users can skip entering the password when making outbound calls during the selected time condition. ● If set to ‘No’, users will be asked to enter the password when making outbound calls.
Time Condition for Skip Trunk Auth	If ‘Skip Trunk Auth’ is set to ‘By Time’, select a time condition during which users can skip entering password when making outbound calls.
Dial Trunk Password	Configure personal password when making outbound calls via trunk.
Enable LDAP	If enabled, the extension will be added to LDAP Phonebook PBX list.
Music On Hold	Specify which Music On Hold playlist to suggest to the bridged channel when putting them on hold.
Call Duration Limit	The maximum duration of call-blocking.
Email Missed Calls	When enabled, the UCM sends a log of missed calls to the extension's email address.

Table 43: FXS Extension Configuration Parameters – Specific Time

Specific Time	
Time Condition	Click to add Time Condition to configure specific time for this extension.

Batch Add Extensions

Batch Add SIP Extensions

To create multiple SIP extensions quickly, users can select “Batch” for the Select **Add Method** option during the extension creation process.

Table 44: Batch Add SIP Extension Parameters

General	
Create Number	Specify the number of extensions to be added. The default setting is 5.
Extension Incrementation	Specify how much to increment each additional extension (e.g., if the value is 2, the extensions will be 1000, 1002, 1004, etc.). Note: Supports up to 3 characters.
Extension	Configure the starting extension number of the batch of extensions to be added.
Permission	Assign permission level to the user. The available permissions are “Internal”, “Local”, “National” and “International” from the lowest level to the highest level. The default setting is “Internal”. Note: Users need to have the same level as or higher level than an outbound rule’s privilege to make outbound calls from this rule.
Voicemail	Configure Voicemail. There are three valid options and the default option is “Enable Local Voicemail”. <ul style="list-style-type: none"> ◦ Disable Voicemail: Disable Voicemail. ◦ Enable Local Voicemail: Enable voicemail for the user. ◦ Enable Remote Voicemail: Forward the notify message from remote voicemail system for the user, and the local voicemail will be disabled. Note: Remote voicemail feature is used only for Infomatec (Brazil).
Enable WebRTC Support	Enable WebRTC support.

<p>SIP/IAX Password</p>	<p>Configure the SIP/IAX password for the users. Three options are available to create password for the batch of extensions.</p> <ul style="list-style-type: none"> ◦ User Random Password. <p>A random secure password will be automatically generated. It is recommended to use this password for security purpose.</p> <ul style="list-style-type: none"> ◦ Use Extension as Password. ◦ Enter a password to be used on all the extensions in the batch.
<p>Voicemail Password</p>	<p>Configure the password to access the extension's voicemail. A randomly generated password is used by default and is highly recommended for security. Only digits are supported.</p>
<p>CallerID Number</p>	<p>Configure CallerID Number when adding Batch Extensions.</p> <ul style="list-style-type: none"> ◦ Use Extension as Number <p>Users can choose to use the extension number as CallerID</p> <ul style="list-style-type: none"> ◦ Use as Number <p>Users can choose to set a specific number instead of using the extension number.</p>
<p>Ring Timeout</p>	<p>Configure the number of seconds to ring the user before the call is forwarded to voicemail (voicemail is enabled) or hang up (voicemail is disabled). If not specified, the default ring timeout is 60 seconds on the UCM6200, which can be configured in the global ring timeout setting under Web GUI→PBX Settings→Voice Prompt→Custom Prompt: General Preference. The valid range is between 5 seconds and 600 seconds.</p> <p>Note:</p> <p>If the end point also has a ring timeout configured, the actual ring timeout used is the shortest time set by either device.</p>
<p>Auto Record</p>	<p>Enable automatic recording for the calls using this extension. The default setting is disabled. The recording files can be accessed under Web GUI→CDR→Recording Files.</p>
<p>Skip Voicemail Password Verification</p>	<p>If enabled, users can skip password verification when dialing in via the My Voicemail feature code. This option is disabled by default.</p>
<p>Music On Hold</p>	<p>Select which Music On Hold class to suggest to extensions when putting them on hold.</p>
<p>Enable LDAP</p>	<p>If enabled, the batch added extensions will be added to LDAP Phonebook PBX list; if disabled, the batch added extensions will be skipped when creating LDAP Phonebook.</p>
<p>Enable WebRTC Support</p>	<p>If enabled, extensions will be able to login to user portal and use Web RTC features.</p>

Call Duration Limit	Configure the maximum duration of call-blocking.
SIP Settings	
NAT	<p>Use NAT when the PBX is on a public IP communicating with devices hidden behind NAT (e.g., broadband router). If there is one-way audio issue, usually it is related to NAT configuration or Firewall's support of SIP and RTP ports.</p> <p>The default setting is enabled.</p>
Enable Direct Media	By default, the PBX will route the media streams from SIP endpoints through itself. If enabled, the PBX will attempt to negotiate with the endpoints to route the media stream directly. It is not always possible for the PBX to negotiate endpoint-to-endpoint media routing. The default setting is "No".
DTMF Mode	Select DTMF mode for the user to send DTMF. The default setting is "RFC4733". If "Info" is selected, SIP INFO message will be used. If "Inband" is selected, 64-kbit codec PCMU and PCMA are required. When "Auto" is selected, RFC4733 will be used if offered, otherwise "Inband" will be used.
Enable Keep-alive	If enabled, empty SDP packet will be sent to the SIP server periodically to keep the NAT port open. The default setting is "Yes".
Keep-alive Frequency	Configure the number of seconds for the host to be up for Keep-alive. The default setting is 60 seconds.
TEL URI	If the end device/phone has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.
Concurrent Registrations	The maximum allowed number of endpoint registrations to this extension. Default value is 1.
Other Settings	
SRTP	Enable SRTP for the call. The default setting is "No".
Fax Mode	<p>Select Fax mode for this user. The default setting is "None".</p> <ul style="list-style-type: none"> o None: Disable Fax. o Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under Web GUI→Call Features→Fax/T.38.

ACL Policy	<p>Access Control List manages the IP addresses that can register to this extension.</p> <ul style="list-style-type: none"> ◦ Allow All: Any IP address can register to this extension. <p>Local Network Address: Only IP addresses in the configured network segments can register to this extension.</p>
Enable T.38 UDPTL	Enable or disable T.38 UDPTL Support.
Skip Trunk Auth	If enable “All”, users do not need to enter password when making an outbound call. If enable “Follow Me”, the user can dial out via follow me without password.
Codec Preference	Select audio and video codec for the extension. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.722, G.729, G.723, iLBC, ADPCM, LPC10, H.264, H.263, H.263p and VP8.

Batch Add IAX Extensions

Under Web GUI→**Extension/Trunk**→**Extensions**, click on “Add”, then select extension type as IAX Extension and the add method to be Batch.

Table 45: Batch Add IAX Extension Parameters


General	
Start Extension	Configure the starting extension number of the batch of extensions to be added.
Create Number	Specify the number of extensions to be added. The default setting is 5.
Permission	<p>Assign permission level to the user. The available permissions are “Internal”, “Local”, “National” and “International” from the lowest level to the highest level. The default setting is “Internal”.</p> <p>Note: Users need to have the same level as or higher level than an outbound rule’s privilege in order to make outbound calls from this rule.</p>
Voicemail	<p>Configure Voicemail. There are three valid options and the default option is “Enable Local Voicemail”.</p> <ul style="list-style-type: none"> ◦ Disable Voicemail: Disable Voicemail. ◦ Enable Local Voicemail: Enable voicemail for the user.

SIP/IAX Password	<p>Configure the SIP/IAX password for the users. Three options are available to create password for the batch of extensions.</p> <ul style="list-style-type: none"> ○ User Random Password. <p>A random secure password will be automatically generated. It is recommended to use this password for security purpose.</p> <ul style="list-style-type: none"> ○ Use Extension as Password. ○ Enter a password to be used on all the extensions in the batch.
Voicemail Password	<p>Configure the password to access the extension's voicemail. A randomly generated password is used by default and is highly recommended for security. Only digits are supported.</p>
Ring Timeout	<p>Configure the number of seconds to ring the user before the call is forwarded to voicemail (voicemail is enabled) or hang up (voicemail is disabled). If not specified, the default ring timeout is 60 seconds on the UCM6200, which can be configured in the global ring timeout setting under Web GUI→PBX Settings→Voice Prompt→Custom Prompt: General Preference. The valid range is between 5 seconds and 600 seconds.</p> <p>Note:</p> <p>If the end point also has a ring timeout configured, the actual ring timeout used is the shortest time set by either device.</p>
Auto Record	<p>Enable automatic recording for the calls using this extension. The default setting is disabled. The recording files can be accessed under Web GUI→CDR→Recording Files.</p>
Skip Voicemail Password Verification	<p>If enabled, users can skip password verification when dialing in via the My Voicemail feature code. This option is disabled by default.</p>
Music On Hold	<p>Select which Music On Hold class to suggest to extensions when putting them on hold.</p>
Enable LDAP	<p>If enabled, the batch added extensions will be added to LDAP Phonebook PBX list; if disabled, the batch added extensions will be skipped when creating LDAP Phonebook.</p>
Call Duration Limit	<p>Configure the maximum duration of call-blocking.</p>
IAX Settings	
Max Number of Calls	<p>Configure the maximum number of calls allowed for each remote IP address.</p>

Require Call Token	<p>Configure to enable/disable requiring call token. If set to “Auto”, it might lock out users who depend on backward compatibility when peer authentication credentials are shared between physical endpoints.</p> <p>The default setting is “Yes”.</p>
Other Settings	
SRTP	Enable SRTP for the call. The default setting is “No”.
Fax Mode	<p>Select Fax Mode for this user. The default setting is “None”.</p> <ul style="list-style-type: none"> ◦ None: Disable Fax. ◦ Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under Web GUI→Call Features→Fax/T.38.
ACL Policy	<p>Access Control List manages the IP addresses that can register to this extension.</p> <ul style="list-style-type: none"> ◦ Allow All: Any IP address can register to this extension. <p>Local Network Address: Only IP addresses in the configured network segments can register to this extension.</p>
Skip Trunk Auth	If enable “All”, users do not need to enter password when making an outbound call. If enable “Follow Me”, the call can dial out via follow me without password.
Codec Preference	Select audio and video codec for the extension. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.722, G.729, G.723, iLBC, ADPCM, LPC10, H.264, H.263, H.263p and VP8.

Batch-Edit Extensions

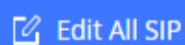To edit many extensions at once, please navigate to the web GUI of the UCM62xx then choose **Extensions / Trunk** → **Extensions** then click on

 Edit All SIP

General	
Permission	Please select the permission level for outgoing calls.
Voicemail	<p>The default option is "Local Voicemail".</p> <ul style="list-style-type: none"> ● Disable: Disables voicemail entirely ● Local Voicemail: Enables local voicemail from the user. ● Informatec Remote Voicemail: Send the notify message from remote voicemail system to the user. Cannot be used alongside local voicemail. Note: This option is used only for Informatec remote voicemail
SIP/IAX Password	The password for the user to register SIP/IAX account.

Voicemail Password	Password to access the user's voicemail.
CallerID Number	Configure the caller ID number displayed in dialing calls from this user. Note: The Caller ID usage might be limited by your VoIP provider.
Ring Timeout	Number of seconds to ring the extension before forwarding the call to voicemail.
Auto Record	<ul style="list-style-type: none"> • All Calls: All incoming calls to this extension will be recorded. • OFF: The call won't be recorded for all extensions. • Only External Calls: All external calls of the extension will be recorded. • Only Internal Calls: All internal calls of the extension will be recorded.
Skip Voicemail Password Verification	When user dials My Voicemail, the password verification IVR is skipped.
Keep-alive	If enabled, the PBX will regularly send SIP OPTIONS to check if host device is online.
Keep-alive Frequency	Configure the keep-alive interval (in seconds) to check if the host is up.
Music On Hold	Specify which Music On Hold class to suggest to the bridged channel when putting them on hold.
Disable This Extension	Check this box to disable this extension.
Enable LDAP	If enabled, the extension will be added to LDAP Phonebook PBX lists.
Enable WebRTC Support	Enable registration and call from WebRTC.
Call Duration Limit	Block calls for the configured duration.
Language	Select voice prompt language for this extension. If set to "Default", the global setting for voice prompt language will be used.
Send Voicemail to Email	Whether to attach voicemail messages to email.
Keep Voicemail after Emailing	The voicemail recording will be kept even if it has been sent through email. Only applies if extension-level or global <i>Send Voicemail to Email</i> is enabled.
Call Waiting	Allows calls to the extension even when it is already in a call. This only works if the caller is directly dialing the extension. If disabled, the CC service will not work.
SIP Settings	
NAT	<p>Enable this setting if the UCM is using public IP and communicating with devices behind NAT.</p> <p>Note 1: This setting will overwrite the Contact header of received messages, which may affect the ability to establish calls when behind NAT. Consider changing settings in PBX Settings->SIP Settings->NAT instead.</p> <p>Note 2: If one is experiencing one-way audio issues, please check the NAT configuration and SIP/RTP ports in the firewall.</p>




Enable Direct Media	By default, the PBX will route the media streams from SIP endpoints through itself. If this option is enabled, the PBX will attempt to redirect the RTP media streams to bypass the PBX and to go directly between caller and callee. Note: It is not always possible for the PBX to negotiate endpoint-to-endpoint media routing.
DTMF Mode	Configures the mode for sending DTMF. <ul style="list-style-type: none"> ● RFC4733 (default): DTMF is transmitted as audio in the RTP stream but is encoded separately from the audio stream. Backwards-compatible with RFC2833. ● Inband: DTMF is transmitted as audio and is included in the audio stream. Requires alaw/ulaw codecs. ● Info: DTMF is transmitted through a separate network connection from media streams ● Auto: DTMF mode will be negotiated with the remote peer. RFC4733 will be used by default unless the remote peer does not indicate support.
TEL URI	If "Enabled" option is selected, TEL URI and Remove OBP from Route cannot be enabled at the same time. If the phone has an assigned PSTN telephone number, this field should be set to "User=Phone". A "User=Phone" parameter will then be attached to the Request-Line and "TO" header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request.
Concurrent Registrations	The maximum endpoints which can be registered to this extension.
CC Settings	
Enable CC	Check this box to allow the system to automatically alert this extension when a called party is available, given that a previous call to that party failed for some reason.
Monitor Privilege Control	
Allow Call-barging	Members of this list can spy on this extension via feature codes.
Seamless Transfer Privilege Control	
Allowed to seamless transfer	Members of the list can seamless transfer via feature code
Other Settings	
SRTP	Enable/disable SRTP for RTP stream encryption.
Fax Mode	Check this box to allow the system to automatically alert this extension when a called party is available, given that a previous call to that party failed for some reason. <ul style="list-style-type: none"> ● None: Disable Fax. ● Fax Detect: During a call, the Fax signal from the user/trunk can be detected, and the received Fax will be sent to the Email address configured for the user. If no user Email can be found, the Fax will be sent to the default Email address configured in Fax page.
ACL Policy	Access Control List manages the IP addresses that can register to this extension. <ul style="list-style-type: none"> ● Allow All: Any IP address can register to this extension.


	<ul style="list-style-type: none"> • Local Network: Only IP addresses in the configured network segments can register to this extension.
Skip Trunk Auth	If set to "Yes", users do not need to enter a password when making outbound calls. If set to "Bytime", users do not need to enter a password when making outbound calls that matches the time condition.
Codec Preference	Configure the codecs to be used.

Batch Extension Resetting Functionality

To reset multiple extensions to default settings, select the extensions on the main **Extensions/Trunks->Extensions** page and click on the **Reset** button. Once reset, all settings except for **Concurrent Registrations** will be reverted to default. User voicemail password will be randomized again, and user voicemail prompts and recordings will be deleted. The settings for the extension user in the **User Management** page will also be reverted to default except for usernames and custom privileges.

Search and Edit Extension

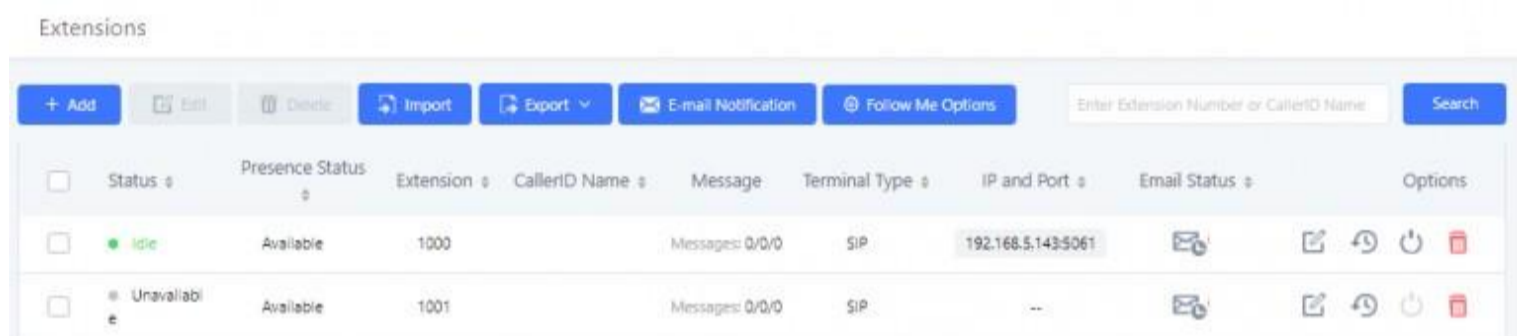All the UCM6200 extensions are listed under Web GUI→**Extension/Trunk→Extensions**, with status, Extension, CallerID Name, Technology (SIP, IAX and FXS), IP and Port. Each extension has a checkbox for users to “Edit Selected Extensions” or “Delete Selected Extensions”. Also, options “Edit” , “Reboot” , “Delete”  and reset are available per extension. User can search an extension by specifying the extension number to find an extension quickly.















Status	Presence Status	Extension	CallerID Name	Message	Terminal Type	IP and Port	Email Status	Options
	Available	1000		Messages: 0/0/0	SIP	192.168.5.143-5061		   
	Available	1001		Messages: 0/0/0	SIP	--		   

Figure 84: Manage Extensions

◦ Status

Users can see the following icon for each extension to indicate the SIP status.

- Green: Idle
- Blue: Ringing
- Yellow: In Use
- Grey: Unavailable (the extension is not registered or disabled on the PBX)

◦ Edit single extension


Click on  to start editing the extension parameters.

◦ Reset single extension


Click on  to reset the extension parameters to default (except concurrent registration).

Other settings will be restored to default in **Maintenance→User Management→User Information** except username and permissions and delete the user voicemail prompt and voice messages.

- **Reboot the user**

Click on  to send NOTIFY reboot event to the device which has an UCM6200 extension already registered. To successfully reboot the user, “Zero Config” needs to be enabled on the UCM6200 Web GUI→**Value-added Features→Zero Config→Zero Config Settings**.

- **Delete selected extensions**

Click on the  button to delete a single extension. Users can also select multiple extensions and click on the Delete button to delete several extensions at once.

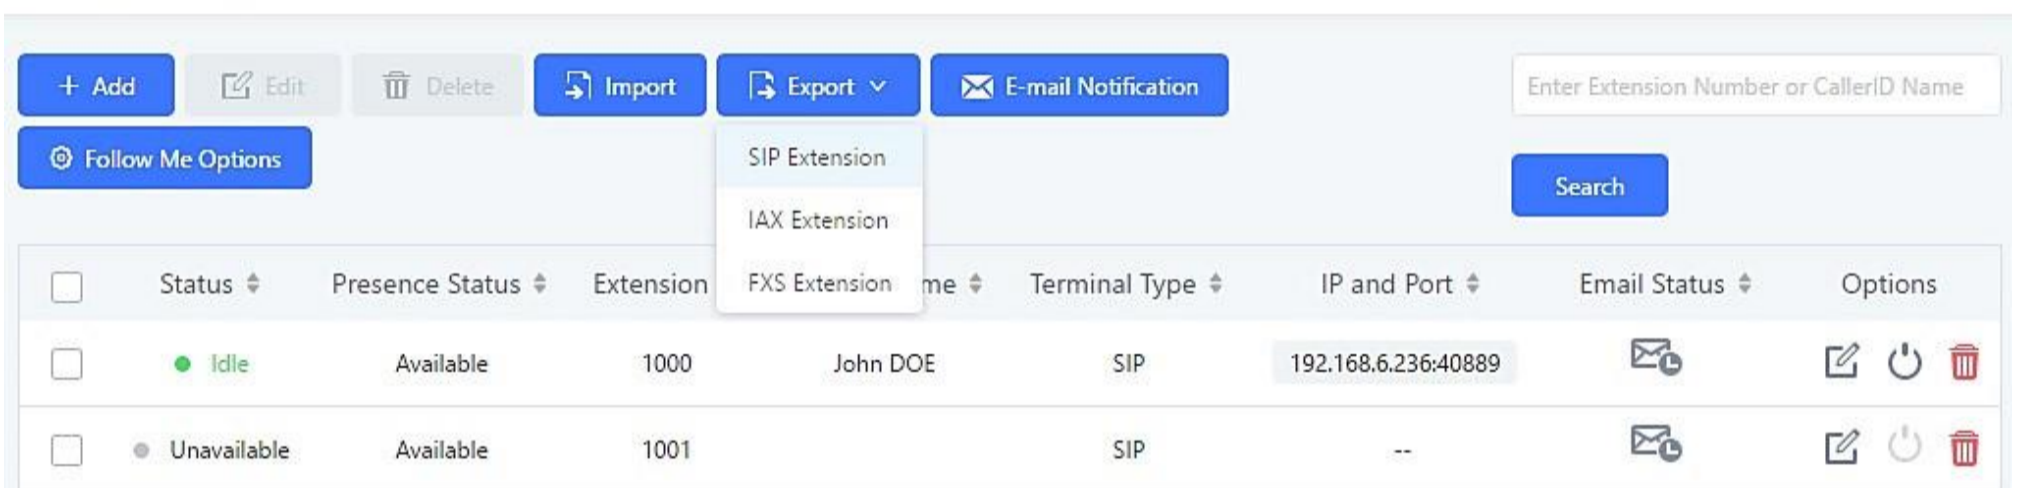
- **Modify selected extensions**

Select the checkbox for the extension(s). Then click on “Edit” to edit the extensions in a batch.

Export Extensions

UCM extensions can be exported to a CSV file. Different extension types (SIP, IAX, FXS) cannot be exported to the same CSV file. To export extensions, click on the **Export** button and select the extension type to export.

Manage Extensions



The screenshot shows the 'Manage Extensions' interface. At the top, there are buttons for '+ Add', 'Edit', 'Delete', 'Import', 'Export', and 'E-mail Notification'. The 'Export' button is open, showing a dropdown menu with three options: 'SIP Extension', 'IAX Extension', and 'FXS Extension'. Below the buttons is a search bar with the placeholder text 'Enter Extension Number or CallerID Name' and a 'Search' button. The main area contains a table with columns: Status, Presence Status, Extension, Name, Terminal Type, IP and Port, Email Status, and Options. Two rows are visible: one for extension 1000 (John DOE, SIP, 192.168.6.236:40889) and one for extension 1001 (Unavailable, SIP, --).

Figure 85: Export Extensions

Users can also use the exported CSV file to use as a template to manually edit extension information.

Import Extensions

The capability to import extensions to the UCM6200 provides users flexibility to batch add extensions with similar or different configuration quickly into the PBX system.

- Export extension csv file from the UCM6200 by clicking on “Export Extensions” button.
- Fill up the extension information you would like in the exported csv template.
- Click on “Import Extensions” button. The following dialog will be prompted.

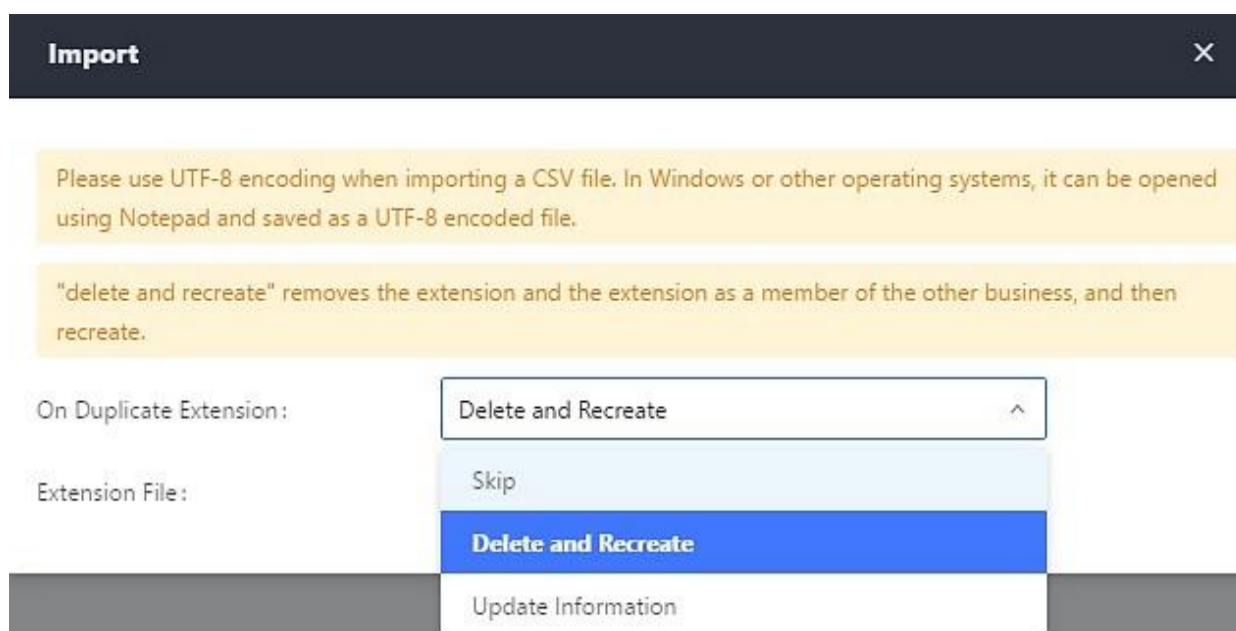


Figure 86: Import Extensions

- Select the option in “On Duplicate Extension” to define how the duplicate extension(s) in the imported csv file should be treated by the PBX.
- **Skip:** Duplicate extensions in the csv file will be skipped. The PBX will keep the current extension information as previously configured without change.
- **Delete and Recreate:** The current extension previously configured will be deleted and the duplicate extension in the csv file will be loaded to the PBX.
- **Update Information:** The current extension previously configured in the PBX will be kept. However, if the duplicate extension in the csv file has different configuration for any options, it will override the configuration for those options in the extension.
- Click on “Choose file to upload” to select csv file from local directory in the PC.
- Click on “Apply Changes” to apply the imported file on the UCM6200.

Example of file to import:

A	B	C	D	E	F	G	H	I	J	K	L	M	N	
Extension	Technology	Enable Voicemail	CallerID	SIP/IAX Password	Voicema	Skip Voicemail	Password Verification	Ring Timeout	Auto Record	SRTP	Fax Mode	Strategy	Local Subnet 1	Local Sub
1000	SIP	yes	1000	admin123	61783	no			no	no	None	Allow All		
1001	SIP	yes	1001	admin123	955921	no			no	no	None	Allow All		
1002	SIP	yes	1002	admin123	269824	no			no	no	None	Allow All		
1003	SIP	yes	1003	admin123	363196	no			no	no	None	Allow All		
1004	SIP	yes	1004	admin123	12860	no			no	no	None	Allow All		

Figure 87: Import File

Table 46: SIP extensions Imported File Example

Field	Supported values
Extension	Digits
Technology	SIP/SIP(WebRTC)
Enable Voicemail	yes/no/remote
CallerID Number	Digits
SIP/IAX Password	Alphanumeric characters
Voicemail Password	Digits
Skip Voicemail Password Verification	yes/no
Ring Timeout	Empty/ 3 to 600 (in second)

SRTP	yes/no
Fax Mode	None/Fax Detection
Strategy	Allow All/Local Subnet Only/A Specific IP Address
Local Subnet 1	IP address/Mask
Local Subnet 2	IP address/Mask
Local Subnet 3	IP address/Mask
Local Subnet 4	IP address/Mask
Local Subnet 5	IP address/Mask
Local Subnet 6	IP address/Mask
Local Subnet 7	IP address/Mask
Local Subnet 8	IP address/Mask
Local Subnet 9	IP address/Mask
Local Subnet 10	IP address/Mask
Specific IP Address	IP address
Skip Trunk Auth	yes/no/bytime
Codec Preference	PCMU,PCMA,GSM,G.726,G.722,G.729,H.264,ILBC,AAL2-G.726-32,ADPCM,G.723,H.263,H.263p,vp8,opus
Permission	Internal/Local/National/International
NAT	yes/no
DTMF Mode	RFC4733/info/inband/auto
Insecure	Port
Enable Keep-alive	Yes/no
Keep-alive Frequency	Value from 1-3600
AuthID	Alphanumeric value without special characters

TEL URI	Disabled/user=phone/enabled
Call Forward Busy	Digits
Call Forward No Answer	Digits
Call Forward Unconditional	Digits
Support Hot-Desking Mode	Yes/no
Dial Trunk Password	Digits
Disable This Extension	Yes/no
CFU Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
CFN Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
CFB Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Music On Hold	Default/ringbacktone_default
CC Agent Policy	If CC is disabled use: never If CC is set to normal use: generic If CC is set to trunk use: native
CC Monitor Policy	Generic/never
CCBS Available Timer	3600/4800
CCNR Available Timer	3600/7200
CC Offer Timer	60/120
CC Max Agents	Value from 1-999
CC Max Monitors	Value from 1-999
Ring simultaneously	Yes/no
External Number	Digits
Time Condition for Ring Simultaneously	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time

Time Condition for Skip Trunk Auth	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Enable LDAP	Yes/no
Enable T.38 UDPTL	Yes/no
Max Contacts	Values from 1-10
Enable WebRTC	Yes/no
Alert-Info	None/Ring 1/Ring2/Ring3/Ring 4/Ring 5/Ring 6/Ring 7/ Ring 8/Ring 9/Ring 10/bellcore-dr1/bellcore-dr2/ bellcore-dr3/ bellcore-dr4/ bellcore-dr5/custom
Do Not Disturb	Yes/no
DND Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Custom Auto answer	Yes/no
Do Not Disturb Whitelist	Empty/digits
User Password	Alphanumeric characters.
First Name	Alphanumeric without special characters.
Last Name	Alphanumeric without special characters.
Email Address	Email address
Language	Default/en/zh
Phone Number	Digits
Call-Barging Monitor	Extensions allowed to call barging
Seamless Transfer Members	Extensions allowed to seamless transfer

Table 47: IAX extensions Imported File Example

Field	Supported values
Extension	Digits
Technology	IAX

Enable Voicemail	yes/no
CallerID Number	Digits
SIP/IAX Password	Alphanumeric characters
Voicemail Password	Digits
Skip Voicemail Password Verification	yes/no
Ring Timeout	Empty/ 3 to 600 (in second)
SRTP	yes/no
Fax Mode	None/Fax Detection
Strategy	Allow All/Local Subnet Only/A Specific IP Address
Local Subnet 1	IP address/Mask
Local Subnet 2	IP address/Mask
Local Subnet 3	IP address/Mask
Local Subnet 4	IP address/Mask
Local Subnet 5	IP address/Mask
Local Subnet 6	IP address/Mask
Local Subnet 7	IP address/Mask
Local Subnet 8	IP address/Mask
Local Subnet 9	IP address/Mask
Local Subnet 10	IP address/Mask
Specific IP Address	IP address
Skip Trunk Auth	yes/no/bytime
Codec Preference	PCMU,PCMA,GSM,G.726,G.722,G.729,H.264,ILBC,AAL2-G.726-32,ADPCM,G.723,H.263,H.263p,vp8,opus
Permission	Internal/Local/National/International

NAT	yes/no
Call Forward Busy	Digits
Call Forward No Answer	Digits
Call Forward Unconditional	Digits
Require Call Token	Yes/no/auto
Max Number of Calls	Values from 1-512
Dial Trunk Password	Digits
Disable This Extension	Yes/no
CFU Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
CFN Time Condition	
CFB Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Music On Hold	Default/ringbacktone_default
Ring simultaneously	Yes/no
External Number	Digits
Time Condition for Ring Simultaneously	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Time Condition for Skip Trunk Auth	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Enable LDAP	Yes/no
Limit Max time (s)	empty
Do Not Disturb	Yes/no
DND Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Do Not Disturb Whitelist	Empty/digits
User Password	Alphanumeric characters.
First Name	Alphanumeric without special characters.

Last Name	Alphanumeric without special characters.
Email Address	Email address
Language	Default/en/zh
Phone Number	Digits
Call-Barging Monitor	Extensions allowed to call barging
Seamless Transfer Members	Extensions allowed to seamless transfer


Table 48: FXS Extensions Imported File Example

Field	Supported values
Extension	Digits
Technology	FXS
Analog Station	FXS1/FXS2
Enable Voicemail	yes/no
CallerID Number	Digits
Voicemail Password	Digits
Skip Voicemail Password Verification	yes/no
Ring Timeout	Empty/ 3 to 600 (in second)
Auto Record	yes/no
Fax Mode	None/Fax Detection
Skip Trunk Auth	Yes/no/bytime
Permission	Internal/Local/National/International
Call Forward Busy	Digits
Call Forward No Answer	Digits
Call Forward Unconditional	Digits

Call Waiting	Yes/no
Use # as SEND	Yes/no
RX Gain	Values from -30→6
TX Gain	Values from -30→6
MIN RX Flash	Values from: 30 – 1000
MAX RX Flash	Values from: 40 – 2000
Enable Polarity Reversal	Yes/no
Echo Cancellation	On/Off/32/64/128/256/512/1024
3-Way Calling	Yes/no
Send CallerID After	1/2
Dial Trunk Password	digits
Disable This Extension	Yes/no
CFU Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
CFN Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
CFB Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Music On Hold	Default/ringbacktone_default
CC Agent Policy	If CC is disabled use: never If CC is set to normal use: generic If CC is set to trunk use: native
CC Monitor Policy	Generic/never
CCBS Available Timer	3600/4800
CCNR Available Timer	3600/7200
CC Offer Timer	60/120
CC Max Agents	Value from 1-999

CC Max Monitors	Value from 1-999
Ring simultaneously	Yes/no
External Number	Digits
Time Condition for Ring Simultaneously	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Time Condition for Skip Trunk Auth	
Enable LDAP	Yes/no
Enable Hotline	Yes/no
Hotline Type	Immediate hotline/delay hotline
Hotline Number	digits
Limit Max time (s)	empty
Do Not Disturb	Yes/no
DND Time Condition	All time/Office time/out of office time/holiday/out of holiday/out of office time or holiday/specific time
Do Not Disturb Whitelist	Empty/digits
User Password	Alphanumeric characters.
First Name	Alphanumeric without special characters.
Last Name	Alphanumeric without special characters.
Email Address	Email address
Language	Default/en/zh
Phone Number	Digits
Call-Barging Monitor	Extensions allowed to call barging
Seamless Transfer Members	Extensions allowed to seamless transfer

The CSV file should contain all the above fields, if one of them is missing or empty, the UCM6200 will display the following error message for missing fields.



Extension Details

Users can click on an extension number in the *Extensions* list page and quickly view information about it such as:

- **Extension:** Shows the Extension number.
- **Status:** Shows the status of the extension.
- **Presence status:** Indicates the Presence Status of this extension.
- **Terminal Type:** Shows the Type of the terminal using this extension (SIP, FXS...etc.).
- **Caller ID Name:** Reveals the Caller ID Name configured on the extension.
- **Messages:** Shows the messages stats.
- **IP and Port:** The IP address and the ports of the device using the extension.
- **Email status:** Show the Email status (sent, to be sent...etc.).
- **Ring Group:** Indicates the ring groups that this extension belongs to.
- **Call Queue:** Indicates the Cal Queues that this extension belongs to.
- **Call Queue (Dynamic):** Indicates the Call Queues that this extension belongs to as a dynamic agent.

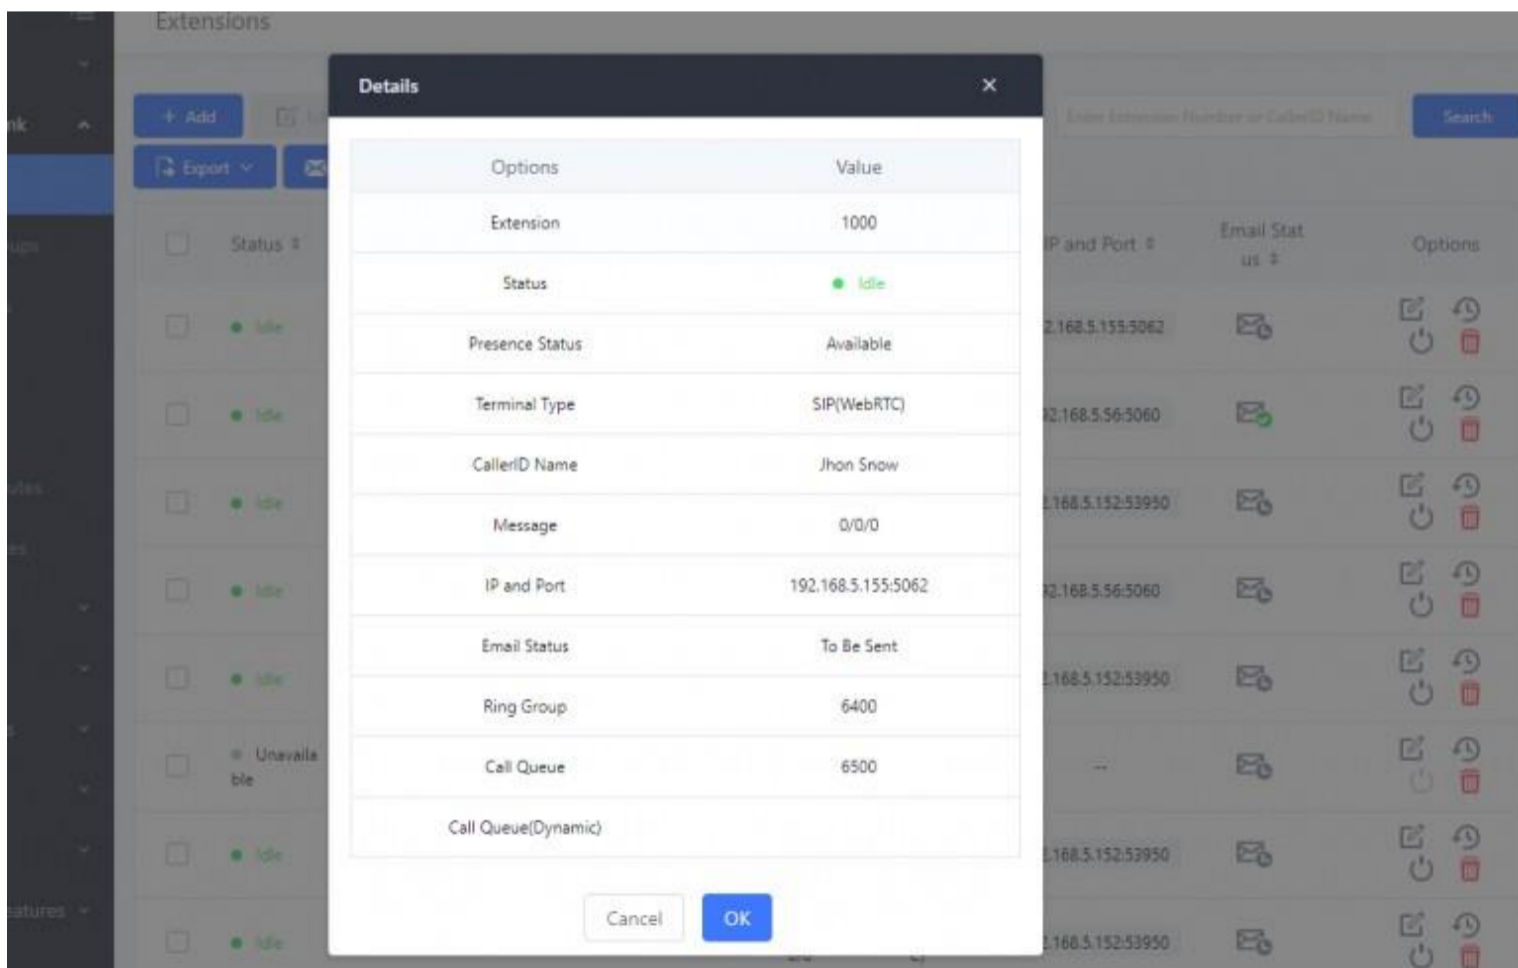


Figure 89: Extension Details

E-mail Notification

Users can request for their SIP account information via email. The system administrator can select the extensions to send account information emails to and press the **Email Notification** button in the **Extensions** page.

When click on “E-mail Notification” button, the following message will be prompted in the web page. Click on OK to confirm sending the account information to all users’ Email addresses. After clicking the button, the following prompt will appear:

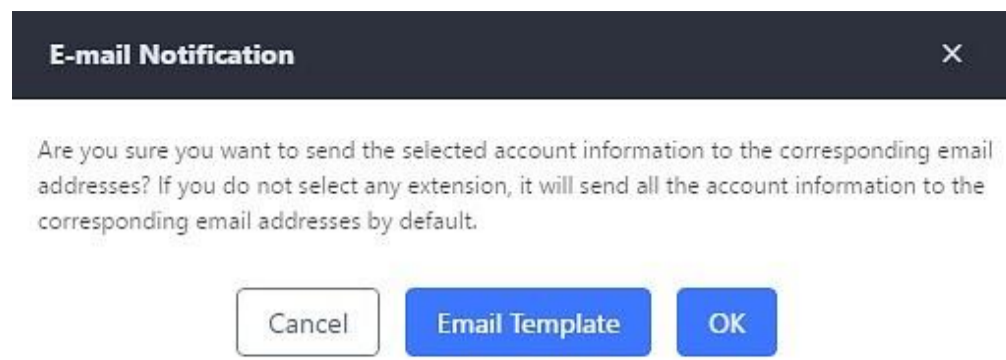


Figure 90: E-mail Notification – Prompt Information

The selected users will receive emails containing account registration information, LDAP configuration, and QR codes for quick setup on mobile apps.

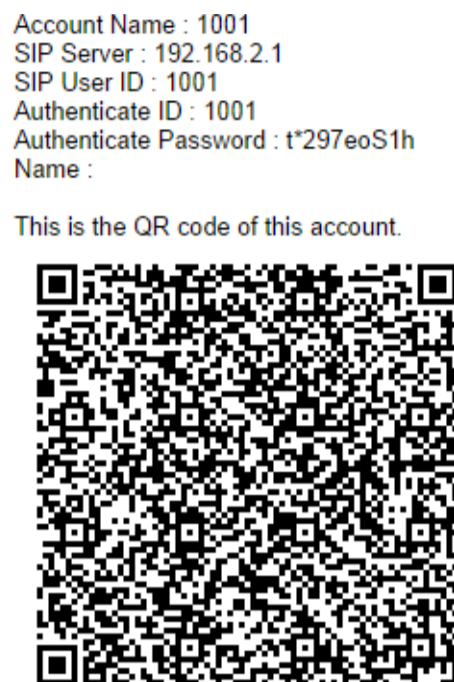


Figure 91: Account Registration Information and QR Code



Figure 92: LDAP Client Information and QR Code

Multiple Registrations per Extension

UCM6200 supports multiple registrations per extension so that users can use the same extension on devices in different locations.



Figure 93: Multiple Registrations per Extension

This feature can be enabled by configuring option “Concurrent Registrations” under Web GUI→Extension/Trunk→Edit Extension. The default value is 1 for security purposes. Maximum is 10.

Edit Extension: 1000 Save

Basic Settings Media Features Specific Time Follow Me

General

* Extension: 1000 CallerID Number:

* Permission: Internal * SIP/IAX Password: DGc7BjoG

AuthID:

Enable Voicemail:

* Voicemail Password: 791020 Skip Voicemail Password V.:

Enable Keep-alive:

* Keep-alive Frequency: 60

Disable This Extension:

User Settings

First Name: John Last Name: DOE

Email Address: mbaomar@grandstream.com * User Password: *****

* Language: Default * Concurrent Registration: 3

Mobile Phone Number:

Figure 94: Extension – Concurrent Registration

SMS Message Support

The UCM6200 provides built-in SIP SMS message support. For SIP end devices such as Grandstream GXP or GXV phones that supports SIP message, after an UCM6200 account is registered on the end device, the user can send and receive SMS message. Please refer to the end device documentation on how to send and receive SMS message.

SMS Message support is a new feature added since firmware 1.0.10.x which is built with Asterisk 13.



Figure 95: SMS Message Support



Extension Groups

The UCM6200 extension group feature allows users to assign and categorize extensions in different groups to better manage the configurations on the UCM6200. For example, when configuring “Enable Filter on Source Caller ID”, users could select a group instead of each person’s extension to assign. This feature simplifies the configuration process and helps manage and categorize the extensions for business environment.

Configure Extension Groups

Extension group can be configured via Web GUI→Extension/Trunk→Extension Groups.

- Click on + Add to create a new extension group.

- Click on  to edit the extension group.
- Click on  to delete the extension group.

Select extensions from the list on the left side to the right side.

Create New Extension Group

* Name:

Members:

<input type="checkbox"/> 0 item Available	<input type="checkbox"/> 6 items Selected
Search <input type="text" value=""/>	Search <input type="text" value=""/>
None	<input type="checkbox"/> 1000 <input type="checkbox"/> 4001 <input type="checkbox"/> 4002 <input type="checkbox"/> 4003

Figure 96: Edit Extension Group

Click on  in order to change the ringing priority of the members selected on the group.



Using Extension Groups

Here is an example where the extension group can be used. Go to Web GUI→**Extension/Trunk**→**Outbound Routes** and select “Enable Filter on Source Caller ID”. Both single extensions and extension groups will show up for users to select.

Figure 97: Select Extension Group in Outbound Route

Analog Trunks

Go to Web GUI→**Extension/Trunk**→**Analog Trunks** to add and edit analog trunks.

- Click on “Create New Analog Trunk” to add a new analog trunk.
- Click on  to edit the analog trunk.
- Click on  to delete the analog trunk.

Analog Trunk Configuration

The analog trunk options are listed in the table below.

Table 49: Analog Trunk Configuration Parameters

Channels	Select the channel for the analog trunk. <ul style="list-style-type: none">◦ UCM6202: 2 channels◦ UCM6204: 4 channels◦ UCM6208: 8 channels
Trunk Name	Specify a unique label to identify the trunk when listed in outbound rules, incoming rules and etc.
Advanced Options	
SLA Mode	Enable this option to satisfy two primary use cases, which include emulating a simple key system and creating shared extensions on a PBX. Enable SLA Mode will disable polarity reversal.
Barge Allowed	The barge option specifies whether other stations can join a call in progress on this trunk. If enabled, the other stations can press the line button to join the call. The default setting is Yes.
Hold Access	The hold option specifies hold permissions for this trunk. If set to “Open”, any station can place this trunk on hold and any other station is allowed to retrieve the call. If set to “Private”, only the station that places the call on hold can retrieve the call. The default setting is Yes.
Enable Polarity Reversal	If enabled, a polarity reversal will be marked as received when an outgoing call is answered by the remote party. For some countries, a polarity reversal is used for signaling the disconnection of a phone line and the call will be considered as “Hangup” on a polarity reversal. The default setting is “No”.
Polarity on Answer Delay	When FXO port answers the call, FXS may send a Polarity Reversal. If this interval is shorter than the value of “Polarity on Answer Delay”, the Polarity Reversal will be ignored. Otherwise, the FXO will Onhook to disconnect the call. The default setting is 600ms.
Current Disconnect Threshold (ms)	This is the periodic time (in ms) that the UCM6200 will use to check on a voltage drop in the line. The default setting is 200. The valid range is 50 to 3000.
Ring Timeout	Configure the ring timeout (in ms). Trunk (FXO) devices must have a timeout to determine if there was a Hangup before the line is answered. This value can be used to configure how long it takes before the UCM6200 considers a non-ringing line with Hangup activity. The default setting is 8000.

RX Gain	Configure the RX gain for the receiving channel of analog FXO port. The valid range is from -12.0 (dB) to + 12.0 (dB). The default setting is 0.
TX Gain	Configure the TX gain for the transmitting channel of analog FXO port. The valid range is from -12.0 (dB) to + 12.0 (dB). The default setting is 0.
Use CallerID	Configure to enable CallerID detection. The default setting is “Yes”.
Caller ID Scheme	<p>Select the Caller ID scheme for this trunk.</p> <ul style="list-style-type: none"> ○ Bellcore/Telcordia. ○ ETSI-FSK During Ringing ○ ETSI-FSK Prior to Ringing with DTAS ○ ETSI-FSK Prior to Ringing with LR ○ ETSI-FSK Prior to Ringing with RP ○ ETSI-DTMF During Ringing ○ ETSI-DTMF Prior to Ringing with DTAS ○ ETSI-DTMF Prior to Ringing with LR ○ ETSI-DTMF Prior to Ringing with RP ○ SIN 227-BT ○ NTT Japan ○ Auto Detect <p>If you are not sure which scheme to choose, please select “Auto Detect”. The default setting is “Bellcore/Telcordia”.</p>
Fax Mode	<p>Enable to detect Fax signal from the trunk during the call and send the received Fax to the default Email address in Fax setting page under Web GUI→Call Features→Fax/T.38. The default setting is “No”.</p> <p>Note: If enabled, Fax Pass-through cannot be used.</p>
FXO Dial Delay(ms)	Configure the time interval between off-hook and first dialed digit for outbound calls.
Auto Record	Enable automatic recording for the calls using this trunk. The default setting is disabled. The recording files can be accessed under Web GUI→ CDR → Recording Files .
Disable This Trunk	If selected, the trunk will be disabled and incoming/Outgoing calls via this trunk will not be possible.

<p>DAHDI Out Line Selection</p>	<p>This is to implement analog trunk outbound line selection strategy.</p> <p>Three options are available:</p> <ul style="list-style-type: none"> o Ascend <p>When the call goes out from this analog trunk, it will always try to use the first idle FXO port. The port order that the call will use to go out would be port 1→port 2→port 10→port 16. Every time it will start with port 1 (if it is idle).</p> <ul style="list-style-type: none"> o Poll <p>When the call goes out from this analog trunk, it will use the port that is not used last time. And it will always use the port in the order of port 1→2→10→16→1→2→10→16→1→2→10→16..., following the last port being used.</p> <ul style="list-style-type: none"> o Descend <p>When the call goes out from this analog trunk, it will always try to use the last idle FXO port. The port order that the call will use to go out would be port 16→port 10→port 2→port 1. Every time it will start with port 16 (if it is idle).</p> <p>The default setting is “Ascend” mode.</p>
<p>Echo Cancellation Mode</p>	<p>The Non-Linear Processing (NLP) in echo cancellation helps to remove/suppress residual echo components that could not be removed by the LEC (Line Echo Canceller). Following modes are supported:</p> <ul style="list-style-type: none"> o Default: Slightly reduces the amount of detected background noise. o High Noise Level Adjustment: Greatly reduces the amount of detected background noise. o Noise Masking: Injects noise to mask echo and greatly reduces the amount of detected background noise. o White Noise Injection: Injects variable amounts of white noise based on detected background noise and greatly reduces the amount of detected background noise.
<p>Direct Callback</p>	<p>Allows external numbers the option to get directed to the extension that last called them.</p> <p>For Example: User 2002 has dialed external number 061234575 but they were not reachable, once they have received missed call notification on their phone, they would mostly call back the number, if the option “Direct Callback” is enabled then they will be directly bridged to user 2002 regardless of the configured inbound destination.</p>
<p>Tone Settings</p>	
<p>Busy Detection</p>	<p>Busy Detection is used to detect far end Hangup or for detecting busy signal. The default setting is “Yes”.</p>
<p>Busy Tone Count</p>	<p>If “Busy Detection” is enabled, users can specify the number of busy tones to be played before hanging up. The default setting is 2. Better results might be achieved if set to 4, 6 or even 8. Please note that the higher the number is, the more time is needed to Hangup the channel. However, this might lower the probability to get random Hangup.</p>
<p>Congestion Detection</p>	<p>Congestion detection is used to detect far end congestion signal. The default setting is “Yes”.</p>

Congestion Count	If “Congestion Detection” is enabled, users can specify the number of congestion tones to wait for. The default setting is 2.
Tone Country	Select the country for tone settings. If “Custom” is selected, users could manually configure the values for Busy Tone and Congestion Tone. The default setting is “United States of America (USA)”.
Busy Tone	<p>Syntax:</p> <p>f1=val[@level],[f2=val[@level]],c=on1/off1[-on2/off2[-on3/off3]];</p> <p>Frequencies are in Hz and cadence on and off are in ms.</p> <p>Frequencies Range: [0, 4000)</p> <p>Busy Level Range: (-300, 0)</p> <p>Cadence Range: [0, 16383].</p> <p>Select Tone Country “Custom” to manually configure Busy Tone value.</p> <p>Default value:</p> <p>f1=480@-50,f2=620@-50,c=500/500</p>
Congestion Tone	<p>Syntax:</p> <p>f1=val[@level],[f2=val[@level]],c=on1/off1[-on2/off2[-on3/off3]];</p> <p>Frequencies are in Hz and cadence on and off are in ms.</p> <p>Frequencies Range: [0, 4000)</p> <p>Busy Level Range: (-300, 0)</p> <p>Cadence Range: [0, 16383].</p> <p>Select Tone Country “Custom” to manually configure Busy Tone value.</p> <p>Default value:</p> <p>f1=480@-50,f2=620@-50,c=250/250</p>
PSTN Detection	Click on “Detect” to detect the busy tone, Polarity Reversal and Current Disconnect by PSTN. Before the detecting, please make sure there is more than one channel configured and working properly. If the detection has busy tone, the “Tone Country” option will be set as “Custom”.

PSTN Detection

The UCM6200 provides PSTN detection function to help users detect the busy tone, Polarity Reversal and Current Disconnect by making a call from the PSTN line to another destination. The detecting call will be answered and up for about 1 minute. Once done, the detecting result will show and can be used for the UCM6200 settings.

1. Go to UCM6200 Web GUI→**Extension/Trunk**→**Analog Trunks** page.
2. Click to edit the analog trunk created for the FXO port.
3. In the dialog window to edit the analog trunk, go to “Tone Settings” section and there are two methods to set the busy tone.
 - ◊ Tone Country. The default setting is “United States of America (USA)”.
 - ◊ PSTN Detection.

Figure 98: UCM6200 FXO Tone Settings

1. Click on “Detect” to start PSTN detection.

Figure 99: UCM6200 PSTN Detection

- ◊ If there are two FXO ports connected to PSTN lines, use the following settings for auto-detection.

Detect Model: Auto Detect.

Source Channel: The source channel to be detected.

Destination Channel: The channel to help detecting. For example, the second FXO port.

Destination Number: The number to be dialed for detecting. This number must be the actual PSTN number for the FXO port used as the destination channel.

Figure 100: UCM6200 PSTN Detection: Auto Detect

- ◊ If there is only one FXO port connected to PSTN line, use the following settings for auto-detection.

Figure 101: UCM6200 PSTN Detection: Semi-Auto Detect

Detect Model: Semi-auto Detect.

Source Channel: The source channel to be detected.

Destination Number: The number to be dialed for detecting. This number could be a cell phone number or other PSTN number that can be reached from the source channel PSTN number.

1. Click “Detect” to start detecting. The source channel will initiate a call to the destination number. For “Auto Detect”, the call will be automatically answered. For “Semi-auto Detect”, the UCM6200 Web GUI will display prompt to notify the user to answer or hang up the call to finish the detecting process.
2. Once done, the detected result will show. Users could save the detecting result as the current UCM6200 settings.

Table 50: PSTN Detection for Analog Trunk

Detect Model	<p>Select “Auto Detect” or “Semi-auto Detect” for PSTN detection.</p> <ul style="list-style-type: none"> ◦ Auto Detect <p>Please make sure two or more channels are connected to the UCM6200 and in idle status before starting the detection. During the detection, one channel will be used as caller (Source Channel) and another channel will be used as callee (Destination Channel). The UCM6200 will control the call to be established and hang up between caller and callee to finish the detection.</p> <ul style="list-style-type: none"> ◦ Semi-auto Detect <p>Semi-auto detection requires answering or hanging up the call manually. Please make sure one channel is connected to the UCM6200 and in idle status before starting the detection. During the detection, source channel will be used as caller and send the call to the configured Destination Number. Users will then need follow the prompts in Web GUI to help finish the detection.</p> <p>The default setting is “Auto Detect”.</p>
Source Channel	<p>Select the channel to be detected.</p>
Destination Channel	<p>Select the channel to help detect when “Auto Detect” is used.</p>
Destination Number	<p>Configure the number to be called to help the detection.</p>

Note:

- The PSTN detection process will keep the call up for about 1 minute.
- If “Semi-auto Detect” is used, please pick up the call only after informed from the Web GUI prompt.
- Once the detection is successful, the detected parameters “Busy Tone”, “Polarity Reversal” and “Current Disconnect by PSTN” will be filled into the corresponding fields in the analog trunk configuration.

VoIP Trunks

VoIP Trunk Configuration

VoIP trunks can be configured in UCM6200 under Web GUI → **Extension/Trunk** → **VoIP Trunks**. Once created, the VoIP trunks will be listed with Provider Name, Type, Hostname/IP, Username and Options to edit/detect the trunk.

Note: UCM6200 currently supports up to 200 VoIP trunks.

- Click on “Create New SIP Trunk” or “Create New IAX Trunk” to add a new VoIP trunk.
- Click on [\[icon\]](#) to configure detailed parameters for the VoIP trunk.
- Click on [\[icon\]](#) to configure Direct Outward Dialing (DOD) for the SIP Trunk.
- Click on [\[icon\]](#) to start LDAP Sync.

- Click on  to delete the VoIP trunk.

For VoIP trunk example, please refer to the document in the following link:

<https://documentation.grandstream.com/knowledge-base/sip-trunks-guide/>

The VoIP trunk options are listed in the table below.

Table 51: Create New SIP Trunk

Type	<p>Select the VoIP trunk type.</p> <ul style="list-style-type: none"> ◦ Peer SIP Trunk ◦ Register SIP Trunk
Provider Name	<p>Configure a unique label (up to 64 character) to identify this trunk when listed in outbound rules, inbound rules etc.</p>
Host Name	<p>Configure the IP address or URL for the VoIP provider's server of the trunk.</p>
Keep Original CID	<p>Keep the CID from the inbound call when dialing out. This setting will override "Keep Trunk CID" option. Please ensure that the remote peer PBX supports matching user entry via the "username" field from authentication line.</p>
Keep Trunk CID	<p>If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".</p>
NAT	<p>Turn on this setting when the PBX is using public IP and communicating with devices behind NAT. If there is one-way audio issue, usually it is related to NAT configuration or SIP/RTP port support on the firewall.</p>
Disable This Trunk	<p>If checked, the trunk will be disabled.</p> <p>Note: If a current SIP trunk is disabled, UCM will send UNREGISTER message (REGISTER message with expires=0) to the SIP provider.</p>
TEL URI	<p>If the trunk has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.</p>
Caller ID	<p>Configure the Caller ID. This is the number that the trunk will try to use when making outbound calls. For some providers, it might not be possible to set the CallerID with this option and this option will be ignored.</p> <p>Important Note: When making outgoing calls, the following priority order rule will be used to determine which CallerID will be set before sending out the call:</p> <p>From user (Register Trunk Only) → CID from inbound call (Keep Original CID Enabled) → Trunk Username/CallerID (Keep Trunk CID Enabled) → DOD → Extension CallerID Number → Trunk Username/CallerID (Keep Trunk CID Disabled) → Global Outbound CID.</p>

Need Registration	Select whether the trunk needs to register on the external server or not when “Register SIP Trunk” type is selected. The default setting is No.
Username	Enter the username to register to the trunk from the provider when “Register SIP Trunk” type is selected.
Password	Enter the password to register to the trunk from the provider when “Register SIP Trunk” is selected.
Auth ID	Enter the Authentication ID for “Register SIP Trunk” type.
Auto Record	Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under Web GUI→CDR→Recording Files.
Direct Callback	<p>Allows external numbers the option to get directed to the extension that last called them.</p> <p>For Example: User 2002 has dialed external number 061234575 but they were not reachable, once they have received missed call notification on their phone, they would mostly call back the number, if the option “Direct Callback” is enabled then they will be directly bridged to user 2002 regardless of the configured inbound destination.</p>

Table 52: SIP Register Trunk Configuration Parameters

Basic Settings	
Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules etc.
Host Name	Configure the IP address or URL for the VoIP provider’s server of the trunk.
Transport	<p>Configure the SIP transport protocol to be used in this trunk. The default setting is “UDP”.</p> <ul style="list-style-type: none"> ◦ UDP ◦ TCP ◦ TLS
SIP URI Scheme When Using TLS	When TLS is selected as Transport for register trunk, users can select between SIP and SIPS URI scheme
Keep Original CID	Keep the CID from the inbound call when dialing out. This setting will override “Keep Trunk CID” option. Please ensure that the remote peer PBX supports matching user entry via the “username” field from authentication line.
Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension’s CID when the extension has CID configured. The default setting is “No”.

NAT	Turn on this option when the PBX is using public IP and communicating with devices behind NAT. If there is one-way audio issue, usually it is related to NAT configuration or SIP/RTP port configuration on the firewall.
Disable This Trunk	If selected, the trunk will be disabled. Note: If a current SIP trunk is disabled, UCM will send UNREGISTER message (REGISTER message with expires=0) to the SIP provider.
TEL URI	If the trunk has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.
Need Registration	Select whether the trunk needs to register on the external server or not when "Register SIP Trunk" type is selected. The default setting is No.
Allow outgoing calls if registration failure	If enabled, outbound calls can still be made even if registration to the trunk fails. Note: If Need Registration is disabled, this option will be ignored.
CallerID Name	Configure the new name of the caller when the extension has no CallerID Name configured.
From Domain	Configure the domain name of the SIP user account. This will overwrite the domain in the "From" header. Example: If the user account is "1234567", setting "trunk.UCM6510.provider.com" as the From Domain value will result in the following From header: "sip:1234567@trunk.UCM6510.provider.com".
From User	Configure the username of the account. This will overwrite the user value in the From header. This is useful for scenarios where a single user account has multiple DIDs. Example: If the domain is "trunk.UCM6510.provider.com", setting "1234567" as the From User value will result in the following From header: "sip:1234567@trunk.UCM6510.provider.com".
Username	Enter the username to register to the trunk from the provider when "Register SIP Trunk" type is selected.
Password	Enter the password to register to the trunk when "Register SIP Trunk" is selected.
Auth ID	Enter the Authentication ID for "Register SIP Trunk" type.
Auth Trunk	If enabled, the UCM will send 401 response to the incoming call to authenticate the trunk.
Auto Record	Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under Web GUI→CDR→Recording Files.
Direct Callback	Allows external numbers the option to get directed to the extension that last called them. For Example: User 2002 has dialed external number 061234575 but they were not reachable, once they have received missed call notification on their phone, they would mostly call back the number, if the option "Direct Callback" is enabled then they will be directly bridged to user 2002 regardless of the configured inbound destination.

Advanced Settings	
Codec Preference	Select audio and video codec for the VoIP trunk. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p, RTX, OPUS and VP8.
Send PPI Header	<p>If enabled, the SIP INVITE message sent to the trunk will contain PPI (P-Preferred-Identity) header. The default setting is “No”.</p> <p>Note: “Send PPI Header” and “Send PAI Header” cannot be enabled at the same time. Only one of the two headers can be contained in SIP INVITE message.</p>
PPI Mode	<ul style="list-style-type: none"> ○ Default – Include the trunk’s preferred CID (configured in <i>Basic Settings</i>) in the PPI Header. ○ Original CID – Include the original CID in the PPI Header. ○ DOD Number – Include the trunk’s DOD number in the PPI Header. If no DOD number has been set, the trunk’s preferred CID will be used.
Send PAI Header	<p>If enabled, the SIP INVITE message sent to the trunk will contain PAI (P-Asserted-Identity) header including configured PAI Header. The default setting is “No”.</p> <p>Note: “Send PPI Header” and “Send PAI Header” cannot be enabled at the same time. Only one of the two headers can be contained in the SIP INVITE message.</p>
PAI Header	<p>If “Send PAI Header” is enabled and “PAI Header” is configured as “123456” for instance, the PAI header in the SIP message sent from the UCM will contain “123456”. If “Send PAI Header” is enabled and “PAI Header” is configured as “empty”, the PAI header in the SIP message sent from the UCM will contain the original CID.</p> <p>Note: “Send PAI Header” needs to be enabled in order to use this feature.</p> <p>Only alphanumeric characters are allowed and/or special characters #*-_+. with a limit of 64 characters.</p>
DOD As From Name	If enabled and “From User” is configured, the INVITE’s From header will contain the DOD number.
Passthrough PAI Header	If checked and option “Send PAI Header” not checked, the PAI header will be passthrough from one side to the other side.
Outbound Proxy Support	Select to enable outbound proxy in this trunk. The default setting is “No”.
Outbound Proxy	When outbound proxy support is enabled, enter the IP address or URL of the outbound proxy.
Remove OBP from Route	It is used to set if the phone system will remove outbound proxy URI from the route header. If is set to “Yes”, it will remove the route header from SIP requests. The default setting is “No”.
DID Mode	Configure where to get the destination ID of an incoming SIP call, from SIP Request-line or To-header. The default is set to “Request-line”.

DTMF Mode	<p>Configure the default DTMF mode when sending DTMF on this trunk.</p> <ul style="list-style-type: none"> ◦ Default: The global setting of DTMF mode will be used. The global setting for DTMF Mode setting is under Web GUI→PBX Settings→SIP Settings→ToS. ◦ RFC4733: Send DTMF using RFC4733. ◦ Info: Send DTMF using SIP INFO message. ◦ Inband: Send DTMF using inband audio. This requires 64-bit codec, i.e., PCMU and PCMA. ◦ Auto: Send DTMF using RFC4733 if offered. Otherwise, inband will be used.
Enable Heartbeat Detection	<p>If enabled, the UCM6200 will regularly send SIP OPTIONS to the trunk to check connection status.</p> <p>The default setting is “No”.</p>
Heartbeat Frequency	<p>When “Enable Heartbeat Detection” option is set to “Yes”, configure the interval (in seconds) of the SIP OPTIONS message sent to the device to check if the device is still online. The default setting is 60 seconds.</p>
Maximum Number of Call Lines	<p>The maximum number of concurrent calls using the trunk. The default settings 0, which means no limit.</p>
Fax Mode	<p>Select Fax mode. The default setting is “None”.</p> <ul style="list-style-type: none"> ◦ None: Disable Fax. ◦ Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under Web GUI→Call Features→Fax/T.38.
SRTP	<p>Enable SRTP for the VoIP trunk. The default setting is “No”.</p>
CC Settings	
Enable CC	<p>If enabled, the system will automatically alert the user when a called party is available, given that a previous call to that party failed for some reason.</p>
CC Max Agents	<p>Configure the maximum number of CCSS agents which may be allocated for this channel. In other words, this number serves as the maximum number of CC requests this channel is allowed to make. The minimum value is 1.</p>
CC Max Monitors	<p>Configure the maximum number of monitor structures which may be created for this device. In other words, this number tells how many callers may request CC services for a specific device at one time. The minimum value is 1.</p>

Table 53: SIP Peer Trunk Configuration Parameters

Basic Settings

Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules and etc.
Host Name	Configure the IP address or URL for the VoIP provider's server of the trunk.
Auto Record	Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under Web GUI→ CDR → Recording Files .
Keep Original CID	Keep the CID from the inbound call when dialing out, this setting will override "Keep Trunk CID" option. Please ensure that the remote peer PBX supports matching user entry via the "username" field from authentication line.
Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".
NAT	Turn on this option when the PBX is using public IP and communicating with devices behind NAT. If there is one-way audio issue, usually it is related to NAT configuration or SIP/RTP port configuration on the firewall.
Disable This Trunk	<p>If selected, the trunk will be disabled.</p> <p>Note:</p> <p>If a current SIP trunk is disabled, UCM will send UNREGISTER message (REGISTER message with expires=0) to the SIP provider.</p>
TEL URI	If the trunk has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.
Caller ID	<p>Configure the Caller ID. This is the number that the trunk will try to use when making outbound calls. For some providers, it might not be possible to set the CallerID with this option and this option will be ignored.</p> <p>Important Note: When making outgoing calls, the following priority order rule will be used to determine which CallerID will be set before sending out the call :</p> <ul style="list-style-type: none"> ○ CID from inbound call (<i>Keep Original CID</i> Enabled) → Trunk Username/CallerID (<i>Keep Trunk CID</i> Enabled) → DOD → Extension CallerID Number → Trunk Username/CallerID (<i>Keep Trunk CID</i> Disabled) → Global Outbound CID.
CallerID Name	Configure the name of the caller to be displayed when the extension has no CallerID Name configured.
Transport	<p>Configure the SIP transport protocol to be used in this trunk. The default setting is "UDP".</p> <ul style="list-style-type: none"> ○ UDP ○ TCP ○ TLS

Direct Callback	<p>Allows external numbers the option to get directed to the extension that last called them.</p> <p>For Example: User 2002 has dialed external number 061234575 but they were not reachable, once they have received missed call notification on their phone, they would mostly call back the number, if the option “Direct Callback” is enabled then they will be directly bridged to user 2002 regardless of the configured inbound destination.</p>
Advanced Settings	
Codec Preference	<p>Select audio and video codec for the VoIP trunk. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p, RTX, OPUS and VP8.</p>
DID Mode	<p>Configure where to get the destination ID of an incoming SIP call, from SIP Request-line or To-header. The default is set to “Request-line”.</p>
DTMF Mode	<p>Configure the default DTMF mode when sending DTMF on this trunk.</p> <ul style="list-style-type: none"> ◦ Default: The global setting of DTMF mode will be used. The global setting for DTMF Mode setting is under Web GUI→PBX Settings→SIP Settings→ToS. ◦ RFC4733: Send DTMF using RFC4733. ◦ Info: Send DTMF using SIP INFO message. ◦ Inband: Send DTMF using inband audio. This requires 64-bit codec, i.e., PCMU and PCMA. ◦ Auto: Send DTMF using RFC4733 if offered. Otherwise, inband is used.
Enable Heartbeat Detection	<p>If enabled, the UCM6200 will regularly send SIP OPTIONS to the trunk to check connection status. The default setting is “No”.</p>
Heartbeat Frequency	<p>When “Enable Heartbeat Detection” option is set to “Yes”, configure the interval (in seconds) of the SIP OPTIONS message sent to the device to check if the device is still online. The default setting is 60 seconds.</p>
Maximum Number of Call Lines	<p>The maximum number of concurrent calls using the trunk. The default settings 0, which means no limit.</p>
Fax Mode	<p>Select Fax mode. The default setting is “None”.</p> <ul style="list-style-type: none"> ◦ None: Disable Fax. ◦ Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under Web GUI→Call Features→Fax/T.38.
SRTP	<p>Enable SRTP for the VoIP trunk.</p> <p>The default setting is “No”.</p>

IPVT Mode	If enabled, it will allow SDP passthrough to Grandstream IPVideoTalk therefore it will allow calls between the UCM and IPVideoTalk. The default setting is disabled.
Sync LDAP Enable	If enabled, the local UCM6200 will automatically provide and update the local LDAP contacts to the remote UCM6200 SIP peer trunk. In order to ensure successful synchronization, the remote UCM6200 peer also needs to enable this option on the SIP peer trunk. The default setting is “No”.
Sync LDAP Password	This is the password used for LDAP contact file encryption and decryption during the LDAP sync process. The password must be the same on both UCM6200 peers to ensure successful synchronization.
Sync LDAP Port	Configure the TCP port used LDAP sync feature between two peer UCM6200.
LDAP Outbound Rule	Specify an outbound rule for LDAP sync feature. The UCM6200 will automatically modify the remote contacts by adding prefix parsed from this rule.
LDAP Dialed Prefix	Specify the prefix for LDAP sync feature. The UCM6200 will automatically modify the remote contacts by adding this prefix.
Enable T.38 UDPTL	This option allows to toggle T.38 support for individual trunks. The default setting is enabled.
CC Settings	
Enable CC	If enabled, the system will automatically alert the user when a called party is available, given that a previous call to that party failed for some reason.
CC Max Agents	Configure the maximum number of CCSS agents which may be allocated for this channel. In other words, this number serves as the maximum number of CC requests this channel can make. The minimum value is 1.
CC Max Monitors	Configure the maximum number of monitor structures which may be created for this device. In other words, this number tells how many callers may request CC services for a specific device at one time. The minimum value is 1.

Table 54: Create New IAX Trunk

Type	Select the VoIP trunk type. <ul style="list-style-type: none"> ○ Peer IAX Trunk ○ Register IAX Trunk
Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules etc.

Host Name	Configure the IP address or URL for the VoIP provider's server of the trunk.
Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".
Username	Enter the username to register to the trunk from the provider when "Register IAX Trunk" type is selected.
Password	Enter the password to register to the trunk from the provider when "Register IAX Trunk" type is selected.
Disable This Trunk	If selected, the trunk will be disabled.

Table 55: IAX Register Trunk Configuration Parameters

Basic Settings	
Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules etc.
Host Name	Configure the IP address or URL for the VoIP provider's server of the trunk.
Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension's CID when the extension has CID configured. The default setting is "No".
Disable This Trunk	If selected, the trunk will be disabled.
Caller ID	Configure the Caller ID. This is the number that the trunk will try to use when making outbound calls. For some providers, it might not be possible to set the CallerID with this option and this option will be ignored. Important Note: When making outgoing calls, the following priority order rule will be used to determine which CallerID will be set before sending out the call : From user (Register Trunk Only) → CID from inbound call (<i>Keep Original CID</i> Enabled) → Trunk Username/CallerID (<i>Keep Trunk CID</i> Enabled) → DOD → Extension CallerID Number → Trunk Username/CallerID (<i>Keep Trunk CID</i> Disabled) → Global Outbound CID.
CallerID Name	Configure the name of the caller to be displayed when the extension has no CallerID Name configured.
Username	Enter the username to register to the trunk from the provider.
Password	Enter the password to register to the trunk from the provider.

Advanced Settings	
Codec Preference	Select audio and video codec for the VoIP trunk. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p and VP8.
Enable Heartbeat Detection	If enabled, the UCM6200 will regularly send SIP OPTIONS to the device to check if the device is still online. The default setting is “No”.
Heartbeat Frequency	When “Enable Heartbeat Detection” option is set to “Yes”, configure the interval (in seconds) of the SIP OPTIONS message sent to the device to check if the device is still online. The default setting is 60 seconds.
Maximum Number of Call Lines	The maximum number of concurrent calls using the trunk. The default settings 0, which means no limited.
Fax Mode	Select Fax mode. The default setting is “None”. <ul style="list-style-type: none"> o None: Disable Fax. o Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under Web GUI→Call Features→Fax/T.38.

Table 56: IAX Peer Trunk Configuration Parameters

Basic Settings	
Provider Name	Configure a unique label to identify this trunk when listed in outbound rules, inbound rules etc.
Host Name	Configure the IP address or URL for the VoIP provider’s server of the trunk.
Keep Trunk CID	If enabled, the trunk CID will not be overridden by extension’s CID when the extension has CID configured. The default setting is “No”.
Disable This Trunk	If selected, the trunk will be disabled.

Caller ID	<p>Configure the Caller ID. This is the number that the trunk will try to use when making outbound calls. For some providers, it might not be possible to set the CallerID with this option and this option will be ignored.</p> <p>Important Note: When making outgoing calls, the following priority order rule will be used to determine which CallerID will be set before sending out the call :</p> <p>CID from inbound call (<i>Keep Original CID</i> Enabled) → Trunk Username/CallerID (<i>Keep Trunk CID</i> Enabled) → DOD → Extension CallerID Number → Trunk Username/CallerID (<i>Keep Trunk CID</i> Disabled) → Global Outbound CID..</p>
CallerID Name	Configure the name of the caller to be displayed when the extension has no CallerID Name configured.
Advanced Settings	
Codec Preference	Select audio and video codec for the VoIP trunk. The available codecs are: PCMU, PCMA, GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p and VP8.
Enable Heartbeat Detection	If enabled, the UCM6200 will regularly send SIP OPTIONS to the device to check if the device is still online. The default setting is “No”.
Heartbeat Frequency	When “Enable Heartbeat Detection” option is set to “Yes”, configure the interval (in seconds) of the SIP OPTIONS message sent to the device to check if the device is still online. The default setting is 60 seconds.
Maximum Number of Call Lines	The maximum number of concurrent calls using the trunk. The default settings 0, which means no limited.
Fax Mode	<p>Select Fax mode. The default setting is “None”.</p> <ul style="list-style-type: none"> ◦ None: Disable Fax. ◦ Fax Detect: Fax signal from the user/trunk during the call can be detected and the received Fax will be sent to the Email address configured for this extension. If no Email address can be found for the user, the Fax will be sent to the default Email address configured in Fax setting page under Web GUI→Call Features→Fax/T.38.

Trunk Groups

Users can create VoIP Trunk Groups to register and easily apply the same settings on multiple accounts within the same SIP server. This can drastically reduce the amount of time needed to manage accounts for the same server and improve the overall cleanliness of the web UI.

Figure 102: Trunk Group

Once creating the new trunk group and configuring the SIP settings, users can add multiple accounts within the configured SIP server by pressing button and configuring the username, password and authentication ID fields.

Figure 103: Trunk Group Configuration

Direct Outward Dialing (DOD)

The UCM6200 provides Direct Outward Dialing (DOD) which is a service of a local phone company (or local exchange carrier) that allows subscribers within a company's PBX system to connect to outside lines directly.

Example of how DOD is used:

Company ABC has a SIP trunk. This SIP trunk has 4 DIDs associated to it. The main number of the office is routed to an auto attendant. The other three numbers are direct lines to specific users of the company. Now when a user makes an outbound call their caller ID shows up as the main office number. This poses a problem as the CEO would like their calls to come from their direct line. This can be accomplished by configuring DOD for the CEO's extension.

Steps to configure DOD on the UCM6200:

1. To setup DOD go to UCM6200 Web GUI→**Extension/Trunk**→**VoIP Trunks** page.
2. Click to access the DOD options for the selected SIP Trunk.
3. Click “Add DOD” to begin your DOD setup
4. For “DOD Number” enter one of the numbers (DIDs) from your SIP trunk provider. In the example above Company ABC received 4 DIDs from their provider. ABC will enter in the number for the CEO’s direct line. **Note:** DOD number cannot exceed 32 characters.
5. Set the DOD name and If extension number need to be appended to the DID number click on “Add Extension”.
Note: DOD name cannot exceed 32 characters.
6. Select an extension from the “Available Extensions” list. Users have the option of selecting more than one extension. In this case, Company ABC would select the CEO’s extension. After making the selection, click on the button to move the extension(s) to the “Selected Extensions” list.

Figure 104: DOD extension selection

1. Click “Save” at the bottom.

Once completed, the user will return to the **Edit DOD** page that shows all the extensions that are associated to a particular DOD.

Figure 105: Edit DOD

DOD can also be assigned to the UCM’s **Fax Sending** feature. To do this, select “VFAX” from the extension list when creating or editing a DOD number like shown below.

Figure 106: Fax Sending DOD

DOD Import/Export

UCM62xx now supports to import/export DOD CSV file for an easy configuration.

- To Import DOD CSV file, click on “**Import**”.

Note: the file must contain and respect the following columns: DOD Number, DOD Name, Add extension, Local Member, LDAP Members.

A	B	C	D	E
DOD Number	DOD Name	Add Extensior	Local Member	Ldap Members
123456789	test	no	1000	

Figure 107: DOD Import

- To export the DOD file, users can click on “**Export**”.

SLA Station

The UCM6200 supports SLA that allows mapping the key with LED on a multi-line phone to different external lines. When there is an incoming call and the phone starts to ring, the LED on the key will flash in red and the call can be picked up by pressing this key. This allows users to know if the line is occupied or not. The SLA function on the UCM6200 is like BLF but SLA is used to monitor external line i.e., analog trunk on the UCM6200. Users could configure the phone with BLF mode on the MPK to monitor the analog trunk status or press the line key pick up call from the analog trunk on the UCM6200.

Create/Edit SLA Station



SLA Station can be configured on Web GUI→**Extension/Trunk**→**SLA Station**.

Station Name	Station	Associated SLA Trunks	Options
FX01	1000	Telco1	

Figure 108: SLA Station

- Click on to add an SLA Station.
- Click on to edit the SLA Station. The following table shows the SLA Station configuration parameters.
- Click on to delete the SLA Station.

Table 57: SLA Station Configuration Parameters

Station Name	Configure a name to identify the SLA Station.
Station	Specify a SIP extension as a station that will be using SLA.
Available SLA Trunks	Existing Analog Trunks with SLA Mode enabled will be listed here.
Selected SLA Trunks	Select a trunk for this SLA from the Available SLA Trunks list. Click on   to arrange the order. If there are multiple trunks selected, when there are calls on those trunks at the same time, pressing the LINE key on the phone will pick up the call on the first trunk here.
SLA Station Options	
Ring Timeout	Configure the time (in seconds) to ring the station before the call is considered unanswered. No timeout is set by default. If set to 0, there will be no timeout.
Ring Delay	Configure the time (in seconds) for delay before ringing the station when a call first coming in on the shared line. No delay is set by default. If set to 0, there will be no delay.
Hold Access	This option defines the competence of the hold action for one particular trunk. If set to “open”, any station could hold a call on that trunk or resume one held session; if set to “private”, only the station that places the trunk call on hold could resume the session. The default setting is “open”.

Sample Configuration

1. On the UCM6200, go to Web GUI→**Extension/Trunk**→**Analog Trunks** page. Create analog trunk or edit the existing analog trunk. Make sure “SLA Mode” is enabled for the analog trunk. Once enabled, this analog trunk will be only available for the SLA stations created under Web GUI→**Extension/Trunk**→**SLA Station** page.



Figure 109: Enable SLA Mode for Analog Trunk

1. Click on “Save”. The analog trunk will be listed with trunk mode “SLA”.

Analog Trunks				
Analog Trunks		Call Progress Tone File List		
+ Create New Analog Trunk				
Trunks	Disable	Trunk Mode	Analog Ports	Options
Telco1	no	sla	1	 

Figure 110: Analog Trunk with SLA Mode Enabled

1. On the UCM6200, go to Web GUI→Extension/Trunk→SLA Station page, click on “Add”. Please refer to section [Create/Edit SLA Station] for the configuration parameters. Users can create one or more SLA stations to monitor the analog trunk. The following figure shows two stations, 1002 and 1005, are configured to be associated with SLA trunk “fxo1”.


<input type="checkbox"/>	Station Name	Station	Associated SLA Trunks	Options
<input type="checkbox"/>	SLA1	1005	Telco1	 

Figure 111: SLA Example – SLA Station

1. On the SIP phone 1, configure to register UCM6200 extension 1002. Configure the MPK as BLF mode and the value must be set to “extension_trunkname”, which is 1002_fxo1 in this case.
2. On the SIP phone 2, configure to register UCM6200 extension 1005. Configure the MPK as BLF mode and value must be set to “extension_trunkname”, which is 1005_fxo1 in this case.

	Mode	Account	Description	Value
MPK 1	Busy Lamp Field (BLF)	Account 2	1005_fxo1	1005_fxo1

Figure 112: SLA Example – MPK Configuration

Now the SLA station is ready to use. The following functions can be achieved by this configuration.

- **Making an outbound call from the station/extension, using LINE key**

When the extension is in idle state, pressing the line key for this extension on the phone to off hook. Then dial the station’s extension number, for example, dial 1002 on phone 1 (or dial 1005 on phone 2), to hear the dial tone. Then the users could dial external number for the outbound call.

- **Making an outbound call from the station/extension, using BLF key**

When the extension is in idle state, pressing the MPK and users could dial external numbers directly.

- **Answering call using LINE key**

When the station is ringing, pressing the LINE key to answer the incoming call.

- **Barging-in active call using BLF key**

When there is an active call between an SLA station and an external number using the SLA trunk, other SLA stations monitoring the same trunk could join the call by pressing the BLF key if “Barge Allowed” is enabled for the analog trunk.

- **Hold/UnHold using BLF key**

If the external line is previously put on hold by an SLA station, another station that monitors the same SLA trunk could UnHold the call by pressing the BLF key if “Hold Access” is set to “open” on the analog trunk and the SLA station.

Call Routes

Outbound Routes

In the following sections, we will discuss the steps and parameters used to configure and manage outbound rules in UCM6200, these rules are the regulating points for all external outgoing calls initiated by the UCM through all types of trunks: SIP, Analog and Digital.





Configuring Outbound Routes

In the UCM6200, an outgoing calling rule pairs an extension pattern with a trunk used to dial the pattern. This allows different patterns to be dialed through different trunks (e.g., “Local” 7-digit dials through an FXO while “Long distance” 10-digit dials through a low-cost SIP trunk). Users can also set up a failover trunk to be used when the primary trunk fails.

Info

UCM6200 currently supports up to 500 Outbound routes.

Go to Web GUI→**Extension/Trunk**→**Outbound Routes** to add and edit outbound rules.

- Click on  to add a new outbound route.
- Click on  to edit the outbound route.
- Click on  to add a DOD to the outbound route
- Click on  to delete the outbound route.

On the UCM6200, the outbound route priority is based on “Best matching pattern”. For example, the UCM6200 has outbound route A with pattern 1xxx and outbound route B with pattern 10xx configured. When dialing 1000 for outbound call, outbound route B will always be used first. This is because pattern 10xx is a better match than pattern 1xxx. Only when there are multiple outbound routes with the same pattern configured.

Table 58: Outbound Route Configuration Parameters

Calling Rule Name	Configure the name of the calling rule (e.g., local, long_distance, and etc.). Letters, digits, _ and – are allowed.
--------------------------	--

Pattern	<ul style="list-style-type: none"> ◦ All patterns are prefixed with the “_”. ◦ Special characters: <p>X: Any Digit from 0-9.</p> <p>Z: Any Digit from 1-9.</p> <p>N: Any Digit from 2-9.</p> <p>“.”: Wildcard. Match one or more characters.</p> <p>“!”: Wildcard. Match zero or more characters immediately.</p> <p>Example: [12345-9] – Any digit from 1 to 9.</p> <p>Notes:</p> <ul style="list-style-type: none"> ◦ Multiple patterns can be used. Each pattern should be entered in new line. ◦ Users can add comments to the end of patterns to better organize and keep track of complex rules by typing “/*” and “*/” before and after each comment, respectively. ◦ Example: <p>_X.</p> <p>_NNXXNXXXXXX /* 10-digit long distance */</p> <p>_818X. /* Any number with leading 818 */</p>
Disable This Route	<p>After creating the outbound route, users can choose to enable and disable it. If the route is disabled, it will not take effect anymore. However, the route settings will remain in UCM. Users can enable it again when it is needed.</p>
Password	<p>Configure the password for users to use this rule when making outbound calls.</p>
Call Duration Limit	<p>Once call duration limit is enabled, it will set the maximum duration of call-blocking.</p>
Maximum Call Duration	<p>User can customize the maximum call duration (in seconds) that is allowed for the outbound call. By default, this value is set to 0 means there is no limit for the call duration.</p>
Warning Time	<p>This option will give caller warning when call duration is approaching to its limit. If the warning time is set to ‘y’, the warning tone will be played to caller when y seconds is left to end the call by UCM.</p>
Warning Repeat Interval	<p>Once this option is set to ‘z’, it will repeatedly be warning caller every z seconds after the first warning.</p>
PIN Groups	<p>If selected, the Password, Privilege Level and Enable Filter on Source Caller ID will not take effect.</p> <p>For more details, refer to [PIN Groups] section.</p>

PIN Groups with Privilege Level	If enabled and PIN Groups are used, Privilege Levels and Filter on Source Caller ID will also be applied.
Password	Configure the password for users to use this rule when making outbound calls.
Privilege Level	<p>Select privilege level for the outbound rule.</p> <ul style="list-style-type: none">◦ Internal: <p>The lowest level required. All users can use this rule.</p> <ul style="list-style-type: none">◦ Local: <p>Users with Local, National, or International level are allowed to use this rule.</p> <ul style="list-style-type: none">◦ National: <p>Users with National or International level are allowed to use this rule.</p> <ul style="list-style-type: none">◦ International: <p>The highest level required. Only users with international level can use this rule.</p> <p>The default setting is “Disable”. Please be aware of the potential security risks when using “Internal” level, which means all users can use this outbound rule to dial out from the trunk.</p>

<p>Enable Filter on Source Caller ID</p>	<p>When enabled, users could specify extensions allowed to use this outbound route. “Privilege Level” is automatically disabled if using “Enable Filter on Source Caller ID”.</p> <p>The following two methods can be used at the same time to define the extensions as the source caller ID.</p> <ol style="list-style-type: none"> 1. Select available extensions/extension groups from the left to the right. This allows users to specify arbitrary single extensions available in the PBX. 2. Custom Dynamic Route: define the pattern for the source caller ID. This allows users to define extension range instead of selecting them one by one. <ul style="list-style-type: none"> o All patterns are prefixed with the “_”. o Special characters: <p>X: Any Digit from 0-9.</p> <p>Z: Any Digit from 1-9.</p> <p>N: Any Digit from 2-9.</p> <p>“.”: Wildcard. Match one or more characters.</p> <p>“!”: Wildcard. Match zero or more characters immediately.</p> <p>Example: [12345-9] – Any digit from 1 to 9.</p> <p>Note: Multiple patterns can be used. Patterns should be separated by comma “,”. Example: _X. , _NNXXNXXXXX , _818X.</p>
<p>Outbound Route CID</p>	<p>Attempt to use the configured outbound route CID. This CID will not be used if DOD is configured. It is formatted as “name<number>” or “<number>” or “number”.</p>
<p>Send This Call Through Trunk</p>	
<p>Use Trunk</p>	<p>Select the trunk for this outbound rule.</p>
<p>Strip</p>	<p>Allows the user to specify the number of digits that will be stripped from the beginning of the dialed string before the call is placed via the selected trunk.</p> <p>Example:</p> <p>The users will dial 9 as the first digit of a long-distance calls. However, 9 should not be sent out via analog lines and the PSTN line. In this case, 1 digit should be stripped before the call is placed.</p>
<p>Prepend</p>	<p>Specify the digits to be prepended before the call is placed via the trunk. Those digits will be prepended after the dialing number is stripped.</p>
<p>Use Failover Trunk</p>	

Failover Trunk	<p>Failover trunks can be used to ensure calls can still be made in the scenario that the main trunk is congested or down.</p> <p>UCM6200 support up to 10 failover trunks.</p> <p>Example: The user's primary trunk is a VoIP trunk and the user would like to use the PSTN when the VoIP trunk is not available. The PSTN trunk can be configured as the failover trunk of the VoIP trunk.</p>
Strip	<p>Allows the user to specify the number of digits that will be stripped from the beginning of the dialed string before the call is placed via the selected trunk.</p> <p>Example:</p> <p>The users will dial 9 as the first digit of a long-distance calls. However, 9 should not be sent out via analog lines and the PSTN line. In this case, 1 digit should be stripped before the call is placed.</p>
Prepend	<p>Specify the digits to be prepended before the call is placed via the trunk. Those digits will be prepended after the dialing number is stripped.</p>
Time Condition	
Time Condition	<p>Outbound routes can be configured to use different trunks based on time conditions such as holidays, office times, specific times, etc.</p>

Outbound Blacklist

The UCM6200 allows users to configure blacklist for outbound routes. If the dialing number matches the blacklist numbers or patterns, the outbound call will not be allowed. The outbound blacklist can be configured under UCM Web GUI → **Extension/Trunk** → **Outbound Routes**: Outbound Blacklist.

Users can configure numbers, patterns or select country code to add in the blacklist. Please note that the blacklist settings apply to all outbound routes.

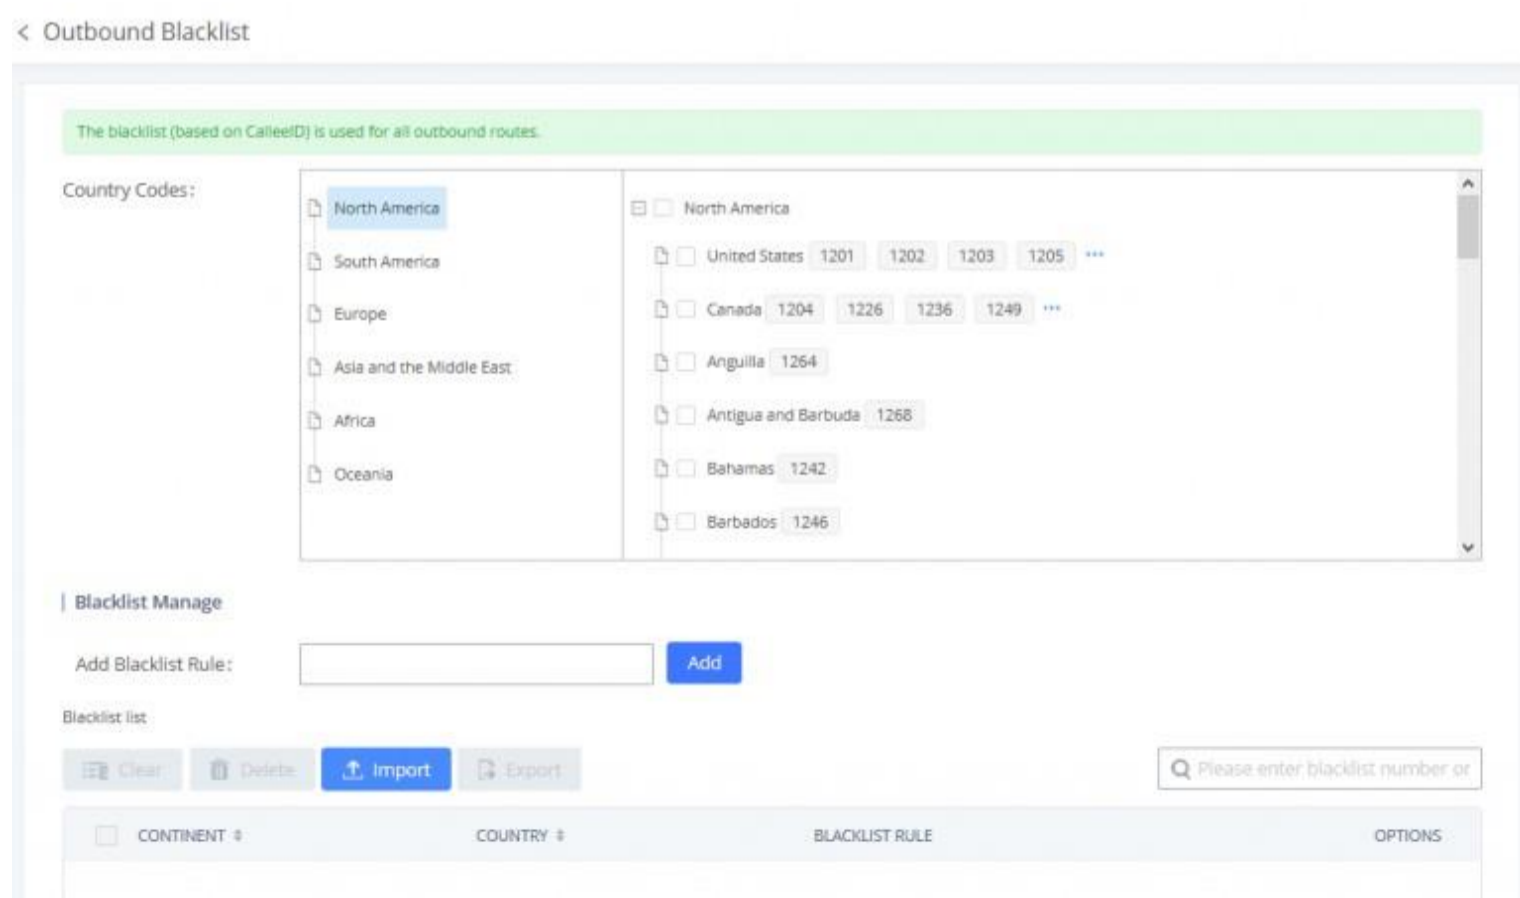


Figure 113: Country Codes

Blacklist Manage

Add Blacklist Rule	<p>Allows to define a rule based on number(s) or pattern(s) as blacklist entry. Pattern rules:</p> <p>N : Any digit from 2-9</p> <p>X : Any digit from 0-9</p> <p>Z : Any digit from 1-9</p> <p>. : Wildcard, matching one or more characters</p> <p>! : Wildcard, matching zero or more characters immediately</p> <p>- : Hyphens are used mainly to improve readability and are not involved in pattern matching.</p>
---------------------------	---

Note: Users can export outbound route blacklists and delete all blacklist entries. Additionally, users can also import blacklists for outbound routes.

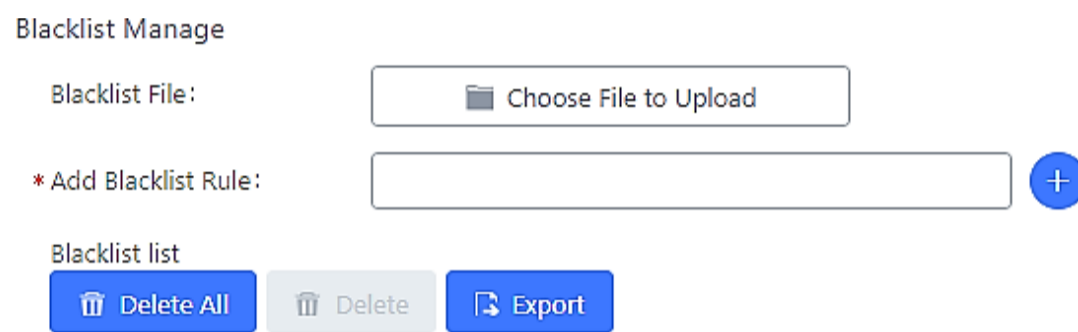


Figure 114: Blacklist Import/Export

PIN Groups

The UCM6200 supports pin group. Once this feature is configured, users can apply pin group to specific outbound routes. When placing a call on pin protected outbound routes, caller will be asked to input the group pin number, this feature can be found on the webGUI→**Extension/Trunk**→**Outbound Routes**→**PIN Groups**.

Name	Specify the name of the group
Record In CDR	Specify Whether or not to display the used PIN group and name in a call's CDR entry.
PIN Number	Specify the PIN that will be required to dial out.
PIN Name	Specify the name of the PIN

Table 59: Outbound Routes/PIN Group

Once user click on [PIN Groups](#) the following figure shows to configure the new PIN.

Create New PIN Group Save

* Name:

Record in CDR:

Members

* PIN Number:

* PIN Name:

PIN Number: 2020 PIN Name: John ✎ 🗑

Figure 115: Create New PIN Group

The following screenshot shows an example of created PIN Groups and members:

PIN Groups

Name	Record in CDR	Options
GSEMEA	yes	✎ 🗑

PIN Number	PIN Name
2020	John
2025	Emily
3009	Jane

Figure 116: PIN Members

Edit Outbound Rule: National Save

* Calling Rule Name:

Disable This Route:

Password:

* Pattern:

PIN Groups:

Privilege Level:

Figure 117: Outbound PIN

If PIN group CDR is enabled, the call with PIN group information will be displayed as part of CDR under Account Code field.

CDR

Status	Call from	Call to	Action Type	Start Time	Talk Time	Account Code
	1002	7946541 [Trunk: BranchOffice]	DIAL	2017-05-05 04:59:51	0:00:08	Emily/GSEMEA
	1002	7654654 [Trunk: BranchOffice]	DIAL	2017-05-05 04:59:12	0:00:06	Jane/GSEMEA
	1002	7564654 [Trunk: BranchOffice]	DIAL	2017-05-05 04:58:38	0:00:06	John/GSEMEA

Figure 118: CDR Record

o **Importing PIN Groups from CSV files:**

User can also import PIN Groups by uploading CSV files for each group. To do this:

1. Navigate to **Extension/Trunk**→**Outbound Routes**→**PIN Groups** and click on the “Choose file to upload” button.

Figure 119: Importing PIN Groups from CSV files

1. Select the CSV file to upload. Incorrect file formats and improperly formatted CSV files will result in error messages such as the one below:

Figure 120: Incorrect CSV File

1. To ensure a successful import, please follow the format in the sample image below


Figure 121: CSV File Format

- The top-left value (A1) is the PIN Group name. In this case, it is “ALPHA”.
- Row 2 contains the labels for the modifiable fields: pin and pin_name. These values should not be changed and will cause an upload error otherwise.

- Rows 3+ contain the user-defined values with Column A holding the PINs and Column B holding the PIN names. PIN values must consist of at least four digits.
- Once the file is successfully uploaded, the entry will be added to the list of PIN Groups.

Figure 122: CSV File Successful Upload




- **Exporting PIN Groups from CSV files:**

Press  button under “Options” to download/export PIN Group settings.

Inbound Routes

Inbound routes can be configured via Web GUI→**Extension/Trunk**→**Inbound Routes**.

Note: UCM6200 currently supports up to 5000 Inbound route.

- Click on  to add a new inbound route.
- Click on “Blacklist” to configure blacklist for all inbound routes.
- Click on  to edit the inbound route.
- Click on  to delete the inbound route.

Inbound Rule Configurations

Trunks	Select the trunk to configure the inbound rule.
Pattern	<p>– All patterns are prefixed with the “_”.</p> <p>– Special characters:</p> <ul style="list-style-type: none"> ● X: Any Digit from 0-9. ● Z: Any Digit from 1-9. ● N: Any Digit from 2-9. ● “.”: Wildcard. Match one or more characters. ● “!”: Wildcard. Match zero or more characters immediately. <p>Example: [12345-9] - Any digit from 1 to 9.</p> <p>– There are two pattern fields: Pattern and CallerID:</p> <ul style="list-style-type: none"> ■ Pattern: Specifies the pattern that the dialed number must satisfy to use the inbound route. Example: if the pattern is “_2xxx”, the dialed number must be a four-digit number that starts with 2 in order for this route to be used. ■ CallerID Pattern: Specifies the CallerID pattern that callers must satisfy to use the inbound route. Example: if the CallerID pattern is “_1234”, only callers with a CID of 1234 can use this route. <p>Notes:</p> <ul style="list-style-type: none"> ● Multiple patterns can be used. Each pattern should be entered in new line.

	<ul style="list-style-type: none"> • Users can add comments to the end of patterns to better organize and keep track of complex rules by typing “/*” and “*/” before and after each comment respectively. <p>Example:</p> <table> <tr> <td>Pattern:</td> <td>CallerID Pattern:</td> </tr> <tr> <td>_X.</td> <td>1000</td> </tr> <tr> <td>_NXXNXXXXX /* 10-digit long distance */</td> <td>1001</td> </tr> <tr> <td>_818X. /* Any number with leading 818 */</td> <td></td> </tr> </table>	Pattern:	CallerID Pattern:	_X.	1000	_NXXNXXXXX /* 10-digit long distance */	1001	_818X. /* Any number with leading 818 */	
Pattern:	CallerID Pattern:								
_X.	1000								
_NXXNXXXXX /* 10-digit long distance */	1001								
_818X. /* Any number with leading 818 */									
Disable This Route	<p>After creating the inbound route, users can choose to enable and disable it. If the route is disabled, it will not take effect anymore. However, the route settings will remain in UCM. Users can enable it again when it is needed.</p>								
Allowed to seamless transfer	<p>Allows the selected extension to use this function. If an extension is busy, and a mobile phone is bound to that extension, the mobile phone can pick up calls to that extension.</p>								
Alert-Info	<p>Configure the Alert-Info, when UCM6200 receives an INVITE request, the Alert-Info header field specifies an alternative ring tone to the UAS.</p>								
Special Ringing Tone	<p>This option will allow users to choose the custom ring back tone to play when caller reaches the route.</p>								
Fax Detection	<p>If enabled, fax signals from the trunk during a call will be detected.</p>								
Fax Destination	<p>Configures the destination of faxes.</p> <ul style="list-style-type: none"> • Extension: Send the fax to the designated FXS/SIP extension (fax machine) or a FAX extension. • Fax to Email: Send the fax as an email attachment to the designated extension's email address. If the selected extension does not have an associated email address, it will be sent to the default email address configured in the Call Features →Fax/T.38 → Fax Settings page. <p>Note: Please make sure the sending email address is correctly configured in System Settings→Email Settings.</p>								
Prepend Trunk Name	<p>If enabled, the trunk name will be added to the caller id name as the displayed caller id name.</p>								
Block Collect Calls	<p>If enabled, collect calls will be blocked.</p> <p>Note 1: Collect calls are indicated by the header “P-Asserted-Service-Info: service-code=Backward Collect Call, P-Asserted-Service-Info: service-code=Collect Call”.</p> <p>Note 2: There is also a global setting for this option in the SIP Settings -> General Settings page.</p>								
Set Caller ID Info	<p>Manipulates Caller ID (CID) name and/or number within the call flow to help identify who is calling. When enabled two field will show allowing to manipulate the CallerID Number and the Caller ID Name.</p>								
CallerID Number	<p>Configures the pattern-matching format to manipulate the numbers of incoming callers or to set a fixed CallerID number for calls that go through this inbound route.</p>								

	<ul style="list-style-type: none"> • `\${CALLERID(num)}`: Default value which indicates the number of an incoming caller (CID). The CID will not be modified. • `\${CALLERID(num):n}`: Skips the first n characters of a CID number, where n is a number. • `\${CALLERID(num):-n}`: Takes the last n characters of a CID number, where n is a number. • `\${CALLERID(num):s:n}`: Takes n characters of a CID number starting from s+1, where n is a number and s is a character position (e.g. `\${CALLERID(num):2:7}` takes 7 characters after the second character of a CID number). • n`\${CALLERID(num)}`: Prepends n to a CID number, where n is a number.
CallerID Name	<p>Default string is `\${CALLERID(name)}` which means the name of an incoming caller, it is a pattern-matching syntax format.</p> <p>A`\${CALLERID(name)}`B means Prepend a character 'A' and suffix a character 'B' to `\${CALLERID(name)}`.</p> <p>Not using pattern-matching syntax means setting fix name to incoming caller.</p>
Enable Route-Level Inbound	<p>Gives uses the ability to configure inbound mode per individual route. When enabled two fields will show allowing to set the Inbound mode and the Inbound mode Suffix.</p> <p>Note: Global inbound mode must be enabled before users can configure route-level inbound mode</p>
Inbound Mode	<p>Choose the inbound mode for this route.</p> <p>Note: Toggling the global inbound mode will not affect routes that have Route-level Inbound Mode enabled. If all routes have the option enabled, toggling the global inbound mode via BLF will trigger a voice prompt indicating that none of the routes will be affected by the global inbound mode change.</p>
Inbound Mode Suffix	<p>Dial "Global Inbound Mode feature code + Inbound Mode Suffix" or a route's assigned suffix to toggle the route's inbound mode. The BLF subscribed to the inbound mode suffix can monitor the current inbound mode.</p>
Inbound Multiple Mode	<p>Multiple mode allows user to switch between destinations of the inbound rule by feature codes. Configure related feature codes as described in [Inbound Route: Multiple Mode]. If this option is enabled, user can use feature code to switch between different modes/destinations.</p>
Dial Trunk	<p>This option shows up only when "By DID" is selected. If enabled, the external users dialing in to the trunk via this inbound route can dial outbound call using the UCM6200's trunk.</p>
Privilege Level	<p>This option shows up only when "By DID" is selected.</p> <ul style="list-style-type: none"> • Disable: Only the selected Extensions or Extension Groups are allowed to use this rule, when enabled Filter on Source Caller ID. • Internal: The lowest level required. All users are allowed to use this rule, check this level might be risky for security purpose. • Local: User with Local level, National or International level are allowed to use this rule. • National: Users with National or International Level are allowed to use this rule. • International: The highest level required. Only users with international level are allowed to use this rule.
Allowed DID Destination	<p>This option shows up only when "By DID" is selected. This controls the destination that can be reached by the external caller via the inbound route. The DID destination are:</p> <ul style="list-style-type: none"> • Extension • Conference • Call Queue • Ring Group

	<ul style="list-style-type: none"> ● Paging/Intercom Groups ● IVR ● Voicemail Groups ● Fax Extension ● Dial By Name ● All
Default Destination	<p>Select the default destination for the inbound call.</p> <ul style="list-style-type: none"> ● Extension ● Voicemail ● Conference Room ● Call Queue ● Ring Group ● Paging/Intercom ● Voicemail Group ● Fax ● DISA ● IVR ● External Number ● By DID <p>When “By DID” is used, the UCM6200 will look for the destination based on the number dialed, which could be local extensions, conference, call queue, ring group, paging/intercom group, IVR, voicemail groups and Fax extension as configured in “DID destination”. If the dialed number matches the DID pattern, the call will be allowed to go through.</p> <ul style="list-style-type: none"> ● Dial By Name ● Callback ● Announcement
Strip	Specify the number of digits to strip from the beginning of the DID. This is used when “By DID” is selected in “Default Destination”.
Prepend	Specify the digits to be prepended before the call is placed via the trunk. Those digits will be prepended after the dialing number is stripped.
Time Condition	
Start Time	Select the start time “hour:minute” for the trunk to use the inbound rule.
End Time	Select the end time “hour:minute” for the trunk to use the inbound rule.
Frequency	<p>Select either “By Week” or “By Month” for the time condition.</p> <p>If “By Week” is selected, select the weekdays that the time condition will be used.</p> <p>If “By Month” is selected, select the months that the time condition will be used. Next, select either “Week” or “Day”.</p> <p>(1) If “Week” is selected, choose the weekdays of the month that the time condition will be used.</p>

	(2) If “Day” is selected, choose the specific days of the month that the time condition will be used.
Destination	<p>Select the destination for the inbound call under the defined time condition.</p> <ul style="list-style-type: none"> ● Extension ● Voicemail ● Conference Room ● Call Queue ● Ring Group ● Paging/Intercom ● Voicemail Group ● Fax ● DISA ● IVR ● External Number ● By DID <p>When “By DID” is used, the UCM6200 will look for the destination based on the number dialed, which could be local extensions, conference, call queue, ring group, paging/intercom group, IVR, voicemail groups and Fax extension as configured in “DID destination”. If the dialed number matches the DID pattern, the call will be allowed to go through.</p> <p>Configure the number of digits to be stripped in “Strip” option.</p> <ul style="list-style-type: none"> ● Dial By Name ● External Number ● Callback ● Announcement

Table 60: Inbound Rule Configuration Parameters

Inbound Route: Prepend Example

UCM6200 now allows user to prepend digits to an inbound DID pattern, with strip taking precedence over prepend. With the ability to prepend digits in inbound route DID pattern, user no longer needs to create multiple routes for the same trunk to route calls to different extensions. The following example demonstrates the process:

1. If Trunk provides a DID pattern of 18005251163.
2. If **Strip** is set to 8, UCM6200 will strip the first 8 digits.
3. If **Prepend** is set to 2, UCM6200 will then prepend a 2 to the stripped number, now the number become 2163.
4. UCM6200 will now forward the incoming call to extension 2163.

Edit Inbound Rule [Cancel] [Save]

* Pattern:

CallerID Pattern:

Disable This Route:

Alert-info:

Fax Detection:

Block Collect Calls:

Set CallerID Info:

Dial Trunk:

Inbound Multiple Mode:

Allowed to seamless transfer:

special ringing tone:

Prepend Trunk Name:

Enable Route-Level:

Inbound Mode:

Default Mode | Mode 1

* Default Destination:

Strip:

Prepend:

Figure 123: Inbound Route feature: Prepend

Inbound Route: Multiple Mode

In the UCM6200, the user can configure inbound route to enable multiple mode to switch between different destinations. The inbound multiple mode can be enabled under Inbound Route settings.

Edit Inbound Rule [Cancel] [Save]

* Pattern:

CallerID Pattern:

Disable This Route:

Alert-info:

Fax Detection:

Block Collect Calls:

Set CallerID Info:

Dial Trunk:

Inbound Multiple Mode:

Allowed to seamless transfer:

special ringing tone:

Prepend Trunk Name:

Enable Route-Level:

Inbound Mode:

Default Mode | **Mode 1**

* Default Destination:

Figure 124: Inbound Route – Multiple Mode

When Multiple Mode is enabled for the inbound route, the user can configure a “Default Destination” and a “Mode 1” destination for all routes. By default, the call coming into the inbound routes will be routed to the default destination.

SIP end devices that have registered on the UCM6200 can dial feature code *62 to switch to inbound route “Mode 1” and dial feature code *61 to switch back to “Default Destination”. Switching between different mode can be easily done without Web GUI login.

For example, the customer service hotline destination has to be set to a different IVR after 7PM. The user can dial *62 to switch to “Mode 1” with that IVR set as the destination before off work.

To customize feature codes for “Default Mode” and “Mode 1”, click on [Set Global Inbound Mode](#) under “Inbound Routes” page, check “Enable Inbound Multiple Mode” option and change “Inbound Default Mode” and “Inbound Mode 1” values (By default, *61 and *62 respectively).

Set Global Inbound Mode

Caution: Disabling Inbound Multiple Mode will switch the inbound mode to default mode.

Enable Inbound Multiple

Mode:

Inbound Mode: Default Mode

* Inbound Default Mode: *61

* Mode 1: *62

[Add Mode](#) +

BLF Subscription Number:

Figure 125: Inbound Route – Multiple Mode Feature Codes

Inbound Route: Route-Level Mode

In the UCM6200, users can enable Route-Level Inbound Mode to switch between different destinations for each individual inbound route. The inbound Route-Level mode can be enabled under Inbound Route settings.

Edit Inbound Rule

Cancel Save

* Pattern: _18005251163

Disable This Route:

Alert-info: None

Fax Detection:

Block Collect Calls:

Set CallerID Info:

Inbound Mode: Default Mode

Inbound Multiple Mode:

CallerID Pattern:

Allowed to seamless transfer:

special ringing tone: None

Prepend Trunk Name:

Enable Route-Level Inbound Mode:

Mode:

* Inbound Mode Suffix: 5000

* Default Destination: Extension 400

Figure 126: Inbound Route – Route-Level Mode

Global inbound mode must be enabled before configuring Route-Level Inbound Mode. Additionally, the Mode 1 must be configured as well.

When Route-Level Inbound Mode is enabled, the user can configure a “Default Destination” and a “Mode 1” destination for each specific route. By default, the call coming into this specific inbound route will be routed to the default destination.

Users can toggle the route’s inbound mode by dialing “Global Inbound Mode feature code + Inbound Mode Suffix” and the current inbound route can be monitored by subscribing a BLF to the Inbound Mode Suffix.

For example, Inbound Default Mode feature code is set to *61 and the Inbound Mode suffix for route 1 is set to 1010. To switch the mode of route 1 to Default Mode, users can dial *611010.

Note: Toggling the global inbound mode will not affect routes that have *Route-level Inbound Mode* enabled. If all routes have the option enabled, toggling the global inbound mode via BLF will trigger a voice prompt indicating that none of the routes will be affected by the global inbound mode change.

Inbound Route: Inbound Mode BLF Monitoring

Users can assign MPKs and VPKs to monitor and toggle the current global inbound mode of the UCM.

To do this, please refer to the following steps:

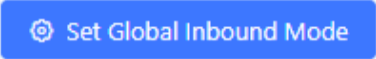
1. Access the UCM web GUI and navigate to Extension/Trunk→Inbound Routes.
2. Click on the  button and enable Inbound Multiple Mode.
3. Edit the subscribe number field to the desired BLF value.

Figure 127: Global Inbound Mode

1. Configure the BLF value on a phone's MPK/VPK. As an example, a GXP2140 with the BLF configured will show the Inbound Mode status on its screen once configured. The 777 BLF is lit green, indicating that the current inbound mode is "Default Mode".

Figure 128: Inbound Mode – Default Mode

1. Pressing the key will toggle the inbound mode to "Mode 1", and the button's color will change to red.

Figure 129: Inbound Mode – Mode 1

Inbound Route: Import/Export Inbound Route

Users can now import and export inbound routes to quickly set up inbound routing on a UCM or to back up an existing configuration. An exported inbound route configuration can be directly imported without needing any manual modifications.

Figure 130: Import/Export Inbound Route

The imported file should be on CSV format and using UTF-8 encoding, the imported file should contain below columns, and each column should be separated by a comma (It is recommended to use Notepad++ for the imported file creation):

- Disable This Route: Yes/No.
- Pattern: Always prefixed with _
- CallerID Pattern: Always prefixed with _
- Prepend Trunk Name: Yes/No.
- Prepend User Defined Name Enable: Yes/No.
- Prepend User Defined Name: A string.
- Alert-info: None, Ring 1, Ring 2... User should enter an Alert-info string following the values we have in the Inbound route Alert-Info list.
- Allowed to seamless transfer: [Extension_number]
- Fax Detection: No, Yes.
- Fax Type: Extension, Fax to Email.
- Fax Destination: [Extension_number] or [Email address]
- Inbound Multiple Mode: Yes/No.
- Default Destination: By DID, Extension, Voicemail... User should enter a Default Destination string following the values we have in the Inbound route Default Destination list.
- Destination: An Extension number, Ring Group Extension...
- Default Time Condition.
- Mode 1: By DID, Extension, Voicemail... User should enter a Default Destination string following the values we have in the mode 1 Default Destination list.
- Mode 1 Destination: An Extension number, Ring Group Extension...
- Mode 1 Time Condition.

FAX Detection

The UCM can automatically detect fax signaling from FXO ports and forward these calls to specified destinations.

FAX with Two Media

Since UCM's system is now based on Asterisk 13, fax re-invites that negotiate with multiple codecs are now supported. If a re-invite contains both T.38 and PCMU/PCMA codecs, T.38 will be prioritized.

Blacklist Configurations

In the UCM6200, Blacklist is supported for all inbound routes. Users could enable the Blacklist feature and manage the Blacklist by clicking on “Blacklist”.





- Select the checkbox for “Blacklist Enable” to turn on Blacklist feature for all inbound routes. Blacklist is disabled by default.
- Enter a number in “Add Blacklist Number” field and then click  to add to the list. Anonymous can also be added as a Blacklist Number.
- To remove a number from the Blacklist, select the number in “Blacklist list” and click on  or click on  button to remove all the numbers on the blacklist.
- User can also export the inbound route blacklist by pressing on  button.

Figure 131: Blacklist Configuration Parameters

- To add blacklist number in batch, click on “choose file to upload” to upload blacklist file in csv format. The supported csv format is as below.

Figure 132: Blacklist csv File

Note:

Users could also add a number to the Blacklist or remove a number from the Blacklist by dialing the feature code for “Blacklist Add” (default: *40) and “Blacklist Remove” (default: *41) from an extension. The feature code can be configured under Web GUI→**Call Features**→**Feature Codes**.

Conference

The UCM6200 supports conference room allowing multiple rooms used at the same time:

- UCM6202/6204 supports up to 3 conference rooms allowing up to 25 simultaneous PSTN or IP participants.
- UCM6208 supports up to 6 conference rooms allowing up to 32 simultaneous PSTN or IP participants.

The conference room configurations can be accessed under Web GUI→**Call Features**→**Conference**. In this page, users could create, edit, view, invite, manage the participants and delete conference rooms. The conference room status and conference call recordings (if recording is enabled) will be displayed in this web page as well.

Conference Room Configurations

- Click on “Create New Conference Room” to add a new conference room.
- Click on [\[icon\]](#) to edit the conference room.
- Click on [\[icon\]](#) to delete the conference room.

Table 61: Conference Room Configuration Parameters

Extension	<p>Configure the conference number for the users to dial into the conference.</p> <p>Note: The conference extension number can contain up to 64 characters.</p>
Password	<p>When configured, the users who would like to join the conference call must enter this password before accessing the conference room.</p> <p>Notes:</p> <ul style="list-style-type: none"> ◦ If “Public Mode” is enabled, the password is not required to join the conference room thus this field is invalid. ◦ The password must contain at least 4 characters. ◦ Conference extension number can no longer be used as the conference password if Strong Password is enabled.
Host Password	<p>Configure the password to join the conference room as administrator. Conference administrator can manage the conference call via IVR (if “Enable Caller Menu” is enabled) as well as invite other parties to join the conference by dialing “0” (permission required from the invited party) or “1” (permission not required from the invited party) during the conference call.</p> <p>Notes:</p> <ul style="list-style-type: none"> ◦ If “Public Mode” is enabled, the password is not required to join the conference room thus this field is invalid. ◦ Password must be at least 4 characters and different than conference extension number.
Enable Caller Menu	<p>If enabled, conference participant could press the * key to access the conference room menu. The default setting is “No”.</p>
Record Conference	<p>If enabled, the calls in this conference room will be recorded automatically in a .wav format file. All the recording files will be displayed and can be downloaded in the conference web page. The default setting is “No”.</p>
Quiet Mode	<p>If enabled, if there are users joining or leaving the conference, voice prompt or notification tone will not be played. The default setting is “No”.</p> <p>Note:</p> <p>“Quiet Mode” and “Announce Callers” cannot be enabled at the same time.</p>
Kick Warning Interval (minutes)	<p>If there is only one participant in a conference room, a kick warning prompt will play at the configured interval. If no input from the participant is received after the prompt, he will be automatically kicked out of the conference. The valid range is 1-60 minutes.</p>

Wait For Admin	<p>If enabled, the participants will not hear each other until the conference administrator joins the conference. The default setting is “No”.</p> <p>Note:</p> <p>If “Quiet Mode” is enabled, the voice prompt for “Wait For Admin” will not be announced.</p>
Allow User Invite	<p>If enabled, users could press 0 to invite other users (with the users’ permission) or press 1 to invite other users (without the user’s permission) to join the conference. The default setting is “No”.</p> <p>Note:</p> <p>Conference administrator can always invite other users without enabling this option.</p>
Announce Callers	<p>If enabled, the caller will be announced to all conference participants when there the caller joins the conference. The default setting is “No”.</p> <p>Notes:</p> <ul style="list-style-type: none"> ◦ “Quiet Mode” and “Announce Callers” cannot be enabled at the same time. ◦ Conference participant names will be announced when joining/leaving the conference even when the conference is on hold..
Public Mode	<p>If enabled, no authentication will be required when joining the conference call. The default setting is “Yes”.</p>
Play Hold Music	<p>If enabled, the UCM6200 will play Hold music when there is only one user in the conference. The default setting is “No”.</p>
Music On Hold	<p>Select the music on hold playlist to be played in conference call. Music On Hold playlist can be set up under Web GUI→PBX Settings→Music On Hold.</p>
Custom Music On Hold	<p>Select a custom Music On Hold.</p>
Skip Authentication	<p>If enabled, the invitation from Web GUI for a conference room with password will skip the authentication for the invited users. The default setting is “No”.</p>

Conference Settings contains the following options:

Table 62: Conference Settings

Enable Talk detection	<p>If enabled, the AMI will send the corresponding event when a user starts or ends talking.</p>
DSP Talking Threshold	<p>The time in milliseconds of sound above what the dsp has established as base line silence for a user before a user is considered to be talking. This value affects several operations and should not be changed unless the impact on call quality is fully understood, the default value is 128.</p>

DSP Silence Threshold	The time in milliseconds of sound falling within the what the dsp has established as base line silence before a user is considered to be silent. This value affects several operations and should not be changed unless the impact on call quality is fully understood, the default value is 2500.
Enable Neteq	If enabled, conference audio quality may improve, but system performance will be lowered.

Users can check the talking Caller IDs in conference control page (UCM WebUI→Call Features→Conference). The image will move up and down when the user is talking.

Conference

The screenshot shows the 'Conference' page in the UCM WebUI. It features a navigation bar with 'Conference', 'Conference Schedule', 'Google Service Settings', and 'Record Conference'. Below the navigation bar are two buttons: '+ Create New Conference Bridge' and '@ Conference Settings', followed by an 'Enable CEI Notify' checkbox. The main content area contains a table with columns: Room, Attendee, Administrator, Start Time, Activity, and Options. A sub-table below it shows participant details with columns: User, Caller ID, Caller Name, Channel Name, Activity, and Options.

Room	Attendee	Administrator	Start Time	Activity	Options
6300	2	0	2017-05-03 04:49:01	00:00:15	[Icons]

User	Caller ID	Caller Name	Channel Name	Activity	Options
1	1000	John DOE	PJSIP/1000-00000000	00:00:15	[Icons]
2	1001		PJSIP/1001-00000001	00:00:05	[Icons]

Figure 133: Conference

Conference Call Operations

Join a Conference Call

Users could dial the conference room extension to join the conference. If password is required, enter the password to join the conference as a normal user, or enter the admin password to join the conference as administrator.

Invite Other Parties to Join Conference

When using the UCM6200 conference room., there are two ways to invite other parties to join the conference.

- **Invite from Web GUI.**

For each conference room in UCM6200 Web GUI→Call Features→Conference, there is an icon for option “Invite a participant”. Click on it and enter the number of the party you would like to invite. Then click on “Add”. A call will be sent to this number to invite it to the conference.

The screenshot shows a modal dialog box titled 'Invitation'. It contains a text input field for '* Participant's Extensi...' with the value '1003'. Below it is a checkbox for 'Require Confirmation...' which is checked. At the bottom are 'Cancel' and 'Add' buttons.

Figure 134: Conference Invitation from Web GUI

- **Invite by dialing 0 or 1 during conference call.**

A conference participant can invite other parties to the conference by dialing during the conference call. Please make sure “Allow User Invite” is turned on for the conference room first. Enter 0 or 1 during the conference call. Follow the voice prompt to input the number of the party you would like to invite. A call will be sent to this number to join it into the conference.

If 0 is entered, once the invited party picks up the invitation call, the system will ask the party to accept or reject the invitation.

If 1 is entered, once the invited party picks up the call, they will automatically be brought into the conference.

Note:





Conference administrator can always invite other parties from the phone during the call by entering 0 or 1. To join a conference room as administrator, enter the admin password when joining the conference. A conference room can have multiple administrators.

During The Conference

During the conference call, users can manage the conference from Web GUI or IVR.

- **Manage the conference call from Web GUI.**

Log in UCM6200 Web GUI during the conference call, the participants in each conference room will be listed.

1. Click on  to kick a participant from the conference.
2. Click on  to mute the participant.
3. Click on  to lock this conference room so that other users cannot join it anymore.
4. Click on  to invite other users into the conference room.

- **Manage the conference call from IVR.**

If “Enable Caller Menu” is enabled, conference participant can input * to enter the IVR menu for the conference. Please see options listed in the table below.

Table 63: Conference Caller IVR Menu

Conference Administrator IVR Menu	
1	Mute/unmute yourself.
2	Lock/unlock the conference room.
3	Kick the last joined user from the conference.
4	Decrease the volume of the conference call.
5	Decrease your volume.
6	Increase the volume of the conference call.
7	Increase your volume.

8	<p>More options.</p> <ul style="list-style-type: none"> ○ 1: List all users currently in the conference call. ○ 2: Kick all non-Administrator participants from the conference call. ○ 3: Mute/Unmute all non-Administrator participants from the conference call. ○ 4: Record the conference call. ○ 8: Exit the caller menu and return to the conference.
Conference User IVR Menu	
1	Mute/unmute yourself.
4	Decrease the volume of the conference call.
5	Decrease your volume.
6	Increase the volume of the conference call.
7	Increase your volume.
8	Exit the caller menu and return to the conference.

Note:

When there is participant in the conference, the conference room configuration cannot be modified.

Google Service Settings Support

UCM6200 now supports Google OAuth 2.0 authentication. This feature is used for supporting UCM6200 conference scheduling system. Once OAuth 2.0 is enabled, UCM6200 conference system can access Google calendar to schedule or update conference.

Google Service Settings can be found under Web GUI→**Call Features**→**Conference**→**Google Service Settings**→**Google Service Settings**.

Figure 135: Google Service Settings→OAuth2.0 Authentication

If you already have OAuth2.0 project set up on **Google Developers** web page, please use your existing login credential for “OAuth2.0 Client ID” and “OAuth2.0 Client Secret” in the above figure for the UCM6200 to access Google Service.

If you do not have OAuth2.0 project set up yet, please following the steps below to create new project and obtain credentials:

1. Go to Google Developers page <https://console.developers.google.com/start> Create a New Project in Google Developers page.

Figure 136: Google Service → New Project

1. Enable Calendar API from API Library.
2. Click “Credentials” on the left drop down menu to create new OAuth2.0 login credentials.

Figure 137: Google Service → Create New Credential

1. Use the newly created login credential to fill in “OAuth2.0 Client ID” and “OAuth2.0 Client Secret”.
2. Click “Get Authentication Code” to obtain authentication code from Google Service.

Figure 138: Google Service → OAuth2.0 Login

1. Now UCM6200 is connected with Google Service.

You can also configure the Status update, which automatically refresh your Google Calendar with the configured time (m). **Note:** Zero means disable.

Conference Schedule

Conference Schedule can be found under UCM6200 Web GUI → **Call Features** → **Conference** → **Conference Schedule**. Users can create, edit, view and delete a Conference Schedule.

- Click on “Create New Conference Schedule” to add a new Conference Schedule.
- Click on the scheduled conference to edit or delete the event.

After the user configures UCM6200 with Google Service Settings [*Google Service Settings Support*] and enables Google Calendar for Conference Schedule, the conference schedule on the UCM6200 can be synchronized with Google Calendar for authorized Google account.

Table 64: Conference Schedule Parameters

Schedule Options	
Conference Subject	Configure the topic of the scheduled conference. Letters, digits, _ and – are allowed.
Conference Room	Select a conference room for this scheduled conference.
Conference Password	Conference login password.
Host Password	Host Password.
Kick Time(m)	Set kick time before conference starts. When kick time is reached, a warning prompt will be played for all attendees in the conference room. After 5 minutes, this conference room will be cleared and locked for the scheduled conference to begin. Note: Kick Time cannot be less than 6 minutes in order to clear the conference room.
Wait for Host	If enabled, conference participants will not hear each other until the host joins the conference. Note: If Quiet Mode is enabled, the voice prompt for this option will not be played.
Description	The description of scheduled conference.
Repeat	Repeat interval of scheduled conference. By default, set to single event.
Schedule Time	Configure the beginning date and duration of scheduled conference. Note: Please pay attention to avoid time conflict on schedules in the same conference room.

Meeting Duration	Duration of the conference meeting. Note: The maximum allowed meeting duration that can be set is 8 hour(s).
Enable Google Calendar	Select this option to synchronize scheduled conference with Google Calendar. Note: Google Service Setting OAuth2.0 must be configured on the UCM6200. Please refer to section [<i>Google Service Settings Support</i>].
Send email notification	Sends Email notification to the extension.
Conference Administrator	Select the administrator of scheduled conference from selected extensions. Note: “Public Mode” must be disabled from Conference Room Options tab.
Local Extension	Select available extensions from the list to attend scheduled conference.
Remote Extension	Select available extensions from the remote peer PBX. Note: “LDAP Sync” must be enabled on the UCM6200 in order to view remote extensions here.
Special Extension	Add extensions that are not in the list (both local and remote list). If the user wishes to add the special extension, please make sure that the UCM’s outbound routes will allow calling that special extension.
Remote Conference	Invite a remote conference.
Conference Room Options	
Password	Configure conference room password. Please note that if “Public Mode” is enabled, this option is automatically disabled.
Host Password	Configure the password to join as conference administrator. Please note that if “Public Mode” is enabled, this option is automatically disabled.
Enable Caller Menu	If this option is enabled, conference participants will be able to access conference room menu by pressing the * key.
Record Conference	If this option is enabled, conference call will be recorded in .wav format. The recorded file can be found from Conference page.
Quiet Mode	If this option is enabled, the notification tone or voice prompt for joining or leaving the conference will not be played. Note: Option “Quiet Mode” and option “Announce Caller” cannot be enabled at the same time.

Wait For Admin	<p>If this option is enabled, the participants in the conference will not be able to hear each other until conference administrator joins the conference.</p> <p>Note: If “Quiet Mode” is enabled, voice prompt for this option will not be played.</p>
Allow User Invite	<p>If this option is enabled, the user can:</p> <ul style="list-style-type: none"> ◦ Press ‘0’ to invite others to join the conference with invited party’s permission ◦ Press ‘1’ to invite without invited party’s permission ◦ Press ‘2’ to create a multi-conference room to another conference room ◦ Press ‘3’ to drop all current multi-conference rooms <p>Note: Conference Administrator is always allowed to access this menu.</p>
Announce Callers	<p>If this option is enabled, when a participant joins the conference room, participant’s name will be announced to all members in the conference room.</p> <p>Note: Option “Quiet Mode” and option “Announce Caller” cannot be enabled at the same time.</p>
Public Mode	<p>If this option is enabled, no authentication is required for entering the conference room.</p> <p>Note: Please be aware of the potential security risks when turning on this option.</p>
Play Hold Music	<p>If this option is enabled, UCM6200 will play Hold Music while there is only one participant in the conference room, or the conference is not yet started.</p>
Skip Authentication	<p>If this option is enabled, the invitation from Web GUI via a trunk with password will not require authentication.</p> <p>Note: Please be aware of the potential security risks when turning on this option.</p>

Cleaner Options

Cleaner Options	
Enable Conference Schedules Cleaner	If this option is enabled, conference schedules will be automatically cleaned as configured.
Conference Schedules Clean Time	Enter the clean time (in hours). The valid range is from 0 to 23.
Clean Interval	Enter the clean interval (in days). The valid range is from 1 to 30.

After configuring the scheduled conference, it will be shown under Conference Schedule page as below:

Conference

Conference

Conference Schedule Google Service Settings Record Conference

Note: The Update Google Calendar button is used to update and synchronize the data on a local Google Calendar with a remote...

+ Create New Conference Schedule Cleaner Options Update Google Calendar Today

6300 1 Conference Schedule

Conference Subject
WeeklyMeeting
Start Time
2017-05-05 09:57:27
End Time
2017-05-05 10:57:00
Session state
Weekly meeting
Enable Google Calendar
no
Repeat
Friday
Conference Schedule Members
1000,1001,1005,1002

Figure 139: Conference Schedule

Once the conference room is scheduled, at the kick time, all users will be removed from conference room and no extension can join the conference room anymore. At the scheduled conference time, UCM6200 will send INVITE to the extensions that have been selected for conference.

Notes:

- Please make sure that outbound route is properly configured for remote extensions to join the conference.
- Once Kick Time is reached, Conference Schedule is locked and cannot be modified.

Contact Group

Users can now quickly invite multiple participants at once to a conference via conference contact groups. Up to 5 contact groups can be created. The maximum allowed number of contacts per group is based on the UCM model's conference participant limit: 25 for 6202/6204, 32 for 6208, 64 for 6510.

Each contact group must have a password configured, which will be required when inviting the specified contact group to a conference. Additionally, an audio file can be uploaded to each group to be used to announce the contact group name such as "Sales" or "Marketing". The default announcement for each group is "Conference Contact Group 1", "Conference Contact Group 2", etc.

Create New Contact Group

Normal

* Name:

* Password:

* Prompt:

Members (6)

Type: Extensions Self-defined

* Number:

* Name:

NUMBER	NAME	TYPE	OPTIONS
1001	1001	Extensions	
1002	1002	Extensions	

Figure 140: Contact Group Parameters

Contact Group Configurations

- Click on “Create New Contact Group” to add a new Contact Group.
- Click on to edit the Contact Group.
- Click on to delete the Contact Group.

Table 65: Contact Group Parameters

Name	Name associated to the contact group.
Password	Password required to invite the specified contact group to a conference.
Prompt	Audio file that can be uploaded to the group to announce the contact group name such as “Sales” or “Marketing”. The default announcement for each group is “Conference Contact Group 1”, “Conference Contact Group 2”, etc.
Members	Contacts that needs to be added in each group.
Type	Type of the members to be added, it can be either Extensions or a self-defined number .

Conference Recordings

The UCM6200 allows users to record the conference call and retrieve the recording from Web GUI→**Call Features**→**Conference**→**Record Conference**.

To record the conference call, when the conference room is in idle, enable “Record Conference” from the conference room configuration dialog. Save the setting and apply the change. When the conference call starts, the call will be automatically recorded in .wav format.

The recording files will be listed as below once available. Users could click on to download the recording or click on to delete the recording. Users could also delete all recording files by clicking on “Delete All Recording Files” or delete multiple recording files at once by clicking on “Delete Selected Recording Files” after selecting the recording files.

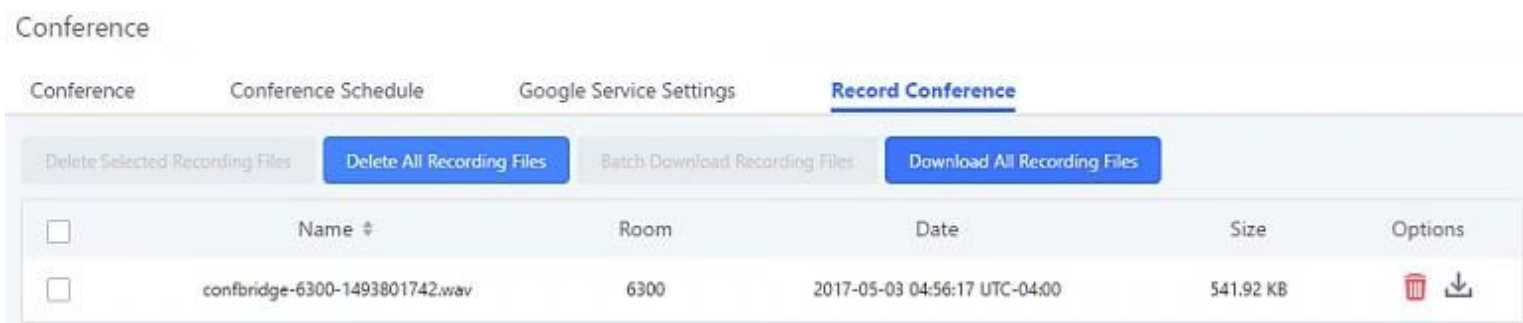


Figure 141: Conference Recording

Conference Call Statistics

Conference reports will now be generated after every conference. These reports can be exported to a .CSV file for offline viewing. The conference report page can be accessed by clicking on the Call Statistics button on the main Conference page.

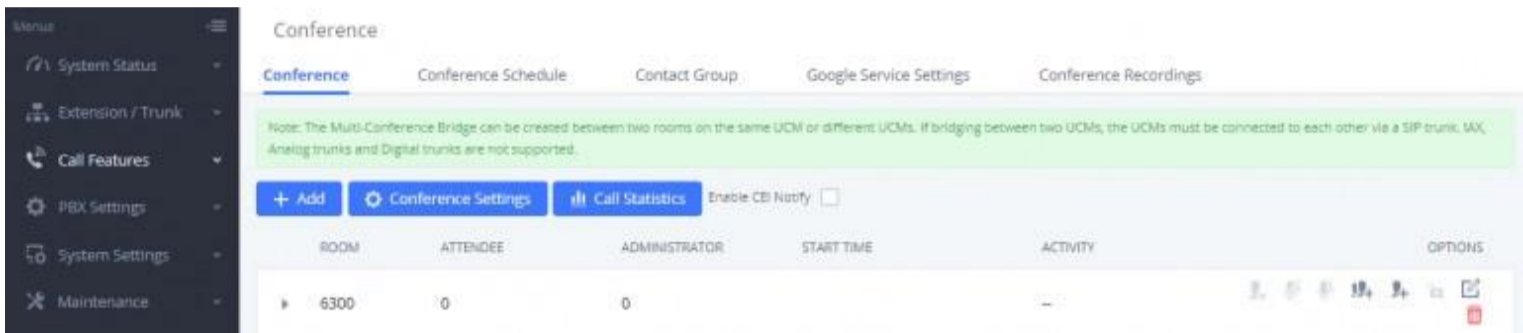


Figure 142: Conference Call Statistics

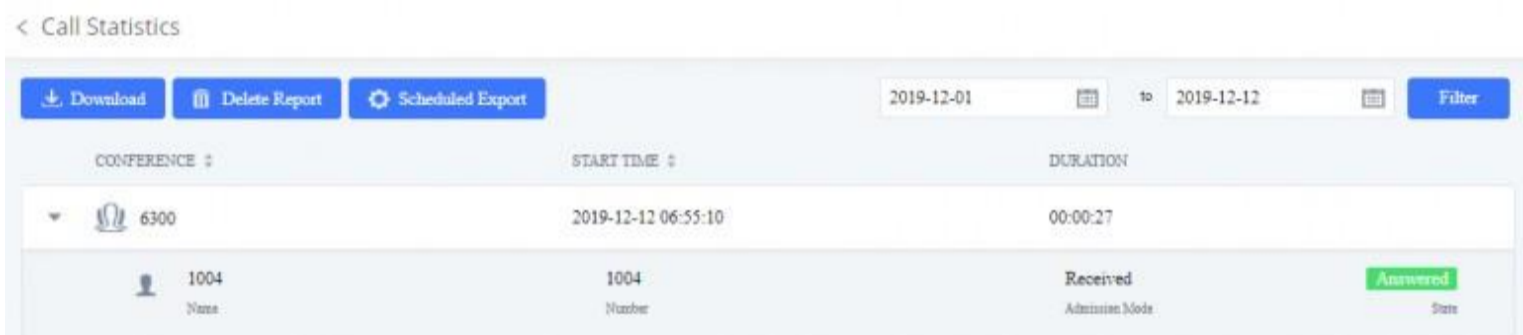


Figure 143: Conference Report on Web

	A	B	C	D	E	F	G
1	Room	Start Time	Duration Time				
2	6301	11/7/2019 16:12	0:01:16				
3	Contact Number	Name	Way	Status	Contact Group Name		
4	1002	Conference invitatio	INVITE	FAILURE	Sales		
5	1005	Conference invitatio	INVITE	FAILURE	Sales		
6	1004	Conference invitatio	INVITE	FAILURE	Sales		
7	1003	Conference invitatio	INVITE	FAILURE	Sales		
8	1001	1001	CALLIN	ANSWER			

Figure 144: Conference Report on CSV

Video Conference

With the UCM you can easily create, schedule, manage, and join video conference calls, from your desktop or laptop computer. UCM Video conferencing uses WebRTC technology, so all the participants don't have to download and install any additional software or plugins. If upgrading from firmware that does not have this functionality, system administrators must first toggle on the **Enable WebRTC** option for extensions that want to use the UCM's WebRTC video conferencing feature. The video conference configurations can be accessed under Web GUI → **Call Features** → **Video Conference**. Here, users can create and manage video conference rooms and schedule video conferences.

Video Conference Room Configurations



- Click on "Create New Conference Room" to add a new conference room.
- Click on  to edit the conference room.
- Click on  to delete the conference room.

Table 66: Video Conference room Configuration Parameters

Extension	<p>Configure the conference number for the users to dial into the conference.</p> <p>Note: Up to 64 characters.</p>
Password	<p>When configured, the users who would like to join the conference call must enter this password before accessing the conference room.</p> <p>Note:</p> <ul style="list-style-type: none"> ◦ Only digits are allowed. ◦ The password has to be at least 4 characters. All repetitive and sequential digits (e.g., 0000, 1111, 1234 and 2345) or common digits (e.g., 111222 and 321321) are not allowed.

Conference Settings

Conference Settings

Video Conferencing:

* Bind UDP Port:

Packet Loss Retransmission:

FEC:

Enable Talk Detection:

* DSP Talking Threshold:

* DSP Silence Threshold:

Figure 145: Video Conference Basic settings

Basic Settings	
Video Conferencing	<p>This option should be enabled in order to activate the Video Conference feature.</p>
Bind UDP Port	<p>Configure the UDP port number for MCM. The standard UDP port for MCM is 5062.</p>
Packet Loss Retransmission	<p>Configure to enable Packet Loss Retransmission.</p>
FEC	<p>If enabled, the Forward Error Correction (FEC) will be activated. The default setting is “No”.</p>
Enable Talk Detection	<p>If enabled, the AMI will send the corresponding event when a user starts or stops talking.</p>

DSP Talking Threshold	The amount of time (ms) that sound exceeds what the DSP has established as the baseline for silence before a user is considered to be talking. This value affects several operations and should not be changed unless the impact on call quality is fully understood.
DSP Silence Threshold	The amount of time(ms) that sound falls within what the DSP has established as the baseline for silence before a user is considered be silent. This value affects several operations and should not be changed unless the impact on call quality is fully understood.

Conference Schedule

Conference Schedule can be found under UCM Web GUI → Call Features → Video Conference → Conference Schedule. Users can create, edit, view and delete a Conference Schedule.

- Click on “Schedule New Conference” to add a new Conference Schedule.
- Click on the scheduled conference to edit or delete the event.

Table 67: Video Conference Schedule Parameters

Schedule Options	
Conference Subject	Configure the name of the scheduled conference. Letters, digits, _ and – are allowed.
Conference Room	Select a conference room for this scheduled conference.
Conference Password	Configure conference room password. Please note that if “Public Mode” is enabled, this option is automatically disabled.
Kick Time(m)	Configure the time before the scheduled conference. When this time is reached, a warning prompt will be played, and all attendees currently in the scheduled conference room will be kicked after 5 mins. The conference room will be locked until the scheduled conference begins. Default value is 10 min.
Start Time	Configure the beginning date and duration of scheduled conference. Note: Please be mindful to avoid schedule conflicts for the same conference room.
Host	Set the admin of this scheduled conference from the following list of members.
Repeat	Choose when to repeat a scheduled conference.
Local Extension	Select the extensions from the list to attend this scheduled conference.

Remote Extension	The remote extension in the peer PBX connected to the local PBX via LDAP sync.
Special Extension	Add extensions that are not in the list (both local and remote list). If the user wishes to add the special extension, please match the pattern on the outbound route.
Description	Set a description of scheduled conference.
Time Zone	Configure the conference Time Zone.

Once created, the Web GUI will display scheduled conference in Conference Schedule.

Please see figure below:

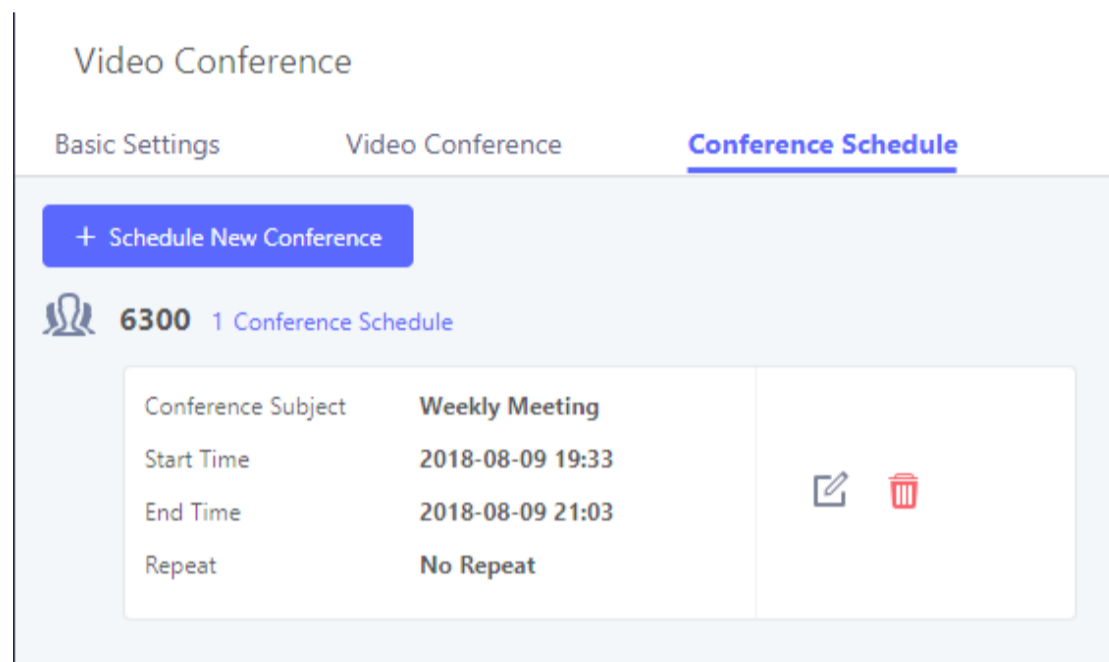


Figure 146: Video Conference Schedule

Once the conference room is scheduled, at the kick time, all users will be removed from conference room and no extension is allowed to join the conference room anymore. At the scheduled conference time, UCM will send INVITE to the extensions that have been selected for conference.

Notes:

- Video conferencing can be resource-intensive and may cause performance issues with the UCM when used.
- To ensure the best experience, please use Google Chrome (v67 or higher) or Mozilla Firefox (v60).

Wave WebRTC Video Calling & Conferencing

Web audio and video calls and conferencing can now be achieved through the UCM's new WebRTC page. To get started with this new feature, please make sure to:

1. Navigate to **Value-Added Features** → **WebRTC** and enable WebRTC support.

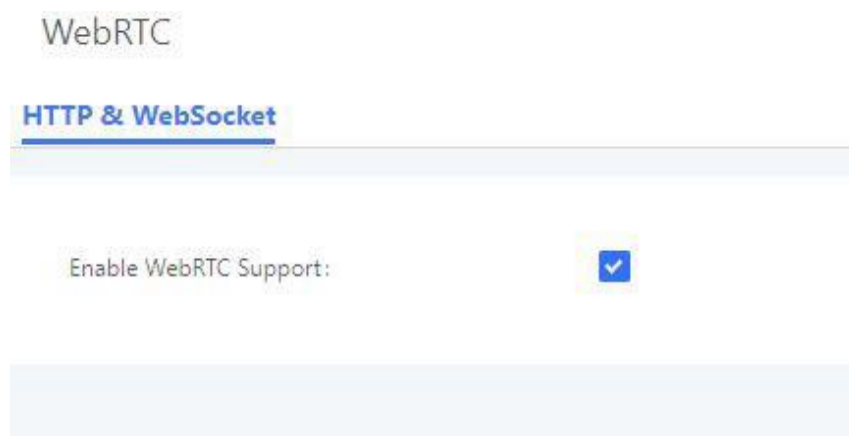


Figure 147: Enabling WebRTC Feature

1. Enable the WebRTC on the extensions that would use this feature under **Extension / Trunk** → **Extensions**.

Figure 148: Enabling WebRTC on Extensions

The UCM offers the possibility to log in to an extension via Grandstream Wave Portal using user portal password in addition to SIP registration password, where it offers a sleek interface to host conferences, receive email reminders for scheduled conferences, manage contacts, initiate calls, call transfer, chat functionality and more.

Access the page by adding “/gswave” after the UCM’s server address and port. (e.g. <https://my.ucm.com:8089/gswave>).

Figure 149: Grandstream Wave Interface

Note: Starting with 1.0.19.27, the registration limit was increased to 300 for UCM62xx. The limit is the same regardless of whether the user is making voice calls or video calls

For more details about the WebRTC feature, please refer to the following guide:

<https://documentation.grandstream.com/knowledge-base/wave-video-calling-conferencing-guide/>

IPVideoTalk Meetings

UCM extensions can now dial into IPVT (IPVideoTalk) meetings by creating a peer trunk to an IPVT server. However, users must make sure that the IPVT server they are peering to also has a peer trunk to their UCM configured. This setting can be found in Admin Center → SIP Trunk Configuration.

Figure 150: IPVT SIP Trunk page

Next, users must create a peer trunk on the UCM to the IPVT server. Enter one of the following addresses based on the desired connection protocol:

- TCP: pro.ipvideotalk.com:20000
- TLS: pro.ipvideotalk.com:20001

Figure 151 – Peer Trunk to IPVT

Make sure that the *Transport* field is either “TCP” or “TLS”. Save and apply changes to create the trunk.

Next, edit the newly created trunk and click on the *Advanced Settings* tab. Make sure the *IPVT Mode* option is checked. Otherwise, you may experience audio issues when dialing into IPVT.

Figure 152 – IPVT Mode

Finally, create an outbound route for this trunk. This route will be used to dial IPVT meeting IDs. Due to IPVT meeting IDs having a random assortment of numbers, it is recommended to use a unique code to precede the meeting ID so that UCM can direct calls to the IPVT trunk without fail (e.g., *99). In the below image, “x.” would be the meeting ID.

Figure 153 – IPVT Outbound Pattern

However, if a unique code is used, users must also configure the *Strip* field to remove the unique code from the meeting ID before the call is sent to IPVT.

Figure 154 – IPVT Outbound Strip

In this example, the *Strip* field has “3” configured to remove the example unique code *99 from the dialed number before the call is routed out to the IPVT server. Once this outbound route has been created, users can now use a UCM extension to dial IPVT meeting rooms.

Note: An IPVT account can have only 1 SIP trunk peered to it.

IVR

Configure IVR

IVR configurations can be accessed under the UCM6200 Web GUI → **Call Features** → **IVR**. Users could create, edit, view and delete an IVR.

Note: UCM6200 currently supports up to 500 IVR entry.



- Click on “Create New IVR” to add a new IVR.
- Click on  to edit the IVR configuration.
- Click on  to delete the IVR.

Figure 155: Create New IVR

Table 68: IVR Configuration Parameters

Basic Settings	
Name	Configure the name of the IVR. Letters, digits, _ and – are allowed.
Extension	Enter the extension number for users to access the IVR.
Dial other Extensions	If enabled, the caller is allowed to dial extensions other than the ones explicitly defined.

DID Destination	<p>This option shows up only when “By DID” is selected. This controls the destination that can be reached by the external caller via the inbound route. The DID destination are:</p> <ul style="list-style-type: none"> o Extension o Conference o Call Queue o Ring Group o Paging/Intercom Groups o Voicemail Groups o Fax Extension o Dial By Name o All
Dial Trunk	<p>If enabled, all callers to the IVR is allowed to use trunk. The permission must be configured for the users to use the trunk first. The default setting is “No”.</p>
Permission	<p>Assign permission level for outbound calls if “Dial Trunk” is enabled. The available permissions are “Internal”, “Local”, “National” and “International” from the lowest level to the highest level. The default setting is “Internal”. If the user tries to dial outbound calls after dialing into the IVR, the UCM6200 will compared the IVR’s permission level with the outbound route’s privilege level. If the IVR’s permission level is higher than (or equal to) the outbound route’s privilege level, the call will be allowed to go through.</p>
Replace Caller ID	<p>If enabled, the UCM will replace the caller display name with the IVR name the caller know whether the call is incoming from a direct extension or an IVR.</p>
Alert-Info	<p>When present in an INVITE request, the alert-Info header field specifies and alternative ring tone to the UAS.</p>
Welcome Prompt	<p>Select an audio file to play as the welcome prompt for the IVR. Click on “Prompt” to add additional audio file under Web GUI→PBX Settings→Voice Prompt→Custom Prompt.</p> <p>Note: Up to 5 welcome prompts can be used.</p>
Digit Timeout	<p>Configure the timeout between digit entries. After the user enters a digit, the user needs to enter the next digit within the timeout. If no digit is detected within the timeout, the UCM6200 will consider the entries complete. The default timeout is 3 seconds.</p>
Response Timeout	<p>After playing the prompts in the IVR, the UCM6200 will wait for the DTMF entry within the timeout (in seconds). If no DTMF entry is detected within the timeout, a timeout prompt will be played. The default setting is 10 seconds.</p>
Response Timeout Prompt	<p>Select the prompt message to be played when timeout occurs.</p>
Invalid Input Prompt	<p>Select the prompt message to be played when an invalid extension is pressed.</p>

Response Timeout Prompt Repeats	<p>Configure the number of times to repeat the prompt if no DTMF input is detected. When the loop ends, it will go to the timeout destination if configured, or hang up. The default setting is 3.</p>
Invalid Input Prompt Repeats	<p>Configure the number of times to repeat the prompt if the DTMF input is invalid. When the loop ends, it will go to the invalid destination if configured, or hang up. The default setting is 3.</p>
Language	<p>Select the voice prompt language to be used for this IVR. The default setting is “Default” which is the selected voice prompt language under Web GUI→PBX Settings→Voice Prompt→Language Settings. The dropdown list shows all the current available voice prompt languages on the UCM6200. To add more languages in the list, please download voice prompt package by selecting “Check Prompt List” under Web GUI→PBX Settings→Voice Prompt→Language Settings.</p>
Key Pressing Events	
Key Press Event: Press 0 Press 1 Press 2 Press 3 Press 4 Press 5 Press 6 Press 7 Press 8 Press 9 Press * Timeout Invalid	<p>Select the event for each key pressing for 0-9, *, Timeout and Invalid. The event options are:</p> <ul style="list-style-type: none"> ○ Extension ○ Voicemail ○ Conference Rooms ○ Voicemail Group ○ IVR ○ Ring Group ○ Queues ○ Page Group ○ Fax ○ Custom Prompt ○ Hangup ○ DISA ○ Dial By Name ○ External Number ○ Callback ○ Announcement

Figure 156: Key Pressing Events

IVR Black/Whitelist

In some scenarios, the IPPBX administrator needs to restrict the extensions that can be reached from IVR.

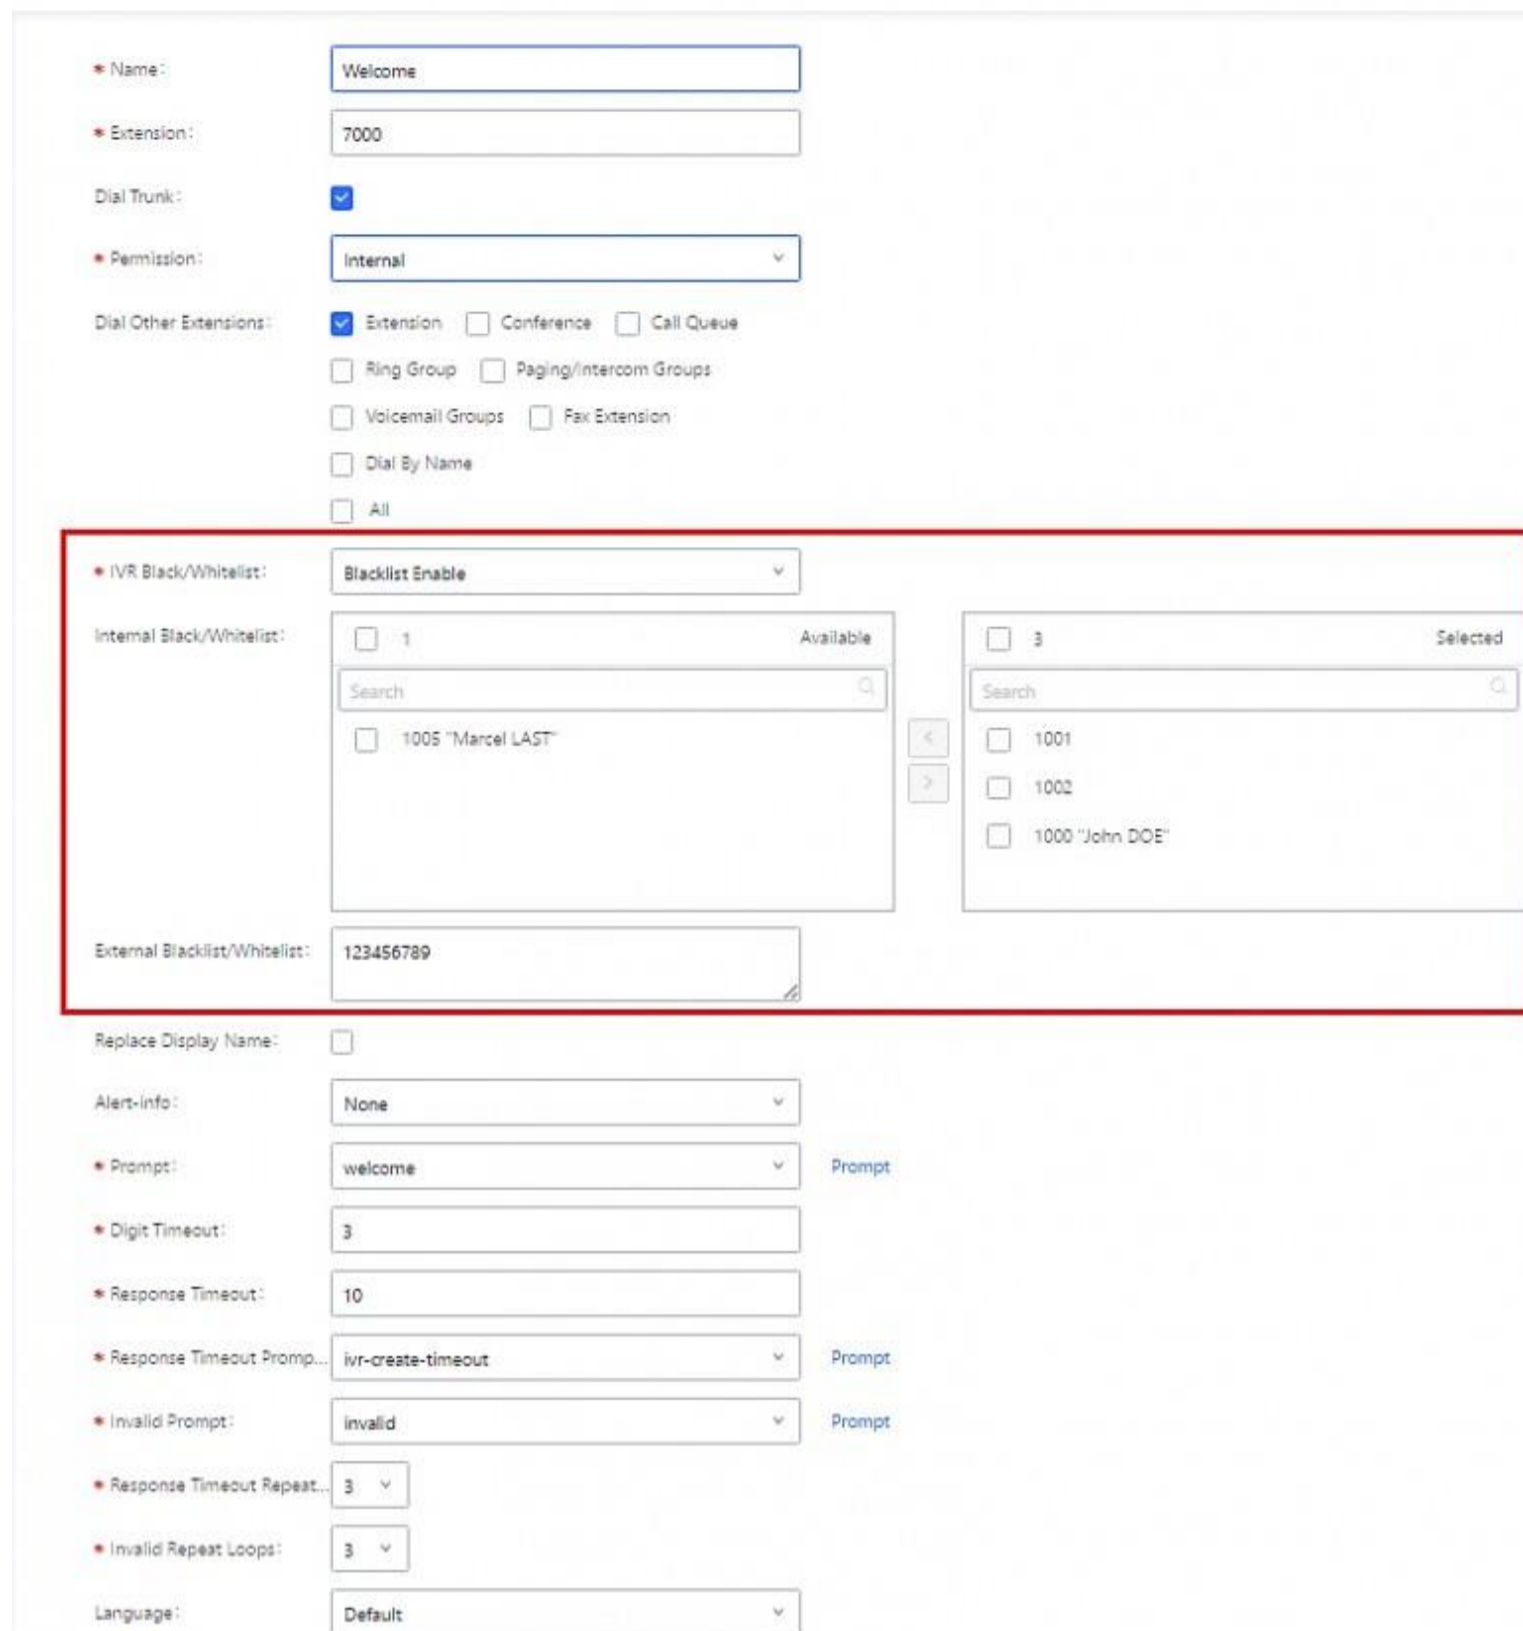
For example, the company CEO and directors prefer only receiving calls transferred by the secretary, some special extensions are used on IP surveillance end points which shouldn't be reached from external calls via IVR for privacy reason. UCM has now added blacklist and whitelist in IVR settings for users to manage this.

Note: up to 500 extensions are allowed on the black/white list.

To use this feature, log in UCM Web GUI and navigate to **Call Features**→**IVR**→**Create/Edit IVR: IVR Black/White List**.

- If the user selects “Blacklist Enable” and adds extension in the list, the extensions in the list will not be allowed to be reached via IVR.
- If the user selects “Whitelist Enable” and adds extension in the list, only the extensions in the list can be allowed to be reached via IVR.

Create New IVR



* Name: Welcome

* Extension: 7000

Dial Trunk:

* Permission: Internal

Dial Other Extensions: Extension Conference Call Queue
 Ring Group Paging/Intercom Groups
 Voicemail Groups Fax Extension
 Dial By Name
 All

* IVR Black/Whitelist: Blacklist Enable

Internal Black/Whitelist: 1 Available 3 Selected
Search 1005 "Marcel LAST" 1001
 1002
 1000 "John DOE"

External Blacklist/Whitelist: 123456789

Replace Display Name:

Alert-info: None

* Prompt: welcome Prompt

* Digit Timeout: 3

* Response Timeout: 10

* Response Timeout Prompt: ivr-create-timeout Prompt

* Invalid Prompt: invalid Prompt

* Response Timeout Repeat: 3


* Invalid Repeat Loops: 3

Language: Default

Figure 157: Black/White List

Create Custom Prompt

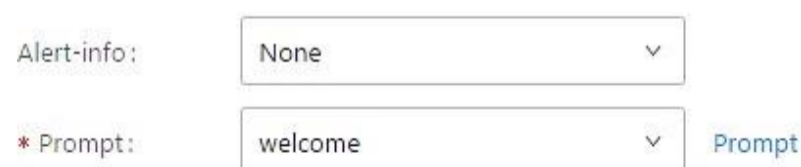To record new IVR prompt or upload IVR prompt to be used in IVR, click on “Prompt” next to the “Welcome Prompt” option and the users will be redirected to Custom Prompt page. Or users could go to Web GUI→PBX Settings→Voice Prompt→Custom Prompt page directly.



Alert-info: None

* Prompt: welcome Prompt

Figure 158: Click on Prompt to Create IVR Prompt

Once the IVR prompt file is successfully added to the UCM6200, it will be added into the prompt list options for users to select in different IVR scenarios.

Voice Prompt

The UCM6200 supports multiple languages in Web GUI as well as system voice prompt. The following languages are currently supported in system voice prompt:

English (United States), Arabic, Chinese, Dutch, English (United Kingdom), French, German, Greek, Hebrew, Italian, Polish, Portuguese, Russian, Spanish, Catalan, Swedish, Czech and Turkish.

English (United States) and Chinese voice prompts are built in with the UCM6200 already. The other languages provided by Grandstream can be downloaded and installed from the UCM6200 Web GUI directly. Additionally, users could customize their own voice prompts, package them and upload to the UCM6200.

Language settings for voice prompt can be accessed under Web GUI→PBX Settings→Voice Prompt→Language Settings. Additionally, UCM6200 allows to customize specific prompt instead of full language package, and it provides ability to upload greeting files for extensions.

Language Settings

Download and Install Voice Prompt Package

To download and install voice prompt package in different languages from UCM6200 Web GUI, click on “Add Voice Prompt Package” button.

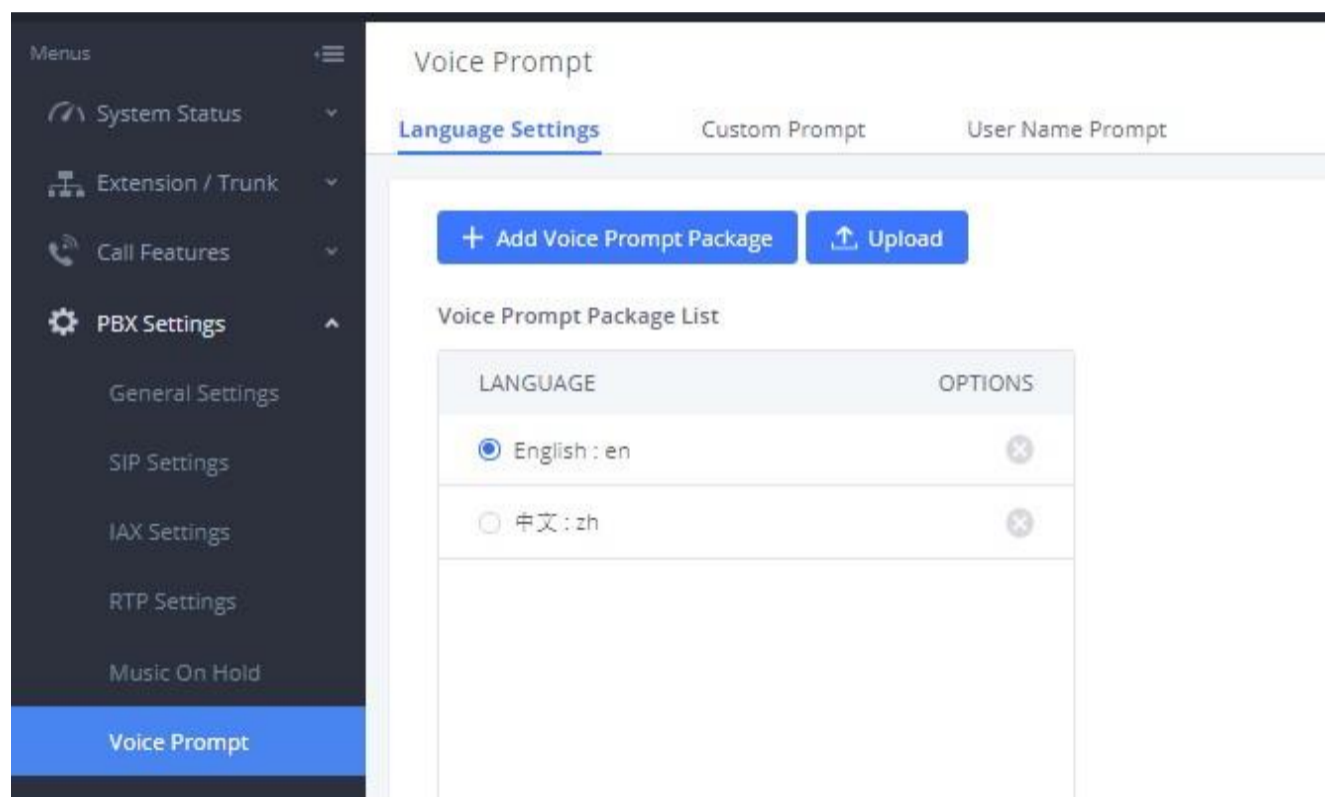


Figure 159: Language Settings for Voice Prompt

A new dialog window of voice prompt package list will be displayed. Users can see the version number (latest version available V.S. current installed version), package size and options to upgrade or download the language.

VOICE PROMPT PACKAGE LIST	VERSION (REMOTE / LOCAL)	SIZE	OPTIONS
British English	1.9/-	4.2M	↓
Deutsch	1.8/-	4.2M	↓
English	1.11/1.11	6.0M	⬆
Español	1.10/-	4.4M	↓
Español(Català)	1.8/-	3.1M	↓
Español(Español)	1.8/-	4.2M	↓
Ελληνικά	1.8/-	4.4M	↓
Français	1.8/-	4.1M	↓
Italiano	1.8/-	4.0M	↓

Figure 160: Voice Prompt Package List

Click on ↓ to download the language to the UCM6200. The installation will be automatically started once the downloading is finished.

LANGUAGE	OPTIONS
<input type="radio"/> English : en	<input type="button" value="X"/>
<input type="radio"/> 中文 : zh	<input type="button" value="X"/>
<input checked="" type="radio"/> Español(Español) : es_es	<input type="button" value="X"/>

Figure 161: New Voice Prompt Language Added

A new language option will be displayed after successfully installed. Users then could select it to apply in the UCM6200 system voice prompt or delete it from the UCM6200.

Upload Language Package

On the UCM6200, if the user needs to replace some specific customized prompt, the user can upload a single specific customized prompt from Web GUI→PBX Settings→Voice Prompt→Language Settings instead of the entire language pack.

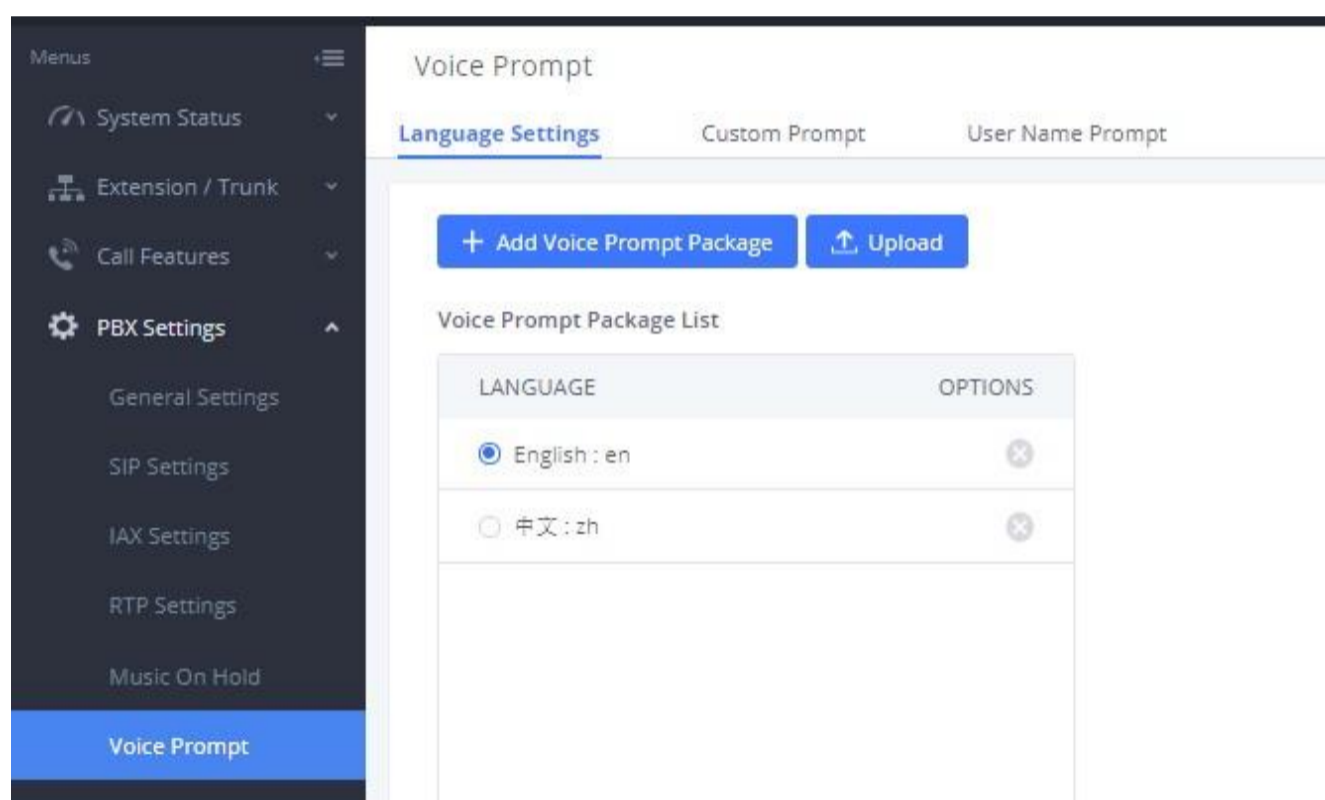


Figure 162: Upload Voice Prompts Package

The package file should follow below requirements:

Each file uploaded must be under 50MB.

Package structure:

```
[Package]
├ [voice prompt dir]
│ └ [... dir]
│   └ [... files]
└ info.txt (containing the language name for display, in UTF8)
```

- Language dir name format:
- Custom dir name format: language_XXX;

For example: If there is a Chinese custom directory named zh_XXX, the custom voice prompt in zh_XXX would be used first, then the Chinese voice prompt zh, then use the default language prompt (en); If not named the format as above, then the custom prompt will be used first, then use the default language prompt (en).

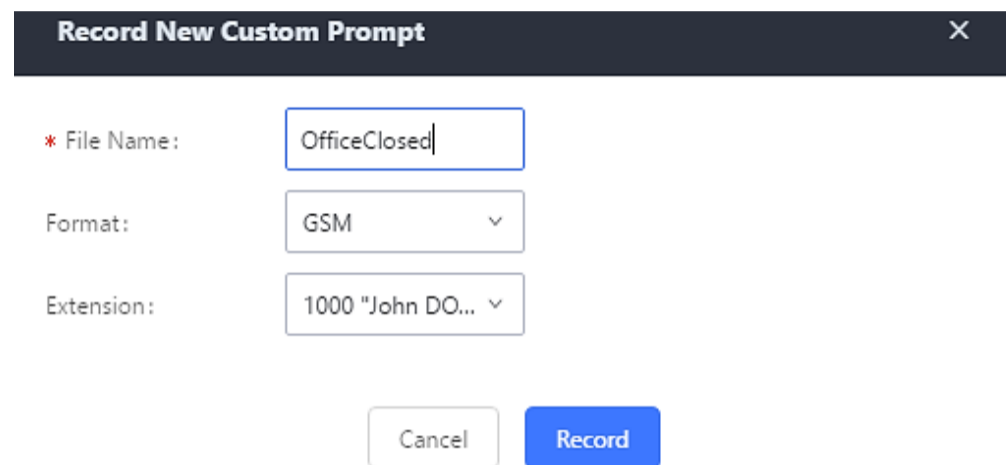
For more details, please refer to:

https://www.grandstream.com/sites/default/files/Resources/ucm_voiceprompt_customization_guide.zip

Custom Prompt

Record New Custom Prompt

In the UCM6200 Web GUI→**PBX Settings**→**Voice Prompt**→**Custom Prompt** page, click on “Record New IVR Prompt” and follow the steps below to record new IVR prompt.



Record New Custom Prompt ×

* File Name:

Format:

Extension:


Figure 163: Record New IVR Prompt

1. Specify the IVR file name.
2. Select the format (GSM or WAV) for the IVR prompt file to be recorded.
3. Select the extension to receive the call from the UCM6200 to record the IVR prompt.
4. Click the “Record” button. A request will be sent to the UCM6200. The UCM6200 will then call the extension for recording the IVR prompt from the phone.
5. Pick up the call from the extension and start the recording following the voice prompt.
6. The recorded file will be listed in the IVR Prompt web page. Users could select to re-record, play or delete the recording.

Upload Custom Prompt

If the user has a pre-recorded IVR prompt file, click on “Upload IVR Prompt” in Web GUI→**PBX Settings**→**Voice Prompt**→**Custom Prompt** page to upload the file to the UCM6200. The following are required for the IVR prompt file to be successfully uploaded and used by the UCM6200:

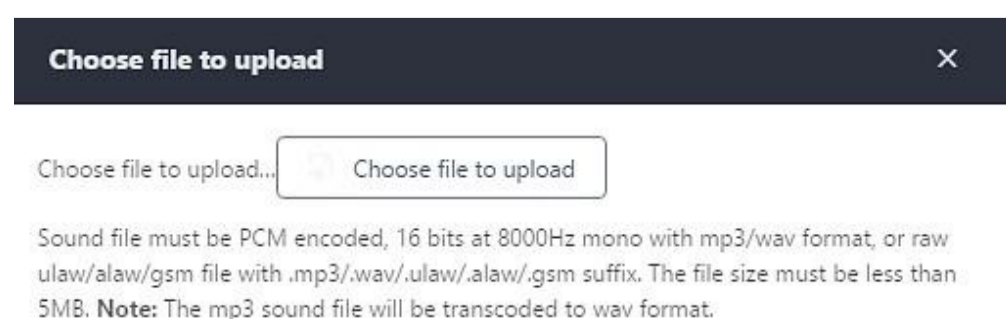- PCM encoded.
- 16 bits.
- 8000Hz mono.
- In .mp3 or .wav format; or raw/ulaw/alaw/gsm file with .ulaw or .alaw suffix.
- File size under 5MB.
- Filename should not exceed 100 characters.



Choose file to upload ×

Choose file to upload...

Sound file must be PCM encoded, 16 bits at 8000Hz mono with mp3/wav format, or raw ulaw/alaw/gsm file with .mp3/.wav/.ulaw/.alaw/.gsm suffix. The file size must be less than 5MB. **Note:** The mp3 sound file will be transcoded to wav format.

Click on “choose file to upload” to select audio file from local PC and to start uploading. Once uploaded, the file will appear in the IVR Prompt web page.

Download All Custom Prompt

On the UCM6200, the users can download all custom prompts from UCM Web GUI to local PC. To download all custom prompt, log in UCM Web GUI and navigate to **PBX Settings**→**Voice Prompt**→**Custom Prompt** and click on . The following window will pop up in order to set a name for the downloaded file.

Figure 165: Download All Custom Prompt

Note: The downloaded file will have a .tar extension.

Username Prompt Customization

There are two ways to customize/set new username prompt:


Upload Username Prompt File from Web GUI

1. First, users should have a pre-recorded file respecting the following format:

- PCM encoded / 16 bits / 8000Hz mono.
- In “.GSM” or “.WAV” format.
- File size under 5MB.
- Filename must be set as the extension number with 18 characters max. For example, the recorded file name 1000.wav will be used for extension 1000.

1. Go under web GUI **PBX Settings** → **Voice Prompt** → **Username Prompt** and click on  button.

2. Select the recorded file to upload it and press Save and Apply Settings.

3. To delete username prompts, either click on the button  to delete a single file or select multiple files and click on **Delete** button to delete multiple prompts at once.

Record Username via Voicemail Menu

The second option to record username is using voicemail menu, please follow below steps:

- Dial *98 to access the voicemail
- After entering the desired extension and voicemail password, dial “0” to enter the recordings menu and then “3” to record a name.

Another option is that each user can record their own name by following below steps:

- The user dials *97 to access his/her voicemail
- After entering the voicemail password, the user can press “0” to enter the recordings menu and then “3” to record his name.

Voicemail

Configure Voicemail

If the voicemail is enabled for UCM6200 extensions, the configurations of the voicemail can be globally set up and managed under Web GUI→**Call Features**→**Voicemail**.

Figure 166: Voicemail Settings

Table 69: Voicemail Settings

Max Greeting	Configure the maximum number of seconds for the voicemail greeting. The default setting is 60 seconds.
Dial '0' For Operator	If enabled, the caller can press 0 to exit the voicemail application and connect to the configured operator's extension.
Operator Extension	Select the operator extension, which will be dialed when users press 0 to exit voicemail application. The operator extension can also be used in IVR.
Max Messages Per Folder	Configure the maximum number of messages per folder in users' voicemail. The valid range 10 to 1000. The default setting is 50.

Max Message Time	<p>Select the maximum duration of the voicemail message. The message will not be recorded if the duration exceeds the max message time. The default setting is 15 minutes. The available options are:</p> <ul style="list-style-type: none"> ○ 1 minute ○ 2 minutes ○ 5 minutes ○ 15 minutes ○ 30 minutes ○ Unlimited
Min Effective Message Time	<p>Configure the minimum duration (in seconds) of a voicemail message. Messages will be automatically deleted if the duration is shorter than the Min Message Time. The default setting is 3 seconds. The available options are:</p> <ul style="list-style-type: none"> ○ No minimum ○ 1 second ○ 2 seconds ○ 3 seconds ○ 4 seconds ○ 5 seconds <p>Note: Silence and noise duration are not counted in message time.</p>
Announce Message Caller-ID	<p>If enabled, the caller ID of the user who has left the message will be announced at the beginning of the voicemail message. The default setting is “No”.</p>
Announce Message Duration	<p>If enabled, the message duration will be announced at the beginning of the voicemail message. The default setting is “No”.</p>
Play Envelope	<p>If enabled, a brief introduction (received time, received from, and etc.) of each message will be played when accessed from the voicemail application. The default setting is “Yes”.</p>
Play from Last	<p>If enabled, UCM will play from the voice message left most recently; if disabled, UCM will play from the earliest left voice message</p>
Allow User Review	<p>If enabled, users can review the message following the IVR before sending.</p>

Voicemail Remote Access	<p>If enabled, external callers routed by DID and reaching VM will be prompted by the UCM with 2 options:</p> <ul style="list-style-type: none"> ◦ <i>Press 1 to leave a message.</i> <p>To leave a message for the extension reached by DID.</p> <ul style="list-style-type: none"> ◦ Press 2 to access voicemail management system. <p>This will allow caller to access any extension VM after entering extension number and its VM password.</p> <p>Note: This option applies to inbound call routed by DID only.</p> <p>The default setting is “Disabled”.</p>
Forward Voicemail to Peered UCMs	<p>Enables the forwarding of voicemail to remote extensions on peered SIP trunks.</p> <p>The default setting is “Disabled”.</p>
Voicemail Password	<p>Configures the default voicemail password that will be used when an extension is reset.</p>

Note: Resetting an extension will reset Voicemail Password, Send Voicemail to Email, and Keep Voicemail after Emailing values to default. Previous custom voicemail prompts and messages will be deleted.

Access Voicemail

If the voicemail is enabled for UCM6200 extensions, the users can dial the voicemail access number (by default *97) to access their extension’s voicemail. The users will be prompted to enter the voicemail password and then can enter digits from the phone keypad to navigate in the IVR menu for different options.

Otherwise, the user can dial the voicemail access code (by default *98) followed by the extension number and password in order to access to that specific extension’s voicemail.

Table 70: Voicemail IVR Menu

Main Menu	Sub Menu 1	Sub Menu 2
1 – New messages		1 - Send a reply
		2 - Call the person who sent this message
		3 - Hear the message envelop
		4 - Leave a message
		* - Return to the main menu
	5 - Repeat the current message	

2 – Change folders	7 - Delete this message	
	8 - Forward the message to another user	
	9 – Save	
	* - Help	
	# - Exit	
	0 - New messages	
	1 - Old messages	
	2 - Work messages	
3 – Advanced options	3 - Family messages	
	4 - Friend messages	
	# - Cancel	
	1 - Send a reply	
	2 - Call the person who sent this message	
	3 - Hear the message envelop	
0 – Mailbox options	4 - Leave a message	
	* - Return to the main menu	
	1 - Record your unavailable message	1 - Accept this recording
		2 - Listen to it
		3 - Re-record your message
		1 - Accept this recording
	2 - Record your busy message	2 - Listen to it
		3 - Re-record your message
	3 - Record your name	1 - Accept this recording
		2 - Listen to it

4 - Record temporary greeting	3 - Re-record your message
	1 - Accept this recording
	2 - Listen to it
5 - Change your password	3 - Re-record your message
* - Return to the main menu	

Leaving Voicemail

If an extension has voicemail enabled under basic settings “**Extension/Trunk → Extensions → Basic Settings**” and after a ring timeout or user not available, the caller will be automatically redirected to the voicemail in order to leave a message on which case they can press # in order to submit the message.

In case if the caller is calling from an internal extension, they will be directly forwarded to the extension’s voicemail box.

But if the caller is calling from outside the system and the incoming call is routed by DID to the destination extension, then the caller will be prompted with the choice to either press 1 to access voicemail management or press 2 to leave a message for the called extension. This feature could be useful for remote voicemail administration.

Voicemail Email Settings

The UCM6200 can be configured to send the voicemail as attachment to Email. Click on “Voicemail Email Settings” button to configure the Email attributes and content.

Table 71: Voicemail Email Settings

Attach Recordings to E-Mail	If enabled, voicemails will be sent to user’s Email address. The default setting is “Yes”.
Keep Recordings	If enabled, voicemail will be stored in the UCM6200 after the email is sent. The default setting is “Yes”.

<p>Template for Voicemail Emails</p>	<p>Fill in the “Subject:” and “Message:” content, to be used in the Email when sending to the user.</p> <p>The template variables are:</p> <ul style="list-style-type: none"> ◦ \t: TAB ◦ \${VM_NAME}: Recipient’s first name and last name ◦ \${VM_DUR}: The duration of the voicemail message ◦ \${VM_MAILBOX}: The recipient’s extension ◦ \${VM_CALLERID}: The caller ID of the person who has left the message ◦ \${VM_MSGNUM}: The number of messages in the mailbox ◦ \${VM_DATE}: The date and time when the message is left
---	---

Figure 167: Voicemail Email Settings

Click on “Load Default Settings” button to view the default template as an example.

Configure Voicemail Group

The UCM6200 supports voicemail group and all the extensions added in the group will receive the voicemail to the group extension. The voicemail group can be configured under Web GUI → **Call Features** → **Voicemail** → **Voicemail Group**. Click on “Create New Voicemail Group” to configure the group.

Figure 168: Voicemail Group

Voicemail Group Extension	Enter the Voicemail Group Extension. The voicemail messages left to this extension will be forwarded to all the voicemail group members.
Name	Configure the Name to identify the voicemail group. Letters, digits, _ and – are allowed.
Voicemail Password	The Voicemail password for the user to check Voicemail messages.
Email Address	The Email address of current user.
Member	Select available extensions from the left list and add them to the right list. The extensions need to have voicemail enabled to be listed in available mailboxes list. Note: Members selected cannot exceed 30 extensions.

Ring Group

The UCM6200 supports ring group feature with different ring strategies applied to the ring group members. This section describes the ring group configuration on the UCM6200.

Configure Ring Group

Ring group settings can be accessed via Web GUI → **Call Features** → **Ring Group**.

Figure 169: Ring Group


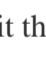



- Click on  to add ring group.
- Click on  to edit the ring group. The following table shows the ring group configuration parameters.
- Click on  to delete the ring group.

Table 73: Ring Group Parameters

Ring Group Name	Configure ring group name to identify the ring group. Letters, digits, _ and – are allowed.
Extension	Configure the ring group extension.
Members	Select available users from the left side to the ring group member list on the right side. Click on  to arrange the order.
LDAP Phonebook	Select available remote users from the left side to the ring group member list on the right side. Click on  to arrange the order. Note: LDAP Sync must be enabled first.

Ring Strategy	<p>Select the ring strategy. The default setting is “Ring in order”.</p> <ul style="list-style-type: none"> ◦ Ring simultaneously. <p>Ring all the members at the same time when there is incoming call to the ring group extension. If any of the member answers the call, it will stop ringing.</p> <ul style="list-style-type: none"> ◦ Ring in order. <p>Ring the members with the order configured in ring group list. If the first member does not answer the call, it will stop ringing the first member and start ringing the second member.</p>
Music On Hold	<p>Select the “Music On Hold” Class of this Ring Group, “Music On Hold” can be managed from the “Music On Hold” panel on the left.</p>
Custom Prompt	<p>This option is to set a custom prompt for a ring group to announce to caller. Click on ‘Prompt’, it will direct the users to upload the customized voice prompts.</p> <p>Note: Users can also refer to the page PBX Settings→Voice Prompt→Custom Prompt, where they could record new prompt or upload prompt files.</p>
Ring Timeout for Each Member	<p>Configure the number of seconds to ring each member. If set to 0, it will keep ringing. The default setting is 30 seconds.</p> <p>Note:</p> <p>The actual ring timeout might be overridden by users if the phone has ring timeout settings as well.</p>
Auto Record	<p>If enabled, calls on this ring group will be automatically recorded. The default setting is No. The recording files can be accessed from Web GUI→CDR→Recording Files.</p>
Endpoint Call Forwarding Support	<p>This allows the UCM to work with endpoint-configured call forwarding settings to redirect calls to ring group. For example, if a member wants to receive calls to the ring group on his mobile phone, he would have to set his endpoint’s call forwarding settings to his mobile number. By default, it is disabled.</p> <p>However, this feature has the following limitations:</p> <ul style="list-style-type: none"> ◦ ◦ This feature will work only when call forwarding is configured on endpoints, not on the UCM. ◦ If the forwarded call goes through an analog trunk, and polarity reversal is disabled, the other ring group members will no longer receive the call after it is forwarded. ◦ If the forwarded call goes through a VoIP trunk, and the outbound route for it is PIN-protected and requires authentication, the other ring group members will no longer receive the call after it is forwarded. ◦ If the forwarded call hits voicemail, the other ring group members will no longer receive the call.
Replace Display Name	<p>If enabled, the UCM will replace the caller display name with the Ring Group name the caller know whether the call is incoming from a direct extension or a Ring Group.</p>
Skip Busy Agent	<p>If enabled calls to busy agents will be skipped and sent to the following available ones. Default is enabled.</p>

<p>Enable Destination</p>	<p>If enabled, users could select extension, voicemail, ring group, IVR, call queue, voicemail group as the destination if the call to the ring group has no answer.</p> <p>Note: Voicemail Password and Email address (limited by 128 characters) are required if voicemail is selected as the destination. Voicemail system will mention if a voicemail is from a ring group.</p>
<p>Default Destination</p>	<p>The call would be routed to this destination if no one in this ring group answers the call.</p>

Edit Ring Group: 6400 Save

* Ring Group Name:

* Extension:

Members:

<p><input type="checkbox"/> 1 Available Extensions</p> <p>Search <input type="text"/></p> <p><input type="checkbox"/> 1002</p>	<p><</p> <p>></p>	<p><input type="checkbox"/> 3 Selected Extensions</p> <p>Search <input type="text"/></p> <p><input type="checkbox"/> 1001</p> <p><input type="checkbox"/> 1000 "John DOE@one"</p> <p><input type="checkbox"/> 1005 "Marcel LAST"</p>
--	-------------------------	--

LDAP Phonebook:

<p><input type="checkbox"/> 1 Available LDAP</p> <p>Search <input type="text"/></p> <p><input type="checkbox"/> 1002(ou=GSEMEA,dc=pbx,dc=com)</p> <p style="text-align: center;">None</p>	<p><</p> <p>></p>	<p><input type="checkbox"/> 0 Selected LDAP</p> <p>Search <input type="text"/></p> <p style="text-align: center;">None</p>
---	-------------------------	--

Ring Group Options

Ring Strategy:

Music On Hold:

Custom Prompt: Prompt

* Ring Timeout on E...:

Auto Record:

Figure 170: Ring Group Configuration

Remote Extension in Ring Group

Remote extensions from the peer trunk of a remote UCM6200 can be included in the ring group alongside local extensions. An example of Ring Group with peer extensions is presented in the following:

1. Create SIP trunks from UCM A to UCM B and vice-versa on the **Extension/Trunk->VoIP Trunks** page. Additionally, please create the appropriate outbound and inbound routes for these SIP trunks.
2. Click edit button in the menu , and check if **Sync LDAP Enable** is toggled on.

Edit SIP Trunk: test

Basic Settings

Advanced Settings

Codec Preference:

11 items Available	6 items Selected
<input type="checkbox"/> G.722	<input type="checkbox"/> PCMU
<input type="checkbox"/> AAL2-G.726-32	<input type="checkbox"/> PCMA
<input type="checkbox"/> ADPCM	<input type="checkbox"/> GSM
<input type="checkbox"/> G.723	<input type="checkbox"/> G.726

Send PPI Header:

Send PAI Header:

Passthrough PAI Header:

DID Mode: Request-line

DTMF Mode: Info

Enable Heartbeat Detection:

* The Maximum Number of Call Lines: 0

Fax Mode: None

SRTP: Disabled

IPVT Mode:

Sync LDAP Enable:

* Sync LDAP Password:

* Sync LDAP Port: 4444

LDAP Outbound Rule: Self-defined

* LDAP Dialed Prefix: 9

Figure 171: Sync LDAP Server option

1. In the scenario that the LDAP is not synced automatically, users can manually sync LDAP phonebooks by clicking on the LDAP sync button that's highlighted in the following image.



Figure 172: Manually Sync LDAP Server

1. Under **Ring Groups** setting page, click "Add". **Ring Groups** can be found under Web GUI→**Call Features**→**Ring Groups**.
2. If the LDAP phonebook has synced correctly, the remote UCM's extensions should appear in the **Create/Edit Ring Group**->**LDAP Phonebook** list.

Members:

Available Extensions	Selected Extensions
<input type="checkbox"/> 106 <input type="checkbox"/> 1000 <input type="checkbox"/> 1001 <input type="checkbox"/> 1002 <input type="checkbox"/> 1003	<input type="checkbox"/> 0 None

LDAP Phonebook:

Available LDAP	Selected LDAP
<input type="checkbox"/> 15 <input type="checkbox"/> 5000(ou=ucm6510,dc=pbx,dc=com) <input type="checkbox"/> 5001(ou=ucm6510,dc=pbx,dc=com) <input type="checkbox"/> 5002(ou=ucm6510,dc=pbx,dc=com) <input type="checkbox"/> 5003(ou=ucm6510,dc=pbx,dc=com)	<input type="checkbox"/> 0 None

Ring Group Options

Ring Strategy:

Music On Hold:

Custom Prompt: [Prompt](#)

Figure 173: Ring Group Remote Extension

Restrict Calls

Restrict calls is a feature that can be used to restrict calls between internal extensions besides those in the Allowed List.

This section describes the configuration of this feature in the **Call Features->Restrict Calls** page.

Edit Restrict Calls: Sales

Restrict Calls between Extension:

Members:

Available	Selected
<input type="checkbox"/> 2 items <input type="checkbox"/> 1003 <input type="checkbox"/> 1004	<input type="checkbox"/> 3 items <input type="checkbox"/> 1000 <input type="checkbox"/> 1002 <input type="checkbox"/> 1001

Allowed List:

Available	Selected
<input type="checkbox"/> 3 items <input type="checkbox"/> 1000 <input type="checkbox"/> 1001 <input type="checkbox"/> 1002	<input type="checkbox"/> 2 items <input type="checkbox"/> 1003 <input type="checkbox"/> 1004

Figure 174: Restrict Calls

Configure Restrict Calls



- Click on “Add” to add a rule for restrict calls.
- Click on  to edit the rule of restrict calls.
- Click on  to delete the rule of restrict calls.



Table 74: Restrict Calls Configuration Parameters

Name	Configure Restrict call’s name.
Restrict Calls between extensions	When enabled, members of the group cannot dial other extension, only the numbers in the Allowed List.
Members	Configure the members that will not be able to call any extensions besides those in the Allowed List.
Allowed list	Select the extensions that the Members list can be able to call.

Paging and Intercom Group

Paging and Intercom Group can be used to make an announcement over the speaker on a group of phones. Targeted phones will answer immediately using speaker. The UCM6200 paging and intercom can be used via feature code to a single extension or a paging/intercom group. This section describes the configuration of paging/intercom group under Web GUI→**Call Features**→**Paging/Intercom**.

Configure Paging/Intercom Group

- Click on “Add” to add paging/intercom group.
- Click on  to edit the paging/intercom group.
- Click on  to delete the paging/intercom group.
- Click on “Paging/Intercom Group Settings” to edit Alert-Info Header. This header will be included in the SIP INVITE message sent to the callee in paging/intercom call.

Configure Multicast Paging

Figure 175: Multicast Paging

Table 75: Multicast Paging Configuration Parameters

Name	Configure paging/intercom group name.
Type	Select “Multicast Paging”.
Extension	Configure the paging/intercom group extension.
Multicast IP Address	The allowed multicast IP address range is 224.0.1.0 – 238.255.255.255. Note: This field appears only when “Type” is set to “Multicast Paging”.
Maximum Call Duration	Specify the maximum call duration in seconds. The default value 0 means no limit.
Custom Prompt	This option is to configure a custom to play to paging callees. Users can now directly upload custom prompts from this page. They do not need to be redirected anymore.
Multicast IP Address	Configure the multicast IP address that endpoints will listen to.
Port	Configure the port for multicast paging. Note: This field appears only when “Type” is set to “Multicast Paging”.

Configure 2-way Intercom

Figure 176: 2-way Intercom

Table 76: 2-way Intercom Configuration Parameters

Name	Configure paging/intercom group name.
Type	Select “2-way Intercom”.
Extension	Configure the paging/intercom group extension.
Replace Display Name	If enabled, the UCM will replace the caller display name with Paging/Intercom name.
Maximum Call Duration	Specify the maximum call duration in seconds. The default value 0 means no limit.
Custom Prompt	This option is to set a custom prompt for a paging/intercom group to announce to caller. Users can now directly upload custom prompts from this page. They do not need to be redirected anymore.
Members	Select available users from the left side to the paging/intercom group member list on the right.
Paging/Intercom Whitelist	Select which extensions are allowed to use the paging/intercom feature for this paging group.

Configure 1-way Paging

Figure 177: 1-way Paging

Table 77: 1-way Paging Configuration Parameters

Name	Configure paging/intercom group name.
-------------	---------------------------------------

Type	Select “1-way Paging”.
Extension	Configure the paging/intercom group extension.
Replace Display Name	If enabled, the UCM will replace the caller display name with Paging/Intercom name.
Maximum Call Duration	Specify the maximum call duration in seconds. The default value 0 means no limit.
Custom Prompt	This option is to set a custom prompt for a paging/intercom group to announce to caller. Users can now directly upload custom prompts from this page. They do not need to be redirected anymore..
Members	Select available users from the left side to the paging/intercom group member list on the right.
Paging/Intercom Whitelist	Select which extensions are allowed to use the paging/intercom feature for this paging group.

Configure Announcement Paging

Figure 178: Announcement Paging

Table 78: Announcement Paging Configuration Parameters

Enable	Enable/Disable Announcement Paging.
Name	Configure paging/intercom group name.
Type	Select “Announcement Paging”
Custom Prompt	This option is to set a custom prompt for a paging/intercom group to announce to caller. Users can now directly upload custom prompts from this page. They do not need to be redirected anymore.
Repeat	If enabled, the announcement page will be repeated for the selected weekdays.
Date	Configure Announcement Paging Date.
Include Holidays	If enabled, Announcement Paging will run during holidays.
Time	Configure Announcement Paging Time.
Transmission Method	Configure Announcement Paging transmission method. Unicast: Depending on members selection Multicast: Depending on Multicast IP address and Port
Members	Select available users from the left side to the paging/intercom group member list on the right.

Configure Private Intercom

Private Intercom is a new paging type that is meant to be used with Grandstream GSC3510.

<http://www.grandstream.com/products/facility-management/intercoms-paging/product/gsc3510>

In a private intercom:

- The initiator can be heard by all parties
- The initiator can hear only one of the intercom members, which is determined by whose audio is initially detected. Audio from other members cannot be heard until the first responder is done talking.
- Intercom members can hear only the initiator’s audio and not other intercom members

Figure 179: Private Intercom

Table 79: Private Intercom Configuration Parameters

Name	Configure paging/intercom group name.
Type	Select “Private Intercom”.
Extension	Configure the paging/intercom group extension.
Replace Display Name	If enabled, the UCM will replace the caller display name with Paging/Intercom name.
Maximum Call Duration	Specify the maximum call duration in seconds. The default value 0 means no limit.
Custom Prompt	<p>This option is to set a custom prompt for a paging/intercom group to announce to caller. Click on ‘Prompt’, it will direct the users to upload the customized voice prompts.</p> <p>Note: Users can also refer to the page PBX Settings→Voice Prompt→Custom Prompt, where they could record new prompt or upload prompt files.</p>
Members	Select available users from the left side to the paging/intercom group member list on the right.
Paging/Intercom Whitelist	Select which extensions are allowed to use the paging/intercom feature for this paging group.

Paging/Intercom Group Settings

Figure 180: Page/Intercom Group Settings

The UCM6200 has pre-configured paging/intercom feature code. By default, the Paging Prefix is *81 and the Intercom Prefix is *80. To edit page/intercom feature code, click on “Feature Codes” in the “Paging/Intercom Group Settings” dialog. Or users could go to Web GUI→**Call Features**→**Feature Codes** directly.

Configure a Scheduled Paging/Intercom

Users can schedule paging/intercom calls by using the Schedule Paging/Intercom page. To schedule, click the Add button on the new page and configure the caller, the group to use, and the time to call out.

Figure 181: Schedule Paging/Intercom page

Table 80: Schedule Paging / Intercom Settings

Caller	Configure the caller ID for the paging / intercom group.
Paging/Intercom Group	Select the paging / intercom group from the list of the available groups.
Start Time	Configure the start time of the scheduled paging / intercom call.
Type	Select the type for the scheduled paging / intercom call. The available types are: Single time or Daily, Weekly basis. Default is “Single”.
Include Holidays	If enabled Paging/Intercom will run during holidays.
Action Status	Display the action status of the scheduled paging / intercom call.

Figure 182: Creating a scheduled paging/intercom call

Call Queue

The UCM provides call center functionality through its Call Queue feature. Static and dynamic agents can be assigned to queue groups to handle varying loads of call traffic. This section describes the configuration of call queues in the **Call Features->Call Queue** page.

Configure Call Queue

Call queue settings can be accessed via Web GUI→**Call Features**→**Call Queue**.

Figure 183: Call Queue

UCM6200 supports custom prompt feature in call queue. This custom prompt will active after the caller waits for a period of time in the Queue. Then caller could choose to leave a message/ transfer to default extension or keep waiting in the queue.

To configure this feature, please go to UCM Web GUI→**Call Features**→**Call Queue**→Create New Queue/Edit Queue→Queue Options→set Enable Destination to Enter Destination with Voice Prompt. Users could configure the wait time with Voice Prompt Cycle.



- Click on “Create New Queue” to add call queue.
- Click on  to edit the call queue. The call queue configuration parameters are listed in the table below.
- Click on  to delete the call queue.

Table 81: Call Queue Configuration Parameters

Basic Settings	
Extension	Configure the call queue extension number.
Name	Configure the call queue name to identify the call queue.

<p>Strategy</p>	<p>Select the strategy for the call queue.</p> <ul style="list-style-type: none"> ◦ Ring All <p>Ring all available Agents simultaneously until one answer.</p> <ul style="list-style-type: none"> ◦ Linear <p>Ring agents in the specified order.</p> <ul style="list-style-type: none"> ◦ Least Recent <p>Ring the agent who has been called the least recently.</p> <ul style="list-style-type: none"> ◦ Fewest Calls <p>Ring the agent with the fewest completed calls.</p> <ul style="list-style-type: none"> ◦ Random <p>Ring a random agent.</p> <ul style="list-style-type: none"> ◦ Round Robin <p>Ring the agents in Round Robin scheduling with memory.</p> <p>The default setting is “Ring All”.</p>
<p>Music On Hold</p>	<p>Select the Music On Hold playlist for the call queue.</p> <p>Note: Music On Hold playlists can be managed from Web GUI→PBX Settings→Music On Hold.</p>
<p>Max Queue Length</p>	<p>Configure the maximum number of calls that can be queued at once. This number does not include calls that have been connected with agents. It only includes calls not connected yet. The default setting is 0, which means unlimited. When the maximum value is reached, the caller will be treated with busy tone followed by the next calling rule after attempting to enter the queue.</p>
<p>Wrapup Time</p>	<p>Configure the number of seconds an agent must wait to receive a new call after completing a previous call. If set to 0, an agent can receive a new call as soon as a previous call is completed. Default is 10 seconds.</p>
<p>Retry Time</p>	<p>Configure the number of seconds to wait before ringing the next agent.</p>
<p>Ring Time</p>	<p>Configure the number of seconds to ring an agent before proceeding to ring the next agent. Default is 30 seconds.</p>
<p>Auto Record</p>	<p>If enabled, the calls on the call queue will be automatically recorded. The recording files can be accessed in Queue Recordings under Web GUI→Call Features→Call Queue.</p>
<p>Enable Record Feature Code</p>	<p>If enabled, call queue members can use recording feature code to pause or restore current queue’s recording when Auto Record is enabled for the queue. Default code for Start/Stop Call Recording is *3.</p>

Welcome Prompt	If enabled, users can upload an audio file that will be played as an initial tone when dialing the queue number.
Satisfaction Survey Prompt	When the agent hangs up, the system will play the prompt to ask the caller to rate their satisfaction scale from 1 to 5, where 5 is the highest.
Max Wait Time	Configure the maximum amount of seconds callers can wait before being disconnected from the queue. Default setting is 60 seconds. If left blank, there will be no limit to the amount of time a caller waits in queue. Note: It is recommended to configure “Wait Time” longer than the “Wrapup Time”.
Destination	Configure the destination that callers will be redirected to after the configured Max Wait Time has passed. Default is “Hang up”.
Reset Agent Call Counter – Enable	If enabled, the agent call completion count will be reset based on the frequency set in the Repeat and Date/Time fields.
Repeat	Specifies the frequency at which the Agent call counter will be reset.
Destination Prompt Cycle	Configure the frequency to play the Destination Prompt to callers waiting in queue.
Custom Prompt	The custom prompt to play to callers waiting in queue once the Destination Prompt Cycle period has been reached. Callers can press 1 to be redirected to the destination configured in Destination .
Destination	Select the failover destination to redirect callers to after pressing 1 during the custom prompt.
Advanced Settings	
<ul style="list-style-type: none"> ○ Virtual Queue ○ Position Announcement ○ Queue Chairman 	Refer to <i>Call Center Settings and Enhancements</i> section for detailed information about these features.
Enable Agent Login	Enables quick static agent login/logout via GXP21XX softekys. Supports GXP21XX endpoints on firmware 1.0.9.18 and higher.

<p>Leave When Empty</p>	<p>Configure whether or not callers will be disconnected from the queue based on agent availability.</p> <ul style="list-style-type: none"> ◦ Yes <p>Callers will be disconnected from the queue if all agents are paused or invalid.</p> <ul style="list-style-type: none"> ◦ No <p>Never disconnect the callers from the queue when the queue is empty.</p> <ul style="list-style-type: none"> ◦ Strict <p>Callers will be disconnected from the queue if there are no agents logged in or if all agents are paused or unavailable.</p>
<p>Dial in Empty Queue</p>	<p>Configure whether the callers can dial into a call queue if the queue has no agent. The default setting is “No”.</p> <ul style="list-style-type: none"> ◦ Yes <p>Callers can always dial into a call queue.</p> <ul style="list-style-type: none"> ◦ No <p>Callers cannot dial into a queue if all agents are paused or invalid.</p> <ul style="list-style-type: none"> ◦ Strict <p>Callers cannot dial into the queue if it has no agents logged in or if all agents in it are paused or unavailable.</p>
<p>Failover Destination</p>	<p>Configure the destination to redirect callers to based on the Leave When Empty and Dial in Empty Queue values.</p> <ul style="list-style-type: none"> ◦ Play Sound. ◦ Extension. ◦ Voicemail. ◦ Queues. ◦ Ring Group. ◦ Voicemail Group. ◦ IVR. ◦ External Number.
<p>Report Hold Time</p>	<p>If enabled, the UCM will report to the agent the amount of time a caller waited before being connected. Default is disabled.</p>
<p>Replace Display Name</p>	<p>If enabled, the UCM will replace the caller display name with the Call Queue name so that the caller knows the call is incoming from a Call Queue.</p>
<p>Enable Feature Codes</p>	<p>Enable feature codes option for call queue. For example, *83 is used for “Agent Pause”.</p> <p>Note: Callers can no longer use feature codes in established callbacks.</p>

Dynamic Login Password	If enabled, the configured PIN number is required for dynamic agent to log in. The default setting is disabled.
Alert-Info	Configure the call destination for the call to be routed to if no agent in this call queue answers the call.
Agents	
Agents	Go to “Agents” Tab and Select the available users to be the static agents in the call queue. Choose from the available users on the left to the static agents list on the right. Click on <input type="checkbox"/> to choose. And use UP and Down arrow to select the order of the agent within the call queue.

Static Agents limitation:

To guarantee a high level of audio quality with the call queue feature, UCMs will limit the number of static agents allowed to be assigned depending on the UCM model used. If the user attempts to configure the number of static agents to be more than the maximum allowed number, a warning message will appear.

Figure 184: Static Agents limit


The following table lists the maximum number of static agents for each UCM model:

Table 82: Static Agent Limitation

UCM Model	Max Static Agents in Call Queue
UCM6202	22
UCM6204	23
UCM6208	34
UCM6510	75

Click on “Global Queue Settings” to configure Agent Login Extension Postfix and Agent Logout Extension Postfix. Once configured, users could log in the call queue as dynamic agent.

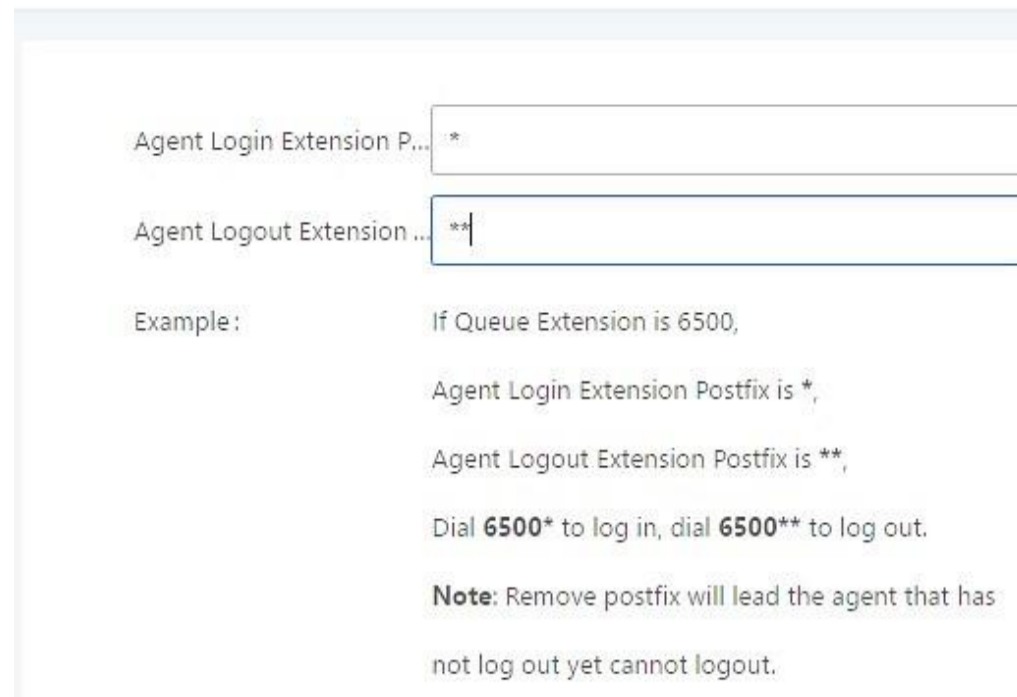Dynamic Agent Login Settings





Agent Login Extension P... *

Agent Logout Extension ... **

Example : If Queue Extension is 6500,
Agent Login Extension Postfix is *,
Agent Logout Extension Postfix is **,
Dial **6500*** to log in, dial **6500**** to log out.
Note: Remove postfix will lead the agent that has not log out yet cannot logout.

Figure 185: Agent Login Settings

For example, if the call queue extension is 6500, Agent Login Extension Postfix is * and Agent Logout Extension Postfix is **, users could dial 6500* to login to the call queue as dynamic agent and dial 6500** to logout from the call queue. Dynamic agent does not need to be listed as static agent and can log in/log out at any time.

- Call queue feature code “Agent Pause” and “Agent Unpause” can be configured under Web GUI→**Call Features**→**Feature Codes**. The default feature code is *83 for “Agent Pause” and *84 for “Agent Unpause”.
- Queue recordings are shown on the Call Queue page under “Queue Recordings” Tab. Click on  to download the recording file in .wav format; click on  to delete the recording file. To delete multiple recording files by one click, select several recording files to be deleted and click on “Delete Selected Recording Files” or click on “Delete All Recording Files” to delete all recording files.

Global Queue Settings	
Dynamic Agent Login Settings	<ul style="list-style-type: none"> ◦ Agent Login Code Suffix: Configure the code to dial after the queue extension to log into the queue (i.e queue extension + suffix). If no suffix is configured, dynamic agents will not be able to log in. ◦ Agent Logout code Suffix: Configure the code to dial after the queue extension to log out of the queue (i.e queue extension + suffix). If no suffix is configured, dynamic agents will not be able to log out.
Virtual Queue Callback Key settings	<ul style="list-style-type: none"> ◦ Call Back Current: Press this feature key to set your current number as callback number. ◦ Custom Callback Number: Press this feature key to set a custom callback number. ◦ Continue waiting: Press this feature key to continue waiting.

Call Center Settings and Enhancements

UCM supports additional call center features such as virtual call queue and position announcement, allowing callers to know their current position in the queue and providing them the option to either stay in the queue or request for callback once an agent is available.

To configure these, click on the  button for a queue group and click on the **Advanced Settings** tab. The following options are available:

Table 83: Call Center Parameters

Enable Virtual Queue	Enable virtual queue to activate call center features.
Virtual Queue Period	Configure the amount of seconds a caller must wait before the virtual queue prompt is played to them. Default is 20 seconds.
Virtual Queue Mode	<p>Timeout Mode: After the virtual queue period passes, the caller will enter the virtual call queue and be presented with a menu to choose an option, the choices are summarized below :</p> <ul style="list-style-type: none"> ○ Press * to set current number as callback number. ○ Press 0 to set a callback number different than current caller number. ○ Press # to keep waiting on the call queue. <p>Note: These options are customizable from the Global Queue Settings page.</p> <p>DTMF Mode: In this mode, the callers can activate the virtual queue by pressing 2, then they will be presented with the menu to choose an option as below:</p> <ul style="list-style-type: none"> ○ Press * to set current number as callback number. ○ Press 0 to set a callback number different than current caller number. ○ Press # to keep waiting on the call queue.
Virtual Queue Outbound Prefix	System will add this prefix to dialed numbers when calling back users.
Enable Virtual Queue Timeout	If enabled, agents will have a set amount of time to answer a virtual queue callback.
Write Timeout	Configure the virtual queue callback timeout period in seconds.
Enable Position Announcement	<p>If enabled, callers' positions in queue will be announced based on the frequency set in Position Announcement Interval.</p> <p>Note: Queue position will now be announced to the caller upon entering the queue.</p>
Position Announcement Interval	Configure the frequency of the caller position announcement.
Enable Hold time Announcement	<p>Enable the announcement of the estimated hold time to the caller periodically.</p> <p>Note: Hold time will not be announced if less than one minute.</p>
Queue Chairman	<p>Select the extension to act as chairman of the queue (monitoring).</p> <p>Note: One queue can have up to 3 chairmen.</p>

<p>Enable Agent Login</p>	<p>Enables quick static agent login/logout via GXP21xx softkeys. Supports GXP21XX endpoint on firmware 1.0.9.18 and higher.</p> <p>Notes:</p> <ul style="list-style-type: none"> o After enabling the feature, users need to set the option on GXP21XX phone under “Account→SIP Settings→Advanced Features→Special Feature” to “UCM Call Center” to display a softkey on the phone to login/logout. o When this option is enabled, dynamic agent login will be no longer supported. o In case of concurrent registrations, changing agent status on one phone (login/logout) will be reflected on all phones.
<p>Autofill</p>	<p>Toggles the way UCM handles and distributes call traffic. Please see the section below for more details.</p>

Queue Auto fill enhancement:

In previous UCM firmware, the call queue has a serial type behavior in that the queue will make all waiting callers wait in the queue even if there is more than one available member ready to take calls until the head caller is connected with the member they were trying to get to.

The next waiting caller in line then becomes the head caller, and they are then connected with the next available member and all available members and waiting callers waits while this happens.

Starting from 1.0.14.x, the waiting callers are connecting with available members in a parallel fashion until there are no more available members or no more waiting callers.

For example, in a call queue with linear method, if there are two available agents, when two callers call in the queue at the same time, UCM will assign the two callers to each of the two available agents at the same time, rather than assigning the second caller to second available agent after the first agent answers the call from the first caller.

Queue Statistics

Along with the mentioned call center features, UCM offers detailed call queue statistics, allowing system administrators to make informed decisions regarding call traffic distribution and handling.

Figure 186: Call Queue Statistics

Select the time interval along with the queue(s) and agent(s) to get detailed statistics.

User can download statistics on CSV format by clicking on the download button , also the statistics can be cleared using “Clear Statistics” button 

The statistics can be automatically sent to a specific email address on a preconfigured Period, this can be done by clicking on “Automatic Download Settings” button, and user will be directed to below page where he can configure the download period (Day/Week/Month) and the Email where the statistics will be sent (Email settings should be configured correctly):

Figure 187 : Automatic Download Settings – Queue Statistics

Significantly more information is now available UCM’s queue statistics page. In addition to the information presented in previous firmware, users can now view a call log that displays calls to all agents and queues, a dynamic agent login/logout record, and a pause log. Statistics reports for these new pages can be obtained by pressing the Download button in the top left corner of the Call Queue Statistics page. The reports are in .CSV format and will be packaged into a single tar.gz file upon download.

Agent Details

Agent Details is a call log that shows every call to each individual agent from all queues. The following information is available:

- Time – the date and time the call was received.
- Agent – the agent that was rung for the call.
- Queue – the queue that the call went to.
- Caller ID Number – the CID of the caller
- Abandoned – indicates whether the call was picked up or not by that specific agent. If the call rang several agents simultaneously, and this specific agent did not pick up the call, the call will be considered abandoned even if a different agent in the same queue picked it up.
- Wait Time – the amount of time that the call was waiting in queue after dialing in.
- Talk Time – the duration of the call after it was picked up by agent.

Figure 188: Agent details

Login Record

Login Record is a report that shows the timestamps of dynamic agent logins and logouts and calculates the amount of time the dynamic agents were logged in. Dynamic agents are extensions that log in and out either via agent login/logout codes (configured in *Global Queue Settings* page) or by using the GXP21xx call queue softkey. A new record will be created only when an agent logs out. The following information is available:

- Agent – the extension that logged in and out.
- Queue – the queue that the extension logged in and out of.
- Login Time – the time that the extension logged into the queue.

- Logout Time – the time that the extension logged out of the queue.
- Login Duration – the total length of time that the extension was logged in.

Figure 189: Login Record

Pause Log

Pause Log is a report that shows the times of agent pauses and unpauses and calculates the amount of time that agents are paused. If an agent is part of several queues, an entry will be created for each queue. An entry will only be created after an agent unpauses. The following information is available:

- Agent – the extension that paused and unpaused
- Queue – the queue that the agent is in.
- Pause Time – the time that the agent paused.
- Resume Time – the time that the agent unpaused.
- Pause Duration – the total length of time the agent was paused for.

Figure 190: Pause Log

Global Queue Settings

As explained before, under this section users can configure the feature codes for Dynamic agent login and logout, and also can now customize the keys for virtual queue options like shown below.

Figure 191: Global Queue Settings

Table 84: Global Queue Settings

Dynamic Agent Login Settings	
Agent Login Code Suffix	Configure the code to dial after the queue extension to log into the queue (i.e. queue extension + suffix). If no suffix is configured, dynamic agents will not be able to log in
Agent Logout Code Suffix	Configure the code to dial after the queue extension to log out of the queue (i.e. queue extension + suffix). If no suffix is configured, dynamic agents will not be able to log out.
Virtual Queue Callback Key Settings	
Call Back Current Number	Press the feature key configured to set your current number as callback number.
Custom Callback Number	Press the feature key configured to set a custom callback number.
Continue Waiting	Press the feature key configured to continue waiting.

Switchboard

Switchboard is a tool that allows system administrators and users to monitor and manage queues. This can be accessed from the **Call Features->Call Queue** page.

Figure 192: Switchboard Summary

Clicking on one of the queues shown above will bring up the following window:

Figure 193: Call Queue Switchboard

The table below gives a brief description for the main menus:

Table 85: Switchboard Parameters

Waiting	This menu shows the current waiting calls along with the caller id and the option to hang-up call by pressing on the button.
Proceeding	Shows the current established calls along with the caller id and the callee (agent) as well as the option to hang-up, transfer, add conference or barge-in the call.
Agents	<p>Displays the list of agents in the queue and the extension status (idle, ringing, in use or unavailable) along with some basic call statistics and agent's mode (static or dynamic).</p> <p>Note: the dashboard will show the number of calls (answered and abandoned) of each agent. For dynamic agents, it will count the number of calls starting from the last login time.</p>

There are three different privilege levels for Call Queue management from the switchboard: Super Admin, Queue Chairman, and Queue Agent.

- **Super Admin** – Default admin of the UCM. Call queue privileges include being able to view and edit all queue agents, monitor and execute actions for incoming and ongoing calls for each extension in Switchboard, and generate Call Queue reports to track performance.
- **Queue Chairman** – User appointed by Super Admin to monitor and manage an assigned queue extension via Switchboard. The Queue Chairman can log into the UCM user portal with his extension number and assigned user password. To access the Switchboard, click on “Value-added Features” in the side menu and click on “Call Queue”. In the image below, User 1012 is the Queue Chairman appointed to manage Queue Extension 6500 and can see all the agents of the queue in the Switchboard.

Note: Super Admin can assign 3 Chairmen

- **Queue Agent** – User appointed by Super Admin to be a member of a queue extension. A queue agent can log into the UCM user portal with his extension number and assigned user password. To access the Switchboard, click on “Value-added Features” in the side menu and click on “Call Queue”. However,

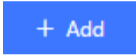


a queue agent can view and manage only his own calls and statistics, but not other agents' in the queue extension. In the image below, User 1000 is a queue agent and can see only his own information in the Switchboard.

Pickup Groups

The UCM6200 supports pickup group feature which allows users to pick up incoming calls for other extensions if they are in the same pickup group, by dialing "Pickup Extension" feature code (by default *8).

Configure Pickup Groups

Pickup groups can be configured via Web GUI→**Call Features**→**Pickup Groups**.

- Click on  to create a new pickup group.
- Click on  to edit the pickup group.
- Click on  to delete the pickup group.

Select extensions from the list on the left side to the right side.

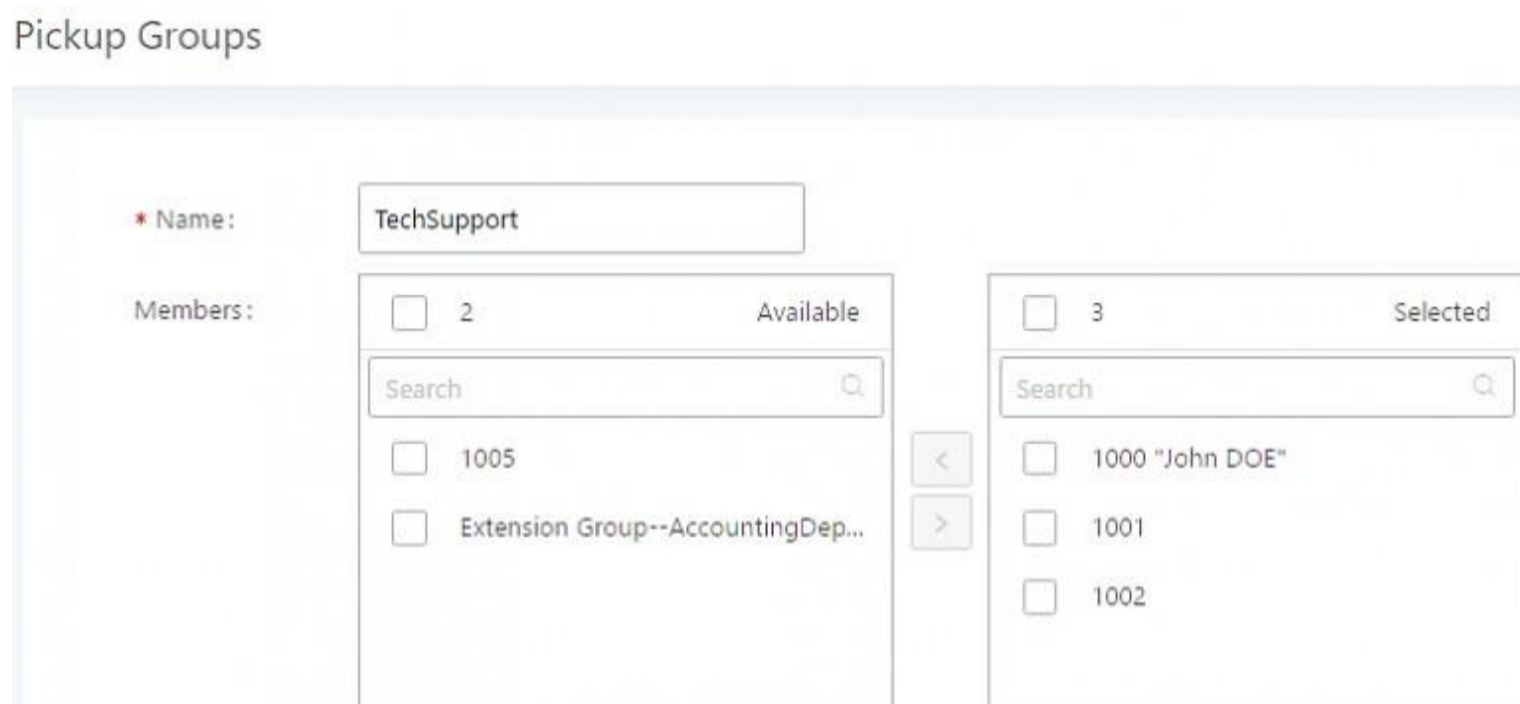


Figure 195: Edit Pickup Group

Configure Pickup Feature Code

When picking up the call for the pickup group member, the user only needs to dial the pickup feature code. It is not necessary to add the extension number after the pickup feature code. The pickup feature code is configurable under Web GUI→**Call Features**→**Feature Codes**.

The default feature code for call pickup extension is *8, otherwise if the person intending to pick up the call knows the ringing extension they can use ** followed by the extension number in order to perform the call pickup operation.

The following figure shows where you can customize these features codes

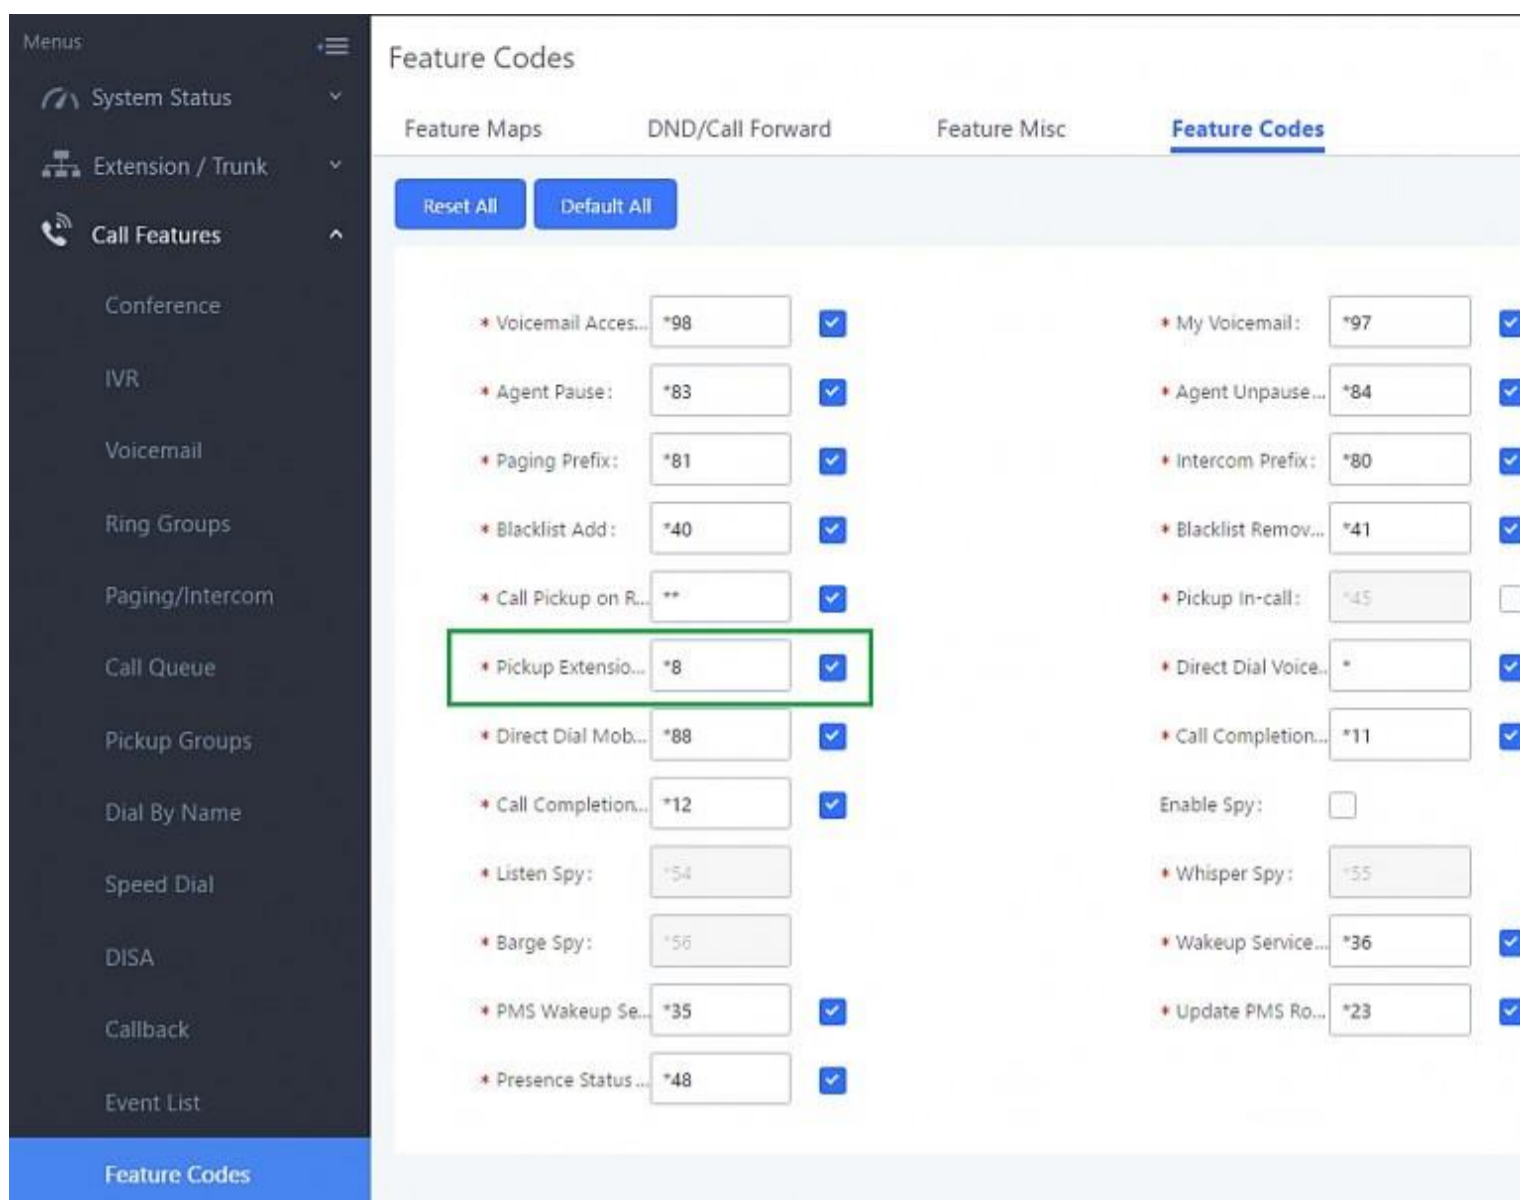


Figure 196: Edit Pickup Feature Code

Music On Hold

Music On Hold settings can be accessed via Web GUI→PBX Settings→Music On Hold. In this page, users could configure music on hold playlist and upload music files. The “default” Music On Hold playlist already has 5 audio files defined for users to use.

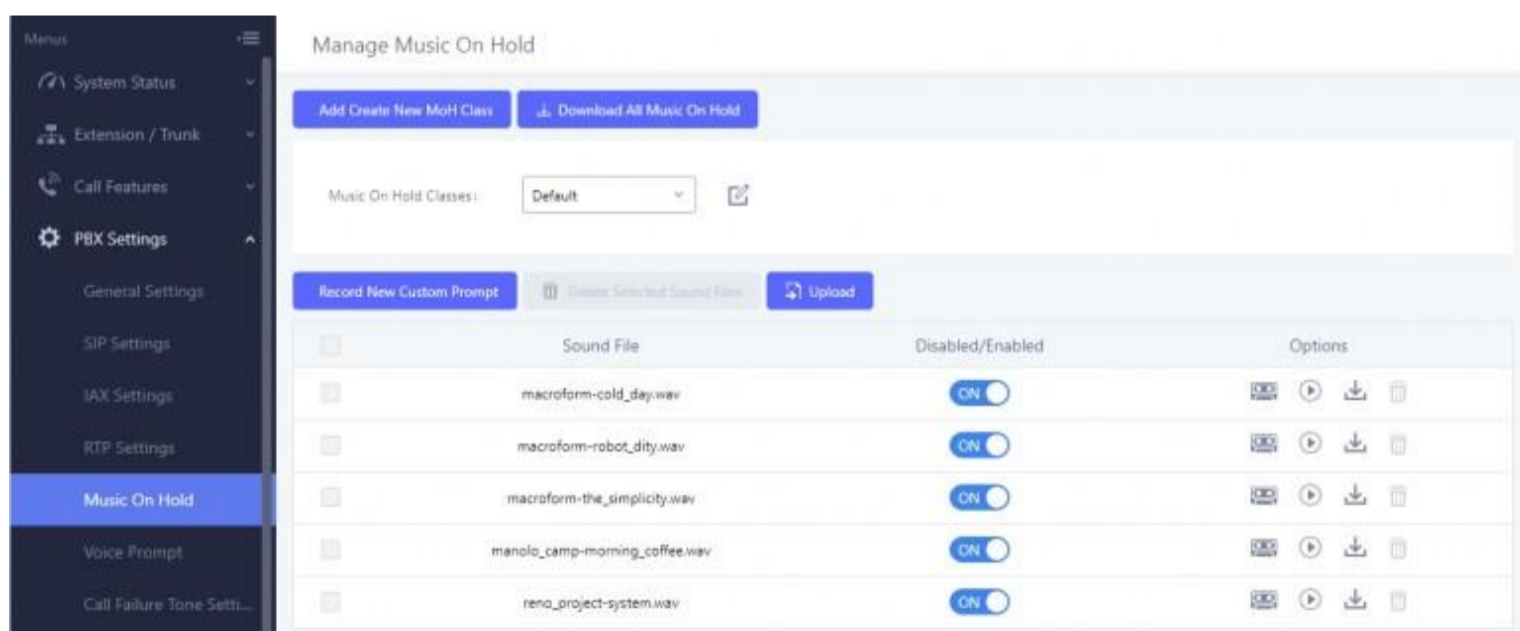


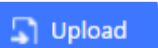


Figure 197: Music On Hold Default Playlist

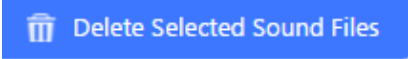
- Click on “Create New MOH Class” to add a new Music On Hold playlist.
- Click on  to configure the MOH class sort method to be “Name” or “Random” for the sound files.
- Click on  next to the selected Music On Hold playlist to delete this Music On Hold playlist.
- Click on  to start uploading. Users can upload:
 - Single files with 8KHz Mono Music file, or
 - Music on hold files in a compressed package with .tar, .tar.gz and .tgz as the suffix. The file name can only be letters, digits or special characters -_
 - the size for the uploaded file should be less than 30M, the compressed file will be applied to the entire MoH.

- Users could also download all the music on hold files from UCM. In the Music On Hold page, click on

 and the file will be downloaded to your local PC.

- Click on  next to the sound file to disable it from the selected Music On Hold Playlist.

- Click on  next to the sound file to enable it from the selected Music On Hold Playlist.

- Select the sound files and click on  to delete all selected music on hold files.

Note: the size for the uploaded file should be less than 30M, the compressed file will be applied to the entire MoH.

The UCM can play selected MOH files to extensions by initiating calls to them from the **Manage Music on Hold** page

Steps to play the music on hold file:



1. Click on the  button for the Music on Hold file.
2. In the prompted window, select the extension to playback and click .

Figure 198: Play Custom Prompt

1. The selected extension will ring.
2. Answer the call to listen to the music playback.

Users could also record their own Music on hold to override an existing custom prompt, this can be done by following those steps:


1. Click on .
2. A prompt of confirmation will pop up, as shown below.

Figure 199: Information Prompt



1. Click .
2. In the prompted window, select the extension to playback and click .

Figure 200: Record Custom Prompt

1. Answer the call and start to record your new music on hold.
2. Hangup the call and refresh Music On Hold page then you can listen to the new recorded file.

Notes:

Once the MOH file is deleted, there are two ways to recover the music files.

- Users could download the MOH file from this link:

<https://downloads.asterisk.org/pub/telephony/sounds/releases/asterisk-moh-opsound-wav-2.03.tar.gz>

After downloading and unzip the pack, users could then upload the music files to UCM.

- Factory reset could also recover the MOH file on the UCM.

Fax Server

The UCM6200 supports T.30/T.38 Fax and Fax Pass-through. It can convert the received Fax to PDF format and send it to the configured Email address.

Fax/T.38 settings can be accessed via Web GUI→**Call Features**→**FAX/T.38**. The list of received Fax files will be displayed in the same web page for users to view, retrieve and delete.

Configure Fax/T.38



- Click on “Create New Fax Extension”. In the popped-up window, fill the extension, name and Email address to send the received Fax to.
- Click on “**Fax Settings**” to configure the Fax parameters.
- Click on  to edit the Fax extension.
- Click on  to delete the Fax extension.

Figure 201: Fax Settings

Table 86: FAX/T.38 Settings

<p>Enable Error Correction Mode</p>	<p>Configure to enable Error Correction Mode (ECM) for the Fax.</p> <p>The default setting is “Yes”.</p>
<p>Maximum Transfer Rate</p>	<p>Configure the maximum transfer rate during the Fax rate negotiation.</p> <p>The possible values are 2400, 4800, 7200, 9600, 12000 and 14400.</p> <p>The default setting is 14400.</p>
<p>Minimum Transfer Rate</p>	<p>Configure the minimum transfer rate during the Fax rate negotiation. The possible values are 2400, 4800, 7200, 9600, 12000 and 14000. The default setting is 2400.</p>
<p>Max Concurrent Sending Fax</p>	<p>Configure the concurrent fax that can be sent by UCM6200. Two modes “Only” and “More” are supported.</p> <ul style="list-style-type: none"> ◦ Only <p>Under this mode, the UCM6200 allows only single user to send fax at a time.</p> <ul style="list-style-type: none"> ◦ More <p>Under this mode, the UCM6200 supports multiple concurrent fax sending by the users.</p> <p>By default, this option is set to “only”.</p>
<p>Fax Queue Length</p>	<p>Configure the maximum length of Fax Queue from 6 to 10.</p> <p>The default setting is 6.</p>
<p>User Information in Fax Header</p>	<p>If enabled this this will give users the option to send a special header in SIP fax messages.</p>

Fax Header Information	Adds fax header into the fax file.
Default Email Address	<p>Configure the Email address to send the received Fax to if user's Email address cannot be found.</p> <p>Note:</p> <p>The extension's Email address or the Fax's default Email address needs to be configured in order to receive Fax from Email. If neither of them is configured, Fax will not be received from Email.</p>
Template Variables	<p>Fill in the "Subject:" and "Message:" content, to be used in the Email when sending the Fax to the users.</p> <p>The template variables are:</p> <ul style="list-style-type: none"> ○ <code>{CALLERIDNUM}</code> : Caller ID Number ○ <code>{CALLERIDNAME}</code> : Caller ID Name ○ <code>{RECEIVEEXTEN}</code> : The extension to receive the Fax ○ <code>{FAXPAGES}</code> : Number of pages in the Fax ○ <code>{VM_DATE}</code> : The date and time when the Fax is received
Enable Fax Resend	Enables the fax resend option which allow the UCM to keep attempting to send faxes up to a specified amount of times. Additionally, if a fax still fails to send, a <i>Resend</i> button will appear in the File Send Progress list in <i>Value-Added Features</i> → <i>Fax Sending</i> to allow manual resending.
Max Resend Attempts	Configures the maximum attempts number to resend the fax.

Receiving Fax

Example Configuration to Receive Fax from PSTN Line

The following instructions describe how to use the UCM6200 to receive fax from PSTN line on the Fax machine connected to the UCM6200 FXS port.

1. Connect Fax machine to the UCM6200 FXS port.
2. Connect PSTN line to the UCM6200 FXO port.
3. Go to Web GUI → **Extension/Trunk** page.
4. Create or edit the analog trunk for Fax as below.

Fax Mode: Make sure "Fax Mode" option is set to "None".

Figure 202: Configure Analog Trunk without Fax Detection

1. Go to UCM6200 Web GUI→**Extension/Trunk**→**Extensions** page.
2. Create or edit the extension for FXS port.
 - **Analog Station:** Select FXS port to be assigned to the extension. By default, it is set to “None”.
 - Once selected, analog related settings for this extension will show up in “**Analog Settings**” section.

Figure 203: Configure Extension for Fax Machine: FXS Extension

Figure 204: Configure Extension for Fax Machine: Analog Settings

1. Go to Web GUI→**Extension/Trunk**→**Inbound Routes** page.
2. Create an inbound route to use the Fax analog trunk. Select the created extension for Fax machine in step 4 as the default destination.

Figure 205: Configure Inbound Rule for Fax

Now the Fax configuration is done. When there is an incoming Fax calling to the PSTN number for the FXO port, it will send the Fax to the Fax machine.

Example Configuration for Fax-To-Email

The following instructions describe a sample configuration on how to use Fax-to-Email feature on the UCM6200.

1. Connect PSTN line to the UCM6200 FXO port.
2. Go to UCM6200 Web GUI→**Call Features**→**Fax/T.38** page. Create a new Fax extension.

Figure 206: Create Fax Extension

1. Go to UCM6200 Web GUI→**Extension/Trunk**→**Analog Trunks** page. Create a new analog trunk. Please make sure “Fax Detection” is set to “No”.
2. Go to UCM6200 Web GUI→**Extension/Trunk**→**Inbound Routes** page. Create a new inbound route and set the default destination to the Fax extension.

Figure 207: Inbound Route to Fax Extension

1. Once successfully configured, the incoming Fax from external Fax machine to the PSTN line number will be converted to PDF file and sent to the Email address **fax@domain.local** as attachment.




<input type="checkbox"/>	Name ↕	Date ↕	Size ↕	Options
<input type="checkbox"/>	VFAX-7200-20170511-101636-1494497796.5.pdf	2017-05-11 10:17:01 UTC+00:00	12834	 

Figure 208: List of Fax Files

FAX Sending

Besides the support of Fax machines, The UCM6200 supports also sending Fax via Web GUI access. This feature can be found on Web GUI→**Value-added Features**→**Fax Sending** page. To send fax, pre-setup for analog trunk and outbound route is required. Please refer to *[ANALOG TRUNKS]*, *[VOIP TRUNKS]* and *[Outbound Routes]* sections for configuring analog trunk and outbound route.

After making sure analog trunk or VoIP Trunk is setup properly and UCM6200 can reach out to PSTN numbers via the trunk, on Fax Sending page, enter the fax number and upload the file to be faxed. Then click on “Send” to start. The progress of sending fax will be displayed in Web GUI. Users can also view the sending history is in the same web page.

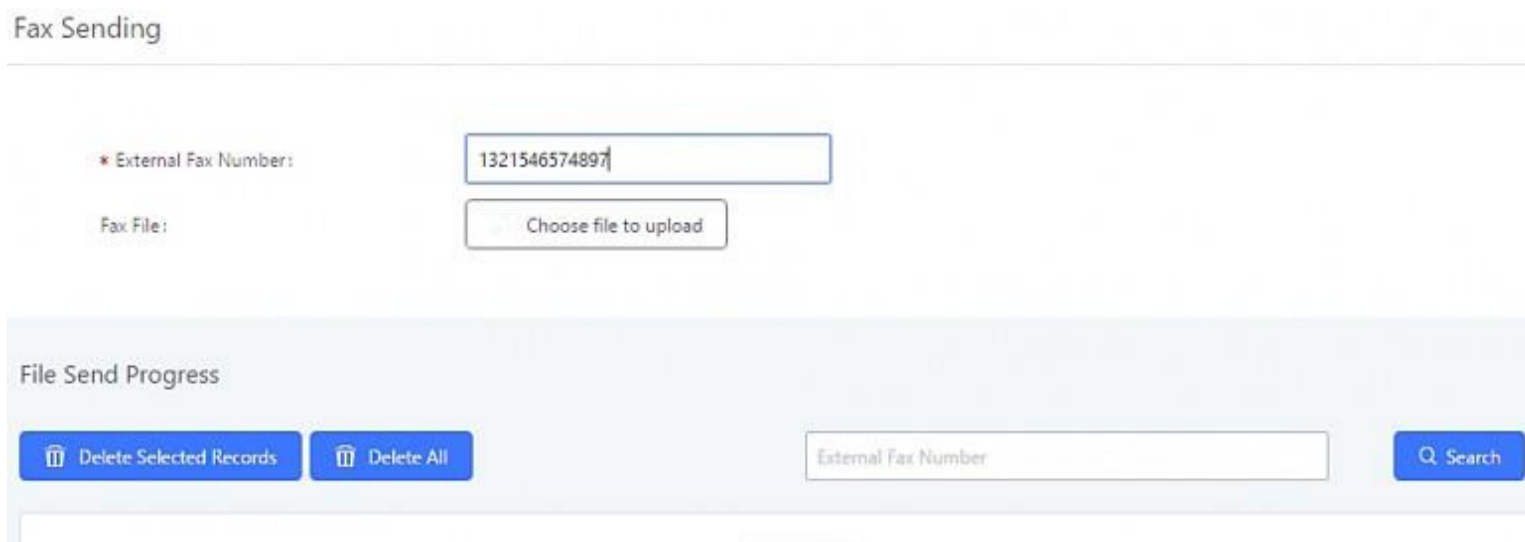


Figure 209: Fax Sending in Web GUI

After that you can see the ongoing sending operation on the progress bar.

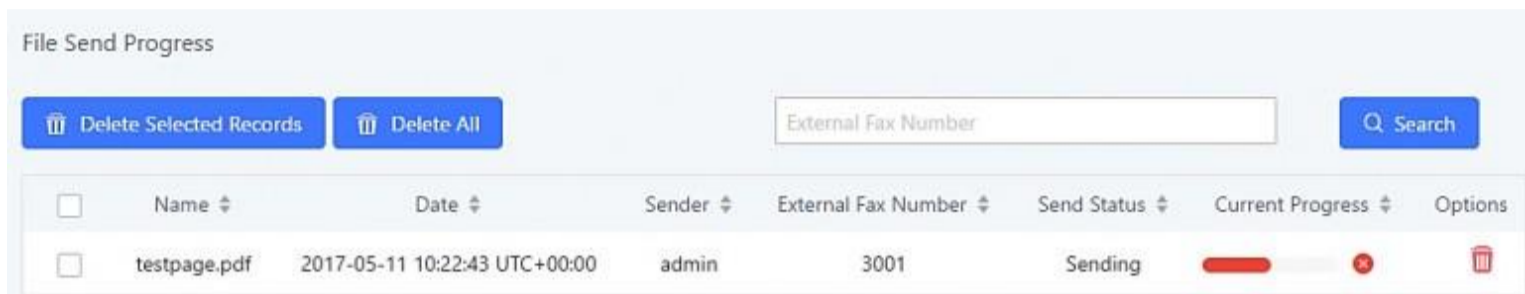


Figure 210: Fax Send Progress

Note: Only A3, A4, and B4 paper sizes are supported for the Fax Sending.

Busy Camp-On

The UCM6200 supports busy camp-on/call completion feature that allows the PBX to camp on a called party and inform the caller as soon as the called party becomes available given the previous attempted call has failed.

The configuration and instructions on how to use busy camp-on/call completion feature can be found in the following guide:

<https://documentation.grandstream.com/knowledge-base/busy-camp-on-2/>

Presence

UCM supports SIP presence, allowing extensions to advertise their current availability for calls. This presence can be monitored by other users.

Presence is different from BLF in that SIP presence is a status that users can manually set themselves.

Users can change presence status from the webUI:

Admin Portal: Navigate to **Extension/Trunk->Extensions->Edit Extension->Features** and click on the **Presence Status** dropdown list.

User Portal: Navigate to **Basic Information->Extensions->Features** and click on the **Presence Status** dropdown list.

Call Transfer

Presence Status: Available ▾

Available Away Chat Custom Presence Status Unavailable

Call Forward: None ▾ CFU Time Condition: All Time ▾

Unconditional: CFN Time Condition: All Time ▾

Call Forward No: None ▾ CFB Time Condition: All Time ▾

Answer: DND Time Condition: All Time ▾

Call Forward Busy: None ▾

Do Not Disturb: *DND Time Condition: All Time ▾

FWD Whitelist: ⊕

Figure 211: SIP Presence Configuration

Select which status to set from the presence status selection drop list.

The following options are available:

Table 87: SIP Presence Status

Available	The contact is online and can participate in conversations/phone calls.
Away	The contact is currently away (ex: for lunch break).
Chat	The contact has limited conversation flexibility and can only be reached via chat.
Do Not Disturb	The Contact is on DND (Do Not Disturb) mode.
Custom Presence Status	Please enter the presence status for this mode on the Web GUI. Up to 64 characters.
Unavailable	The contact is unreachable for the moment, please try to contact later.

Users can also set presence status by dialing the feature code from their phones (*48 by default). The prompt will ask users what presence status they want to set.

The feature code can be enabled and customized from the Web GUI → **Call Features** → **Feature Codes**.

* Voicemail Access Code:	<input type="text" value="*98"/>	<input checked="" type="checkbox"/>	* My Voicemail:	<input type="text" value="*97"/>	<input checked="" type="checkbox"/>
* Agent Pause:	<input type="text" value="*83"/>	<input checked="" type="checkbox"/>	* Agent Unpause:	<input type="text" value="*84"/>	<input checked="" type="checkbox"/>
* Paging Prefix:	<input type="text" value="*81"/>	<input checked="" type="checkbox"/>	* Intercom Prefix:	<input type="text" value="*80"/>	<input checked="" type="checkbox"/>
* Blacklist Add:	<input type="text" value="*40"/>	<input checked="" type="checkbox"/>	* Blacklist Remove:	<input type="text" value="*41"/>	<input checked="" type="checkbox"/>
* Call Pickup on Ringing:	<input type="text" value="**"/>	<input checked="" type="checkbox"/>	* Pickup In-call:	<input type="text" value="*45"/>	<input type="checkbox"/>
* Pickup Extension:	<input type="text" value="*8"/>	<input checked="" type="checkbox"/>	* Direct Dial Voicemail Prefix:	<input type="text" value="*"/>	<input checked="" type="checkbox"/>
* Direct Dial Mobile Phone Prefix:	<input type="text" value="*88"/>	<input checked="" type="checkbox"/>	* Call Completion Request:	<input type="text" value="*11"/>	<input checked="" type="checkbox"/>
* Call Completion Cancel:	<input type="text" value="*12"/>	<input checked="" type="checkbox"/>	Enable Spy:	<input type="checkbox"/>	
* Listen Spy:	<input type="text" value="*54"/>		* Whisper Spy:	<input type="text" value="*55"/>	
* Barge Spy:	<input type="text" value="*56"/>		* Wakeup Service:	<input type="text" value="*36"/>	<input checked="" type="checkbox"/>
* PMS Wakeup Service:	<input type="text" value="*35"/>	<input checked="" type="checkbox"/>	* Update PMS Room Status:	<input type="text" value="*23"/>	<input checked="" type="checkbox"/>
* Presence Status:	<input type="text" value="*48"/>	<input checked="" type="checkbox"/>	* Dynamic Agent Logout:	<input type="text" value="*85"/>	<input checked="" type="checkbox"/>

Figure 212: SIP Presence Feature Code

When a user does change his/her SIP presence status by making a call using presence feature code, the UCM will create a corresponding CDR entry showing the call as **Action type = PRSENCE_STATUS**.

CDR Filter

By default, this page displays the CDR entries from the current month. Use the "Filter" button to specify a time range.

Delete All
Delete Search Result (s)
Download All Records
Download Search Result (s)
Automatic Download

Status	Call from	Call to	Action Type	Start Time	Call Time	Talk Time	Account Code	Recording File Options
+	*4004* 4004	*48	PRESENCE_STATUS	2018-01-30 05:53:02	0:00:30	0:00:30		-
+	*4002* 4002	4001	DIAL	2018-01-29 06:18:43	0:00:03	0:00:00		-
+	0622667315 [Trunk: GXP2160]	4001	DIAL	2018-01-29 06:13:01	0:00:14	0:00:03		-
+	*4001* 4001	5475 [Trunk: GXP2160]	DIAL	2018-01-29 04:47:13	0:00:05	0:00:04		-
+	*4001* 4001	65465476 [Trunk: GXP2160]	DIAL	2018-01-29 04:46:25	0:00:01	0:00:00		-
+	*4001* 4001	9	DIAL	2018-01-29 04:46:21	0:00:02	0:00:00		-

Total: 6 1 10 / page Goto 1

Figure 213: Presence Status CDR



Follow Me

Follow Me is a feature on the UCM6200 that allows users to direct calls to other phone numbers and have them ring all at once or one after the other. Calls can be directed to users' home phone, office phone, mobile and etc. The calls will get to the user no matter where they are. Follow Me option can be found under extension settings page Web GUI→**Extension/Trunk**→**Extensions**.

To configure follow me:

1. Choose the extension and click on
2. Go to the Follow me tab to add destination numbers and enable the feature.




Figure 214: Edit Follow Me

1. Click on  to add local extensions or external numbers to be called after ringing the extension selected in the first step.
2. Once created, it will be displayed on the follow me list. And you can click on  to delete the Follow Me.

The following table shows the Follow Me configuration parameters:

Table 88: Follow Me Settings

Enable	Configure to enable or disable Follow Me for this user.
Skip Trunk Auth	If external number is added in the Follow Me, please make sure this option is enabled or the “Skip Trunk Auth” option of the extension is enabled, otherwise the external Follow Me number cannot be reached.
Music On Hold Class	Configure the Music On Hold class that the caller would hear while tracking users
Confirm When Answering	By default, it is enabled, and user will be asked to press 1 to accept the call or to press 2 to reject the call after answering a Follow Me call. If it is disabled, the Follow Me call will be established once after the user answers.
Enable Destination	When enabled, the call will be routed to the default destination if no one in the Follow Me extensions answers the call.

Default Destination	Configure the destination if no one in the Follow Me extensions answers the call. The available options are: Extension Voicemail Queues Ring Group Voicemail Group IVR External Number
Follow Me Numbers	The added numbers are listed here. Click on  to arrange the order. Click on  to delete the number. Click on  to add new numbers.
New Follow Me Number	Add a new Follow Me number which could be a ‘Local Extension’ or ‘External Number’. The selected dial plan should have permissions to dial the defined external number.
Dialing Order	Select the order in which the Follow Me destinations will be dialed to reach the user: ring all at once or ring one after the other.

Click on “Follow Me Options” under Web GUI→**Extension/Trunk**→**Extension** page to enable or disable the options listed in the following table.

Table 89: Follow Me Options

Playback Incoming Status Message	If enabled, the PBX will playback the incoming status message before starting the Follow Me steps.
Record the Caller’s Name	If enabled, the PBX will record the caller’s name from the phone so it can be announced to the callee in each step.
Playback Unreachable Status Message	If enabled, the PBX will playback the unreachable status message to the caller if the callee cannot be reached.

Speed Dial

The UCM6200 supports Speed Dial feature that allows users to call specified destinations by pressing only 1-4 digits. This creates a system-wide speed dial access for all the extensions on the UCM6200.

To enable Speed Dial, on the UCM6200 Web GUI, go to page Web GUI→**Call Features**→**Speed Dial**.


User should first click on  then create a speed dial extension and assign a destination to it. Supported destinations are Extension, Conference Room, Video Conference Room, Voicemail, Voicemail Group, IVR, Ring Group, Queue, Paging/Intercom Group, Fax, DISA, Dial by Name, Announcement, and External Number.

Figure 215: Speed Dial Destinations

Figure 216: List of Speed Dial

DISA

In many situations, the user will find the need to access his own IP PBX resources, but he is not physically near one of his extensions. However, he does have access to his own cell phone. In this case, we can use what is commonly known as DISA (Direct Inward System Access). Under this scenario, the user will be able to call from the outside, whether it is using his cell phone, pay phone, regular PSTN, etc. After calling into UCM6200, the user can then dial out via the SIP trunk or PSTN trunk connected to UCM6200 as it is an internal extension.

The UCM6200 supports DISA to be used in IVR or inbound route. Before using it, create new DISA under Web GUI→**Call Features**→**DISA**.


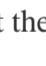

- Click on  to add a new DISA.
- Click on  to edit the DISA configuration.
- Click on  to delete the DISA.

Figure 217: Create New DISA

The following table details the parameters to set and configure DISA feature on UCM6200 PBX.

Table 90: DISA Settings

Name	Configure DISA name to identify the DISA.
Password	Configure the password (digit only) required for the user to enter before using DISA to dial out. Note: The password must be at least 4 digits.
Permission	Configure the permission level for DISA. The available permissions are “Internal”, “Local”, “National” and “International” from the lowest level to the highest level. The default setting is “Internal”. If the user tries to dial outbound calls after dialing into the DISA, the UCM6200 will compare the DISA’s permission level with the outbound route’s privilege level. If the DISA’s permission level is higher than (or equal to) the outbound route’s privilege level, the call will be allowed to go through.
Response Timeout	Configure the maximum amount of time the UCM6200 will wait before hanging up if the user dials an incomplete or invalid number. The default setting is 10 seconds.
Digit Timeout	Configure the maximum amount of time permitted between digits when the user is typing the extension. The default setting is 5 seconds.
Allow Hangup	If enabled, during an active call, users can enter the UCM6200 Hangup feature code (by default it is *0) to disconnect the call or hang up directly. A new dial tone will be heard shortly for the user to make a new call. The default setting is “No”.
Replace Display Name	If enabled, the UCM will replace the caller display name with the DISA name.

Once successfully created, users can configure the inbound route destination as “DISA” or IVR key event as “DISA”. When dialing into DISA, users will be prompted with password first. After entering the correct password, a second dial tone will be heard for the users to dial out.

Emergency

UCM supports configuration and management of numbers to be called in emergency situation, thus bypassing the regular outbound call routing process and allowing users in critical situation to dial out for emergency help with the possibility to have redundant trunks as point of exit in case one of the lines is down.

UCM6xxx series are also now in full compliance with Kari’s Law and Ray Baum’s Act, for more information, please refer to the following links:

<https://www.fcc.gov/mlts-911-requirements>

<https://documentation.grandstream.com/knowledge-base/emergency-calls/>

In addition, Emergency calls can be automatically recorded by toggling on the new Auto Record and recordings can be viewed in the new Emergency Recordings tab on the same page. Additionally, users can have these recordings be sent to the configured email address(es).

Email alerts are also supported after enabling the notification for the event under “**Maintenance → System Events**”

To configure emergency numbers, users need to follow below steps:

1. Navigate on the web GUI under “**Call Features → Emergency Calls**”
2. Click on **+ Add** to add a new emergency number.
3. Configure the required fields “Name, Emergency Number and Trunk(s) to be used to reach the number”.
4. Save and apply the configuration.

The screenshot shows a web form titled "Create New Emergency Call". The form contains the following fields and controls:

- * Name:** Text input field containing "911".
- * Emergency Number:** Text input field containing "911".
- Emergency Level:** Dropdown menu with "1 - Not Urgent" selected.
- Disable Hunt on Busy:** Unchecked checkbox.
- Custom Prompt:** Dropdown menu with "None" selected, and a "Prompt" link to the right.
- * Use Trunks:** Empty text input field.
- * Members Notified:** Two side-by-side selection panes. The left pane is titled "11 items Available" and contains a search bar and a list of items: "1001 'John Doe'", "1002", "1003", and "1004". The right pane is titled "1 item Selected" and contains a search bar and one item: "1000 'James tuan'".
- Strip:** Empty text input field.
- Prepend:** Empty text input field.
- Auto Record:** Checked checkbox.
- Send Recording File:** Checked checkbox.
- Email Address:** Text input field containing "admin@domain.local" and a plus icon to the right.

Figure 218: Emergency Number Configuration

The table below gives more description of the configuration Parameters when creating emergency numbers.

Table 91: Emergency Numbers Parameters

Name	<p>Configure the name of the emergency call.</p> <p>For example, “emergency911”, “emergency211” and etc.</p>
-------------	--

Emergency Number	Config the emergency service number. For example,"911","211" and etc.
Emergency Level	Select the emergency level of the number. Level "3" means the most urgent.
Disable Hunt on Busy	If this option is not enabled, when the lines of trunks which the coming emergency call routes by are completely occupied, the line-grabbing function will automatically cut off a line from all busy lines so that the coming emergency call can seize it for dialing out. This option is not enabled by default.
Custom Prompt	Configures a custom prompt that will be played to the notified extensions when an emergency call is made. The file can be uploaded from the page "Custom Prompt". Click "Upload Audio File" to add a custom prompt.
Use Trunks	Select the trunks for the emergency call. Up to five trunks can be selected.
Members Notified	Select the members who will be notified when an emergency call occurs.
Strip	Specify the number of digits that will be Stripped from the beginning of the dialed number before the call is placed via the selected trunk. Note: Users can strip the same amount of numbers as the emergency number length itself.
Prepend	Specify the digits to be Prepended before the call is placed via the trunk. Those digits will be prepended after the dialing number is stripped.
Auto Record	When enabled, emergency call will be automatically recorded.
Send Recording File	When enabled recording files will be sent to the configured email address.
Email Address	Configure the email addresses that will receive emergency call notifications.

The screenshot shows a web interface titled "Emergency Calls". At the top left, there is a blue button with a plus sign and the text "+ Add". Below this is a table with the following columns: "Name", "Emergency Number", "Emergency Level", "Disable Hunt on Busy", and "Options". The table contains one row with the following values: "911", "911", "1", "No", and two icons (a pencil and a trash can).

Name	Emergency Number	Emergency Level	Disable Hunt on Busy	Options
911	911	1	No	

Figure 219: 911 Emergency Sample

Callback

Callback is mainly designed for users who often use their mobile phones to make long distance or international calls which may have high service charges. The callback feature provides an economic solution for reduce the cost from this.

The callback feature works as follows:

1. Configure a new callback on the UCM6200.
2. On the UCM6200, configure destination of the inbound route for analog trunk to callback.

3. Save and apply the settings.
4. The user calls the PSTN number of the UCM6200 using the mobile phone, which goes to callback destination as specified in the inbound route.
5. Once the user hears the ringback tone from the mobile phone, hang up the call on the mobile phone.
6. The UCM6200 will call back the user.
7. The user answers the call.
8. The call will be sent to DISA or IVR which directs the user to dial the destination number.
9. The user will be connected to the destination number.

In this way, the calls are placed and connected through trunks on the UCM6200 instead of to the mobile phone directly. Therefore, the user will not be charged on mobile phone services for long distance or international calls.

To configure callback on the UCM6200, go to Web GUI → **Call Features** → **Callback** page and click on [Configure](#). Configuration parameters are listed in the following table.

Table 92: Callback Configuration Parameters

Name	Configure a name to identify the Callback. (Enter at least two characters)
CallerID Pattern	Configure the pattern of the callers allowed to use this callback. The caller who places the inbound call needs to have the CallerID match this pattern so that the caller can get callback after hanging up the call. Note: If leaving as blank, all numbers are allowed to use this callback.
Outbound Prepend	Configure the prepend digits to be added at before dialing the outside number. The number with prepended digits will be used to match the outbound route. '-' is the connection character which will be ignored.
Delay Before Callback	Configure the number of seconds to be delayed before calling back the user.
Destination	Configure the destination which the callback will direct the caller to. Two destinations are available: <ul style="list-style-type: none"> ◦ IVR ◦ DISA <p>The caller can then enter the desired number to dial out via UCM6200 trunk.</p>

BLF and Event List

BLF

The UCM6200 supports BLF monitoring for extensions, ring group, call queue, conference room and parking lot. For example, on the user's phone, configure the parking lot number 701 as the BLF monitored number. When there is a parked call on 701, the LED for this BLF key will light up in red, meaning a call is parked against this parking lot. Pressing this BLF key can pick up the call from this parking lot.

Note:

On the Grandstream GXP series phones, the MPK supports “Call Park” mode, which can be used to park the call by configuring the MPK number as call park feature code (e.g., 700). MPK “Call Park” mode can also be used to monitor and pickup parked call if the MPK number is configured as parking lot (e.g., 701).

Event List

Besides BLF, users can also configure the phones to monitor event list. In this way, both local extensions on the same UCM6200 and remote extensions on the VOIP trunk can be monitored. The event list setting is under Web GUI→**Call Features**→**Event List**.



- Click on “Create New Event List” to add a new event list.
- Sort selected extensions manually in the Eventlist
- Click on  to edit the event list configuration.
- Click on  to delete the event list.

Figure 220: Create New Event List

Table 93: Event List Settings

URI	Configure the name of this event list (for example, office_event_list). Please note the URI name cannot be the same as the extension name on the UCM6200. The valid characters are letters, digits, _ and -.
Local Extensions	Select the available extensions/Extension Groups listed on the local UCM6200 to be monitored in the event list.

Remote Extensions	If LDAP sync is enabled between the UCM6200 and the peer UCM6200, the remote extensions will be listed under “Available Extensions”. If not, manually enter the remote extensions under “Special Extensions” field.
Special Extensions	Manually enter the remote extensions in the peer/register trunk to be monitored in the event list. Valid format: 5000,5001,9000

Event List BLF can be used to monitor remote LDAP extensions on VoIP trunks. SIP endpoints will need to support event list BBLF to monitor remote extensions.

When an event list is created on the UCM and remote extensions are added to the list, the UCM will send out SIP SUBSCRIBE to the remote UCM to obtain the remote extension status. When the SIP end points register and subscribe to the local UCM event list, it can obtain the remote extension status from this event list. Once successfully configured, the event list page will show the status of total extension and subscribers for each event list. Users can also select the event URI to check the monitored extension’s status and the subscribers’ details.

Notes:

- To configure LDAP sync, please go to UCM6200 Web GUI→**Extension/Trunk**→**VoIP Trunk**. You will see “Sync LDAP Enable” option. Once enabled, please configure password information for the remote peer UCM6200 to connect to the local UCM6200. Additional information such as port number, LDAP outbound rule, LDAP Dialed Prefix will also be required. Both the local UCM6200 and remote UCM6200 need enable LDAP sync option with the same password for successful connection and synchronization.
- Currently LDAP sync feature only works between two UCMs.
- (Theoretically) Remote BLF monitoring will work when the remote PBX being monitored is non-UCM6200 PBX. However, it might not work the other way around depending on whether the non-UCM6200 PBX supports event list BLF or remote monitoring feature.

Dial by Name

Dial by Name is a feature on the PBX that allows caller to search a person by first or last name via his/her phone’s keypad. The administrator can define the Dial by Name directory including the desired extensions in the directory and the searching type by “first name” or “last name”. After dialing in, the PBX IVR/Auto Attendant will guide the caller to spell the digits to find the person in the Dial by Name directory. This feature allows customers/clients to use the guided automatic system to get in touch with the enterprise employees without having to know the extension number, which brings convenience and improves business image for the enterprise.

Dial by Name Configuration

The administrators can create the dial by name group under Web GUI→**Call Features**→**Dial By Name**.

Figure 221: Create Dial by Name Group

Figure 222: Configure Extension First Name and Last Name

1. **Name:** Enter a Name to identify the Dial By Name group.
2. **Extension:** Configure the direct dial extension for the Dial By Name group.
3. **Custom Prompt:** This option sets a custom prompt for directory to announce to a caller. The file can be uploaded from the page “Custom Prompt”. Click “Upload Audio File” to add additional record.
4. **Available Extensions/Selected Extensions:** Select available extensions from the left side to the right side as the directory for the Dial By Name group. Only the selected extensions here can be reached by the Dial By Name IVR when dialing into this group. The extensions here must have a valid first name and last name configured under Web GUI→**Extension/Trunk**→**Extensions** in order to be searchable in Dial By Name directory through IVR. By specifying the extensions here, the administrators can make sure unscreened calls will not reach the company employee if he/she does not want to receive them directly.

1. **Prompt Wait Time**

Configure “Prompt Wait Time” for Dial By Name feature. During Dial By Name call, the caller will need to input the first letters of First/Last name before this wait time is reached. Otherwise, timeout will occur, and the call might hang up. The timeout range is between 3 and 60 seconds.

1. Query Type

Specify the query type. This defines how the caller will need to enter to search the directory.

By First Name: enter the first 3 digits of the first name to search the directory.

By Last Name: enter the first 3 digits of the last name to search the directory.

By Full Name: enter the first 3 digits of the first name or last name to search the directory.

1. Select Type

Specify the select type on the searching result. The IVR will confirm the name/number for the party the caller would like to reach before dialing out.

By Order: After the caller enters the digits, the IVR will announce the first matching party’s name and number. The caller can confirm and dial out if it is the destination party, or press * to listen to the next matching result if it is not the desired party to call.

By Menu: After the caller enters the digits, the IVR will announce 8 matching results. The caller can press number 1 to 8 to select and call or press 9 for results in next page.

The Dial by Name group can be used as the destination for inbound route and key pressing event for IVR. The group name defined here will show up in the destination list when configuring IVR and inbound route. If Dial by Name is set as a key pressing event for IVR, users can dial star (*) to exit from Dial by Name, and re-enter the IVR to start a new event. The following example shows how to use this option.

Figure 223: Dial By Name Group In IVR Key Pressing Events

Figure 224: Dial By Name Group In Inbound Rule

Username Prompt Customization

Starting from fw 1.0.15.x, the Dial By Name feature can use the recorded name prompt of a user to announce his/her name assigned to the dialed extension. If no name prompt greeting exists, the name will be spelt out like in previous versions.

There are two ways to customize/set new username prompt for an extension:





Upload Username Prompt File from Web GUI

1. First, Users should have a pre-recorded file respecting the following format:

- PCM encoded / 16 bits / 8000Hz mono.
- In .GSM or .WAV format.
- File size under 5MB.
- Filename must be set as the extension number. For example, the recorded file name 1000.wav will be used for extension 1000.

1. Go under web GUI **PBX Settings** → **Voice Prompt** → **Username Prompt** and click on  button.

2. Select the recorded file to upload it and press Save and Apply Settings.

- Click on  to record again the username prompt.
- Click on  to play recorded username prompt.
- Select username prompts and press  to delete specific file or select multiple files for deletion using the button .

Record Username via Voicemail Menu

Users can also record their username via the voicemail menu.

- Dial *97 or *98 to access the voicemail menu. If *98 is dialed, enter the desired extension and voicemail password.
- Upon entering the extension's voicemail system, dial 0 to enter the recordings menu.
- Press 3 to start recording the username.

Active Calls and Monitor

The active calls on the UCM6200 are displayed in Web GUI→**System Status**→**Active Calls** page. Users can monitor the status, hang up the call as well as barge in the active calls in real time manner.

Active Calls Status

To view the status of active calls, navigate to Web GUI→**System Status**→**Active Calls**. The following figure shows extension 1000 is calling 1001. 1001 is ringing.

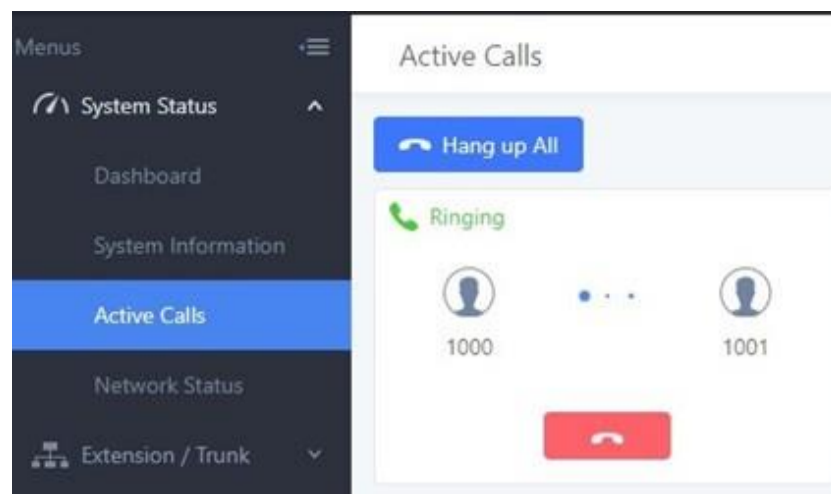


Figure 225: Status→PBX Status→Active Calls – Ringing

The following figure shows the call between 1002 and 1003 is established.

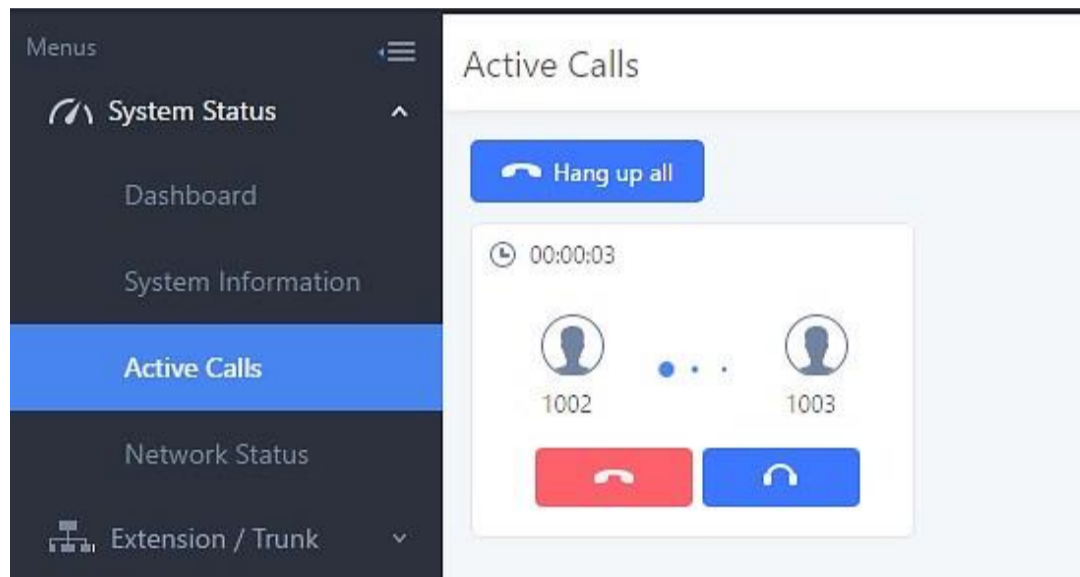


Figure 226: Status→PBX Status→Active Calls – Call Established

The black color of the active call means the connection of call time is less than half an hour. It means this call is normal.

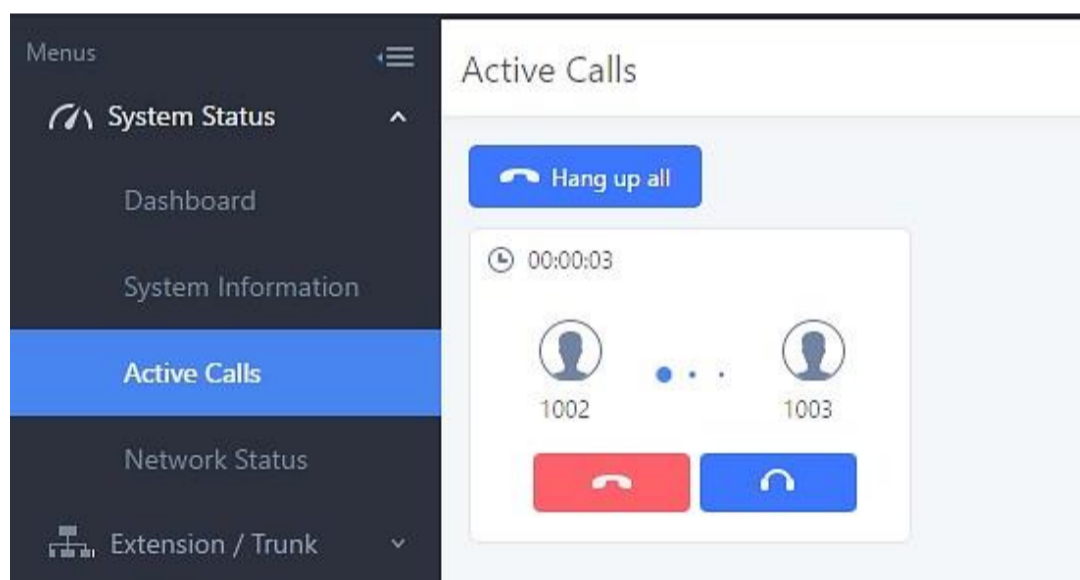


Figure 227: Call Connection less than half hour

The yellow color of the active call means the connection of call time is greater than half an hour but less than one hour. It means this call is a bit long.

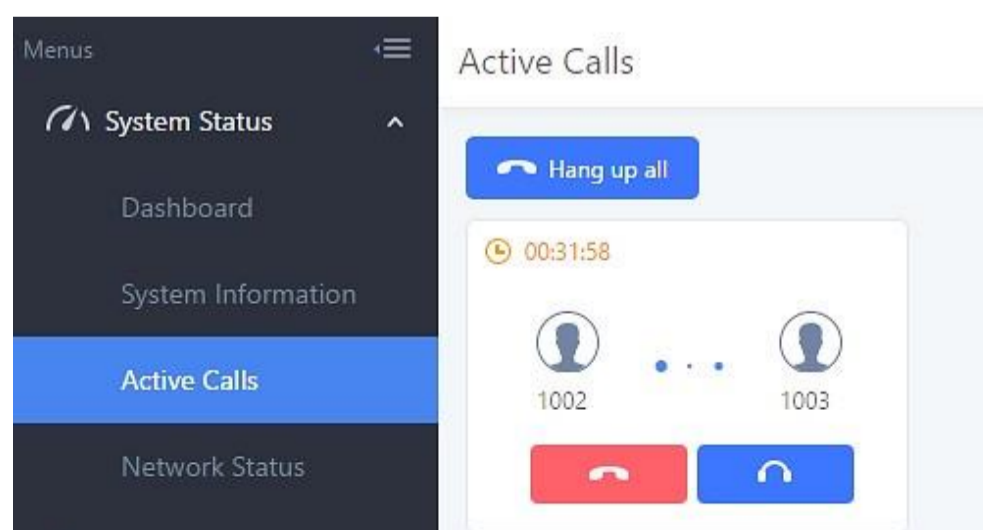


Figure 228: Call Connection between half an hour and one hour

The red color of the active call means the connection of call time is more than one hour. It means this call could be abnormal.

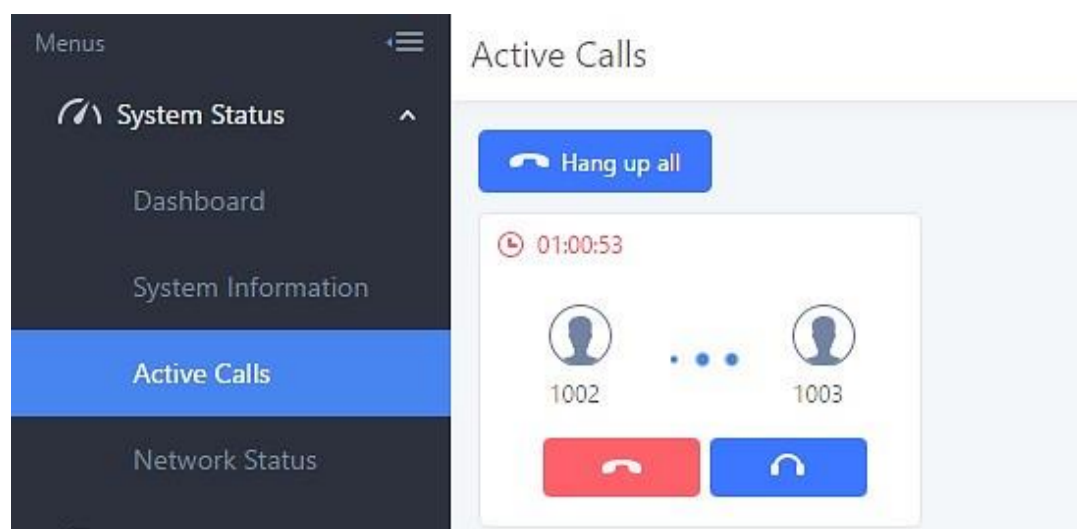


Figure 229: Call Connection more than one hour

Hang Up Active Calls

To hang up an active call, click on  icon in the active call dialog. Users can also click on  to hang up all active calls.

Call Monitor

During an active call, click on icon  and the monitor dialog will pop up.

Figure 230: Configure to Monitor an Active Call

In the “Monitor” dialog, configure the following to monitor an active call:

1. Enter an available extension for “Monitor’s Extension” which will be used to monitor the active call.
2. “Monitored Extension” must be one of the parties in the active call to be monitored.
3. Select spy mode. There are three options in “Spy Mode”.

- **Listen**

In “Listen” mode, the extension monitoring the call can hear both parties in the active call but the audio of the user on this extension will not be heard by either party in the monitored active call.

- **Whisper**

In “Whisper” mode, the extension monitoring the call can hear both parties in the active call. The user on this extension can only talk to the selected monitored extension and he/she will not be heard by the other party in the active call. This can be usually used to supervise calls.

- **Barge**

In “Barge” mode, the extension monitoring the call can talk to both parties in the active call. The call will be established similar to three-way conference.

1. Enable or disable “Require Confirmation” option. If enabled, the confirmation of the invited monitor’s extension is required before the active call can be monitored. This option can be used to avoid adding participant who has auto-answer configured, or call forwarded to voicemail.
2. Click on “Add”. An INVITE will be sent to the monitor’s extension. The monitor can answer the call and start monitoring. If “Require Confirmation” is enabled, the user will be asked to confirm to monitor the call.

Another way to monitor active calls is to dial the corresponding feature codes from an extension. Please refer to [Table 94: UCM6200 Feature Codes] and [Call Recording] section for instructions.

Call Feature Codes

The UCM6200 supports call recording, transfer, call forward, call park and other call features via feature code. This section lists all the feature codes in the UCM6200 and describes how to use the call features.

Feature Codes

Table 94: UCM6200 Feature Codes

Feature Maps	
Blind Transfer	<ul style="list-style-type: none"> ◦ Default code: #1 ◦ Enter the code during active call. After hearing “Transfer”, you will hear dial tone. Enter the number to transfer to. Then the user will be disconnected, and transfer is completed. ◦ Options: <p>Disable Allow Caller: Enable the feature code on caller side only. Allow Callee: Enable the feature code on callee side only. Allow Both: Enable the feature code on both caller and callee.</p> <p>Note: The transfer will be performed 6 seconds after dialing the feature code.</p>
Attended Transfer	<ul style="list-style-type: none"> ◦ Default code: *2 ◦ Enter the code during active call. After hearing “Transfer”, you will hear the dial tone. Enter the number to transfer to and the user will be connected to this number. Hang up the call to complete the attended transfer. In case of the called party does not answer, users could press *0 to cancel the call and retrieve the first call leg. ◦ Options: <p>Disable Allow Caller: Enable the feature code on caller side only. Allow Callee: Enable the feature code on callee side only. Allow Both: Enable the feature code on both caller and callee.</p> <p>Note: The transfer will be performed 6 seconds after dialing the feature code.</p>
Seamless Transfer	<ul style="list-style-type: none"> ◦ Default code: *44 (Disabled by default). ◦ Seamless Transfer allows user to perform blind transfer using UCM feature code without having music on hold presented during the transfer process, it minimizes the interruption during transfer, making the process smooth and simple. ◦ During an active call use the feature code (*44 by default) followed by the number you want to transfer to in order to perform the seamless transfer. <p>Note: The transfer will be performed 6 seconds after dialing the feature code.</p>

Disconnect	<ul style="list-style-type: none"> ◦ Default code: *0 ◦ Enter the code during active call. It will disconnect the call. ◦ Options: <p>Disable</p> <p>Allow Caller: Enable the feature code on caller side only.</p> <p>Allow Callee: Enable the feature code on callee side only.</p> <p>Allow Both: Enable the feature code on both caller and callee.</p>
Call Park	<ul style="list-style-type: none"> ◦ Default code: #72 ◦ Enter the code during active call to park the call. ◦ Options: <p>Disable</p> <p>Allow Caller: Enable the feature code on caller side only.</p> <p>Allow Callee: Enable the feature code on callee side only.</p> <p>Allow Both: Enable the feature code on both caller and callee.</p>
Start/Stop Call Recording	<ul style="list-style-type: none"> ◦ Default code: *3 ◦ Enter the code followed by # or SEND to start recording the audio call and the UCM6200 will mix the streams natively on the fly as the call is in progress. ◦ Options: <p>Disable</p> <p>Allow Caller: Enable the feature code on caller side only.</p> <p>Allow Callee: Enable the feature code on callee side only.</p> <p>Allow Both: Enable the feature code on both caller and callee.</p>
Feature Code Digits Timeout	Set the maximum interval (ms) between digits for feature code activation
DND/Call Forward	
Do Not Disturb (DND) Activate	<ul style="list-style-type: none"> ◦ Default code: *77
Do Not Disturb (DND) Deactivate	<ul style="list-style-type: none"> ◦ Default code: *78

Call Forward Busy Activate	<ul style="list-style-type: none"> ◦ Default Code: *90 ◦ Enter the code and follow the voice prompt. Or enter the code followed by the extension to forward the call.
Call Forward Busy Deactivate	<ul style="list-style-type: none"> ◦ Default Code: *91
Call Forward No Answer Activate	<ul style="list-style-type: none"> ◦ Default Code: *92 ◦ Enter the code and follow the voice prompt. Or enter the code followed by the extension to forward the call.
Call Forward No Answer Deactivate	<ul style="list-style-type: none"> ◦ Default Code: *93
Call Forward Unconditional Activate	<ul style="list-style-type: none"> ◦ Default Code: *72 ◦ Enter the code and follow the voice prompt. Or enter the code followed by the extension to forward the call.
Call Forward Unconditional Deactivate	<ul style="list-style-type: none"> ◦ Default Code: *73
Remote Call Forward Enable	<ul style="list-style-type: none"> ◦ If enabled, this option will allow specific extensions to dial the remote call forwarding feature codes to set call forwarding for any extension.
Remote Call Forward Busy Enable	<ul style="list-style-type: none"> ◦ Default Code: *65 ◦ Enter the code and follow the voice prompt to set the remote extension number where you want to enable Call Forward Busy and the target destination.
Remote Call Forward Busy Disable	<ul style="list-style-type: none"> ◦ Default Code: *651 ◦ Enter the code and follow the voice prompt to set the remote extension number where you want to disable the Call Forward Busy.
Remote Call Forward No Answer Enable	<ul style="list-style-type: none"> ◦ Default Code: *66 ◦ Enter the code and follow the voice prompt to set the remote extension number where you want to enable Call Forward No Answer and the target destination.
Remote Call Forward No Answer Disable	<ul style="list-style-type: none"> ◦ Default Code: *661 ◦ Enter the code and follow the voice prompt to set the remote extension number where you want to disable the Call Forward No Answer.
Remote Call Forward Unconditional Enable	<ul style="list-style-type: none"> ◦ Default Code: *67 ◦ Enter the code and follow the voice prompt to set the remote extension number where you want to enable Call Forward Unconditional and the target destination.

Remote Call Forward Unconditional Disable	<ul style="list-style-type: none"> ◦ Default Code: *671 ◦ Enter the code and follow the voice prompt to set the remote extension number where you want to disable the Call Forward Unconditional.
Remote Call Forward Whitelist	<p>Only the Extensions selected in this whitelist can configure call forwarding for any extension via feature codes.</p>
Feature Codes	
Voicemail Access Code	<ul style="list-style-type: none"> ◦ Default Code: *98 ◦ Enter *98 and follow the voice prompt. Alternatively, dial *98 followed by the extension and pound (#) to immediately access the entered extension's voicemail box.
My Voicemail	<ul style="list-style-type: none"> ◦ Default Code: *97 ◦ Press *97 to access the voicemail box.
Agent Pause	<ul style="list-style-type: none"> ◦ Default Code: *83 ◦ Pause the agent in all call queues.
Agent Unpause	<ul style="list-style-type: none"> ◦ Default Code: *84 ◦ Unpause the agent in all call queues.
Paging Prefix	<ul style="list-style-type: none"> ◦ Default Code: *81 ◦ To page an extension, enter the code followed by the extension number.
Intercom Prefix	<ul style="list-style-type: none"> ◦ Default Code: *80 ◦ To intercom an extension, enter the code followed by the extension number.
Blacklist Add	<ul style="list-style-type: none"> ◦ Default Code: *40 ◦ To add a number to blacklist for inbound route, dial *40 and follow the voice prompt to enter the number.
Blacklist Remove	<ul style="list-style-type: none"> ◦ Default Code: *41 ◦ To remove a number from current blacklist for inbound route, dial *41 and follow the voice prompt to remove the number.
Call Pickup on Ringing	<ul style="list-style-type: none"> ◦ Default Code: ** ◦ To pick up a call for any extension xxxx, enter the code followed by the extension number xxxx.
Pickup In-call	<ul style="list-style-type: none"> ◦ Default Code: *45 (Disabled by default). ◦ If "Pickup In-call" feature is enabled, only the extensions added in "Allowed to seamless transfer" in the extension's Seamless Transfer Privilege Control List" can pick up the call.

Pickup Extension	<ul style="list-style-type: none"> ◦ Default Code: *8 ◦ This code is for the pickup group, which can be assigned for each extension on the extension configuration page. ◦ If there is an incoming call to an extension, the other extensions within the same pickup group can dial *8 directly to pick up the call.
Direct Dial Voicemail Prefix	<ul style="list-style-type: none"> ◦ Default Code: * ◦ This code is for the user to directly dial or transfer to an extension's voicemail. ◦ For example, directly dial *5000 will have to call go into the extension 5000's voicemail. If the user would like to transfer the call to the extension 5000's voicemail, enter *5000 as the transfer target number.
Direct Dial Mobile Phone Prefix	<ul style="list-style-type: none"> ◦ Default Code: *88 ◦ If you have the permission to call mobile phone number, use this prefix plus the extension number can dial the mobile phone number of this extension directly.
Call Completion Request	<ul style="list-style-type: none"> ◦ Default Code: *11 ◦ This code is for the user who wants to use Call Completion to complete a call.
Call Completion Cancel	<ul style="list-style-type: none"> ◦ Default Code: *12 ◦ This code is for the user who wants to cancel Call Completion request.
Enable Spy	<p>Check this box to enable spy feature codes.</p> <p>Disabled by default.</p>
Listen Spy	<ul style="list-style-type: none"> ◦ Default Code: *54 ("Enable Spy" needs to be checked) ◦ This is the feature code to listen in on a call to monitor performance. Monitor's line will be muted, and neither party will hear from the monitor's extension.
Whisper Spy	<ul style="list-style-type: none"> ◦ Default Code: *55 ("Enable Spy" needs to be checked) ◦ This is the feature code to speak to one side of the call (for example, whisper to employees to help them handle a call). Only one side will be able to hear from the monitor's extension.
Barge Spy	<ul style="list-style-type: none"> ◦ Default Code: *56 ("Enable Spy" needs to be checked) ◦ This is the feature code to join in on the call to assist both parties.
Wakeup Service	<ul style="list-style-type: none"> ◦ Default Code: *36 ◦ Dial this code to access UCM wakeup service, you can add, update, activate or deactivate wakeup service.
PMS Wakeup Service	<ul style="list-style-type: none"> ◦ Default Code: *35 ◦ Dial this code to access UCM PMS wakeup service, you can add, update, activate or deactivate PMS wakeup service.

Update PMS Room Status	<ul style="list-style-type: none"> ◦ Default Code: *23 ◦ Use this code with maid code to update PMS room status. Choose the status to set after hearing the prompt, for example: for maid 001 dial *23001 and then 1 after hearing the prompt.
Presence Status	<ul style="list-style-type: none"> ◦ Dial this code to set the presence status of the extension. ◦ Possible options are: <p>1: "unavailable"</p> <p>2: "available"</p> <p>3: "away"</p> <p>4: "chat"</p> <p>5: "dnd"</p> <p>6: "userdef"</p>
Dynamic Agent Logout	<ul style="list-style-type: none"> ◦ Default Code: *85 ◦ Use this code to logout the dynamic agent from all queues.
Voicemail Group Access Code	<p>Call voicemail group access code to access group voicemail. If password is required, enter password followed by pound "#" key.</p>

The UCM6200 also allows user to one click enable / disable specific feature code as shown below:

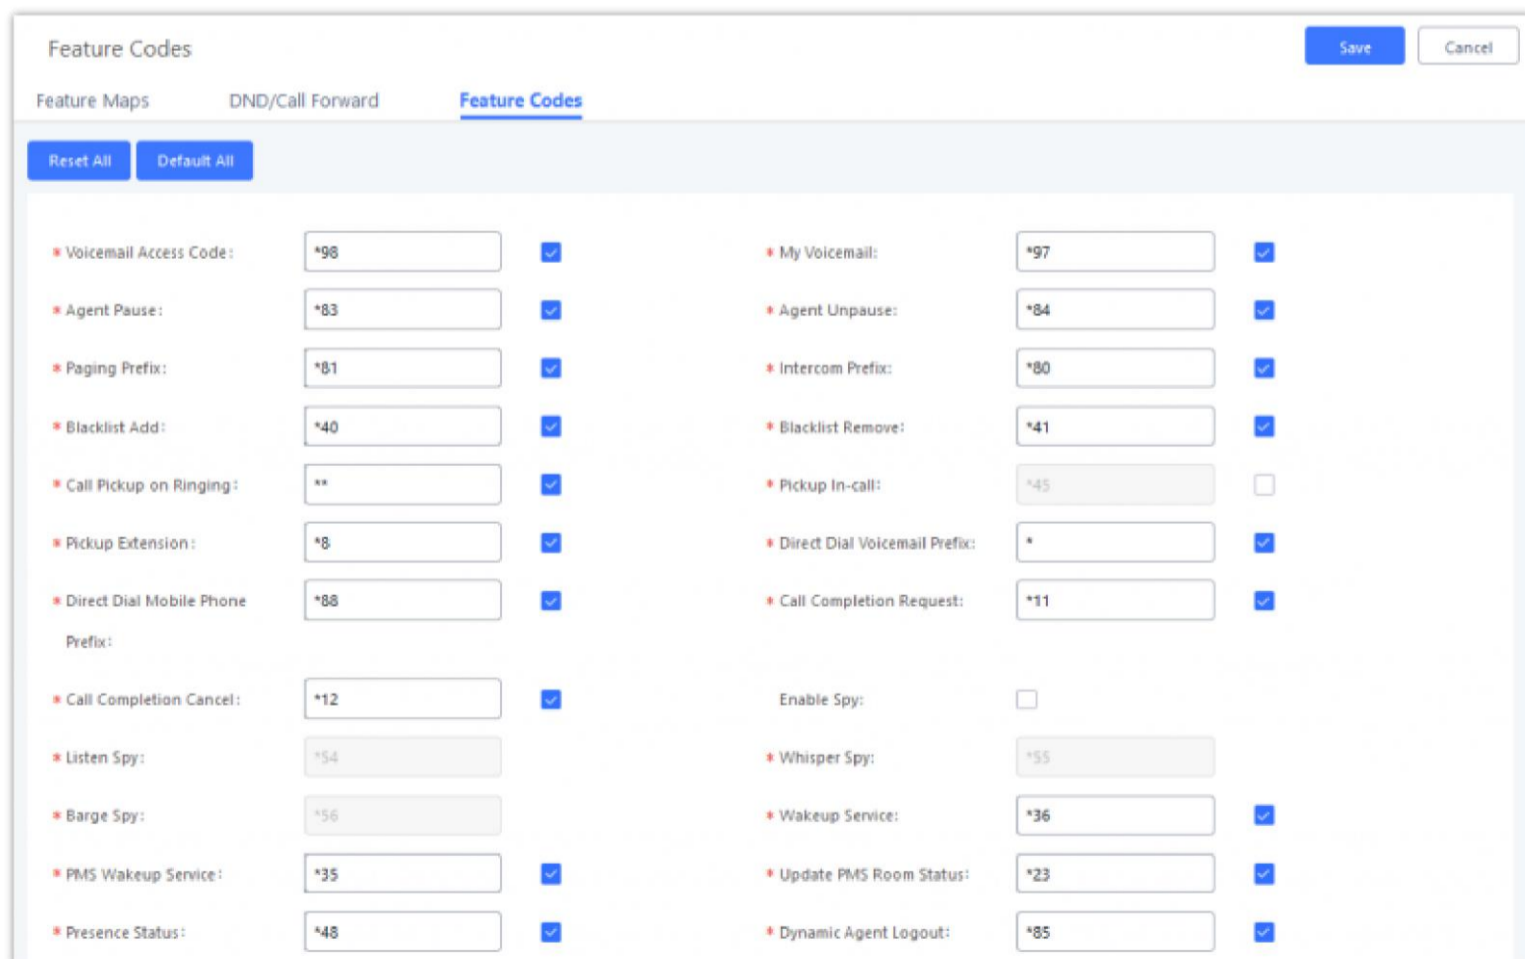


Figure 231: Enable/Disable Feature codes

Parking Lot

User can create parking lots and their related slots under Web GUI→ **Call Features**→ **Parking Lot**. In the Parking Lot page, users can create lots of their own. This allows different groups within an organization to have their own parking lots instead of sharing one large parking lot with others. While creating a new parking lot, users can assign it a range that they think is appropriate for the group that will use the parking lot.

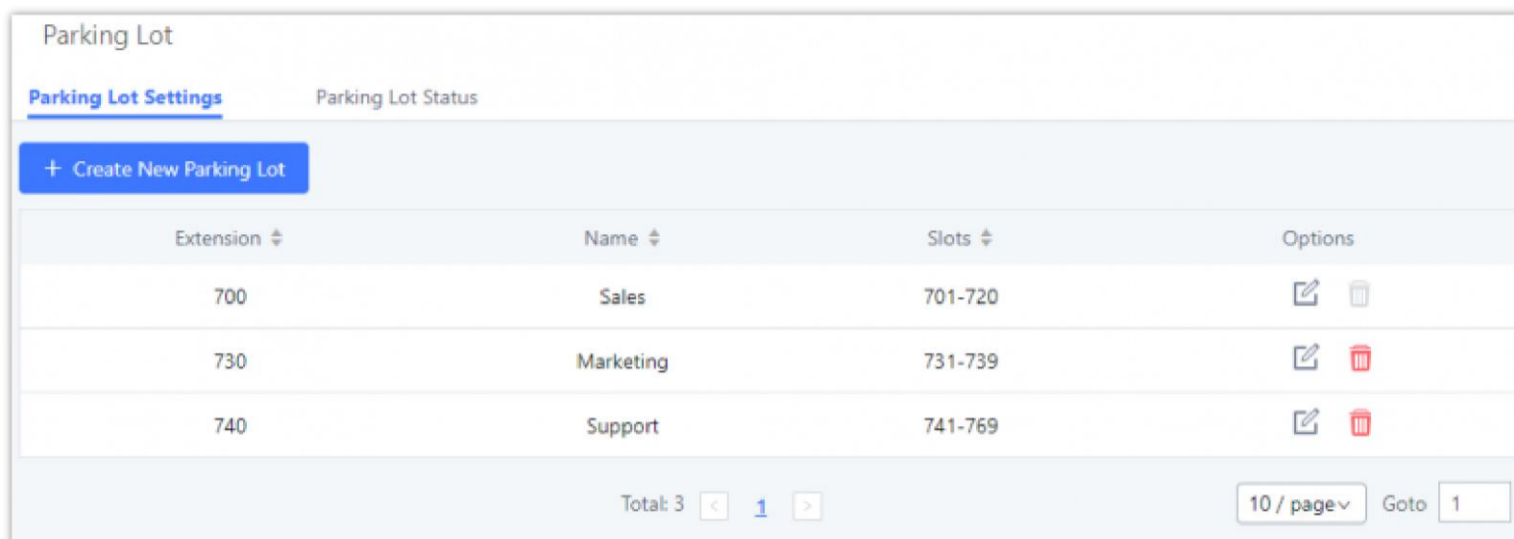


Figure 232: Parking Lot

User can create a new Parking lot by clicking on button “Create New Parking Lot” [+ Create New Parking Lot](#) :

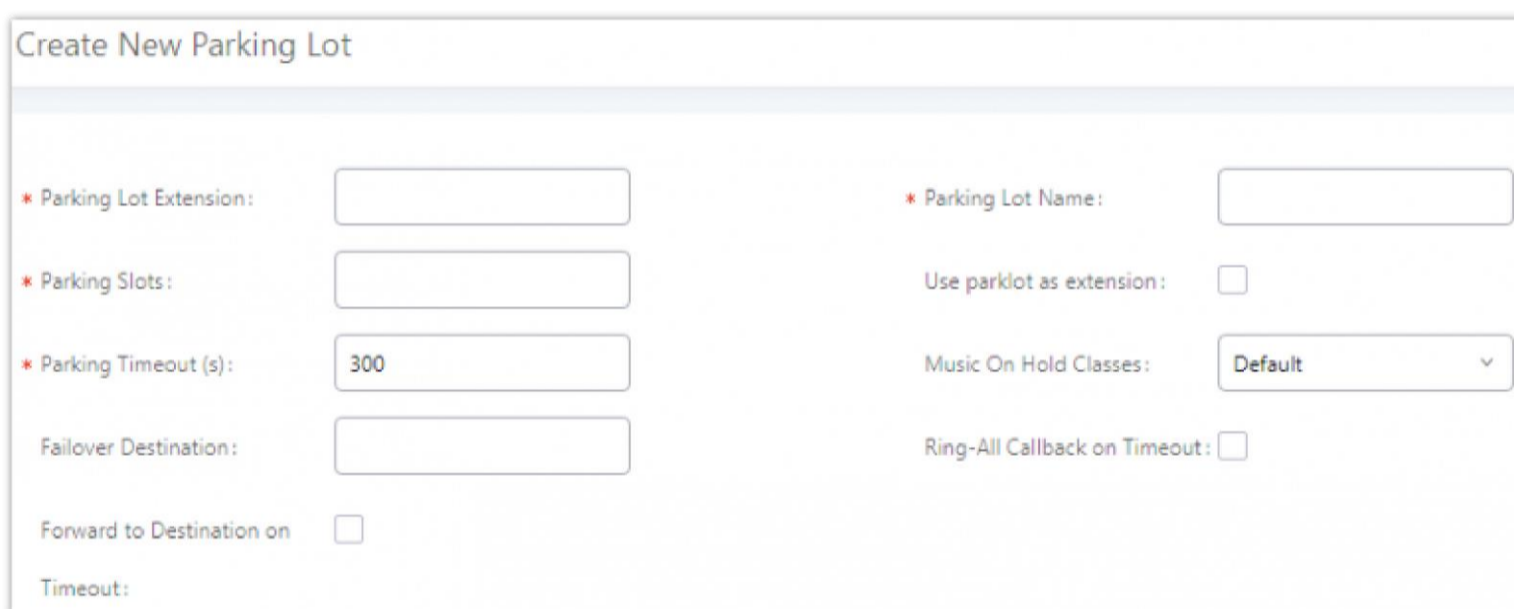


Figure 233: New Parking Lot

Table 95 : Parking Lot

Parking Lot Extension	<ul style="list-style-type: none"> Default Extension: 700 During an active call, initiate blind transfer and then enter this code to park the call.
Parking Lot Name	<ul style="list-style-type: none"> Set a name to the parking lot
Parked Slots	<ul style="list-style-type: none"> Default Extension: 701-720 These are the extensions where the calls will be parked, i.e., parking lots that the parked calls can be retrieved.
Use Parklot as Extension	<ul style="list-style-type: none"> If checked, the parking lot number can be used as extension. The user can transfer the call to the parking lot number to park the call. Please note this parking lot number range might conflict with extension range.
Parking Timeout (s)	<ul style="list-style-type: none"> Default setting is 300 seconds and the maximum limit is 99,999 seconds. This is the timeout allowed for a call to be parked. After the timeout, if the call is not picked up, the extension who parks the call will be called back.

Music On Hold Playlists	Select the Music on Hold Class.
Failover Destination	Configures a callback failover destination when the extension that is called back is busy. The call will be routed to the destination number and this reduces the chance of dropping parked calls. Note: This field cannot exceed 32 characters.
Ring All Callback on Timeout	If enabled, all registered endpoints of the extension will ring when callback occurs. Otherwise, only the original endpoint will be called back. Note: This option will not be available if Forward to Destination on Timeout is enabled.
Forward to destination on timeout	If enabled, the call will be routed to the configured destination upon timeout. Otherwise, the call will be routed back to the original caller.
Timeout Destination	This option appears once Forward to Destination on Timeout is enabled. Upon park timeout, the call will be routed to the configured destination.

Call Park

The UCM6200 provides call park and call pickup features via feature code.

Park a Call

There are two feature codes that can be used to park the call.

- **Feature Maps→Call Park (Default code #72)**

During an active call, press #72 and the call will be parked. Parking lot number (default range 701 to 720) will be announced before parking the call.

- **Feature Misc→Call Park (Default code 700)**

During an active call, initiate blind transfer (default code #1) and then dial 700 to park the call. Parking lot number (default range 701 to 720) will be announced after parking the call.

Retrieve Parked Call

To retrieve the parked call, simply dial the parking lot number and the call will be established. If a parked call is not retrieved after the timeout, the original extension who parks the call will be called back.

Monitor Call Park CID Name Information (GXP21xx Phones Only)

Users can see the CID name information of parked calls. VPK/MPKs must be configured as “Monitored Call Park” with the desired parking lot extension. The display will alternate between displaying the parking lot extension and the call’s CID name. There is no need to configure anything on the UCM.

Note: This feature requires Grandstream GXP21xx new firmware support. Please check GXP21xx firmware release information for availability.



Figure 234: Monitored call park CID name

Call Recording

The UCM6200 allows users to record audio during the call. If “Auto Record” is turned on for an extension, ring group, call queue or trunk, the call will be automatically recorded when there is established call with it. Otherwise, please follow the instructions below to manually record the call.

1. Make sure the feature code for “Start/Stop Call Recording” is configured and enabled.
2. After establishing the call, enter the “Start/Stop Call Recording” feature code (by default it is *3) followed by # or SEND to start recording.
3. To stop the recording, enter the “Start/Stop Call Recording” feature code (by default it is *3) followed by # or SEND again. The recording will also be stopped upon hanging up the call.
4. The recording file can be retrieved under Web GUI→**CDR**. Click on [View](#) to show and play the recording or click on [Download](#) to download the recording file.

Figure 235: Download Recording File from CDR Page

The above recorded call’s recording files are also listed under the UCM6200 Web GUI→**CDR**→**Recording Files**.

Note: Starting with firmware 1.0.20.17, Music on Hold will be also included in the recording.

Figure 236: Download Recording File from Recording Files Page

Enable Spy

If “Enable Spy” option is enabled, feature codes for Listen Spy, Whisper Spy and Barge Spy are available for users to dial from any extension to perform the corresponding actions.

Assume a call is on-going between extension A and extension B, user could dial the feature code from extension C to listen on their call (*54 by default), whisper to one side (*55 by default), or barge into the call (*56 by default). Then the user will be asked to enter the number to call, which should be either side of the active call, extension A or B in this example.

“Enable Spy” allows any user to listen to any call by feature codes. This may result in the leakage of user privacy.

Shared Call Appearance (SCA)

Shared Call Appearance (SCA) functionality has been added to the UCM. With SCA, users can assign multiple devices to one extension, configure endpoints to monitor that extension, make actions on behalf of that extension such as viewing call status and placing and receiving calls, and even barging into existing calls. To configure the SCA functionality, please follow the steps below:

1. Users can enable SCA by navigating to the Extensions page, editing the desired extension, and enabling the option SCA.

With SCA enabled, the Concurrent Registrations field can only have a value of 1.

Figure 237: Enabling SCA option under Extension's Settings

1. After enabling the option, navigate to *Call Features* → *SCA*. The newly enabled SCA extension will be listed. Click the “+” button under the Options column to add a number that will share the main extension's call appearance, which will be called private numbers.

Figure 238: SCA Number Configuration

1. Configure the private number as desired.

Figure 239: SCA Private Number Configuration

1. Once the private number has been created, users must now register a device to it. To properly register a device to the private number, use the configured private number as the SIP User ID. Auth ID and Password will be the same as the main extension's. Once registration is complete, SCA is now configured.

Figure 240: SCA Options

SCA has various options to change its behavior:

- **Allow Call Retrieve from Another Location** – Allows users to retrieve held calls using any device associated with the SCA extension.
- **Alert All Appearances for Group Paging Calls** – Alerts all devices associated with the SCA extension.
- **Multiple Call Arrangement** – Allows all devices associated with the SCA extension to make different calls at the same time.
- **Allow Bridging between Locations** – Allows devices associated with the SCA extension to barge into existing calls of the same SCA group.
- **Bridge Warning Tone** – Notification sound that will play when a party barges into the call. Three options are available:
 - **None** – No notification sound will play
 - **Barge-In Only** – The notification sound will play once when a party barges in.
 - **Barge-In and Repeat** – The notification sound will play when a party barges in and will play again after every 30 seconds.

1. Next, configure the VPK or MPK to Shared for both the main extension and the private number. SCA is now configured for both endpoint devices.

The following table describe the SCA Number configuration setting:

Table 96: Add SCA Private Number

Private Number	Configures the private number for the SCA.
Related Shared Line	Display the related shared line.
Enable This Number	Enable/Disable the private number.
Allow Origination from This Number	Enabling this option will allow calling from this private number. By default, it is enabled.
Allow Termination to This Number	Enabling this option will allows calls to this private number. By default, it is enabled.

The following table describes the options available when editing the SCA number:

Table 97: Editing the SCA Number

Shared Line Number	While SCA is enabled, this number will be the same as the extension number.
Allow Call Retrieve from Another Location	Allows remote call retrieval. Must be enabled in public hold. By default, it is enabled.
Alert All Appearances for Group Paging Calls	Allows all SCA group members to ring when the SCA shared number is paged. If disabled, only the SCA shared number will ring when paged. By default, it is disabled.
Multiple Call Arrangement	Allows simultaneous calls in an SCA group. By default, it is disabled.
Allow Bridging between Locations	Allows location bridging for SCA group. Must be enabled when using the Barge-In feature. By default, it is disabled.
Bridge Warning Tone	<p>Configures the notification in the bridge when another party join.</p> <ul style="list-style-type: none"> ◦ None: No notification sound. ◦ Barge-In only: Notification sound will play when another party join. ◦ Barge-In and Repeat: Notification sound will play when another party joins and repeat every 30 seconds. <p>By default, it is set to “Barge-In Only”.</p>

Announcement

The Announcement feature (not to be confused with Announcement Paging and Announcement Center) is a feature that allows users to set an unskippable audio file to play to callers before routing them to a configured destination. Announcements can be configured as a destination in the [Inbound Routes] or in [IVR].

To configure the Announcement, users need to follow below steps:

1. Navigate on the web GUI under “**Call Features → Announcement**”

2. Click on to add a new Announcement.
3. Configure the required fields Name, Prompt, Default Destination to be used for the announcement.
4. Save and apply the configuration.

Figure 241: Announcement settings

The table below gives more description of the configuration parameters when creating Announcement.

Table 98: Announcement Parameters

<p>Name</p>	<p>Configure the name of the Announcement.</p> <p>Note: Please use letters, digits, _ or – only and no more than 64 characters.</p>
<p>Prompt</p>	<p>Audio file that will be played before ringing the configured default destination.</p> <p>Note: Sound file must be PCM encoded, 16 bits at 8000Hz mono in mp3/wav format or raw ulaw/alaw/gsm file with .mp3/.wav/.ulaw/.alaw/.gsm suffix. The file size must be less than 5MB.</p> <p>If uploading a compressed file, the file must have .tar/.tgz/.tar.gz suffix. the file name must contain only letters, numbers or special characters -_. The file size must be less than 30MB.</p> <p>Filename cannot exceed 100 characters.</p>

Default Destination	<p>Select the destination where to send the call after playing the announcement.</p> <p>The available default destinations are:</p> <ul style="list-style-type: none"> ◦ Extension ◦ Conference Rooms ◦ Video Conference ◦ Voicemail ◦ Voicemail Group ◦ IVR ◦ Ring Group ◦ Queues ◦ Fax ◦ DISA ◦ Dial By Name ◦ External Number ◦ Hang-up
----------------------------	---

Created Announcements will be listed as shown below:

NAME	PROMPT	DEFAULT DESTINATION	DEFAULT DESTINATION	OPTIONS
Announcement1	Alarm01	Extension	1000	

Total: 1 30 / page Goto 1

Figure 242: Announcement

- Press to edit the announcement.
- Press to delete the announcement.

PBX Settings

This section describes internal options that have not been mentioned in previous sections yet. The settings in this section can be applied globally to the UCM6200, including general configurations, jitter buffer, RTP settings, ports config and STUN monitor. The options can be accessed via Web GUI → **PBX Settings** → **General Settings**.

PBX Settings/General Settings

Table 99: Internal Options/General

General Preferences

Global Outbound CID	Configure the global CallerID used for all outbound calls when no other CallerID is defined with higher priority. If no CallerID is defined for extension or trunk, the global outbound CID will be used as CallerID.
Global Outbound CID Name	Configure the global CallerID Name used for all outbound calls. If configured, all outbound calls will have the CallerID Name set to this name. If not, the extension's CallerID Name will be used.
Ring Timeout	Configure the number of seconds to ring an extension before the call goes to the user's voicemail box. The default setting is 60. Note: This is the global value used for each extension if "Ring Timeout" field is left empty on the extension configuration page.
Call Duration Limit	Configure the maximum duration of call-blocking.
Record Prompt	If enabled, users will hear voice prompt before recording is started or stopped. For example, before recording, the UCM6200 will play voice prompt "The call will be recorded". The default setting is "No".
Enable 486 to Failover Trunk	Reroutes failed outbound calls that receive a 486 response through the failover trunk to retry the call. If disabled, calls that receive a 486 response will be terminated.
Device Name	Enter a name to identify the UCM. The name will be displayed on UCM web interface.
International Call Prefix	<p>Configure the International prefix. Default is 00.</p> <p>If empty, international call prefix can be empty or +.</p> <p>This parameter helps the UCM to identify the international call prefix for the country (00, 011, 810...) to avoid any conflict when using blacklist for specific countries.</p> <p>When outbound blacklist is enabled, UCM will apply the following rule "International Call Prefix+Country Code+Destination number".</p> <p>When making outbound call, UCM will check "International Call Prefix" then "Country Code", if the combination exists in the blacklist, then the call will fail, otherwise, the call will be authorized.</p> <p>For example: If blacklist is selecting countries with prefix code 001, dialing a number like 00123456789 will be blocked even if the number is not part of blacklisted countries if "International Call Prefix" is not set. While in same example, if "International Call Prefix" is set to "00", UCM will allow the dialed number.</p>
Extension Preferences	

<p>Enforce Strong Password</p>	<p>If enabled, strong password will be enforced for the password created on the UCM6200. The default setting is enabled.</p> <p>Strong Password Rules:</p> <ol style="list-style-type: none"> 1. Password for voicemail, voicemail group, outbound route, DISA, call queue and conference require non-repetitive and non-sequential digits, with a minimum length of 4 digits. Repetitive digits pattern (such as 0000, 1111, 1234, 2345, and etc.), or common digits pattern (such as 111222, 321321 and etc.) are not allowed to be configured as password. 2. Password for extension registration, Web GUI admin login, LDAP and LDAP sync requires alphanumeric characters containing at least two categories of the following, with a minimum length of 4 characters. <ul style="list-style-type: none"> o Numeric digits o Lowercase alphabet characters o Uppercase alphabet characters o Special characters
<p>Enable Random Password</p>	<p>If enabled, random password will be generated when the extension is created. The default setting is “Yes”. It is recommended to enable it for security purpose.</p>
<p>Enable Auto E-mail Notification</p>	<p>If enabled, UCM6200 will send Email notification to user automatically after editing extension settings or adding a new extension.</p>
<p>Disable Extension Range</p>	<p>If set to “Yes”, users could disable the extension range pre-configured/configured on the UCM6200. The default setting is “No”.</p> <p>Note: While there are no issues with disabling extension ranges, system administrators will need to manage extensions to avoid extension conflicts.</p>

Extension Ranges	<p>The default extension range assignment is:</p> <ul style="list-style-type: none"> ◦ User Extensions: 1000-6299 <p>User Extensions is referring to the extensions created under Web GUI→Extension/Trunk→Extensions page.</p> <ul style="list-style-type: none"> ◦ Pick Extensions: 4000-4999 <p>This refers to the extensions that can be manually picked from end device when being provisioned by the UCM6200. There are two related options in zero config page→Auto Provision Settings, “Pick Extension Segment” and “Enable Pick Extension”.</p> <p>If “Enable Pick Extension” under zero config settings is selected, the extension list defined in “Pick Extension Segment” will be sent out to the device after receiving the device’s request. This “Pick Extension Segment” should be a subset of the “Pick Extensions” range here. This feature is for the GXP series phones that support selecting extension to be provisioned via phone’s LCD.</p> <ul style="list-style-type: none"> ◦ Auto Provision Extensions: 5000-6299 <p>This sets the range for “Zero Config Extension Segment” which is the extensions can be assigned on the UCM6200 to provision the end device.</p> <ul style="list-style-type: none"> ◦ Conference Extensions: 6300-6399 ◦ Ring Group Extensions: 6400-6499 ◦ Queue Extensions: 6500-6599 ◦ Voicemail Group Extensions: 6600-6699 ◦ IVR Extensions: 7000-7100 ◦ Dial By Name Extensions: 7101-7199 ◦ Fax Extensions: 7200-8200
-------------------------	--

PBX Settings/RTP Settings

RTP Settings

Table 100: Internal Options/RTP Settings

RTP Start	Configure the RTP port starting number. The default setting is 10000.
RTP End	Configure the RTP port ending address. The default setting is 20000.
Strict RTP	Configure to enable or disable strict RTP protection. If enabled, RTP packets that do not come from the source of the RTP stream will be dropped. The default setting is “Disable”.
RTP Checksums	Configure to enable or disable RTP Checksums on RTP traffic. The default setting is “Disable”.

ICE Support	<p>Configure whether to support ICE. The default setting is enabled.</p> <p>ICE is the integrated use of STUN and TURN structure to provide reliable VoIP or video calls and media transmission, via a SIP request/response model or multiple candidate endpoints exchanging IP addresses and ports, such as private addresses and TURN server address.</p>
STUN Server	<p>Configure STUN server address. STUN protocol is a Client/Server and also a Request/Response protocol. It is used to check the connectivity between the two terminals, such as maintaining a NAT binding entries keep-alive agreement. The default STUN Server is stun.ipvideotalk.com.</p> <p>Valid format:</p> <p>[(hostname IP-address) [:' port]</p> <p>The default port number is 3478 if not specified.</p>
BFCP UDP Start	Configure BFCP UDP port starting number. The default setting is 50000.
BFCP UDP End	Configure BFCP UDP port ending number. The default setting is 52999.
BFCP TCP Start	Configure BFCP TCP port starting number. The default setting is 53000.
BFCP TCP End	Configure BFCP TCP port ending number. The default setting is 55999.
TURN Server	Configure TURN server address. TURN server is an enhanced version of the STUN protocol and is dedicated to the processing of symmetric NAT problems.
TURN Server Name	Configure TURN server account name.
TURN Server Password	Configure TURN server account password.

Payload

The UCM6200 payload type for audio codecs and video codes can be configured here.

Table 101: Internal Options/Payload

AAL2-G.726	Configure payload type for ADPCM (G.726, 32kbps, AAL2 codeword packing). The default setting is 112.
DTMF	Configured payload type for DTMF. The default setting is 101.

G.721 Compatible	Configure to enable/disable G.721 compatible. The default setting is Yes.
G.726	Configure the payload type for G.726 if “G.721 Compatible” is disabled. The default setting is 111.
iLBC	Configure the payload type for iLBC. The default setting is 97.
H.264	Configure the payload type for H.264. The default setting is 99.
H.263P	Configure the payload type for H.263+. The default setting is 100 103.
VP8	Configure the payload type for VP8. The default setting is 108.
Main Video FEC	Configure the payload type for Main Video FEC, The default is 120.
RTP FECC	Configure the payload type for RTP FECC, The default is 125
RTX	Configure the payload type for RTX, The default is 124. Note: UCM supports only video RTP retransmission.

PBX Settings/Voice Prompt Customization

Record New Custom Prompt

In the UCM6200 Web GUI→**PBX Settings**→**Voice Prompt**→**Custom Prompt** page, click on “Record New Custom Prompt” and follow the steps below to record new IVR prompt.

Figure 243: Record New Custom Prompt

1. Specify the IVR file name.
2. Select the format (GSM or WAV) for the IVR prompt file to be recorded.
3. Select the extension to receive the call from the UCM6200 to record the IVR prompt.
4. Click the “Record” button. A request will be sent to the UCM6200. The UCM6200 will then call the extension for recording the IVR prompt from the phone.
5. Pick up the call from the extension and start the recording following the voice prompt.
6. The recorded file will be listed in the IVR Prompt web page. Users could select to re-record, play or delete the recording.

Upload Custom Prompt

If the user has a pre-recorded IVR prompt file, click on “Upload Custom Prompt” in Web GUI→PBX Settings→Voice Prompt→Custom Prompt page to upload the file to the UCM6200. The following are required for the IVR prompt file to be successfully uploaded and used by the UCM6200:

- PCM encoded.
- 16 bits.
- 8000Hz mono.
- In .mp3 or .wav format; or raw/ulaw/alaw/gsm file with .ulaw or .alaw suffix.
- File size under 5MB.

Figure 244: Upload Custom Prompt

Click on “choose file to upload” to start uploading. Once uploaded, the file will appear in the Custom Prompt web page.

Download All Custom Prompt

On the UCM62XX, the users can download all custom prompts from UCM Web GUI to local PC. To download all custom prompt, log in UCM Web GUI and navigate to **PBX Settings→Voice Prompt→Custom Prompt** and click on **Download All Custom Prompt**. The following window will pop up in order to set a name for the downloaded file.

Figure 245: Download All Custom Prompt

The downloaded file will have a .tar extension.

Call Failure Tone Settings

SIP Trunk Prompt Tone

Prompt Tone Settings tab has been added to the UCM to help users choose which prompt will be played by the UCM during call failure, the following voice message responses have been added and can be set to be played for 4XX, 5XX, and 6XX call failures:

- Default for 404 and 604 status codes: *“Your call can’t be completed as dialed. Please check the number and dial again.”*
- Default for 5xx status codes: *“Server error. Please check your device.”*
- Default for 403 and 603 status codes: *“The call was rejected by the server. Please try again later.”*

- Default for all other status codes: “All circuits are busy now. Please try again later.”

Additionally, custom voice messages recorded and uploaded in **PBX Settings**→**Voice Prompt**→**Custom Prompt** can be used for these failure responses instead of the default messages.

The screenshot shows the 'Prompt Tone Settings' interface. It has two tabs: 'SIP Trunk Prompt Tone' (selected) and 'General Call Prompt Tone'. The 'SIP Trunk Prompt Tone' section contains a grid of dropdown menus for status codes: 423, 481, 483, 485, 487, 491, 480, 482, 484, 486, 488, and 493. All these dropdowns are currently set to 'sip-trunk-out-busy'. Below this grid are 'Reset All' and 'Default All' buttons. The 'General Call Prompt Tone' section is partially visible below, showing dropdowns for status codes 500, 501, 502, 503, 504, 505, 600, and 603. The dropdowns for 500-505 are set to 'sip-trunk-out-server-error', 600 is set to 'sip-trunk-out-busy', and 603 is set to 'sip-trunk-out-rejected'. There are also 'Reset All' and 'Default All' buttons for this section. At the top right, there are 'Save' and 'Cancel' buttons.

Figure 246: SIP Trunk Prompt Tone

General Call Failure Tone

Moreover, users also have the possibility to customize the prompt for typical call failure reasons like (no permission to allow outbound calls, busy lines, incorrect number dialed ...Etc.).

To customize these prompts user could record and upload their own files under “**PBX Settings** → **Voice Prompt** → **Custom Prompts**” then select each one for specific call failure case under “**PBX Settings** -> **Prompt Tone Settings** → **General Call Prompt Tone**” page as shown on the following figure:

The screenshot shows the 'Call Failure Tone Settings' interface. It has two tabs: 'SIP Trunk Prompt Tone' and 'General Call Failure Tones' (selected). Below the tabs are 'Reset All' and 'Default All' buttons. A green banner reads 'Specify the tones to play for various general call failure scenarios.' Below this is a grid of dropdown menus for failure scenarios: 'Bad Number:' (wrong-number), 'User Busy:' (user-busy), 'No Answer:' (no-answer), 'Do Not Disturb:' (vm-isunavail), 'Out Of Service:' (out-of-service), 'Trunk Busy:' (trunk-busy), 'No Permission:' (no-permission), and 'General Failed:' (general-failed). At the top right, there are 'Save' and 'Cancel' buttons.

Figure 247: General call Failure Prompts

PBX Settings/Jitter Buffer

Table 102: Internal Options/Jitter Buffer

SIP Jitter Buffer	
Enable Jitter Buffer	Select to enable jitter buffer on the sending side of the SIP channel. The default setting is “No”.
Jitter Buffer Size	Configure the time (in ms) to buffer. This is the jitter buffer size used in “Fixed” jitter buffer or used as the initial time for “adaptive” jitter buffer. The default setting is 100.
Max Jitter Buffer	Configure the maximum time (in ms) to buffer for “Adaptive” jitter buffer implementation or used as the jitter buffer size for “Fixed” jitter buffer implementation. The default setting is 200.
Implementation	<p>Configure the jitter buffer implementation on the sending side of a SIP channel. The default setting is “Fixed”.</p> <ul style="list-style-type: none"> ◦ Fixed The size is always equal to the value of “Max Jitter Buffer”. ◦ Adaptive The size is adjusted automatically and the maximum value equals to the value of “Max Jitter Buffer”.

PBX Settings/Recordings Storage

The UCM6200 supports call recordings automatically or manually and the recording files can be saved in external storage plugged in the UCM6200 or on the UCM6200 locally. To manage the recording storage, users can go to UCM6200 Web GUI→**PBX Settings**→**Recordings Storage** page and select whether to store the recording files in USB Disk, SD card or locally on the UCM6200.

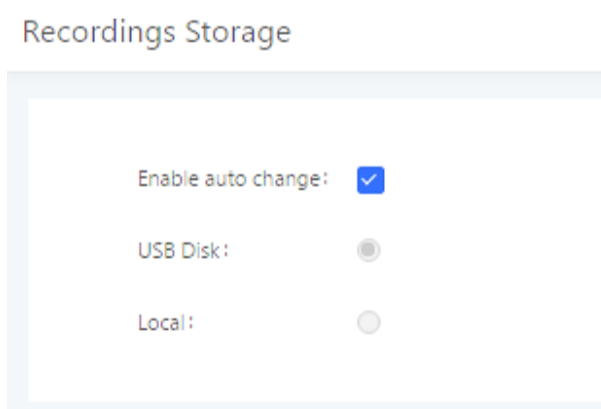


Figure 248: Settings→Recordings Storage

- If “**Enable Auto Change**” is selected, the recording files will be automatically saved in the available USB Disk or SD card plugged into the UCM6200. If both USB Disk and SD card are plugged in, the recording files will be always saved in the USB Disk.
- If “**Local**” is selected, the recordings will be stored in UCM6200 internal storage.
- If “**USB Disk**” or “**SD Card**” is selected, the recordings will be stored in the corresponding plugged in external storage device. Please note the options “USB Disk” and “SD Card” will be displayed only if they are plugged into the UCM6200.

Once “USB Disk” or “SD Card” is selected, click on “OK”. The user will be prompted to confirm to copy the local files to the external storage device.

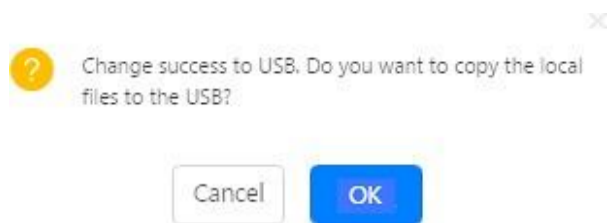


Figure 249: Recordings Storage Prompt Information

Click on “OK” to continue. The users will be prompted a new dialog to select the categories for the files to be copied over.

Edit Please select the files that you want to copy.:

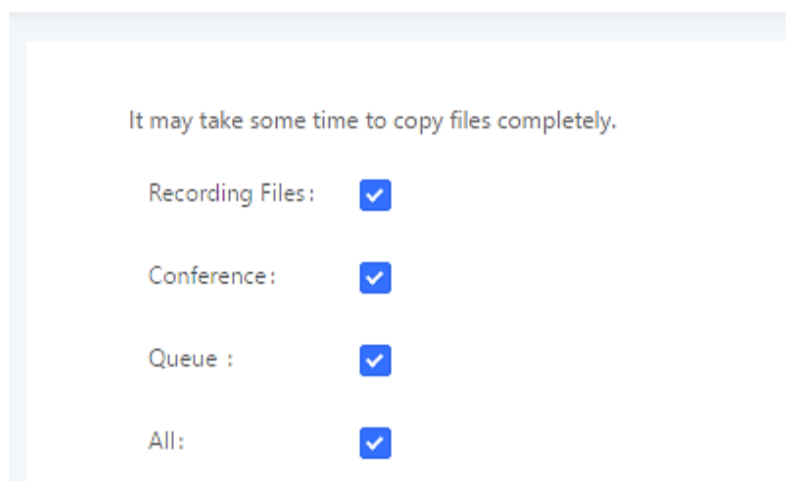


Figure 250: Recording Storage Category

On the UCM6200, recording files are generated and exist in 3 categories: normal call recording files, conference recording files, and call queue recording files. Therefore, users have the following options when select the categories to copy the files to the external device:

- **Recording Files:** Copy the normal recording files to the external device.
- **Conference:** Copy the conference recording files to the external device.
- **Queue:** Copy the call queue recording files to the external device.
- **All:** Copy all recording files to the external device.

PBX Settings/NAS

UCM supports saving call recordings and backing up/restoring system backups to a NAS server. The following options are available:

Table 103: NAS Settings

Enable	Toggles the NAS recording functionality.
Host	Configure the Domain or IP address of the NAS server. Note: Currently, only IP addresses are supported in the Host/IP field.
Share Name	Specify the name of the shared folder.
Username	Specify the account username to access the NAS server.

Passw ord	Configure the account password to access the NAS server.
Status	If configured correctly, the Status field will show “Mounted”, and the newly added NAS server will be shown on the Mounted Netdisk List. Additionally, the NAS will appear as a selectable storage option in the PBX Settings→Recording Storage page and CDR→Recording Files page.

SIP Settings

The UCM6200 SIP global settings can be accessed via Web GUI→**PBX Settings**→**SIP Settings**.

SIP Settings/General

Table 104: SIP Settings/General

Realm For Digest Authentication	Configure the host name or domain name for the UCM6510. Realms MUST be globally unique according to RFC3261. The default setting is Grandstream. Note: Both FQDN and IP address are supported on this field.
Bind UDP Port	Configure the UDP port used for SIP. The default setting is 5060.
Bind IP Address	Configure the IP address to bind to. The default setting is 0.0.0.0, which means binding to all addresses.
Allow Transfer	If set to "No", all transfers initiated by the endpoint in the UCM6510 will be disabled (unless enabled in peers or users). The default setting is "Yes"
MWI From	When sending MWI NOTIFY requests, this value will be used in the "From:" header as the "name" field. If no "From User" is configured, the "user" field of the URI in the "From:" header will be filled with this value.
Enable Diversion Header	If disabled, the UCM will not forward the diversion header. Note: Diversion header will be included for forwarding and transfer when the option is enabled. The header will also contain public IP information
Block Collect Calls	If enabled, collect calls will be blocked. Note: Collect calls are indicated by the header "P-Asserted-Service-Info: service-code=Backward Collect Call, P-Asserted-Service-Info: service-code=Collect Call".

SIP Settings/MISC

Table 105: SIP Settings/Misc

Outbound SIP Registrations	
Register Timeout	Configure the register retry timeout (in seconds). The default setting is 20.

Register Attempts	<p>Configure the number of registration attempts before the UCM6200 gives up.</p> <p>The default setting is 0, which means the UCM6200 will keep trying until the server side accepts the registration request.</p>
Video	
Max Bit Rate (kb/s)	Configure the maximum bit rate (in kb/s) for video calls. The default setting is 384.
Support SIP Video	Select to enable video support in SIP calls. The default setting is “Yes”.
Reject Non-Matching INVITE	<p>If enabled, when rejecting an incoming INVITE or REGISTER request, the UCM6200 will always reject with “401 Unauthorized” instead of notifying the requester whether there is a matching user or peer for the request. This reduces the ability of an attacker to scan for valid SIP usernames. The default setting is “No”.</p>
SDP Attribute Passthrough	
Enable Attribute Passthrough	If enabled, and UCM receives a call that contains unknown FEC/FECC/FBCP attributes, they will be passed through the UCM unmodified.
Early Media	
Enable Use Final SDP	If enabled, call negotiation will use final response SDP.
Ignore 180 Response	If enabled, ignore the ringing indication if has sent 183 response.
Blind Transfer	
Allow callback when blind transfer fails	<p>If enabled, the UCM will call back to the transferrer when blind transfer fails (due to the destination being busy or not answering).</p> <p>Note: This feature applies only to internal calls.</p>
Blind transfer timeout	Configure the amount of time in seconds that the transferred party will wait for the destination to answer before being redirected back to the transferrer. Default is 60 seconds.
DNS	
DNS mode	This option affects the DNS query only during Calls. When you choose A&AAAA, UCM will do both A and AAAA type DNS query; when you chose A, UCM will only do A type DNS query; and when you chose AAAA, UCM will only do AAAA type DNS query.
Hold	
Forward HOLD Requests	<p>Configure the UCM to forward HOLD requests instead of processing holds internally. This serves to meet the standards set by some providers that require HOLD requests to be passed along from endpoint to endpoint. This option is disabled by default.</p> <p>Note: Enabling this option may cause hold retrieval issues and MOH to not be heard.</p>

SIP Settings/Session Timer

Table 106: SIP Settings/Session Timer

Force Timer	If checked, always request and run session timer.
Timer	If checked, run session timer only when requested by other UA.
Session Expire	Configure the maximum session refresh interval (in seconds). The default setting is 1800.
Min SE	Configure the minimum session refresh interval (in seconds). The default setting is 90.

SIP Settings/TCP and TLS

Table 107: SIP Settings/TCP and TLS

TCP Enable	Configure to allow incoming TCP connections with the UCM6200. The default setting is “No”.
TCP Bind Address	Configure the IP address for TCP server to bind to. 0.0.0.0 means binding to all interfaces. The port number is optional. If not specified, 5060 will be used.
TLS Enable	Configure to allow incoming TLS connections with the UCM6200. The default setting is “No”.
TLS Bind Address	Configure the IP address for TLS server to bind to. 0.0.0.0 means binding to all interfaces. The port number is optional. If not specified, 5061 will be used. Note: The IP address must match the common name (hostname) in the certificate. Please do not bind a TLS socket to multiple IP addresses. For details on how to construct a certificate for SIP, please refer to the following document: http://tools.ietf.org/html/draft-ietf-sip-domain-certs
TLS Do Not Verify	If enabled, the TLS server’s certificate will not be verified when acting as a client. The default setting is “Yes”.
TLS Self-Signed CA	This is the CA certificate if the TLS server being connected to requires self-signed certificate, including server’s public key. This file will be renamed as “TLS.ca” automatically. Note: The size of the uploaded ca file must be under 2MB..

TLS Cert	<p>This is the Certificate file (*.pem format only) used for TLS connections. It contains private key for client and signed certificate for the server.</p> <p>This file will be renamed as “TLS.pem” automatically.</p> <p>Note:</p> <p>The size of the uploaded certificate file must be under 2MB.</p>
TLS CA Cert	<p>This file must be named with the CA subject name hash value. It contains CA’s (Certificate Authority) public key, which is used to verify the accessed servers.</p> <p>Note:</p> <p>The size of the uploaded CA certificate file must be under 2MB.</p>
TLS CA List	<p>Display a list of files under the CA Cert directory.</p>

SIP Settings/NAT

Table 108: SIP Settings/NAT

External Host	<p>Configure a static IP address and port (optional) used in outbound SIP messages if the UCM6200 is behind NAT. If a hostname is used, it will be looked up only once.</p>
Use IP address in SDP	<p>If enabled, the SDP connection will use the IP address resolved from the external host.</p>
External TCP Port	<p>Configure the externally mapped TCP port when the UCM6200 is behind a static NAT or PAT.</p>
External TLS Port	<p>Configures the externally mapped TLS port when UCM6200 is behind a static NAT or PAT.</p>
Local Network Address	<p>Specify a list of network addresses that are considered inside of the NAT network. Multiple entries are allowed. If not configured, the external IP address will not be set correctly.</p> <p>A sample configuration could be as follows:</p> <p>192.168.0.0/16</p>

SIP Settings/TOS

Table 109: SIP Settings/ToS

ToS For SIP	<p>Configure the Type of Service for SIP packets. The default setting is None.</p>
--------------------	--

ToS For RTP Audio	Configure the Type of Service for RTP audio packets. The default setting is None.
ToS For RTP Video	Configure the Type of Service for RTP video packets. The default setting is None.
Default Incoming/Outgoing Registration Time	Configure the default duration (in seconds) of incoming/outgoing registration. The default setting is 120.
Max Registration/Subscription Time	Configure the maximum allowed duration (in seconds) of incoming registration and subscription requests. Default value is 3600.
Min Registration/Subscription Time	Configure the minimum allowed duration (in seconds) of incoming registration and subscription requests. Default value is 60.
Enable Relaxed DTMF	Select to enable relaxed DTMF handling, This may cause audio to be mistaken for DTMF. The default setting is “No”.
DTMF Mode	Select DTMF mode to send DTMF. The default setting is RFC4733. If “Info” is selected, SIP INFO message will be used. If “Inband” is selected, 64-kbit codec PCMU and PCMA are required. When “Auto” is selected, “RFC4733” will be used if offered. Otherwise “Inband” will be used. The default setting is “RFC4733”.
RTP Timeout	During an active call, if there is no RTP activity before the configured timeout, the call will be terminated. The default setting is no timeout. Note: This setting does not apply to calls on hold.
RTP Hold Timeout	When the call is on hold, if there is no RTP activity before the configured timeout, the call will be terminated. This value of RTP Hold Timeout should be larger than RTP Timeout. The default setting is no timeout.
RTP Keep-alive	This feature can be used to avoid abnormal call drop when the remote provider requires RTP traffic during proceeding. For example, when the call goes into voicemail and there is no RTP traffic sent out from UCM, configuring this option can avoid voicemail drop. When configured, RTP keep-alive packet will be sent to remote party at the configured interval. If set to 0, RTP keep-alive is disabled.
100rel	Configure the 100rel setting on UCM6200. The default setting is “Yes”.
Trust Remote Party ID	Configure whether the Remote-Party-ID should be trusted. Default setting is “No”.
Send Remote Party ID	Configure whether the Remote-Party-ID should be sent or not. The default setting is “No”.

Generate In-Band Ringing	<p>Configure whether the UCM6200 should generate inband ringing or not. The default setting is “Never”.</p> <ul style="list-style-type: none"> o Yes: The UCM6200 will send 180 Ringing followed by 183 Session Progress and in-band audio. o No: The UCM6200 will send 180 Ringing if 183 Session Progress has not been sent yet. If audio path is established already with 183 then send in-band ringing. o Never: Whenever ringing occurs, the UCM6200 will send 180 Ringing as long as 200OK has not been set yet. Inband ringing will not be generated even the end point device is not working properly.
Server User Agent	<p>Configure the user agent string for the UCM6200.</p> <p>Note: The value configured in the Server User Agent Value field will replace the whole User-Agent header value instead of just the “UCM6xxx” part.</p>
Send Compact SIP Headers	<p>If enabled, compact SIP headers will be sent. The default setting is “No”.</p>

Transparent Call-Info header

UCM supports transparent call info header in order to integrate GDS door system with GXP21XX Color phones, the UCM will forward the call-info header to the phone in order to request the live view from GDS door system and give the option to open the door via softkey.

```

Session Initiation Protocol (INVITE)
Request-Line: INVITE sip:3001@192.168.6.36:5064 SIP/2.0
Message Header
Via: SIP/2.0/UDP 192.168.6.187:5060;rport;branch=z9hG4bKPj3217e67b-e74f-4f9f-b06f-afd3dcbbe29b
From: "3002" <sip:3002@192.168.6.187>;tag=202dca4f-2b9d-4880-924c-d48cea7d0596
To: <sip:3001@192.168.6.36>
Contact: <sip:68aae6ea-f1d4-4e62-9987-446e718a2448@192.168.6.187:5060>
Call-ID: 7f66bb20-0b9f-4828-a355-698853b8d9fb
CSeq: 17559 INVITE
Allow: OPTIONS, INFO, SUBSCRIBE, NOTIFY, PUBLISH, INVITE, ACK, BYE, CANCEL, UPDATE, PRACK, MESSAGE, REGISTER, REFER
Supported: 100rel, timer, replaces, noferesub
Session-Expires: 1800
Min-SE: 90
Call-Info: <https://192.168.6.186:443/capture/8001> ;purpose=GDS-view
Max-Forwards: 70
User-Agent: Grandstream UCM6202V1.5A 1.0.13.15
Content-Type: application/sdp
Content-Length: 547
Message Body

```

Figure 251: Transparent Call-Info

IAX Settings

The UCM6200 IAX global settings can be accessed via Web GUI→PBX Settings→IAX Settings.

IAX Settings/General

Table 110: IAX Settings/General

Bind Port	Configure the port number that the IAX2 will be allowed to listen to. The default setting is 4569.
Bind Address	Configure the address that the IAX2 will be forced to bind to. The default setting is 0.0.0.0, which means all addresses.

IAX1 Compatibility	Select to configure IAX1 compatibility. The default setting is “No”.
No Checksums	If selected, UDP checksums will be disabled and no checksums will be calculated/checked on systems supporting this feature. The default setting is “No”.
Delay Reject	If enabled, the IAX2 will delay the rejection of calls to avoid DOS. The default setting is “No”.
ADSI	Select to enable ADSI phone compatibility. The default setting is “No”.
Music On Hold Interpret	Specify which Music On Hold class this channel would like to listen to when being put on hold. This music class is only effective if this channel has no music class configured and the bridged channel putting the call on hold has no “Music On Hold Suggest” setting.
Music On Hold Suggest	Specify which Music On Hold class to suggest to the bridged channel when putting the call on hold.
Bandwidth	Configure the bandwidth for IAX settings. The default setting is “Low”.

IAX Settings/Registration

Table 111: IAX Settings/Registration

IAX Registration Options	
Min Reg Expire	Configure the minimum period (in seconds) of registration. The default setting is 60.
Max Reg Expire	Configure the maximum period (in seconds) of registration. The default setting is 3600.
IAX Thread Count	Configure the number of IAX helper threads. The default setting is 10.
IAX Max Thread Count	Configure the maximum number of IAX threads allowed. The default is 100.
Auto Kill	If set to “yes”, the connection will be terminated if ACK for the NEW message is not received within 2000ms. Users could also specify number (in milliseconds) in addition to “yes” and “no”. The default setting is “yes”.
Authentication Debugging	If enabled, authentication traffic in debugging will not show. The default is “No”.

Codec Priority	<p>Configure codec negotiation priority. The default setting is “Reonly”.</p> <ul style="list-style-type: none"> ◦ Caller <p>Consider the callers preferred order ahead of the host’s.</p> <ul style="list-style-type: none"> ◦ Host <p>Consider the host’s preferred order ahead of the caller’s.</p> <ul style="list-style-type: none"> ◦ Disabled <p>Disable the consideration of codec preference all together.</p> <ul style="list-style-type: none"> ◦ Reonly <p>This is almost the same as “Disabled”, except when the requested format is not available. The call will only be accepted if the requested format is available.</p>
Type of Service	Configure ToS bit for preferred IP routing.
IAX Trunk Options	
Trunk Frequency	Configure the frequency of trunk frames (in milliseconds). The default is 20.
Trunk Time Stamps	If enabled, time stamps will be attached to trunk frames. The default is “No”.

IAX Settings/Security

Table 112: IAX Settings/Static Defense

Call Token Optional	Enter a single IP address (e.g., 11.11.11.11) or a range of IP addresses (11.11.11.11/22.22.22.22) for which call token validation is not required.
Max Call Numbers	Configure the maximum number of calls allowed for a single IP address.
Max Unvalidated Call Numbers	Configure the maximum number of Unvalidated calls for all IP addresses.
Call Number Limits	Configure to limit the number of calls for a give IP address of IP range.
IP or IP Range	Enter the IP address (11.11.11.11) or a range of IP addresses (11.11.11.11/22.22.22.22) to be considered for call number limits.

Interface Settings

Analog Hardware

The analog hardware (FXS port and FXO port) on the UCM6200 will be listed in this page. Click on [Edit](#) to edit signaling preference for FXS port or configure ACIM settings for FXO port.

Select “Loop Start” or “Kewl Start” for each FXS port. And then click on “Update” to save the change.

Figure 252: FXS Ports Signaling Preference

For FXO port, users could manually enter the ACIM settings by selecting the value from dropdown list for each port. Or users could click on “Detect” and choose the detection algorithm, two algorithms exist (ERL, Pr) for the UCM6200 to automatically detect the ACIM value. The detecting value will be automatically filled into the settings.

Figure 253: FXO Ports ACIM Settings

Table 113: PBX Interface Settings

Tone Region	Select country to set the default tones for dial tone, busy tone, ring tone and etc. to be sent from the FXS port. The default setting is “United States of America (USA)”.
Advanced Settings	
FXO Opermode	Select country to set the On-Hook Speed, Ringer Impedance, Ringer Threshold, Current Limiting, TIP/RING voltage adjustment, Minimum Operational Loop Current, and AC Impedance as predefined for your country’s analog line characteristics. The default setting is “United States of America (USA)”.
FXS Opermode	Select country to set the On-Hook Speed, Ringer Impedance, Ringer Threshold, Current Limiting, TIP/RING voltage adjustment, Minimum Operational Loop Current, and AC Impedance as predefined for your country’s analog line characteristics. The default setting is “United States of America (USA)”.

FXS TISS Override	Configure to enable or disable override Two-Wire Impedance Synthesis (TISS). The default setting is No. If enabled, users can select the impedance value for Two-Wire Impedance Synthesis (TISS) override. The default setting is 600Ω.
PCMA Override	Select the codec to be used for analog lines. North American users should choose PCMU. All other countries, unless already known, should be assumed to be PCMA. The default setting is PCMU. Note: This option requires system reboot to take effect.
Boost Ringer	Configure whether normal ringing voltage (40V) or maximum ringing voltage (89V) for analog phones attached to the FXS port is required. The default setting is “Normal”.
Fast Ringer	Configure to increase the ringing speed to 25HZ. This option can be used with “Low Power” option. The default setting is “Normal”.
Low Power	Configure the peak voltage up to 50V during “Fast Ringer” operation. This option is used with “Fast Ringer”. The default setting is “Normal”.
Ring Detect	If set to “Full Wave”, false ring detection will be prevented for lines where Caller ID is sent before the first ring and proceeded by a polarity reversal, as in UK. The default setting is “Standard”.
FXS MWI Mode	Configure the type of Message Waiting Indicator on FXS lines. The default setting is “FSK”. <ul style="list-style-type: none"> ○ FSK: Frequency Shift Key Indicator ○ NEON: Light Neon Bulb Indicator.
FXO Frequency Tolerance	Allows users to adjust the tolerance of the FXO ringing frequency. 63Hz is considered the standard value and is selected by default.

DAHDI Settings

When users encounter issues such as audio delay in outbound calls using the analog trunk, they can adjust DAHDI settings on the UCM to attempt to lessen or resolve the issues.

* Analog Buffers:	<input type="text" value="32, half"/>
* Fax Buffers Policy:	<input type="text" value="32, half"/>
* DTMF Start Threshold:	<input type="text" value="2"/>
* DTMF End Threshold:	<input type="text" value="3"/>

Figure 254: DAHDI Settings

For the value of the option such as “32, half”:

The number in the option indicates the number of read/write buffers for TDM (DAHDI).

The “Half”, “Immediate” or “Full” option indicates the strategy when reading/writing data from buffer.

- **“Half”**: Data will be read/written from buffer when half of the buffer is occupied with data.
- **“Immediate”**: Read/write from buffer whenever there is data occupying the buffer.
- **“Full”**: Data will be read/written from buffer when buffer is fully occupied with data.

DTMF Start Threshold: Indicates the minimum number of times a single DTMF must be detected in a signal before it is considered valid.

DTMF End Threshold: Indicates the minimum number of times an end signal for a single DTMF number must be detected before it is considered valid.

Normally, DAHDI settings should be kept default and should be adjusted only when users encounter analog trunk/Fax-related issues.

GDMS Settings

UCM can synchronize its SIP accounts to GDMS cloud management system.

<http://www.grandstream.com/products/device-management/gdms>

To get started, log into your GDMS account and navigate to the System→API Developer page. Click on the Enable API Developer Mode button if it has not been enabled yet.

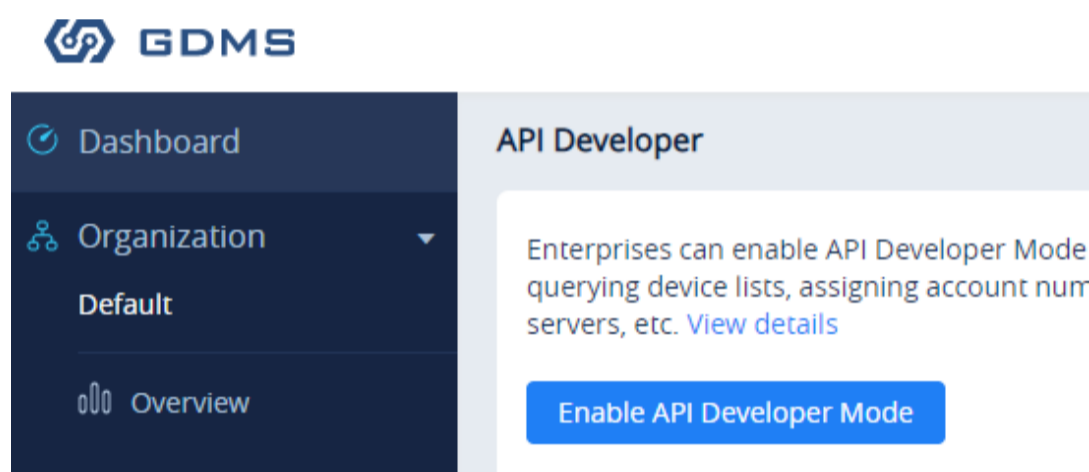


Figure 255: GDMS Developer Mode Button

After clicking on it, the API ID and Secret Key will be displayed. Note down these credentials.

On the UCM, navigate to System Settings→GDMS Settings. Check the Enable option if it has not been toggled on. Enter your GDMS account credentials and the API developer credentials.

For the *Account* field, enter either your account username or email address. Once all the information has been entered, click on the *Authenticate* button to connect to GDMS.

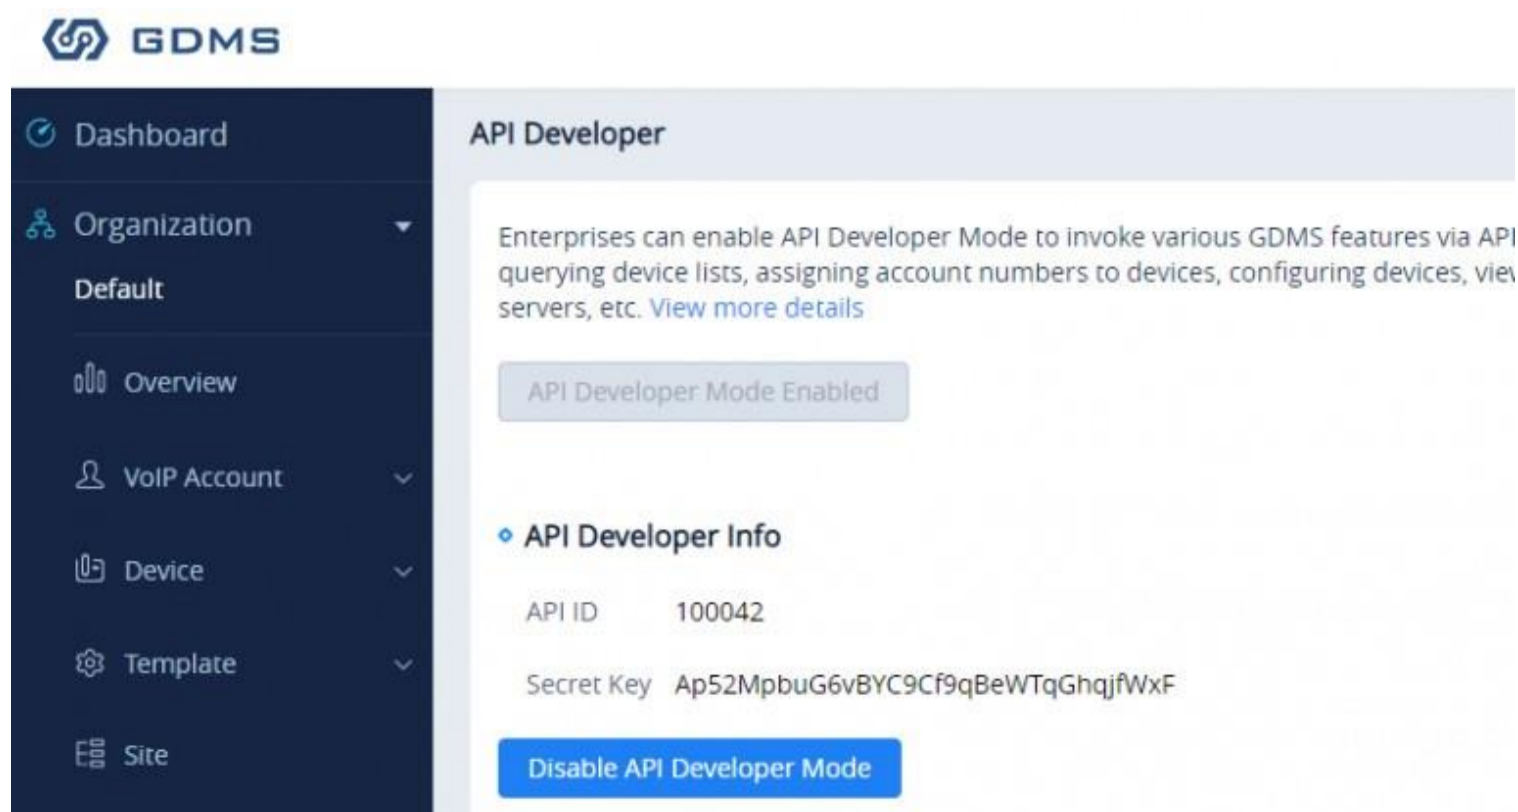


Figure 256: GDMS API Credentials

GDMS Settings

UCM supports syncing all SIP extensions to GDMS Cloud Platform. After authentication, select the organization to sync extensions to. This funct

Enable:

* Server Region:

* Account Email/Username:

* Password:

* API ID:

* Secret Key:

Connection Status: No authentication

Organization:

Authenticate

Figure 257: GDMS Settings

Enable	Toggles GDMS support. If enabled, all SIP extensions on the UCM will be automatically synced to GDMS.
Server Region	Select your GDMS server region: <ul style="list-style-type: none"> ◦ US region ◦ EU region
Account Email/Username	The account email/username for GDMS authentication.
Password	The password for GDMS authentication.
API ID	API ID from GDMS account. Refer to [Figure 256: GDMS API Credentials].
Secret Key	API secret key from GDMS account. Refer to [Figure 256: GDMS API Credentials].
Connection Status	Provides the connection status once authenticated.
Organization	Name of the organization in GDMS that the UCM SIP server and its extensions will be under.
Authenticate	Sends the authentication request to GDMS with the entered credentials.

If the authentication is successful, you will now be able to select an organization on GDMS to synchronize all UCM SIP accounts to. After selecting, saving and applying changes, the UCM will then start the syncing process. Once the initial sync is complete, you will now be able to see the UCM and its extensions on GDMS, which will have an orange label with the words “UCM”. Any future creation, deletion, or modification of SIP accounts will automatically be

synchronized to GDMS.

Figure 258: UCM on GDMS

Figure 259: UCM SIP Extensions on GDMS

Any future creation, modification, and deletion of the UCM's SIP extensions will automatically be synchronized to GDMS.

UCM extensions' names currently cannot be synchronized.

API Configuration

The UCM6200 supports third party billing interface API for external billing software to access CDR and call recordings on the PBX. The API uses HTTPS to request the CDR data and call recording data matching given parameters as configured on the third-party application. More methods are also supported to provide better integration with 3rd party systems.

Before accessing the API, the administrators need to enable the HTTPS API and configure the access/authentication information on the UCM6200 first under **Value-added Features** → **API Configuration**. The API configuration parameters are available for HTTPS API Settings (New), HTTPS API Settings (Old), CDR Real-time Output Settings & "Upload Prompts User Configuration".

HTTPS API (New)

Starting from firmware 1.0.20.17, UCM6200 supports new HTTPS API interface to query, edit PBX settings and implement multiple call functions on another server connected to it via API. PBX will actively send system reports and call reports to this other server. Additionally, legacy CDR API, REC API and PMS API are supported.

The table below lists configuration parameters for HTTPS API.

Table 114: API Configuration Parameters

HTTPS API Settings (New)

Enable	Enable/Disable API. The default setting is disabled.
Username	Configure the username for API Authentication.
Password	Configure the password for API Authentication.
Call Control	If enabled, 3 rd party applications will be able to manage inbound calls via API actions. acceptCall will accept incoming calls while refuseCall will reject them. If no actions are done within 10 seconds, calls will automatically be accepted.

HTTPS API uses web interface port (default is 8089).

The table below lists new HTTPS API supported methods.

Table 115: New API Supported Queries

getSystemStatus	addInboundRoute	listPaginggroup
getSystemGeneralStatus	getInboundRoute	addPaginggroup
listAccount	updateInboundRoute	getPaginggroup
getSIPAccount	deleteInboundRoute	updatePaginggroup
updateSIPAccount	playPromptByOrg	deletePaginggroup
listVoIPTrunk	listBridgedChannels	MulticastPaging
addSIPTrunk	listUnBridgedChannels	MulticastPagingHangup
getSIPTrunk	Hangup	listIVR
updateSIPTrunk	Callbarg	addIVR
deleteSIPTrunk	listQueue	getIVR
listOutboundRoute	getQueue	updateIVR
addOutboundRoute	updateQueue	deleteIVR
getOutboundRoute	addQueue	cdrapi
updateOutboundRoute	deleteQueue	recapi
deleteOutboundRoute	loginLogoffQueueAgent	pmsapi

listInboundRoute	pauseUnpauseQueueAgent	queueapi
listDigitalTrunk	listAnalogTrunk	getAnalogTrunk
deleteAnalogTrunk	updateAnalogTrunk	addAnalogTrunk
addSLATrunk	updateSLATrunk	addDigitalTrunk
updateDigitalTrunk	deletedigitalTrunk	getDigitalTrunk

For more details, please refer to online how-to guide available in our website.

HTTPS API (Old)

Table 116: API Configuration Parameters (Old)

HTTPS API	
Settings (Old)	
Basic Settings	
Enable	Enable/Disable API. The default setting is disabled.
TLS Bind Address	Configure the IP address for TLS server to bind to. “0.0.0.0” means binding to all interfaces. The port number is optional, and the default port number is 8443. The IP address must match the common name (host name) in the certificate so that the TLS socket will not bind to multiple IP addresses. The default setting is 0.0.0.0:8443.
Username	Configure the username for TLS authentication.
Password	Configure the password for TLS authentication.
Permitted IP(s)	Specify a list of IP addresses permitted to use the API. This creates an API-specific access control list. Multiple entries are allowed. For example, “192.168.40.3/255.255.255.255” denies access from all IP addresses except 192.168.40.3. By default, this is blank, which indicates that no IP addresses are allowed to use this API.
Other Settings	
TLS Private Key	Upload TLS private key. The size of the key file must be under 2MB. This file will be renamed as ‘private.pem’ automatically.

TLS Cert	Upload TLS cert. The size of the certificate must be under 2MB. This is the certificate file (*.pem format only) for TLS connection. This file will be renamed as “certificate.pem” automatically. It contains private key for the client and signed certificate for the server.
API Module	
CDR API	Enable/disable CDR API module.
REC API	Enable/disable REC API module.
PMS API	Enable/disable PMS API module.

For more details on CDR API (Access to Call Detail Records), REC API (Access to Call Recording Files) and PMS API, please refer the document in the link here:

- <https://documentation.grandstream.com/knowledge-base/cdr-rec-api/>
- <https://documentation.grandstream.com/knowledge-base/cdr-rec-api/>
- PMS API

CDR Real-time Output Settings

CDR Real-time output feature allows to automatically send CDR records once available (after the call is terminated) to a specified server address.

Table 117: CDR Real-time Output Settings

CDR Real-time Output Settings	
Enable	Enables real-time CDR output module. This module connects to selected IP addresses and ports and posts CDR strings as soon as it is available.
Server Address	CDR server IP address
Port	CDR server IP port
Delivery Method	Choose either TCP protocol or HTTP/HTTPS protocol
Format	Choose either XML or JSON for CDR format
Username	Enter the Username for authentication.
Password	Enter the Password for authentication.

For more details, refer to online how-to guide available at:

<https://documentation.grandstream.com/knowledge-base/cdr-real-time-output-feature/>

CTI Server

UCM supports CTI server capabilities which are designed to be a part of the CTI solution suite provided by Grandstream, which involves the GXP17XX series, GXP21XX series and the GS Affinity application.

By default, the UCM listens to port 8888 for connection requests from the GS Affinity application. This will allow the UCM to interact with, modify, and execute requests by the application such as setting call forwarding and DND.

Users can change the listening port under the menu page, Web GUI→**Value-added Features**→**CTI Server** as shown on below screenshot:



The screenshot shows a web interface for configuring the CTI Server. At the top left, the text 'CTI Server' is displayed. In the top right corner, there is a blue 'Save' button. Below this, there is a form with a label '* Port:' followed by a text input field containing the number '8888'.

Figure 260: CTI Server Listening port

More information about GS affinity and CTI Support on Grandstream products series please refer to the following link:

<https://documentation.grandstream.com/knowledge-base/gs-affinity-user-guide/>

ASTERISK MANAGER INTERFACE (RESTRICTED ACCESS)

The UCM6200 supports Asterisk Manager Interface (AMI) with restricted access. AMI allows a client program to connect to an Asterisk instance commands or read events over a TCP/IP stream. It is particularly useful when the system admin tries to track the state of a telephony client inside Asterisk.

User could configure AMI parameters on UCM6200 Web GUI→**Value-added Features**→**AMI**. For details on how to use AMI on UCM6200, please refer to the following AMI guide:

<https://documentation.grandstream.com/knowledge-base/ami-asterisk-management-interface/>

Please do not enable AMI on the UCM6200 if it is placed on a public or untrusted network unless you have taken steps to protect the device from unauthorized access. It is crucial to understand that AMI access can allow AMI user to originate calls and the data exchanged via AMI is often very sensitive and private for your UCM6200 system. Please be cautious when enabling AMI access on the UCM6200 and restrict the permission granted to the AMI user. By using AMI on UCM6200 you agree you understand and acknowledge the risks associated with this.

CRM Integration

Customer relationship management (CRM) is a term that refers to practices, strategies and technologies that companies use to manage and analyze customer interactions and data throughout the customer lifecycle, with the goal of improving business relationships with customers.

The UCM6200 support the following CRM API: SugarCRM, VtigerCRM, ZohoCRM and Salesforce CRM.

This support allows users to quickly create and modify contacts, leads, and accounts in the CRM from calls made through the UCM.

Starting firmware 1.0.17.16, emergency calls will not be logged into CRM servers.

SugarCRM

Configuration page of the SugarCRM can be accessed via admin login, on the UCM webGUI→**Value-added Features**→**CRM**.

CRM

Figure 261: SugarCRM Basic Settings

1. Select “SugarCRM” from the CRM System Dropdown in order to use SugarCRM.

Table 118: SugarCRM Settings


CRM System	Select a CRM system from the dropdown menu, four CRM systems are available: SugarCRM, VtigerCRM, ZohoCRM (legacy v1 API), ZohoCRM (v2 API), Salesforce or ACT! CRM.
CRM Server Address	Enter the IP address of the CRM server.
Add Unknown Number	Add the new number to this module if it cannot be found in the selected module.
Contact Lookups	Select from the “ Available ” list of lookups and press to select where the UCM can perform the lookups on the CRM tables, Leads, Accounts, and Contacts.

Once settings on admin access are configured:

1. Click on and .
2. Logout from admin access.
3. Login to the UCM as user and navigate under “User Portal→Value-added Feature→CRM User Settings”.

Click on “**Enable CRM**” and enter the username/password associated with the CRM account then click on and . The status will change from “Logged Out” to “Logged In”. User can start then using SugarCRM features.

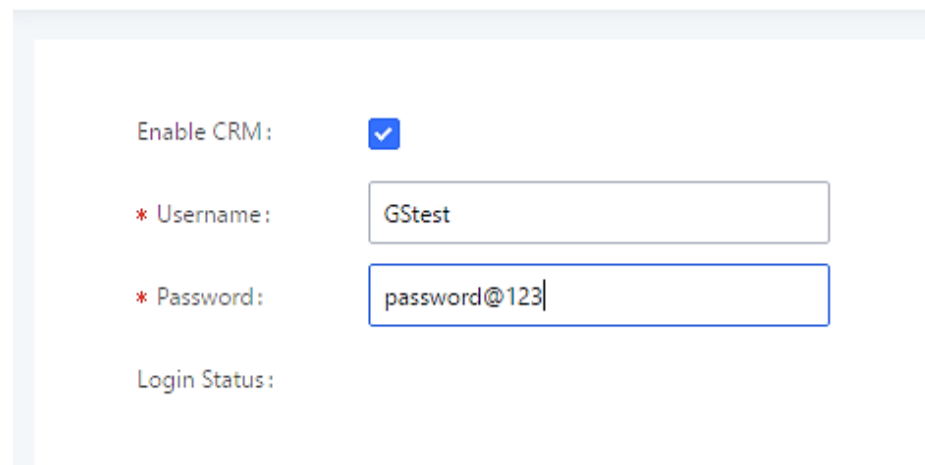CRM User Settings



The screenshot shows a configuration form titled "CRM User Settings". It contains the following fields:

- Enable CRM:** A checkbox that is checked.
- * Username:** A text input field containing "GStest".
- * Password:** A text input field containing "password@123".
- Login Status:** A label with no associated input field.

Figure 262: CRM User Settings

VtigerCRM

Configuration page of the VtigerCRM can be accessed via admin login, on the UCM webGUI→**Value-added Features**→**CRM**.

Figure 263: VtigerCRM Basic Settings

1. Select "VtigerCRM" from the CRM System Dropdown in order to use VtigerCRM.

Table 119: VtigerCRM Settings

CRM System	Select a CRM system from the dropdown menu, four CRM systems are available: SugarCRM, VtigerCRM, ZohoCRM (legacy v1 API), ZohoCRM (v2 API), Salesforce or ACT! CRM.
CRM Server Address	Enter the IP address of the CRM server.
Add Unknown Number	Add the new number to this module if it cannot be found in the selected module.
Contact Lookups	Select from the " Available " list of lookups and press <input type="button" value="OK"/> to select where the UCM can perform the lookups on the CRM tables, Leads, Organizations, and Contacts.

Once settings on admin access are configured:

1. Click on [] and [] .
2. Logout from admin access.
3. Login to the UCM as user and navigate under “User Portal→Value-added Feature→CRM User Settings”.

Click on “**Enable CRM**” and enter the username/password associated with the CRM account then click on [] and [] . The status will change from “Logged Out” to “Logged In”. User can start then using SugarCRM features.

Figure 264: CRM User Settings

Note

UCM6200 is not compatible with Vtiger Cloud version of the CRM.

ZohoCRM

Configuration page of the ZohoCRM v1 and ZohoCRM v2 can be both accessed via admin login, on the UCM Web GUI→**Value-added Features**→**CRM**.

Figure 265: ZohoCRM Basic Settings

1. Select “ZohoCRM (v2 API)” from the CRM System Dropdown in order to use ZohoCRM.

Zoho CRM (legacy v1 API) will no longer be supported after 2019. Please use Zoho CRM (v2 API).t

Table 120: ZohoCRM Settings

CRM System	Select CRM system from the dropdown menu, four CRM systems are available: SugarCRM, VtigerCRM, ZohoCRM (legacy v1 API), ZohoCRM (v2 API), Salesforce or ACT! CRM.
CRM Server Address	Select Zoho CRM URL from the list. Available options are: <ul style="list-style-type: none"> ◦ https://www.zohoapis.com ◦ https://www.zohoapis.com ◦ https://www.zohoapis.eu
Add Unknown Number	Add the new number to this module if it cannot be found in the selected module.
Contact Lookups	Select from the “ Available ” list of lookups and press <input type="button" value="OK"/> to select where the UCM can perform the lookups on the CRM tables, Leads, Accounts, and Contacts.

Once settings on admin access are configured:

1. Click on and .
2. Logout from admin access.
3. Login to the UCM as user and navigate under “User Portal → Value-added Feature → CRM User Settings”.

Click on “**Enable CRM**” and enter the username/password associated with the CRM account then click on and . The status will change from “Logged Out” to “Logged In”. User can start then using ZohoCRM features.

Figure 266: CRM User Settings

Salesforce CRM

Configuration page of the Salesforce CRM can be accessed via admin login, on the UCM Web GUI → **Value-added Features** → **CRM**”.

CRM

Figure 267: Salesforce Basic Settings

1. Select “Salesforce” from the CRM System Dropdown in order to use Salesforce CRM.

Table 121: Salesforce Settings

CRM System	Select a CRM system from the dropdown menu, four CRM systems are available: SugarCRM, VtigerCRM, ZohoCRM (legacy v1 API), ZohoCRM (v2 API), Salesforce or ACT! CRM.
Add Unknown Number	Add the new number to this module if it cannot be found in the selected module.
Contact Lookups	Select from the “ Available ” list of lookups and press to select where the UCM can perform the lookups on the CRM tables, Leads, Accounts, and Contacts.

Once settings on admin access are configured:

1. Click on and .
2. Logout from admin access.
3. Login to the UCM as user and navigate under “User Portal→Value-added Feature→CRM User Settings”.

Click on “**Enable CRM**” and enter the **username**, **password** and **Security Token** associated with the CRM account then click on and . The status will change from “Logged Out” to “Logged In”. User can start then using Salesforce CRM features.

CRM User Settings

Figure 268: Salesforce User Settings

ACT! CRM

Configuration page of the ACT! CRM can be accessed via admin login, on the UCM Web GUI→**Value-added Features**→**CRM**".

The configuration steps of the ACT! CRM are as follows:

1. Navigate to **Value-Added Features**->**CRM** and select the "ACT! CRM" option.

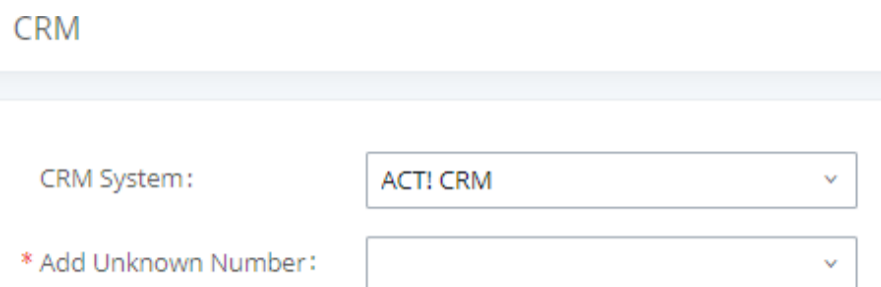


Figure 269: Enabling ACT! CRM

1. Log into the UCM as a regular user and navigate to **Value-Added Features** → **CRM User Settings** and check "Enable CRM" option and enter the username and password, which will be the ACT! CRM account's **API Key** and **Developer Key**, respectively. To obtain these, please refer to the ACT! CRM API developer's guide here: <https://mycloud.act.com/act/Help>

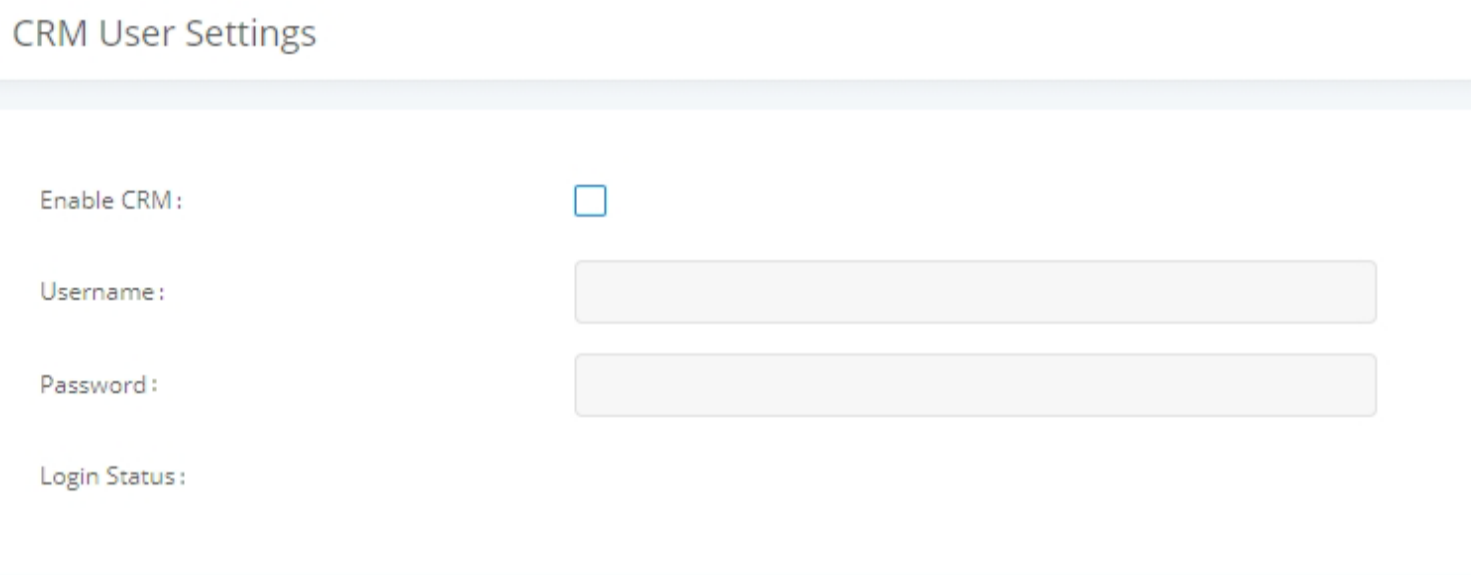


Figure 270: Enabling CRM on the User Portal

For more information on the ACT! CRM integration, please refer to the ACT! CRM documentation on our website.

PMS Integration

UCM6200 supports Hotel Property Management System PMS, including check-in/check-out services, wakeup calls, room status, Do Not Disturb which provide an ease of management for hotel applications. This feature can be found on Web GUI→**Value-added Features**→**PMS**.

The PMS integration on UCM is currently supported only with one of the three following solutions.

The PMS module built-in the UCM supports the following features based on each solution:

Table 122: PMS Supported Features

Feature	Mitel	HMobile	HSC
Check-In	✓	✓	X

Check-out	✓	✓	X
Wake-up Call	✓	✓	X
Name Change	✓	X	✓
Update	X	✓	X
Set Credit	✓	X	X
Set Station Restriction	✓	X	✓
Room Status	X	✓	X
Room Move	X	✓	X
Do Not Disturb	X	✓	✓
Mini Bar	X	✓	X
MSG	X	✓	X
MWI	X	X	✓
Unconditional Call Forward	X	X	✓

HMobile PMS Connector

In this mode, the system can be divided into three parts:

- PMS (Property Management System)
- PMSI (Property Management System Interface)
- PBX

Grandstream UCM6XXX series have integrated HMobile Connect PMSI which supports a large variety of PMS software providing following hospitality features: Check-in, Check-out, set Room Status, Wake-up call and more.

The following figure illustrates the communication flow between the PBX (Grandstream UCM6xxx Series) and PMS software, which is done through a middleware system (HMobile Connect) acting as interface between both parties.

PMS Software

PMSI Middleware

(HMobile Connect)

Grandstream UCM

Figure 271: UCM & PMS interaction

HSC PMS

In this mode, the system can be divided into two parts:

- PMS (Property Management System)
- PBX

Grandstream UCM6XXX series have integrated HSC PMS providing following features:

- Changing Display Name
- Set Station Restriction
- Call forwarding
- DND
- Name Change
- MWI

The following figure illustrates the communication flow between the PBX (Grandstream UCM6xxx Series) and PMS software (HSC). The communication between both parties is direct with no middleware.

HSC PMS Software

Grandstream UCM

Figure 272: UCM & HSC PMS interaction

Mitel PMS

In this mode, the system can be divided into two parts:

- PMS (Property Management System)
- PBX

Grandstream UCM6XXX series have integrated Mitel PMS providing following hospitality features: Check-in, Check-out, set Room Status, Wake-up call and more.

The following figure illustrates the communication flow between the PBX (Grandstream UCM6xxx Series) and PMS software (Mitel). The communication between both parties is direct with no middleware.

Mitel PMS Software

Grandstream UCM

Figure 273: UCM & Mitel PMS interaction

PMS API

The PMS API allows users to use their own middleware to work with PMS systems instead of currently supported integrations.

Additionally, this API allows access to read and modify certain UCM parameters that current supported PMS integrations cannot. To use this, users must first enable and configure the HTTPS API settings.

On the HTTPS API settings, permitted IP addresses must be configured. Otherwise, the API will be inaccessible.

On the “Old” HTTPS API settings, permitted IP addresses must be configured. Otherwise, the API will be inaccessible. Make sure to check “Enable PMS API”.

Figure 274: Enable PMSAPI

On the “New” HTTPS API, users only need to enable the HTTPS API, which has PMS API functionality built in.

For more details, regarding Old/New HTTPS API, please refer to [API CONFIGURATION].

For more details, please refer to online [PMS API Guide](#).

Connecting to PMS

On the UCM WebGUI→**Value-added Features**→**PMS**→**Basic Settings**” set the connection information for the PMS platform.

Table 123: PMS Basic Settings

Field	Description
PMS Module	<p>Users can select the desired PMS module from the drop-down list.</p> <ul style="list-style-type: none"> ◦ Hmobile. ◦ Mitel. ◦ HSC. ◦ PMS API
Wake Up Prompt	Prompt used when answering the wakeup calls it can be customized from “PBX Settings→Voice Prompt→Custom Prompt.”
PMS URL	<p>Enter the PMS system URL.</p> <p>If using “Hmobile” PMS Module only.</p> <p>If</p>
UCM Port	Enter the Port used by the PMS system. Default is 8081.
Username	<p>Enter the Username to connect to the PMS system.</p> <p>If using “Hmobile” or “HSC” PMS Module only.</p>
Password	<p>Enter the password to connect to the PMS system.</p> <p>If using “Hmobile” or “HSC” PMS Module only.</p>
Site	<p>Enter the site to connect to the PMS system.</p> <p>If using “Hmobile” PMS Module only.</p>
Back Up Voicemail Recordings	If enabled, this option allows backing up voicemail recordings to external storage after check-out. Voicemail can be backed up to SD card, USB disk, NAS, or an SFTP server
Email address	Configure the email address to send the backup to.

In order to use some PMS features please activate the feature code associated under **“Call Features→Feature Codes”**

- Update PMS Room Status
- PMS Wake Up Service

PMS Features

Room Status

User can create Rooms by clicking on [+ Create New Room](#) , the following Figure will be displayed then.

Create New Room

* Address: 1000

* Room Number: 1000

* Extension: 1000 "John DOE" v

Guest Account:

Guest Category Cod...

Guest Credit Money...

Maid Code:

Arrival Date:

Departure Date:

Figure 275: Create New Room

Click "Save" to create the new room, the fields above can be configured from the PMS platform, once set the following screen will be shown:

PMS

Basic Settings Room Status Wakeup Service Mini Bar Maid

+ Add Room Delete Selected Rooms + Batch Add Rooms

ADDRESS	ROOM NUMBER	EXTENSION	ROOM STATUS	USER NAME	GUEST CATEGORY CODE	ARRIVAL DATE	DEPARTURE DATE	OPTIONS
10	10	1000	Check-out	John DOE				
100	100	1001	Check-out	Meryem Gou				

Figure 276: Room Status

User can create a batch of rooms as well by clicking on [+ Batch Add Rooms](#).

The following windows will appear:

Batch Add Rooms

* Start Address Num... 100

* Start Room Numb... 351

* Start Extension: 1005 v

* Create Number: 8

Figure 277: Add batch rooms

Wake Up Service

To create a New Wake up service, user can click on [+ Create New Wakeup Service](#).

The following windows will appear:

Create New Wakeup Service

* Room Number: 1000

* Date: 2017-05-05

* Time: 09:15

* Action Status: Programmed

Type: Single

Figure 278: Create New Wake Up Service

Table 124: PMS Wake up Service

Field	Description
Room Number	Select the room to create the wakeup service for.
Time	Set the time of the wakeup call
Action Status	<p>Status of the call:</p> <ul style="list-style-type: none"> ◦ Programmed: the call is scheduled for the time set ◦ Cancelled: the call is canceled <p>Executed: the wakeup call has been sent.</p> <p>Note: Editing an already executed wakeup service will automatically change the service's status to "Programmed".</p>
Type	<p>Single: The call will be made once at the specified time.</p> <ul style="list-style-type: none"> ◦ Daily: The call will be repeated every day at the specified time.

Once the call is made on the time specified, the following figure show the status of the wakeup call.

<input type="checkbox"/>	Name ↕	Extension ↕	Status	Action Status ↕	Answer Status ↕	Date	Time	Options
<input type="checkbox"/>	John	1000	Enabled	Executed	Answered	2017-05-04	05:18	

Figure 279: Wakeup Call executed

Mini Bar

In order to create a new mini bar, click on [+ Create New Mini Bar](#) under UCM webGUI→**Value-added Features**→**PMS**→**Mini Bar**.

The following windows will appear:

Create New Mini Bar

* Code:

* Name:

* Prompt: [Prompt](#)

Skip Maid and Passw...

Enable Continuous M...

Figure 280: Create New Mini Bar

Table 125: Create New Mini Bar

Code	Enter a non-existing extension number to be dialed when using the mini bar feature.
Name	Enter a name for the mini bar.
Prompt	Select the Prompt to play once connected to the mini bar.
Skip Maid and Password Authentication	If enabled, the default maid code will be 0000, no authentication is required. (Enter 0000 followed by # to access the consumer goods)
Enable Continuous Multi Goods Billing	If enabled, please separate the goods' codes by*.

In order to create a new maid, click on [Mini Bar](#) under UCM webGUI→Value-added Features→PMS→Mini Bar.

The following windows will appear:

Figure 281: Create New Maid

Table 126: Create New Maid

Maid Code	Enter the Code to use when the maid wants to use the Mini Bar.
Secret	Enter the password associated with the maid.

In order to create a new consumer goods, click on [Mini Bar](#) under UCM webGUI→Value-added Features→PMS→Mini Bar.

The following windows will appear:

Figure 282: Create New Consumer Goods

Code	Enter the Goods Code.
Name	Enter the Name of the Goods

The Minibar page displays as:

Figure 283: Mini Bar

Wakeup Service

The Wakeup service can be used to schedule a reminder/wakeup calls to extensions.

There are three ways to set up Wakeup Service:

- Using admin portal
- Using user portal
- Using feature code

Wakeup Service using Admin Login

1. Log in to the UCM as admin.
2. Wakeup service can be found under Web GUI→**Value-added Features**→**Wakeup Service**, click on  to create a new wakeup service. The following window will pop up.

Figure 284: Create New Wakeup Service

1. Fill out the required fields and select the members to add to the wakeup group.

Table 127: Wakeup Service

Enable Wakeup Service	Enable Wakeup service.
Name	Enter a name (up to 64 characters) to identify the wakeup service.
Prompt	Select the prompt to play upon answering the wakeup call.
Custom Date	If disabled, users can select a specific date and time. If enabled users can select multiple days of the week to perform the wakeup.
Date	Select the date or dates when to performs the wakeup call.
Time	Select the time to send the wakeup call.
Members	Select the extensions to send the wakeup call to.

1. Click [here](#) and [here](#) to apply the changes.

A wakeup service entry is created. The UCM will send a wakeup call to every extension in the member list at the scheduled date and time.

The wakeup service has the following limitation on how many members can be added depending on UCM model.

Table 128: Max Wakeup Members

UCM Model	Max members in a Wakeup Service
UCM6202	50
UCM6204	50
UCM6208	100
UCM6510	100

Wakeup Service from User Portal

1. Log into the UCM user portal.
2. Wakeup service can be found under “Value-added Features→Wakeup Service”, click on [here](#) to create a new wakeup service.
3. Configure the Name, Prompt, Date and Time for the wakeup call.
4. Click [here](#) and [here](#) to apply the changes.

Wakeup Service using Feature Code

- Log into the UCM admin portal.
- Enable “Wakeup Service” from the WebGUI under the **Call Features->Feature Codes->Feature Codes** page.

Figure 285: Wakeup Service Feature Code

- Click [here](#) and [here](#) to apply the changes.
- Dial the **Wakeup Service** feature code (*36 by default) to access to the UCM wakeup service.
- Users have the choice to set a wakeup service for tomorrow or specify another day when adding a wakeup service.
- A wakeup service entry is created. The UCM will send a wakeup call at the scheduled date and time.

Announcements Center

Starting from firmware 1.0.2.7, UCM supports Announcement Center functionality. By dialing a code associated with a custom prompt along with a configured Announcement Group number, users can quickly send audio prompts to specified groups of extensions.

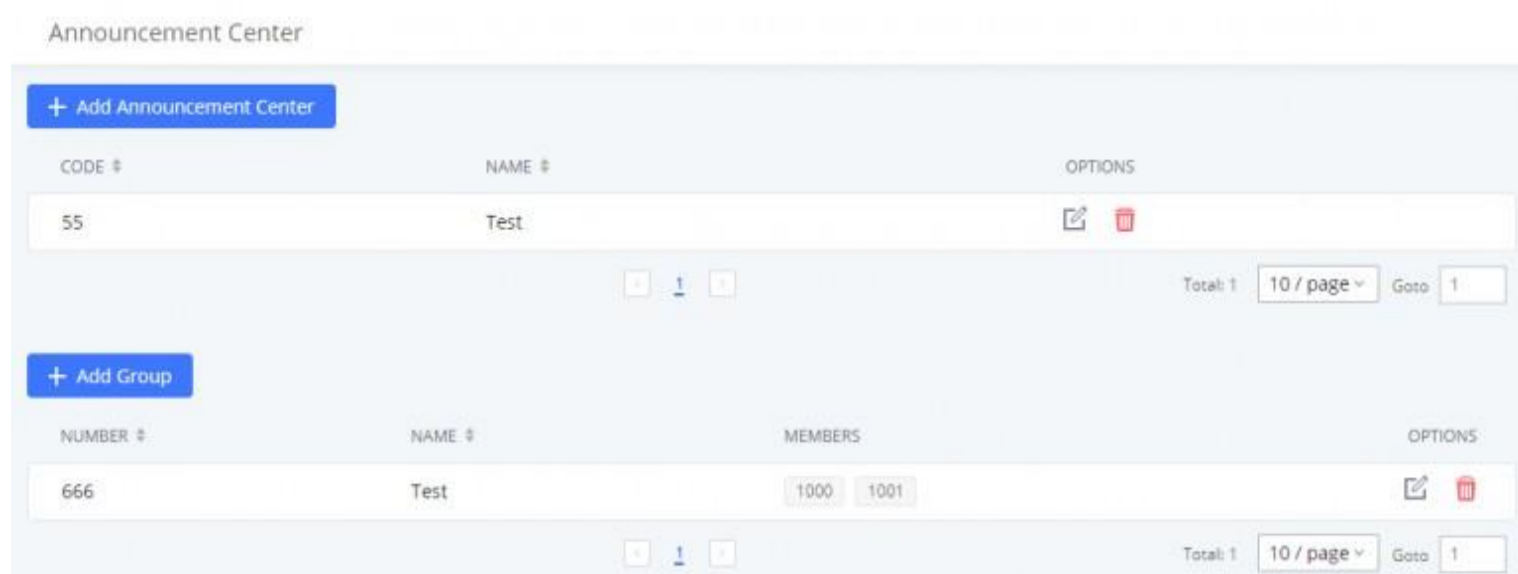


Figure 286: Announcements Center

Announcements Center Settings

1. Table 129: Announcements Center Settings


Name	Configure a name for the Announcements.
Code	Enter a code number to associate the audio prompt with. This code will be used in combination with the Group Number . Example: If the code is 55, and the group number is 666, dialing 66555 will send the prompt associated with code 55 to all the members of Group 666. Note: The combined number must not conflict with any existing extension on the UCM.
Custom Prompt	Configures the custom prompt to play to announcement group members. Prompts can be directly uploaded from this page. Note: Prompt filenames cannot exceed 100 characters.
Ring Timeout	Configure the ring timeout for the group members. The default value is 30 seconds.

Group Settings

1. Table 130: Group Settings

Name	Configure a name for the announcement group. Note: Name cannot exceed 64 characters
Number	Configure the group number. Please see recommendation for Code Number for reference.

Announcements Center feature can be found under Web GUI → **Value-added Features** → **Announcements Center**. The following example demonstrates the usage of this feature.

1. Click  to create new group.
2. Configure a name and number for the group.

3. Create a group number which is used with code to send voice message.

4. Select the extensions that will be ion the group.

Create New Group

The form includes the following fields and lists:

- Name: Test
- Number: 666
- Members:
 - Available: 1
 - Selected: 3
 - 1000 "John DOE"
 - 1001
 - 1002

Figure 287: Announcements Center Group Configuration

Here, Group Test's number is 666 and has extensions 1000, 1001, and 1002 as members of the group.

1. Click [+ Add Announcement Center](#) to create a new Announcement Center.
2. Configure the Announcement Center name and code to associate with the custom prompt.
3. Select the audio prompt that will be associated with the configured code. Users can directly upload audio prompts to use from this page.

Create New Announcement Center

The form includes the following fields:

- Name: Test
- Code: 55
- Custom Prompt: Test.gsm
- Ring Timeout: 30

Figure 288: Announcements Center Code Configuration

Sending 55 (code) + 666 (group number) will send an announcement with the associated audio prompt to all the members of Group Test.

Code	Name	Options
55	Test	

Total: 1 | 10 条/页 | 跳至 1

Number	Name	Members	Options
666	Test	1000 1001 1002	

Figure 289: Announcements Center Example

The UCM now supports QueueMetrics, highly scalable monitoring and reporting suite that addresses the needs of thousands of call centers worldwide and offers a broad range of benefits and services.

UCM currently supports the following features with QueueMetrics: Agent login, Agent Logoff, Realtime Monitoring-Pausing, Realtime Monitoring-Barging, Realtime Monitoring-Transferring, Realtime Monitoring-End calls, Generating Performance Report-Quick and Agent today.

API Configuration Parameters

Configuration page of the QueueMetrics can be accessed via admin login, on the UCM Web GUI → **Value-added Features** → **QueueMetrics**.

To Integrate QueueMetrics with the UCM, please follow the steps below:

1. Enable the option QueueMetrics Integration.
2. Enter the QueueMetrics URL provided.
3. Set the Username and the account code to the account name and password provided from QueueMetrics.
4. Click on Save and Apply Changes.

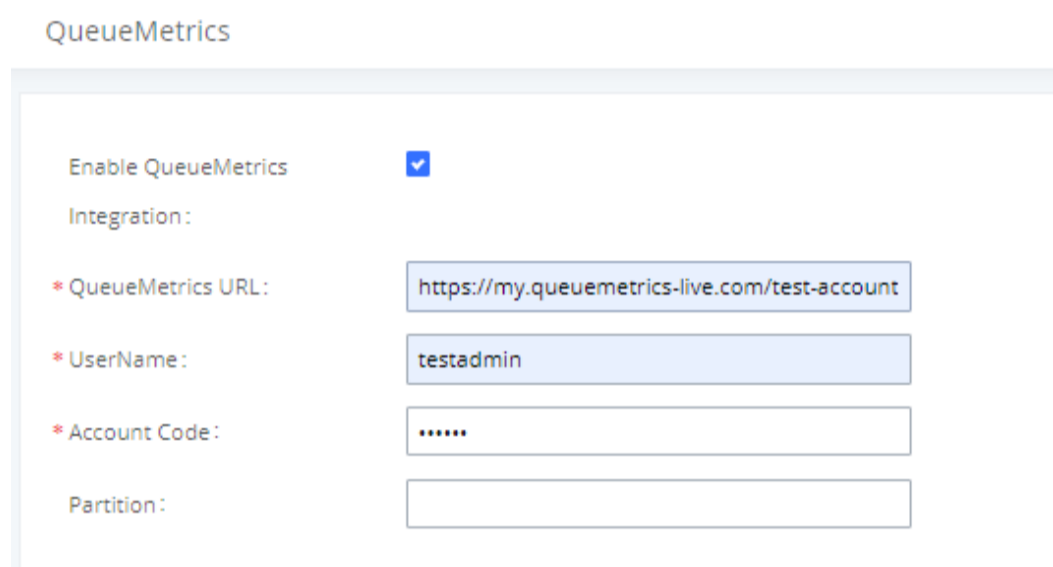


Figure 290: QueueMetrics configuration

Table 131: QueueMetrics Configuration Parameters

QueueMetrics	
Enable QueueMetrics Integration	Enable/Disable QueueMetrics Integration.
QueueMetrics URL	Configure the URL for QueueMetrics Integration.
Username	Configure the username for QueueMetrics authentication.
Account Code	Configure the password for QueueMetrics authentication.
Partition	Configure Data storage partition identifier.

For more details, please refer to online guide:

<https://documentation.grandstream.com/knowledge-base/queuemetrics-integration/>

Status and Reporting

PBX Status

The UCM Dashboard page under System Status->Dashboard provides an real-time overview of the system's trunks, extensions, queues, conference rooms, interface status, digital channels, and parking lots.

Figure 291: Status→PBX Status

Trunks

Users can see the status of all configured trunks.

Figure 292: Trunk Status

Table 132: Trunk Status

Status	<p>Display trunk status.</p> <ul style="list-style-type: none"> ◦ Analog trunk status: <p>Available</p> <p>Busy</p> <p>Unavailable</p> <p>Unknown Error</p> <ul style="list-style-type: none"> ◦ SIP Peer trunk status: <p>Unreachable: The hostname cannot be reached.</p> <p>Unmonitored: Heartbeat feature is not turned on to be monitored.</p> <p>Reachable: The hostname can be reached.</p> <ul style="list-style-type: none"> ◦ SIP Register trunk status: <p>Registered</p> <p>Unrecognized Trunk</p>
Trunks	Display trunk name
Type	<p>Display trunk Type:</p> <ul style="list-style-type: none"> ◦ Analog ◦ SIP ◦ IAX
Username	Display username for this trunk.
Port/Hostname/IP	Display Port for analog trunk, or Hostname/IP for VoIP (SIP/IAX) trunk.

Extensions

Extensions Status can be seen from the same configuration page, users can go under Web GUI→**Extension/Trunk**→**Extensions** and following page will be displayed listing the extensions and their status information.

Figure 293: Extension Status

Table 133: Extension Status

Status	<p>Display extension number (including feature code). The color indicator has the following definitions.</p> <ul style="list-style-type: none"> ◦ Green: Free ◦ Blue: Ringing ◦ Yellow: In Use ◦ Grey: Unavailable
Presence Status	Display the presence status of the extension.
Extension	Display the extension number.
Name	First name and last name of the extension.
IP and Port	Display the IP and port number of the registered device.
Email	<p>Display Email Notification status for the extension.</p> <p>SIP Account email notification has not been sent.</p> <p>SIP Account email notification has been sent.</p>

Interfaces Status

This section displays interface/port connection status on the UCM6200. The following example shows the interface status for UCM6204 with USB, WAN port, FXS1, FXS2 and FXO1 connected.

Figure 294: UCM6204 Interfaces Status

Table 134: Interface Status Indicators

	USB connected.
	USB disconnected.
	SD Card connected.
	SD Card disconnected.
	LAN/WAN connected.
	LAN/WAN not configured.
	LAN/WAN disconnected.
	FXS/FXO connected.
	FXS/FXO waiting.
	FXS/FXO busy.
	FXS/FXO not configured.
	FXS/FXO disconnected.

System Status

The UCM6200 system status can be accessed via Web GUI→**Status**→**System Status**, which displays the following system information.

General

Under Web GUI→**System Status**→**System Information**→**General**, users could check the hardware and software information for the UCM6200. Please see details in the following table.

Table 135: System Status→General

System Status →System Information→General	
Model	Product model.
Part Number	Product part number.
System Time	Current system time. The current system time is also available on the upper right of each web page.
Up Time	System up time since the last reboot.
Boot	Boot version.
Core	Core version.
Base	Base version.
Program	Program version. This is the main software release version.
Recovery	Recovery version.

Network

Under Web GUI→**System Status**→**System Information**→**Network**, users could check the network information for the UCM6200. Please see details in the following table.

Table 136: System Status→Network

System Status→System Status→Network	
MAC Address	Global unique ID of device, in HEX format. The MAC address can be found on the label coming with original box and on the label located on the bottom of the device.
IP Address	IP address.

Gateway	Default gateway address.
Subnet Mask	Subnet mask address.
DNS Server	DNS Server address.
Speed	Network Port Speed
Duplex Mode	Shows the Duplex Mode (Full/Half Duplex)

Space Usage

Users could access the storage usage information from Web GUI→**System Status**→**Dashboard**→**Space Usage**. It shows the available and used space for Space Usage and Inode Usage.

Space Usage includes:

- **Configuration partition**

This partition contains PBX system configuration files and service configuration files.

- **Data partition**

Voicemail, recording files, IVR file, Music on Hold files etc.

- **USB disk**

USB disk will display if connected.

- **SD Card**

SD Card will display if connected.

Inode Usage includes:

- **Configuration partition**
- **Data partition**

Inode is the pointer used for file reference in the system. The system usually has limited resources of pointers.

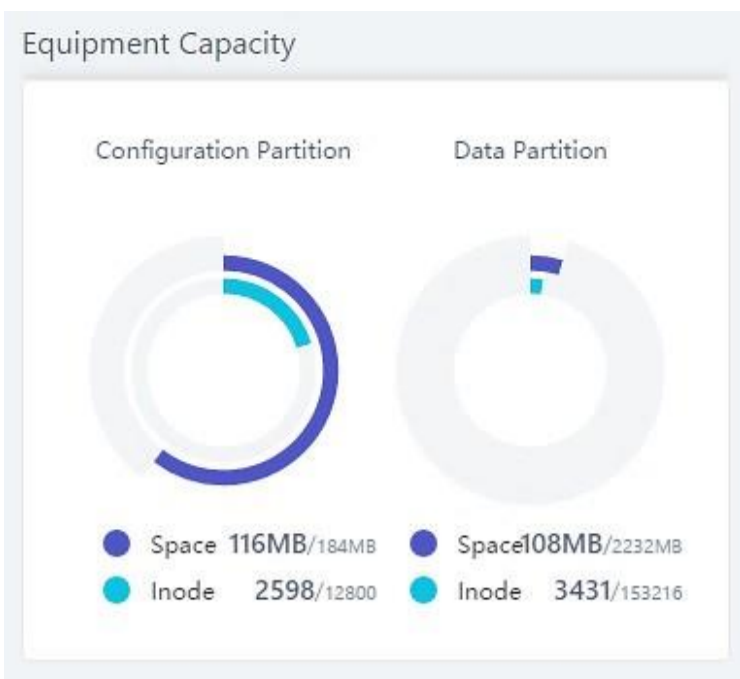


Figure 295: System Status→Storage Usage

Resource Usage

When configuring and managing the UCM6200, users could access resource usage information to estimate the current usage and allocate the resources accordingly. Under Web GUI:

→System Status→Dashboard→Resource Usage, the current CPU usage and Memory usage are shown in the pie chart.

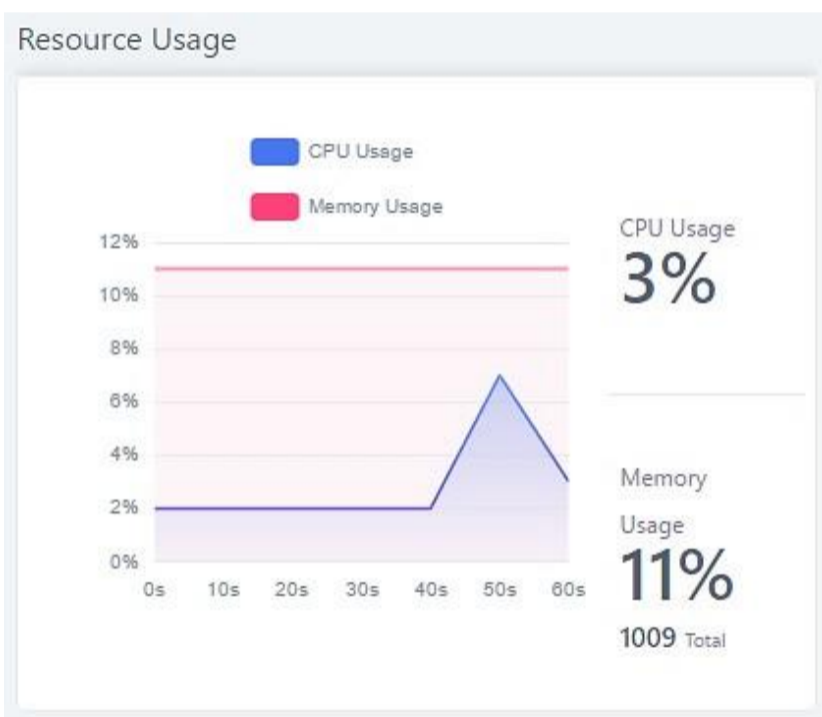


Figure 296: System Status→Resource Usage

System Events

The UCM6200 can monitor important system events, log the alerts and send email notifications to specified email addresses.

Alert Events List

The system alert events list can be found under Web GUI→Maintenance→System Events. The following events are currently supported on the UCM. Alerts for these events will be generated if abnormalities occur.

Table 137: Alert Events


Action index	Alert Events
1	Disk Usage

2	Modify Super Admin Password
3	Memory Usage
4	System Reboot
5	System Update
6	System Crash
7	Register SIP failed
8	Register SIP trunk failed
9	Restore Config
10	User login success
11	User login failed
12	SIP Internal Call Failure
13	SIP Outgoing Call through Trunk Failure
14	Fail2ban Blocking
15	SIP Lost Registration
16	SIP Peer Trunk Status
17	User Login Banned
18	External Disk Usage
19	HA failure warning
20	Emergency Calls
21	The CDR database is corrupted
22	NAS
23	Data Sync Backup
24	External Disk Status

Click on  to configure the parameters for each event. See examples below.

1. Disk Usage

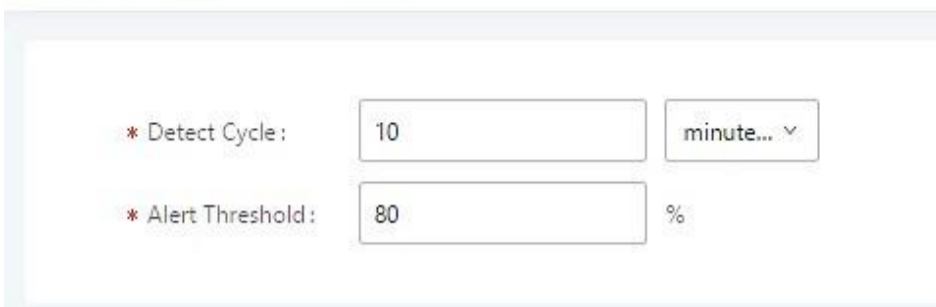Alert Settings: Disk Usage



* Detect Cycle:	<input type="text" value="10"/>	minute... ▾
* Alert Threshold:	<input type="text" value="80"/>	%

Figure 297: System Events→Alert Events Lists: Disk Usage

- **Detect Cycle:** The UCM6200 will perform the internal disk usage detection based on this cycle. Users can enter the number and then select second(s)/minute(s)/hour(s)/day(s) to configure the cycle.
- **Alert Threshold:** If the detected value exceeds the threshold (in percentage), the UCM6200 system will send the alert.


1. External Disk Usage

Figure 298: System Events→Alert Events Lists: External Disk Usage

- **Detect Cycle:** The UCM6200 will perform the External disk usage detection based on this cycle. Users can enter the number and then select second(s)/minute(s)/hour(s)/day(s) to configure the cycle.
- **Alert Threshold:** If the detected value exceeds the threshold (in percentage), the UCM6200 system will send the alert.

1. Memory Usage

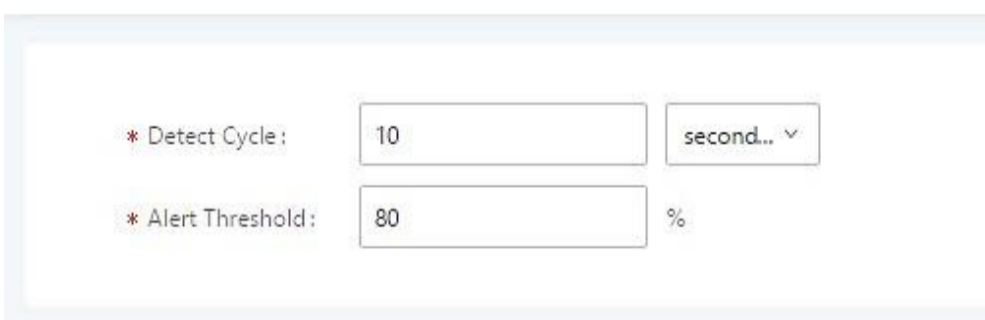Alert Settings: Memory Usage



* Detect Cycle:	<input type="text" value="10"/>	second... ▾
* Alert Threshold:	<input type="text" value="80"/>	%

Figure 299: System Events→Alert Events Lists: Memory Usage

- **Detect Cycle:** The UCM6200 will perform the memory usage detection based on this cycle. Users can enter the number and then select second(s)/minute(s)/hour(s)/day(s) to configure the cycle.
- **Alert Threshold:** If the detected value exceeds the threshold (in percentage), the UCM6200 system will send the alert.

1. System Crash

Alert Settings: System Crash



* Detect Cycle:


Figure 300: System Events→Alert Events Lists: System Crash

- **Detect Cycle:** The UCM will detect the event at each cycle based on the specified time. Users can enter the number and then select second(s)/minute(s)/hour(s)/day(s) to configure the cycle.

Click on the switch OFF ON to turn on/off the alert and Email notification for the event. Users could also select the checkbox for each event and then click on button “Alert On”, “Alert Off”, “Email Notification On”, “Email Notification Off” to control the alert and Email notification configuration.

Alert Log

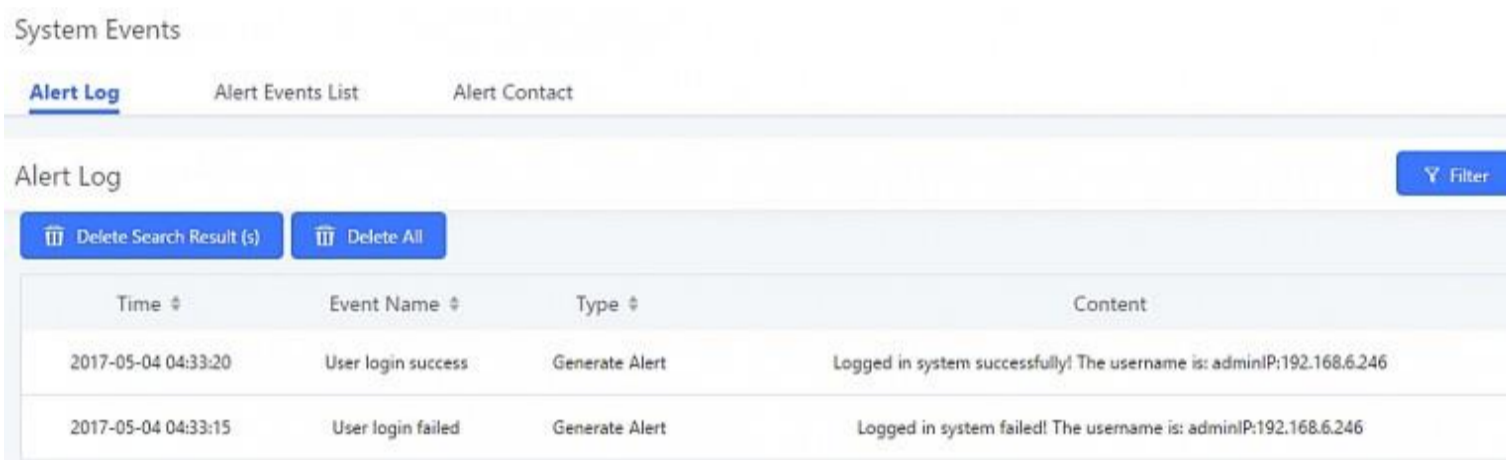Under Web GUI→Maintenance→System Events→Alert Log, system messages from triggered system events are listed as alert logs. The following screenshot shows system crash alert logs.



System Events

[Alert Log](#) [Alert Events List](#) [Alert Contact](#)

Alert Log Filter

Delete Search Result (s) Delete All


Time	Event Name	Type	Content
2017-05-04 04:33:20	User login success	Generate Alert	Logged in system successfully! The username is: adminIP:192.168.6.246
2017-05-04 04:33:15	User login failed	Generate Alert	Logged in system failed! The username is: adminIP:192.168.6.246

Figure 301: System Events→Alert Log

User could also filter alert logs by selecting a certain event category, type of alert log, and/or specifying a certain time period. The matching results will be displayed after clicking on Filter. Alert logs are classified into two types by the system:

1. **Generate Alert:** Generated when alert events happen, for example, alert logs for disk usage exceeding the alert threshold.
2. **Restore to Normal:** Generated when alert events being cleared, for example, logs for disk usage dropping back below the alert threshold.

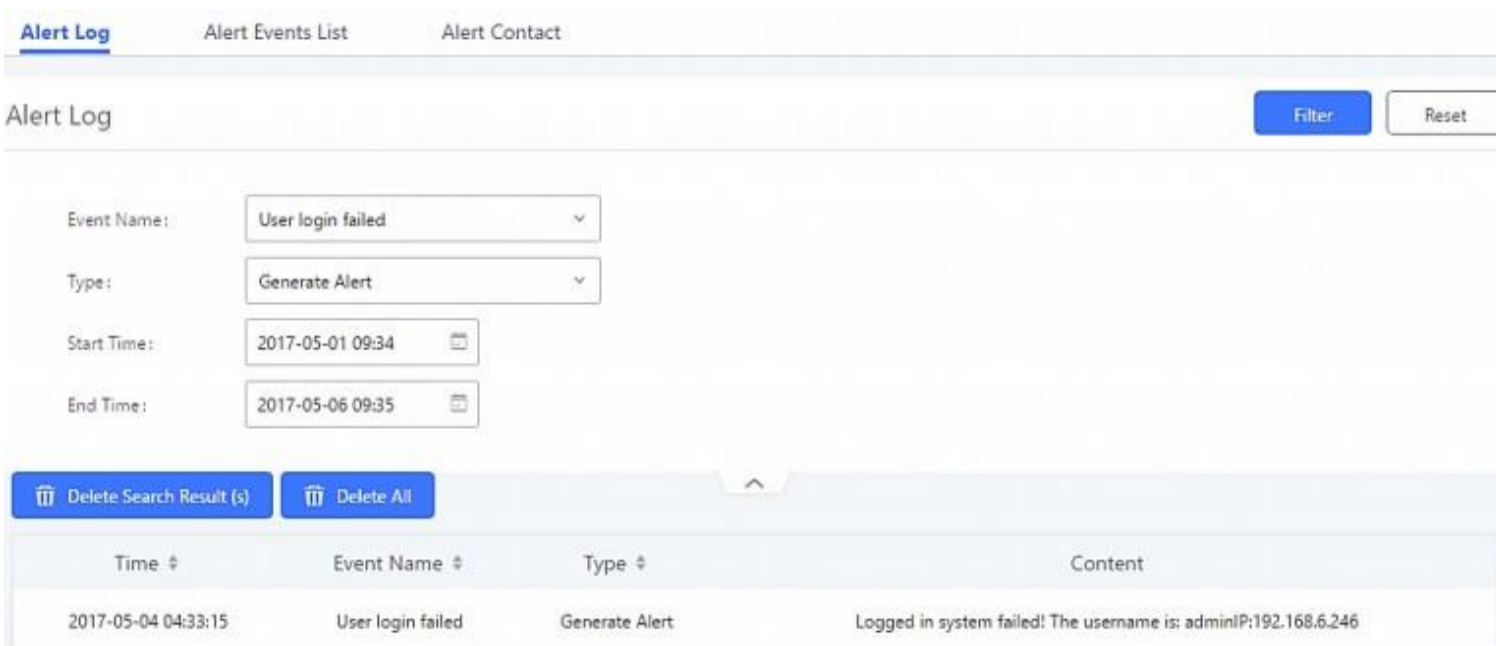User could filter out alert logs of “Generate Alert” or “Restore to Normal” by specifying the type according to need. The following figure shows an example of filtering out alert logs of type of “Restore to Normal”.



[Alert Log](#) [Alert Events List](#) [Alert Contact](#)

Alert Log Filter Reset

Event Name:

Type:

Start Time:

End Time:

Delete Search Result (s) Delete All

Time	Event Name	Type	Content
2017-05-04 04:33:15	User login failed	Generate Alert	Logged in system failed! The username is: adminIP:192.168.6.246

Alert Contact

This feature allows the administrator to be notified when one of the Alert events mentioned above happens. Users could add administrator's Email address under Web GUI→**Maintenance**→**System Events**→**Alert Contact** to send the alert notification to an email (Up to 10 Email addresses can be added) or also specify an HTTP server where to send this alert.

Table 138: Alert Contact

Super Admin Email	Configure the email addresses to send alert notifications to. Up to 10 email addresses can be added.
Admin Email	Configure the email addresses to send alert notifications to. Up to 10 email addresses can be added.
Email Template	Please refer to section Email Templates
Protocol	Protocol used to communicate with the server. HTTP or HTTPS. Default one is HTTP .
HTTP Server	The IP address or FQDN of the HTTP/HTTPS server.
HTTP Server Port	HTTP/HTTPS port
Warning Template	Customize the template used for system warnings. By default: <code>{"action": "\${ACTION}", "mac": "\${MAC}", "content": "\${WARNING_MSG}"}</code>
Notification Template	Customize the notification template to receive relevant alert information. By default: <code>{"action": "\${ACTION}", "cpu": "\${CPU_USED}", "memery": "\${MEM_USED}", "disk": "\${DISK_USED}", "external_disk": "\${EXTERNAL_DISK_USED}"}</code> Note: The notification message with “action:0” will be sent periodically if Notification Interval is set.
Notification Interval	Modifies the frequency at which notifications are sent in seconds. No notifications will be sent if the value is “0”. Default value: 20

Template Variables	<i>\${MAC}</i> : MAC Address
	<i>\${WARNING_MSG}</i> : Warning message
	<i>\${TIME}</i> : Current System Time
	<i>\${CPU_USED}</i> : CPU Usage
	<i>\${MEM_USED}</i> : Memory Usage
	<i>\${ACTION}</i> : Message Type. Refer to [Table 137: Alert Events]
	<i>\${DISK_USED}</i> : Disk Usage
<i>\${EXTERNAL_DISK_USED}</i> : Disk Usage	

CDR

CDR (Call Detail Record) is a data record generated by the PBX that contains attributes specific to a single instance of phone call handled by the PBX. It has several data fields to provide detailed description for the call, such as phone number of the calling party, phone number of the receiving party, start time, call duration, etc.

On the UCM6200, the CDR can be accessed under Web GUI→**CDR**→**CDR**. Users could filter the call report by specifying the date range and criteria, depending on how the users would like to include the logs to the report. Click on “Search” button to display the generated report.

Important Note: Starting from fw 1.0.15.16, the UCM has **CDR separation** and it will display only CDR for the current month. To view data of the previous months, users will need to apply a filter with a specified date range.

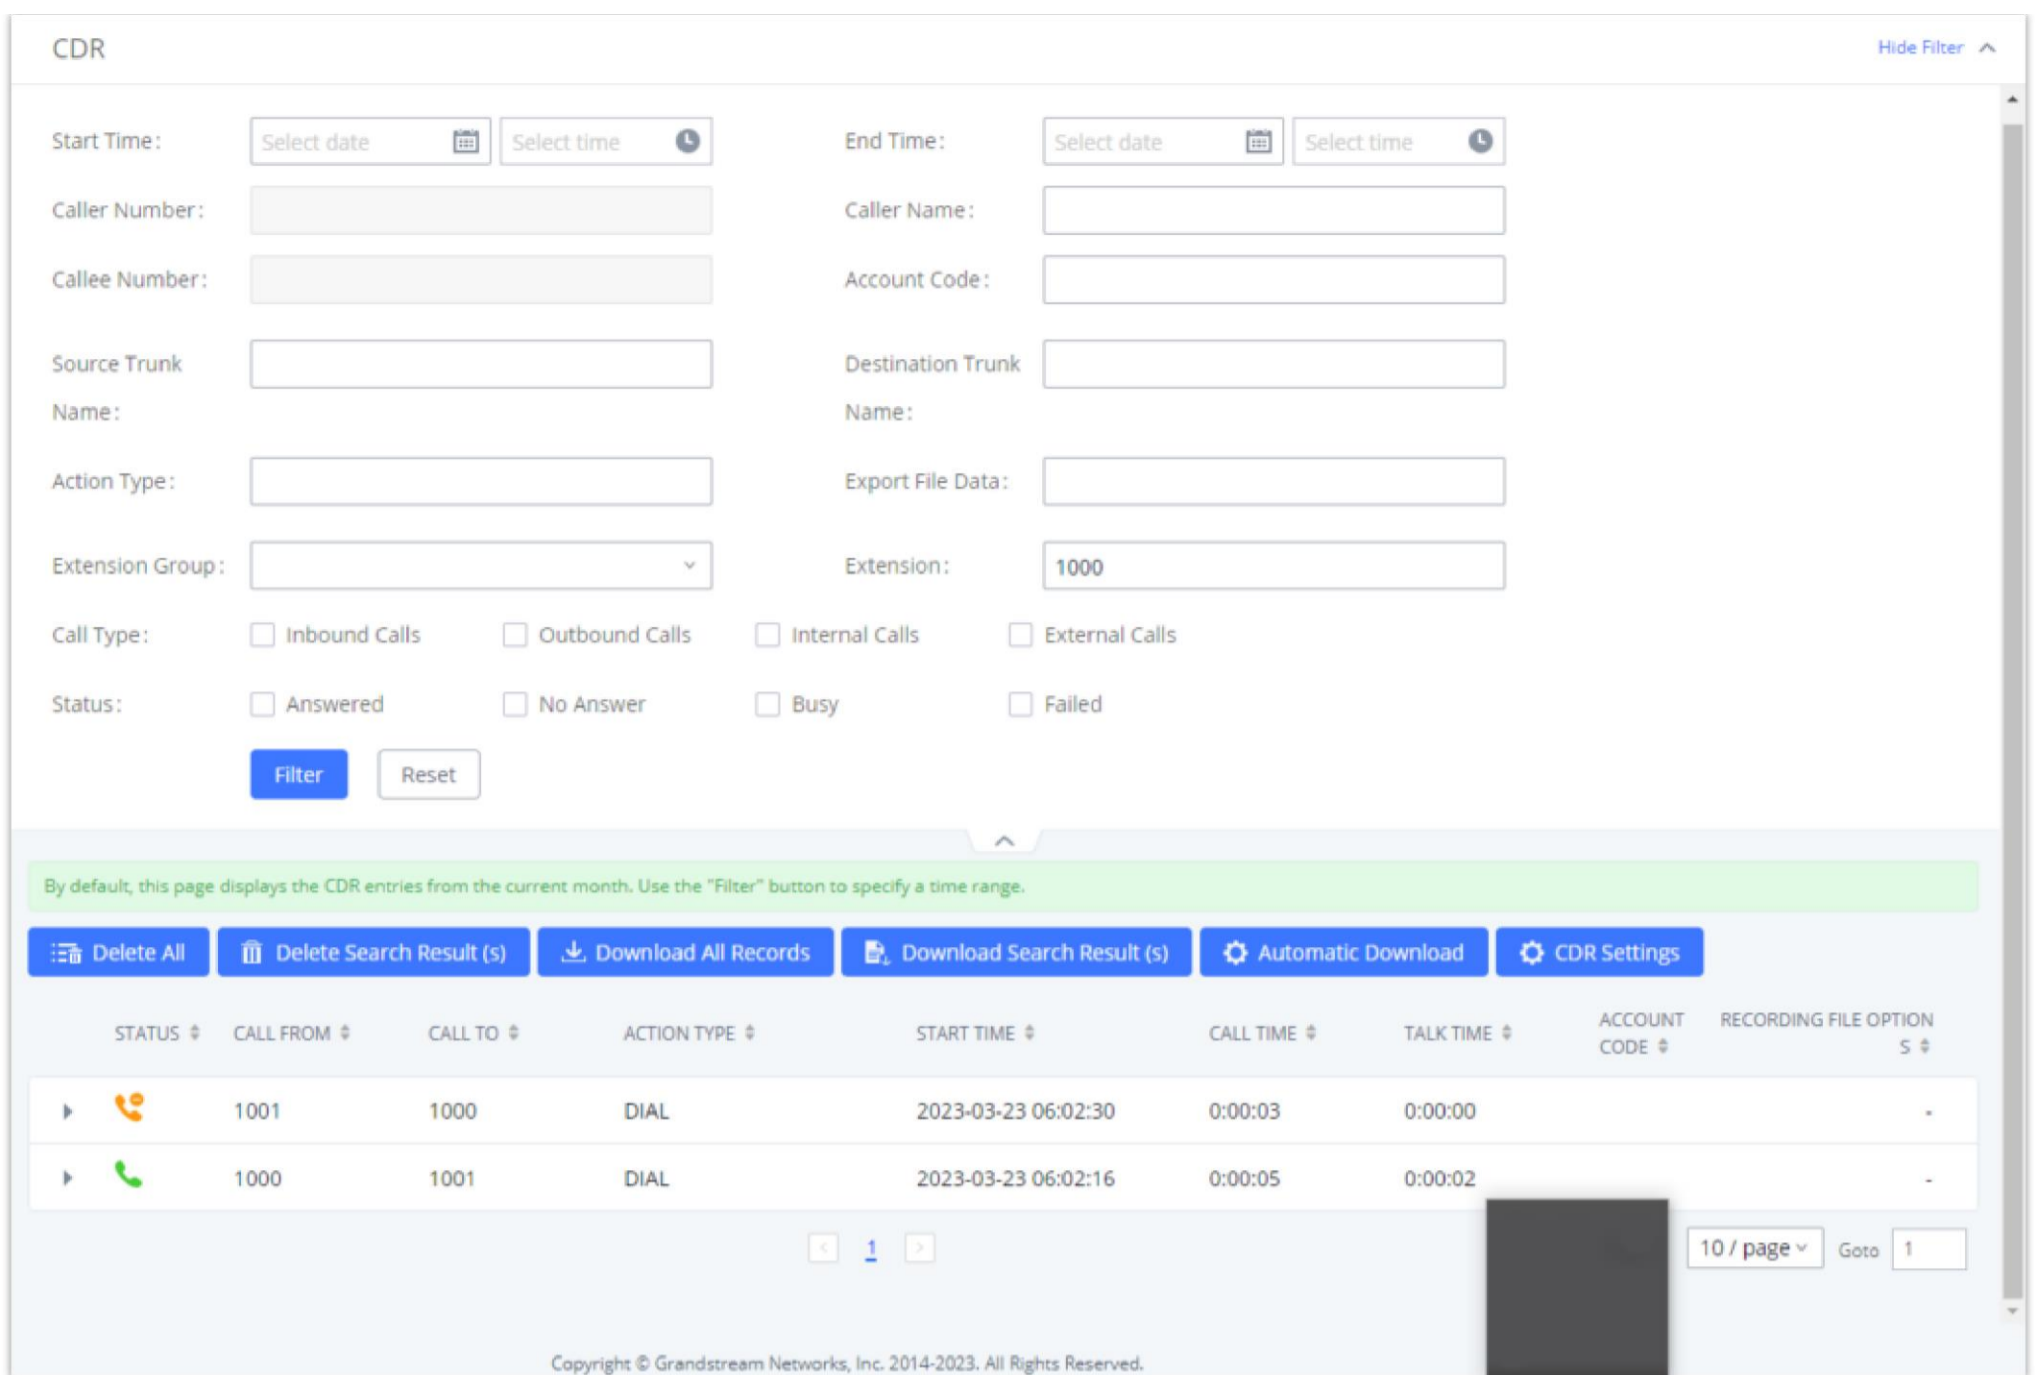


Figure 303: CDR Filter

Table 139: CDR Filter Criteria

<p>Call Type</p>	<ul style="list-style-type: none"> ● Inbound calls: Inbound calls are calls originating from a non-internal source (like a VoIP trunk) and sent to an internal extension. ● Outbound calls: Outbound calls are calls sent to a non-internal source (like a VoIP trunk) from an internal extension. ● Internal calls: Internal calls are calls from one internal extension to another extension and not sent over a trunk. <p>External calls: External calls are calls sent from one trunk to another trunk and are not sent to any internal extension.</p>
<p>Status</p>	<p>Filter with the call status, the available statuses are the following:</p> <ul style="list-style-type: none"> ● Answered ● No Answer ● Busy ● Failed
<p>Source Trunk Name</p>	<p>Filter out calls originating from the selected trunks.</p>
<p>Destination Trunk Name</p>	<p>Filter out calls that were sent to the selected trunks.</p>
<p>Action Type</p>	<p>Filter calls based on the Action Type. The following actions are available:</p> <ul style="list-style-type: none"> ● Dial ● Announcement

	<ul style="list-style-type: none"> ● Callback ● Call Forward ● Conference ● DISA ● Fax ● Follow Me ● IVR ● Page ● Parked Call ● Queue ● Ring Group ● Transfer ● VFax ● VM ● VMG ● Wakeup ● Emergency Call ● Emergency Notify ● SCA
Extension Group	Filters calls made to the selected Extension Group.
Extension	<p>Filters a specific Extension or a range of Extensions via patterns. Supported characters are:</p> <p>. . . . Matches zero or more of any character. Should only be attached to the end of a pattern.</p> <p>X . . . Matches any number from 0-9.</p> <p>Examples:</p> <p>X: filters records where a Extension ranges from 0 to 9.</p> <p>XXXX: filters records where a Extension has exactly 4 digits.</p> <p>3XXX: filters records where a Extension starts with 3 and has a length of exactly 4 digits.</p> <p>3.: filters records where Extension starts with 3 .</p>
Account Code	Filter calls with the specified Account Code. If Outbound Routes->PIN Groups->Record in CDR is enabled, Account Code information will be displayed in the CDR if applicable.
Start Time	Specify the earliest date and time of CDR to filter.
End Time	Specify the latest date and time of CDR to filter.
Caller Number	Enter the caller number of the CDR to filter. Patterns can be used to filter calls made from groups of similar numbers.
Caller Name	Enter the caller name of the CDR to filter.
Callee Number	Enter the callee number of the CDR to filter.

The call report will display as the following figure shows.

Figure 304: Call Report

The CDR report has the following data fields:

- **Start Time**
Format: 2016-09-03 00:06:16
- **Call Type**
Example:
IVR
DIAL
WAKEUP
- **Call From**
Example format:
“John Doe” 2000
- **Call To**
Example format:
2002
- **Call Time**
Format: 0:00:02
- **Talk Time**
Format: 0:00:00
- **Account Code**
Example format:
Grandstream/Test
- **Status**
Answered, Busy, No answer or Failed.

Users could perform the following operations on the call report.

- **Sort by “Start Time”**
Click on the header of the column to sort the report by “Start Time”. Clicking on “Start Time” again will reverse the order.
- **Download Search Results**
Click on “Download Search Result(s)” to export the filtered CDR to a .CSV file.
- **Download All Records**
Click on “Download All Records” to export all the records to a .CSV file.
- **Delete All**
Click on button to remove all the call report information.

- **Delete Search Result**

On the bottom of the page, click on  button to remove the filtered CDR entries

When deleting CDR, a prompt will now appear asking whether to delete all recording files or not.

- **Play/Download/Delete Recording File (per entry)**

If the entry has audio recording file for the call, the three icons on the rightmost column will be activated for users to select. In the following picture, the second entry has audio recording file for the call.

Click on  to play the recording file.

Click on  to download the recording file in .wav format.


Click on  to delete the recording file (the call record entry will not be deleted).

Figure 305: Call Report Entry with Audio Recording File

- **Automatic Download CDR Records**

Users can configure the UCM to periodically send the CDR to a configured email address. Click on “Automatic Download” and configure the parameters in the dialog below.

Figure 306: Automatic Download Settings

Table 140: Automatic Download Settings

Automatic Download	Enable the Automatic Download feature.
Delete Sent Records	Whether to delete the sent records or not.
Automatic Download Period	Configure the Automatic Download Period
Email	Email address blacklist/whitelist for non-local contacts. Separate multiple addresses with semicolon (;) (i.e.”xxx;yyy”).

CDR Improvement

Starting from UCM6200 firmware 1.0.10.x, transferred call will no longer be displayed as a separate call entry in CDR. It will display within call record in the same entry. CDR new features can be found under Web GUI→**CDR**→**CDR**. Users can click on the [+] icon to expand call details and view various legs of the call.

Status	Call from	Call to	Action Type	Start Time	Talk Time	Account Code	Recording File Option
[+]	1002	1001	DIAL	2017-05-04 04:47:58	0:00:29		-

Figure 307: CDR Report

Status	Call from	Call to	Action Type	Start Time	Talk Time	Account Code	Recording File Option
-	1002	1001	DIAL	2017-05-04 04:47:58	0:00:29		-
	1002	1001	DIAL	2017-05-04 04:47:58	0:00:14		-
	1002	1002	TRANSFER	2017-05-04 04:48:13	0:00:15		-

Figure 308: Detailed CDR Information

Downloaded CDR File

The downloaded CDR (.csv file) has different format from the Web GUI CDR. Here are some descriptions.

- **Caller number, Callee number**

“Caller number”: the caller ID.

“Callee number”: the callee ID.

If the “Source Channel” contains “DAHDI”, this means the call is from FXO/PSTN line.

caller number	callee number	context	calerid	source channel	dest channel	lastapp
	2009	from-internal	"Wake Up Call" <WakeUp>	Local/2009@from-internal-00000001;2	PJSIP/2009-00000013	Dial
2007	31100	from-internal	"" <2007>	PJSIP/2007-00000014	DAHDI/1-1	Dial
2009	1100	from-internal	"John Doe" <2009>	PJSIP/2009-00000015	PJSIP/trunk_1-00000016	Dial
1100	2014	from-did-direct	"1100" <1100>	DAHDI/1-1	PJSIP/2014-00000017	Dial

Figure 309: Downloaded CDR File Sample

- **Context**

There are different context values that might show up in the downloaded CDR file. The actual value can vary case by case. Here are some sample values and their descriptions.

from-internal: internal extension makes outbound calls.

ext-did-XXXXX: inbound calls. It starts with “ext-did”, and “XXXXX” content varies case by case, which also relate to the order when the trunk is created.

ext-local: internal calls between local extensions.

- **Source Channel, Dest Channel**

Sample 1:

caller number	callee number	context	calerid	source channel	dest channel	disposition
2007	31100	from-internal	"" <2007>	PJSIP/2007-00000014	DAHDI/1-1	ANSWERED

Figure 310: Downloaded CDR File Sample – Source Channel and Dest Channel 1

DAHDI means it is an analog call, FXO or FXS.

For UCM6202, DAHDI/(1-2) are FXO ports, and DAHDI(3-4) are FXS ports.

For UCM6204, DAHDI/(1-4) are FXO ports, and DAHDI(5-6) are FXS ports.

For UCM6208, DAHDI/(1-8) are FXO ports, and DAHDI(9-10) are FXS ports.

Sample 2:

caller number	callee number	context	calerid	source channel	dest channel	lastapp
2009	1100	from-internal	"John Doe" <2009>	PJSIP/2009-00000015	PJSIP/trunk_1-00000016	Dial

Figure 311: Downloaded CDR File Sample – Source Channel and Dest Channel 2

“SIP” means it is a SIP call. There are three possible formats:

(a) **PJSIP/NUM-XXXXXX**, where NUM is the local SIP extension number. The last XXXXX is a random string and can be ignored.

(c) **PJSIP/trunk_X/NUM**, where trunk_X is the internal trunk name, and NUM is the number to dial out through the trunk.

(c) **PJSIP/trunk_X-XXXXXX**, where trunk_X is the internal trunk name and it is an inbound call from this trunk. The last XXXXX is a random string and can be ignored.

There are some other possible values, but these values are almost the application name which are used by the dialplan.

IAX2/NUM-XXXXXXX: it means this is an IAX call.

Local/@from-internal-XXXXX: it is used internally to do some special feature procedure. We can simply ignore it.

Hangup: the call is hung up from the dialplan. This indicates there are some errors, or it has run into abnormal cases.

Playback: play some prompts to you, such as 183 response or run into an IVR.

ReadExten: collect numbers from user. It may occur when you input PIN codes or run into DISA

CDR Export Customization

Users can select the data they want to see in exported CDR reports by first clicking on the *Filter* button on the CDR page under **CDR→CDR** and selecting the desired information in the *Export File Data* field.

Trunk Type	<p>Select one of the following trunk types.</p> <ul style="list-style-type: none"> ◦ All ◦ SIP Calls ◦ PSTN Calls
Call Type	<p>Select one or more in the following checkboxes.</p> <ul style="list-style-type: none"> ◦ Inbound calls ◦ Outbound calls ◦ Internal calls ◦ External calls ◦ All calls
Time Range	<ul style="list-style-type: none"> ◦ By month (of the selected year). ◦ By week (of the selected year). ◦ By day (of the specified month for the year). ◦ By hour (of the specified date). ◦ By range. For example, 2016-01 To 2016-03.

Recording Files

The **Recording Files** page lists all recordings saved via “Auto Record” or “Start/Stop Call Recording” feature code. If external storage (e.g., NAS, SD card, USB disk, etc.) is connected, recordings will be saved there. If no external storage is available, the recordings will be stored in UCM local storage.

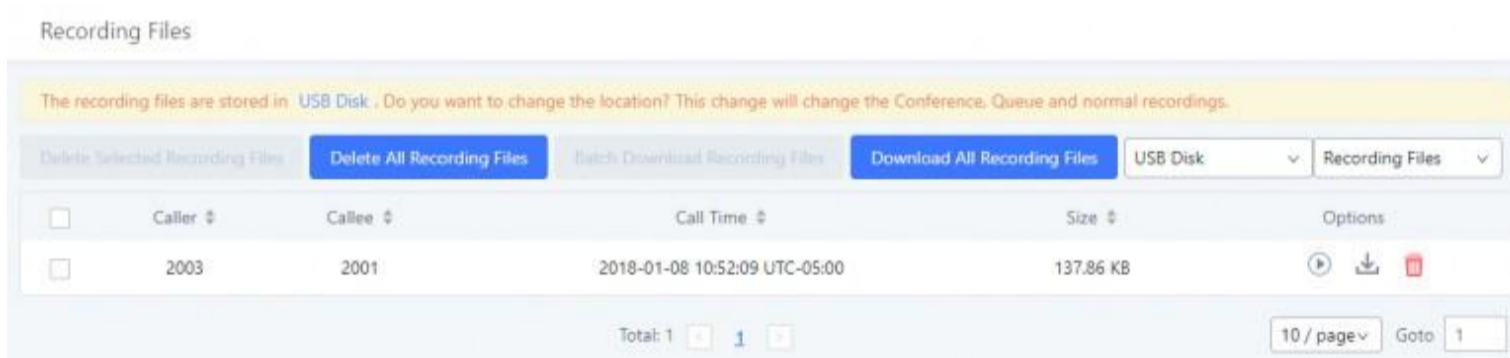




Figure 314: CDR→Recording Files

- Click on “**Delete Selected Recording Files**” to delete the recording files.
- Click on “**Delete All Recording Files**” to delete all recording files.
- Click on “**Batch Download Recording Files**” in order to download the selected recording files.
- Click on “**Download All Recording Files**” to download all recordings files.
- Select Either “**USB Disk**”, “**NAS**” or “**Local**” to show recording files stored on external or internal storage, depending on selected storage space.
- Select whether to show call recordings, queue recordings or conference recordings.
- Click on  to download the recording file in .wav format.
- Click on  to delete the recording file.

- To sort the recording file, click on the title “Caller”, “Callee” or “Call Time” for the corresponding column. Click on the title again can switch the sorting mode between ascending order or descending order.

API Configuration

The UCM6200 supports third party billing interface API for external billing software to access CDR and call recordings on the PBX. The API uses HTTPS to request the CDR data and call recording data matching given parameters as configured on the third-party application.

Before accessing the API, the administrators need enable API and configure the access/authentication information on the UCM6200 first. The API configuration parameters are listed in the table below.

Table 142: API Configuration Files

Enable	Enable/Disable API. The default setting is disabled.
TLS Bind Address	Configure the IP address for TLS server to bind to. “0.0.0.0” means binding to all interfaces. The port number is optional, and the default port number is 8443. The IP address must match the common name (host name) in the certificate so that the TLS socket will not bind to multiple IP addresses. The default setting is 0.0.0.0:8443.
Username	Configure the Username for API Authentication.
Password	Configure the Password for API Authentication.
TLS Private Key	Upload TLS private key. The size of the key file must be under 2MB. This file will be renamed as ‘private.pem’ automatically.
TLS Cert	Upload TLS cert. The size of the certificate must be under 2MB. This is the certificate file (*.pem format only) for TLS connection. This file will be renamed as “certificate.pem” automatically. It contains private key for the client and signed certificate for the server.
Permitted IPs	Specify a list of IP addresses permitted by API. This creates an AIP-specific access control list. Multiple entries are allowed. For example, “192.168.5.20/255.255.255.255” denies access from all IP addresses except 192.168.5.20. The default setting is blank, meaning all IPs will be denied. Users must set permitted IP address before connecting to the API.
Reset Certificates	Press <input type="button" value="Reset Certificates"/> button to restore UCM’s default certificates.

For more details on CDR API (Access to Call Detail Records) and REC API (Access to Call Recording Files), please refer the document in the link here:

<https://documentation.grandstream.com/knowledge-base/cdr-rec-api/>

User Portal

Users could log into their web GUI portal using the extension number and user password. When an extension is created in the UCM62XX, the corresponding user account for the extension is automatically created. The user portal allows access to a variety of features which include user information, extension configuration and CDR as well as settings and managing value-added features like Fax Sending, Call Queue, Wakeup Service and CRM.

Users also can access their personal data files such as call recordings, fax files, and voicemail prompts.

The login credentials are configured by Super Admin. The following figure shows the **User Management->Edit User** page for extension 1000. Username for an extension account cannot be modified. Please note that **User Password** and **SIP Password** are different fields and should not be mistaken for one another.

Figure 315: Edit User Information by Super Admin

The following figure is an example of logging in with an extension account.

Figure 316: User Portal Login

Upon successfully logging in, the following page will appear.

Regular users will be logged out automatically if an admin resets their extensions.

Figure 317: User Portal Layout

Basic Information

Under this menu, the user can configure and change his/her personal information such as first name, last name, user password, email address, and department. Users can set extension features such as presence status and call forwarding and view their CDR.

Personal Data

In this section, users can access and manage their personal files such as voicemail, call recordings, and fax and set up Follow-Me.

Value-added Features

On this section, the user has access to manage and use all rich value-added features which includes:

Fax Sending

For Fax Sending configuration parameters, please refer to the [FAX Sending] section.

Call Queue

If user is a member of call queue, they can check the queue's activity and for more information, please refer to [CALL QUEUE] section.

Wakeup Service

This section allows users to create and enable Wakeup service and for more information, please refer to [WAKEUP SERVICE] section.

CRM User Settings

This section allows users to enable and configure CRM connection to either SugarCRM or Salesforce.

Maintenance

User Management

User management is on Web GUI→Maintenance→User Management page. User could create multiple accounts for different administrators to log in the UCM6200 Web GUI. Additionally, the system will automatically create user accounts along with creating new extensions for extension users to login to the Web GUI using their extension number and password. All existing user accounts for Web GUI login will be displayed on User Management page as shown in the following figure.

Figure 318: User Management Page Display

User Information

When logged in as Super Admin, click on [Create New User](#) to create a new account for Web GUI user. The following dialog will prompt. Configure the parameters as shown in below table.

Figure 319: Create New User

Table 143: User Management→Create New User

Username	Configures a username to identify the user which will be required in Web GUI login. Letters, digits and underscore are allowed in the username.
User Password	Configures a password for this user which will be required in Web GUI login. Letters, digits, and underscore are allowed.
Privilege	This is the role of the Web GUI user. Currently only “Admin” is supported when Super Admin creates a new user.
Department	Enters the necessary information to keep a record for this user.
Fax	

Email Address
First Name
Last Name
Home Number
Phone Number



Once created, the Super Admin can edit the users by clicking on  or delete the user by clicking on .

Figure 320: User Management – New Users

Custom Privilege

Four privilege levels are supported:

- **Super Administrator**
- This is the highest privilege. Super Admin can access all pages on UCM6200 Web GUI, change configuration for all options and execute all the operations.
- Super Admin can create, edit and delete one or more users with “Admin” privilege
- Super Admin can edit and delete one or more users with “Consumer” privilege
- Super Admin can view operation logs generated by all users.
- By default, the user account “admin” is configured with “Super Admin” privilege and it is the only user with “Super Admin” privilege. The Username and Privilege level cannot be changed or deleted.
- Super Admin could change its own login password on Web GUI→**Maintenance**→**Change Information** page.
- Super Admin could view operations done by all the users in Web GUI→**Maintenance**→**User Management**→**Operation Log**
- **Administrator**
- Users with “Admin” privilege can only be created by “Super Admin” user.
- “Admin” privilege users are not allowed to access the following pages:

Maintenance→**Upgrade**

Maintenance→**Cleaner**

Maintenance→**Reset/Reboot**

Settings→**User Management**→**Operation Log**

- “Admin” privilege users cannot create new users for login.

Note: By default, administrator accounts are not allowed to access backup menu, but this can be assigned to them by navigating to **Maintenance**→**User Management**→**Custom Privilege**→**Edit Admin Account** and giving the account the Backup privilege.

Figure 321: Assign Backup permission to “Admin” users

- **Consumer**


- A user account for Web GUI login is created automatically by the system when a new extension is created.
- The user could log in the Web GUI with the extension number and password to access user information, extension configuration, CDR of that extension, personal data and value-added features. For more details; please refer to <https://documentation.grandstream.com/knowledge-base/user-portal/>.
- The SuperAdmin user can click on  on the “General_User” in order to enable/disable the custom privilege from deleting their own recording files, changing SIP credentials and disabling voicemail service in their user portal account.

Figure 322: General User

- **Custom Privilege**

The Super Admin user can create users with different privileges. Following modules are available for privilege customization.

- API Configuration
- Backup
- Callback
- Call Queue
- CDR Recording Files
- CDR Records
- CDR Statistics

- Conference
- Dial By Name
- DISA
- Emergency Calls
- Event List
- Extensions
- Outbound Routes
- Inbound Routes
- Fax/T.38
- Feature Codes
- IVR
- Paging/Intercom
- Parking Lot
- Pickup Groups
- PMS – Wakeup Service
- Ring Groups
- SCA
- Speed Dial
- System Status
- System Events
- Time Settings
- Video Conference
- Voicemail
- Voice Prompt
- Wakeup Service
- Zero Config

Create New Custom Privilege

* Privilege Name:

Custom Privilege:

Available Modules		Selected Modules
<input type="checkbox"/> 4 <input type="checkbox"/> System Status <input type="checkbox"/> System Events <input type="checkbox"/> CDR API <input type="checkbox"/> Wakeup Service	<input type="button" value="←"/> <input type="button" value="→"/>	<input type="checkbox"/> 2 <input type="checkbox"/> CDR Records <input type="checkbox"/> Conference

Figure 323: Create New Custom Privilege

System administrators can create custom privilege sets which can be assigned to created users.

Concurrent Multi-User Login

While UCM supports simultaneous user logins, if different users are modifying the same option or doing the same operation, the following error message may appear:


 Operating too frequently or other users are doing the same operation. Please retry after 15 seconds.

Figure 324: Multiple User Operation Error Prompt

Login Settings

Change Password

After logging in the UCM6200 Web GUI for the first time, it is highly recommended for users to change the default password “admin” to a more complicated password for security purpose. Follow the steps below to change the Web GUI access password.

1. Go to Web GUI→**Maintenance**→**Login settings** page.
2. Enter the old password first.
3. Enter the new password and re-type the new password to confirm.

Note: If PBX Settings→General Settings→Enable Strong Password is toggled on, the minimum password requirements are as follows:

- Must contain at least one number.
- Must contain at least one uppercase letter, lower case letter, OR special character.

1. Configure **Email Address** for account recovery purposes.
2. Click on “Save”.
3. User will be automatically logged out.
4. Once the web page comes back to the login page again, enter the username “admin” and the new password to login.

Figure 325: Change Password

Enter Old Password	Enter the Old Password for UCM6200
Enter New Password	Enter the New Password for UCM6200
Retype New Password	Retype the New Password for UCM6200

Email Address	Configure an email address for account recovery purposes
Change Username	Allows users to change Super Administrator username

Login Security

After the user logs in the UCM6200 Web GUI, the user will be automatically logged out after certain timeout, or he/she can be banned for a specific period if the login timeout is exceeded. Those values can be specified under UCM6200 web GUI→**Maintenance**→**Login Settings**→**Login security** page.

The “**User Login Timeout**” value is in minute and the default setting is 10 minutes. If the user does not make any operation on Web GUI before the timeout, the user will be logged out automatically. After that, the Web GUI will be redirected to the login page and the user will need to enter the username and password again to log back in.

If set to 0, there will be no timeout period, and users can remain logged in for an indefinite period of time.

“**Maximum number of login attempts**” protects the UCM against brute force authentication attempts. If the number of attempts from an IP address exceeds the configured value, it will be blacklisted, and the IP address will be banned based on the configured **User ban period**. Default value is 5.

“**User ban period**” specifies the amount of time (in minutes) that an IP address is banned from attempting to log into the UCM system. A value of 0 indicates a permanent ban. Default value is 5.

“**Login Banned User List**” shows the list of IP addresses banned from the UCM.

“**Login Whitelist**” Users can create a list of IP addresses that will not be banned even if they exceed the maximum number of failed login attempts.

Figure 326: Login Timeout Settings

Operation Log

The Operation Log lists all activities done by all users that have accessed the UCM web portal. This page is found under **Maintenance**->**Operation Log**.

Figure 327: Operation Logs

The operation log can be sorted and filtered for easy access. Click on the header of each column to sort based on those columns. For example, clicking on “Date” will sort the logs according to operation date and time. Clicking on “Date” again will reverse the order.

Table 144: Operation Log Column Header

Date	The date and time when the operation is executed.
Username	The username of the user who performed the operation.
IP Address	The IP address from which the operation is made.
Results	The result of the operation.
Page Operation	The page where the operation is made. For example, login, logout, delete user, create trunk and etc.
Specific Operation	Click on [icon] to view the options and values configured by this operation.
Remark	Allows users to add notes and remarks to each operation

User could also filter the operation logs by time condition, IP address and/or username. Configure these conditions and then click on

[Search](#)

Start Time:	<input type="text" value="2017-05-01 15:57"/>	End Time:	<input type="text" value="2017-05-03 15:58"/>
IPv4/IPv6 Address:	<input type="text"/>	User Name:	<input type="text" value="All Users"/>

<input type="button" value="Delete Search Result (s)"/>		<input type="button" value="Delete All Logs"/>			
Date	User Name	IP Address	Results	Page Operation	Specific Operation
2017-05-02 10:56:40	admin	192.168.6.245	Operation successful	Apply Changes	
2017-05-02 10:56:38	admin	192.168.6.245	Operation successful	Extensions: Create New SIP Extension	User Password: *****; Extension: 1002; Permission: internal.
2017-05-02 10:56:38	admin	192.168.6.245	Operation successful	addFollowme	
2017-05-02 10:56:34	admin	192.168.6.245	Operation successful	Extensions: Create New SIP Extension	User Password: *****; Extension: 1001; Permission: internal.
2017-05-02 10:56:34	admin	192.168.6.245	Operation successful	addFollowme	

Figure 328: Operation Logs Filter

In the figure above, an example that shows operations made by user “support” on device with IP 192.168.40.173 from 2014-11-01 00:00 to 2014-11-06 15:38 are filtered out and displayed.

Users can either filter out specific operation logs or then click on the button to delete the filtered results or click on the button to delete all operation logs. Note: Deleting operation logs will generate an operation log entry detailing the action.

Upgrading

The UCM6200 can be upgraded to a new firmware version remotely or locally. This section describes how to upgrade your UCM6200 via network or local upload.

Upgrading Via Network

The UCM6200 can be upgraded via TFTP/HTTP/HTTPS by configuring the URL/IP Address for the TFTP/HTTP/HTTPS server and selecting a download method. Configure a valid URL for TFTP, HTTP or HTTPS; the server name can be FQDN or IP address.

Examples of valid URLs:

firmware.grandstream.com/BETA

The upgrading configuration can be accessed via Web GUI→Maintenance→Upgrade.

Upgrade Firmware

Upgrade Via:	<input type="text" value="HTTP"/>
Firmware Server Pa..	<input type="text" value="fw.ipvideotalk.com/gs"/>
Firmware File Prefi...	<input type="text"/>
Firmware File Suffi...	<input type="text"/>
HTTP/HTTPS User ...	<input type="text"/>
HTTP/HTTPS Passw..	<input type="text"/>

Figure 329: Network Upgrade

Table 145: Network Upgrade Configuration

Upgrade Via	Allow users to choose the firmware upgrade method: TFTP, HTTP or HTTPS.
Firmware Server Path	Define the server path for the firmware server.
Firmware File Prefix	If configured, only the firmware with the matching encrypted prefix will be downloaded and flashed into the UCM6200.
Firmware File Suffix	If configured, only the firmware with the matching encrypted postfix will be downloaded and flashed into the UCM6200.
HTTP/HTTPS Username	The username for the HTTP/HTTPS server.
HTTP/HTTPS Password	The password for the HTTP/HTTPS server.

Please follow the steps below to upgrade the firmware remotely.

1. Enter the firmware server path under Web GUI→**Maintenance**→**Upgrade**.
2. Click on “Save”. Then reboot the device to start the upgrading process.
3. Please be patient during upgrading process. Once done, a reboot message will be displayed in the LCD.
4. Manually reboot the UCM6200 when it is appropriate to avoid immediate service interruption. After it boots up, log in the Web GUI to check the firmware version.

Upgrading Via Local Upload

If there is no HTTP/TFTP server, users could also upload the firmware to the UCM6200 directly via Web GUI. Please follow the steps below to upload firmware locally.

1. Download the latest UCM6200 firmware file from the following link and save it in your PC.

<http://www.grandstream.com/support/firmware>

1. Log in the Web GUI as administrator in the PC.
2. Go to Web GUI→**Maintenance**→**Upgrade**, upload the firmware file by clicking on “choose file to upload” and select the firmware file from your PC.

The default firmware file name is ucm6200fw.bin




Figure 330: Local Upgrade

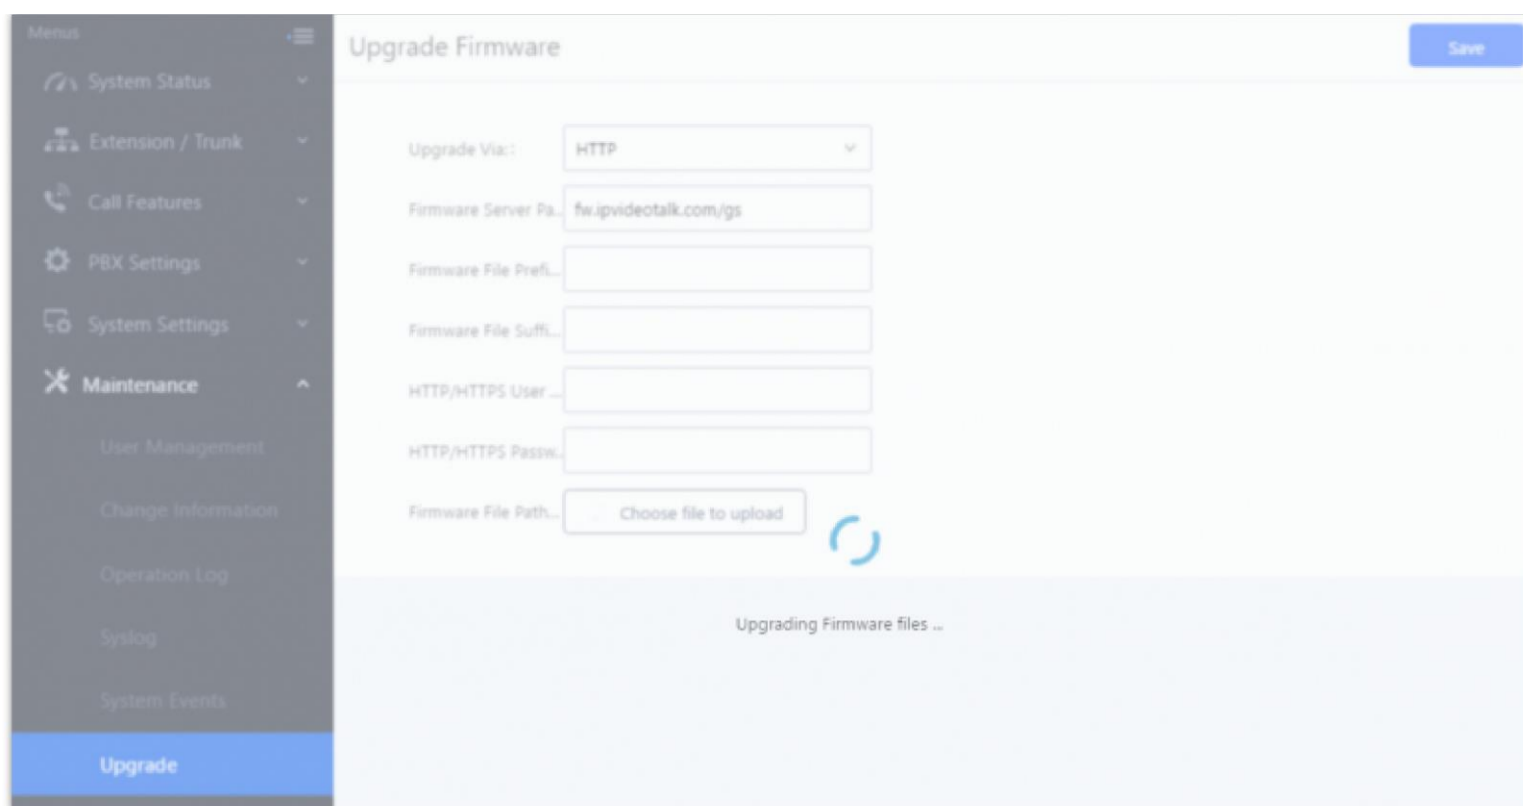


Figure 331: Upgrading Firmware Files

3. Wait until the upgrade process is successful and a prompt will appear on the web GUI.

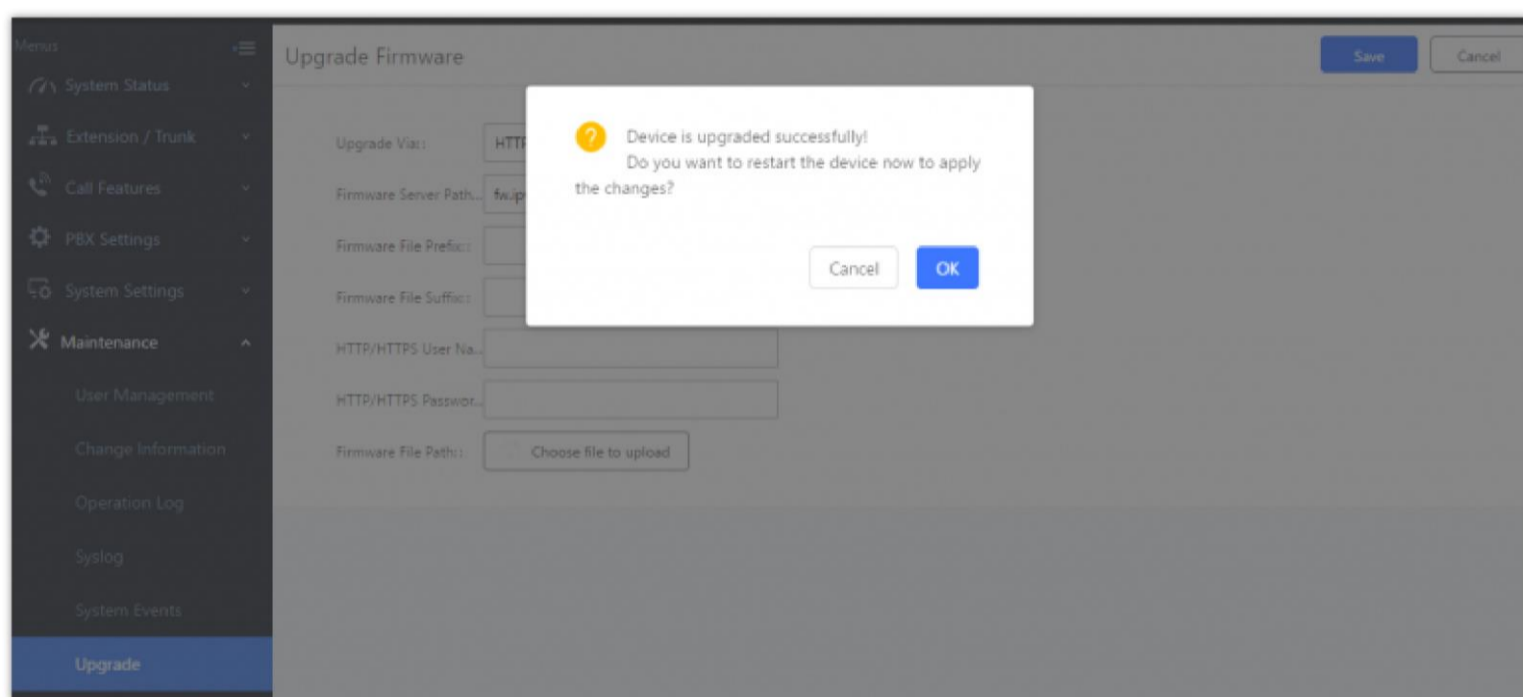


Figure 332: Reboot UCM6200

4. Click on “OK” to reboot the UCM6200 and check the firmware version after it boots up.

Notes

- Please do not interrupt or power cycle the UCM6200 during upgrading process.
- The firmware file name allows the use of the special characters besides the following restricted characters: # \$ ^ & * + () [] / ; ' | , < > ?
- The firmware file size is limited at 1GB.

No Local Firmware Servers

Service providers should maintain their own firmware upgrade servers. For users who do not have TFTP/HTTP/HTTPS server, some free windows version TFTP servers are available for download from

http://www.solarwinds.com/products/freetools/free_tftp_server.aspx

<http://tftpd32.jounin.net>

Please check our website at <http://www.grandstream.com/support/firmware> for latest firmware.

Instructions for local firmware upgrade via TFTP:

1. Unzip the firmware files and put all of them in the root directory of the TFTP server;
2. Connect the PC running the TFTP server and the UCM6200 to the same LAN segment;
3. Launch the TFTP server and go to the File menu→Configure→Security to change the TFTP server's default setting from "Receive Only" to "Transmit Only" for the firmware upgrade;
4. Start the TFTP server and configure the TFTP server in the UCM6200 web configuration interface;
5. Configure the Firmware Server Path to the IP address of the PC;
6. Update the changes and reboot the UCM6200.

End users can also choose to download a free HTTP server from <http://httpd.apache.org/> or use

Microsoft IIS web server.

Backup

The UCM6200 configuration can be backed up locally or via network. The backup file will be used to restore the configuration on UCM6200 when necessary.

Backup/Restore

To create backups, navigate to **Maintenance->Backup->Backup/Restore** and click on the **Backup** button to start the process.

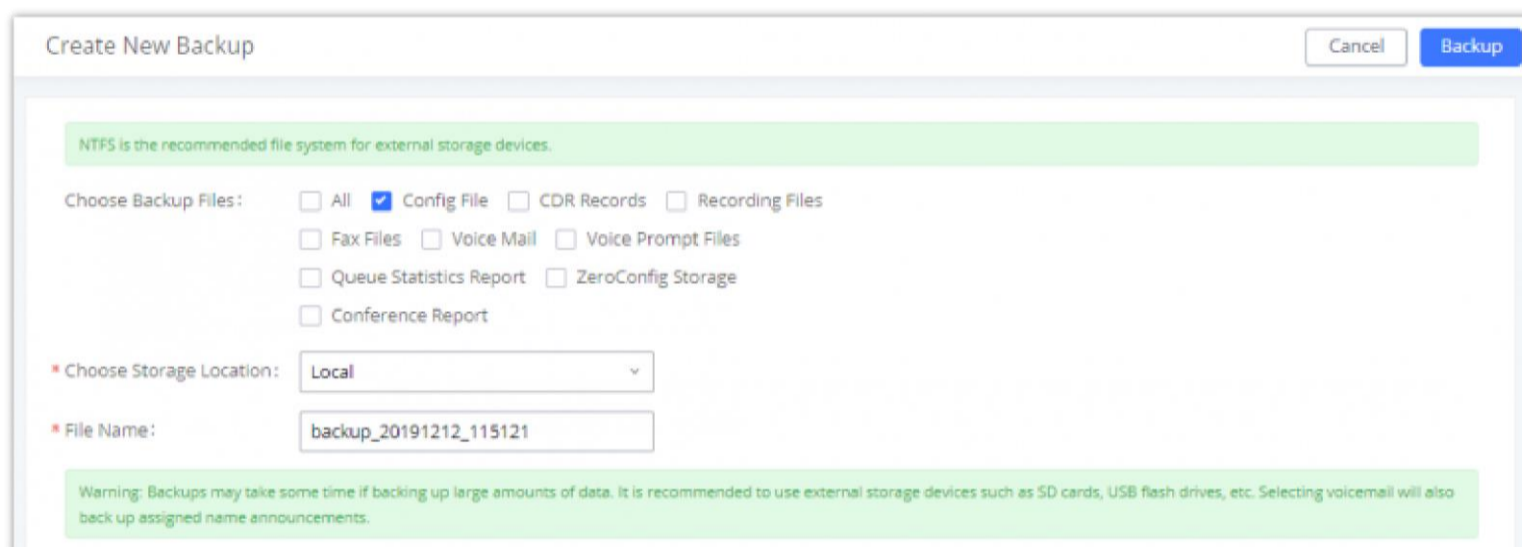


Figure 333: Create New Backup

1. Choose the type(s) of files to be included in the backup.
2. Choose where to store the backup file: USB Disk, SD Card, Local or NAS.

Note: USB Disk or SD card options will show only if plugged; NAS server will show only if configured and status is available. Refer to [PBX Settings/NAS].

1. Name the backup file.
2. Click on "Backup" to start backup.

Once the backup is done, it will appear in the List of **Previous Configuration Backups**. From this list, users can download, restore, and delete backups. Users can download , restore , or delete  it from the UCM62xx internal storage or the external device.

Users can also upload UCM backups from their PC to the UCM by clicking on the **Upload** button.

Note: Uploaded backup files can only be 10MB or lower in file size.

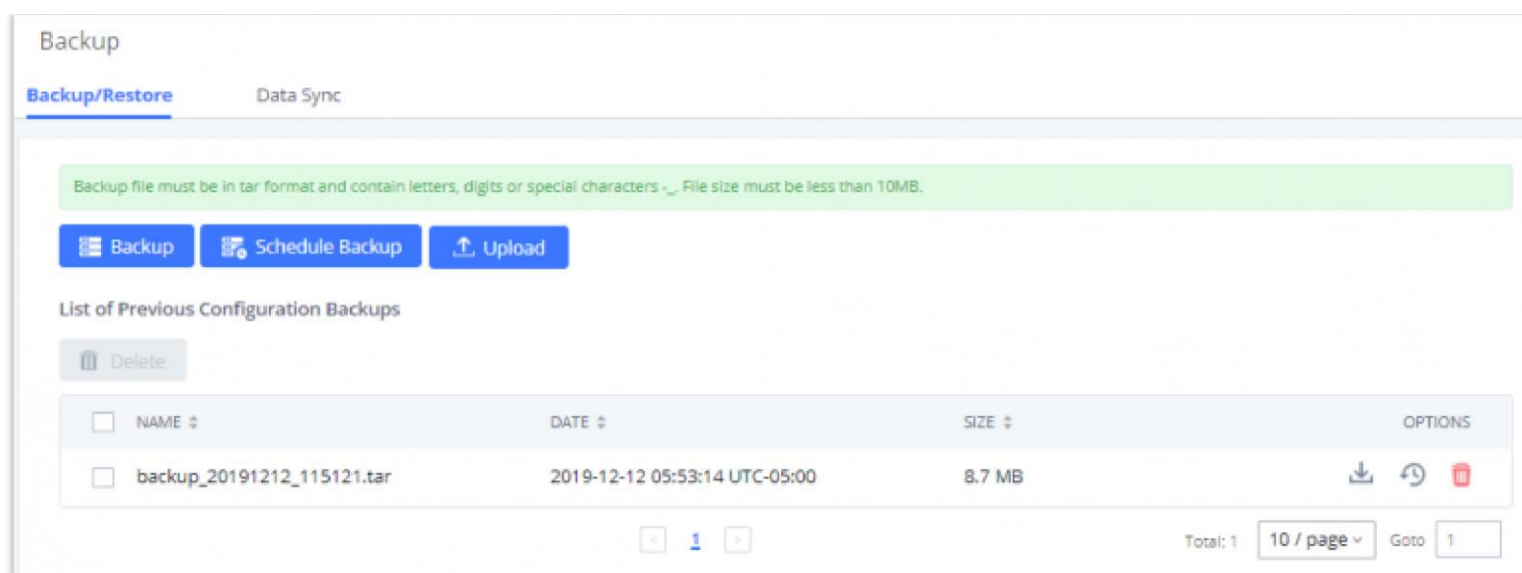


Figure 334: Backup / Restore

The **Schedule Backup** option allows UCM62xx UCM to perform periodic backups to USB disks, SD cards, SFTP servers, or NAS servers. Users can configure the hour and frequency of the periodic backup.

Users can test connections with SFTP servers by clicking on the **+ Test Connection** button.

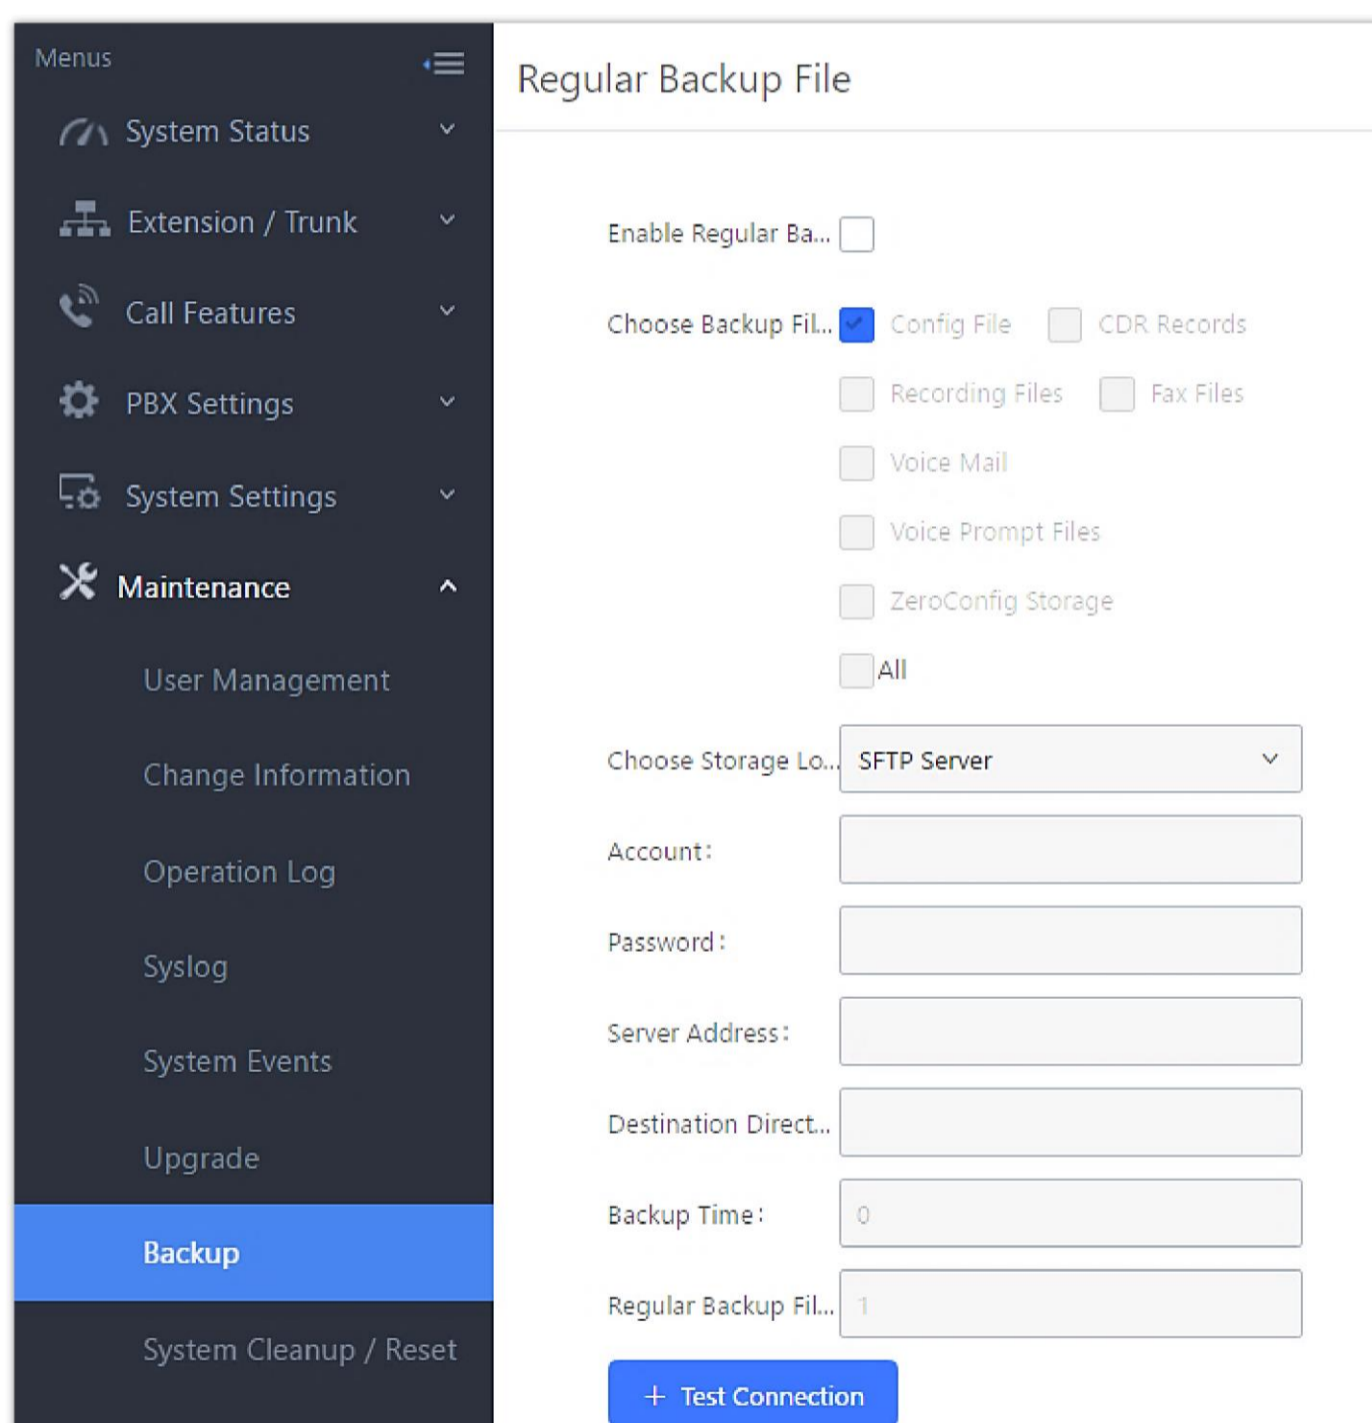


Figure 335: Local Backup

Data Sync

Besides local backup, users can back up call recordings, voicemail, CDR, and fax daily to an SFTP server via the **Data Sync** feature in the **Maintenance->Backup->Data Sync** page.

Special characters such as @ and periods (.) are supported, allowing users to use email addresses as SFTP account usernames and to specify destination directories on the SFTP server. If a specified directory does not exist on the SFTP server, the UCM will create it automatically.

Figure 336: Data Sync

Table 146: Data Sync Configuration



Enable Data Sync	Enable the auto data sync function. The default setting is “No”.
Account	Enter the Account name on the SFTP backup server.
Password	Enter the Password associate with the Account on the SFTP backup server.
Server Address	Enter the SFTP server address.
Destination Directory	Specify the directory in SFTP server to keep the backup file. Format: ‘xxx/xxx/xxx’, If this directory does not exist, UCM will create this directory automatically.
Sync Time	Enter 0-23 to specify the backup hour of the day.

Before saving the configuration, users can click on the **Test Connection** button to verify connection status. Clicking on the **Synchronize All Data** button will manually start a data sync.

Save the changes and all the backup logs will be listed on the web page.

Restore Configuration from Backup File

To restore the configuration on the UCM6200 from a backup file, users could go to Web GUI→**Maintenance**→**Backup**→**Backup/Restore**.

- A list of previous configuration backups is displayed on the web page. Users could click on  of the desired backup file to overwrite the UCM's current settings with the backup's.
- If users have other backup files on PC to restore on the UCM6200, click on "Upload Backup File" first and select it from local PC to upload on the UCM6200. Once the uploading is done, this backup file will be displayed in the list of previous configuration backups for restore purpose. Click on  to restore from the backup file.
- Users can restore backup files located on SD cards, USB disks, or NAS servers. also restore using the backup file saved in SD card or USB device plugged into the UCM6200 or the backup available in his NAS server connected to UCM.

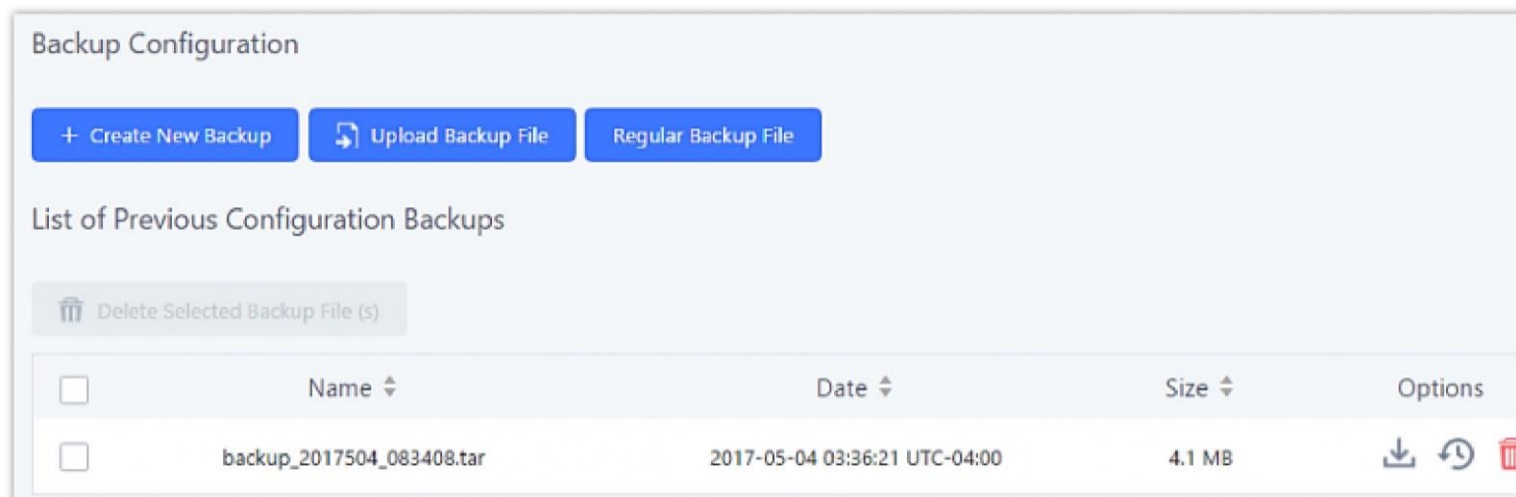


Figure 337: Restore UCM6200 from Backup File

Note:

- The uploaded backup file must be a tar file with no special characters like *,!,#,@,&,\$,%,^,(,/,),space in the file name.
- Uploaded backup file size cannot exceed 10MB.

System Cleanup/Reset

Reset and Reboot

Users could perform reset and reboot under Web GUI→**Maintenance**→**System Cleanup/Reset**→**Reset and Reboot**.

To factory reset the device, select type. There are two different reset types.

- **User Data**

Voicemail, call recordings, voice prompts, Music on Hold files, CDR, and backup files will be erased.

- **All**

All files will be erased, and all settings will be reset to factory settings.

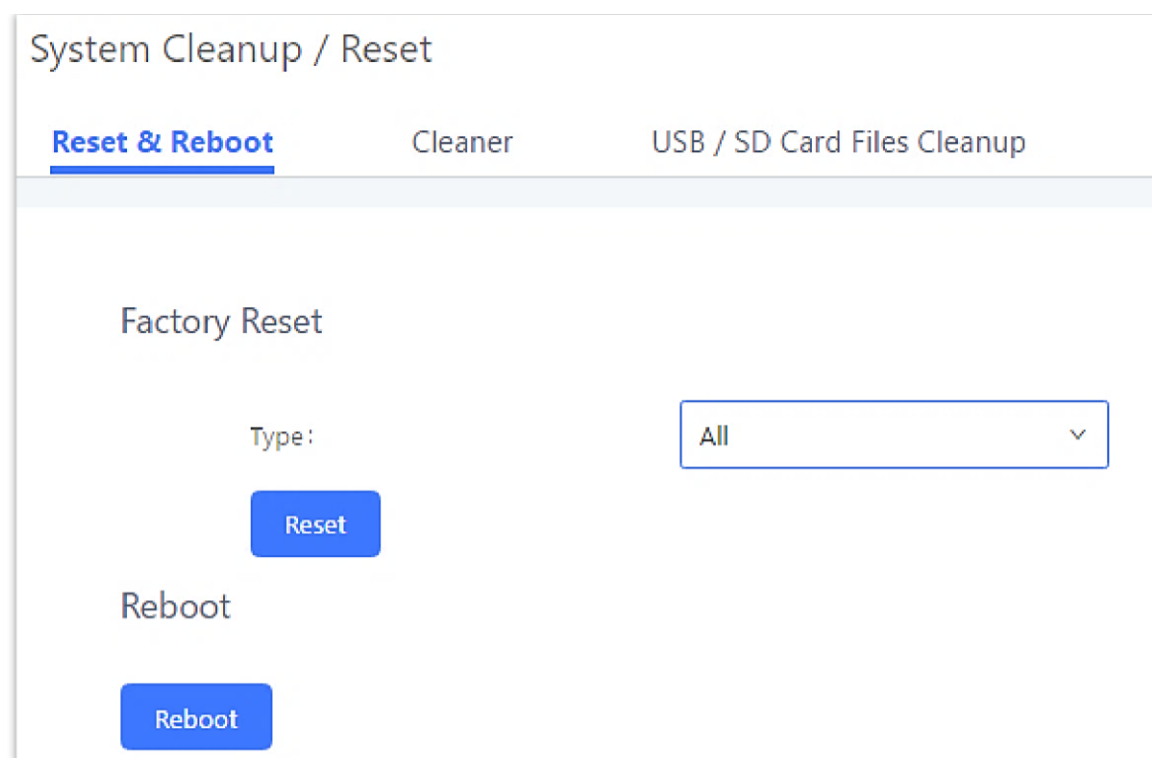


Figure 338: Reset and Reboot

Cleaner

The UCM can be configured to delete files, CDR, voicemail, and calls statistic reports on a regular basis. This featurer can be accessed from the **Maintenance->System Cleanup/Reset->Cleaner** page.

The following screenshot show the settings and parameters to configure the cleaner feature on UCM6200.

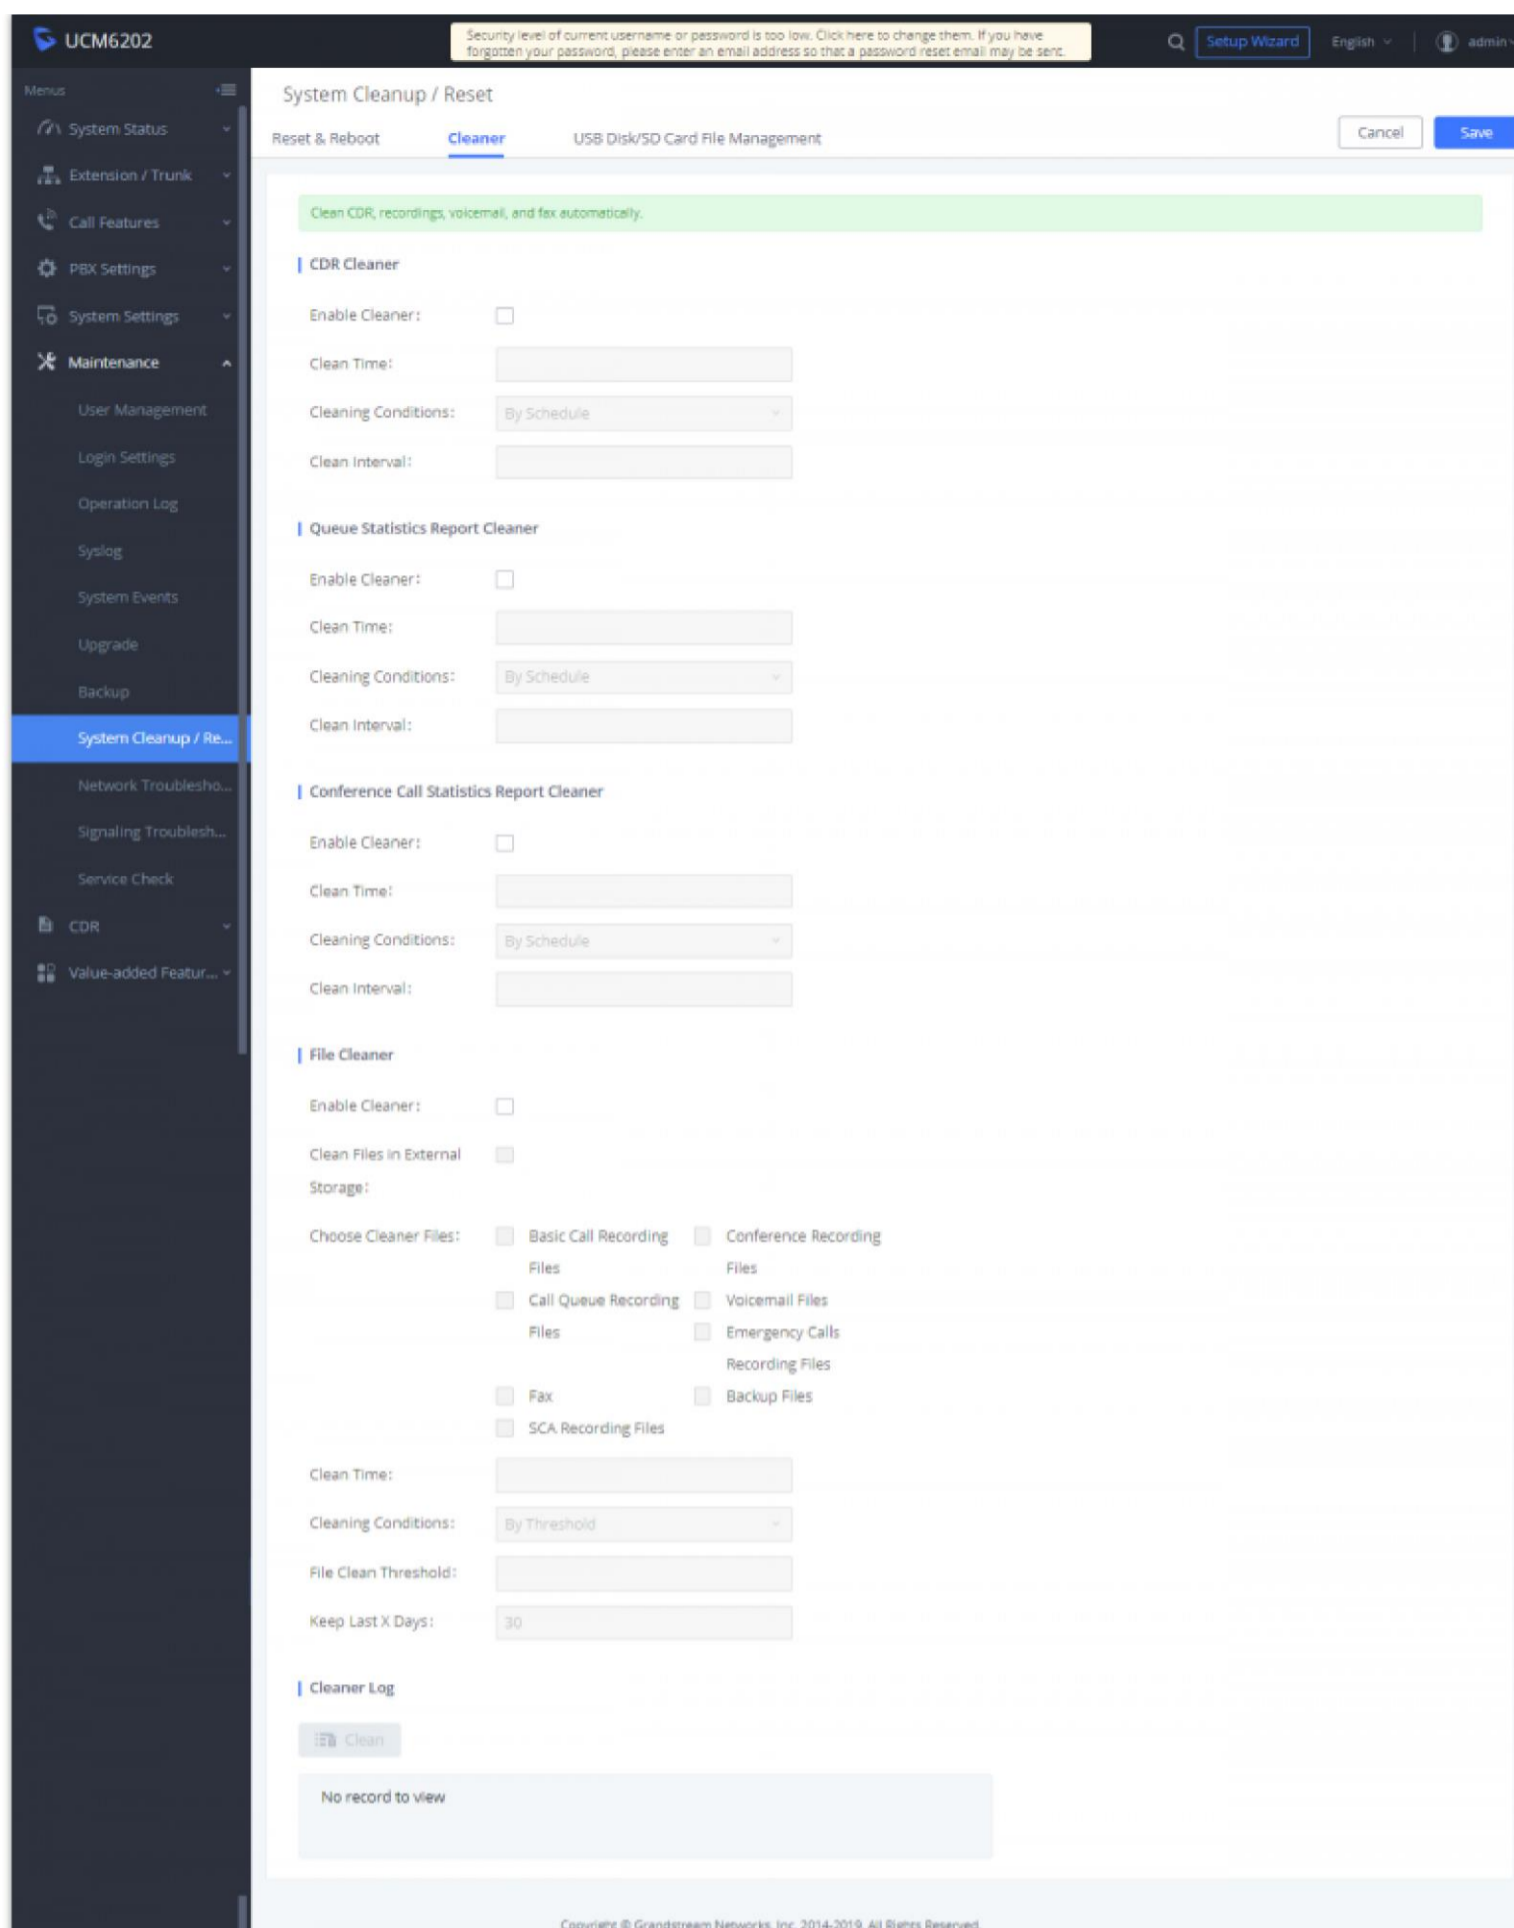


Figure 339: Cleaner

Table 147: Cleaner Configuration

CDR Cleaner	
Enable Cleaner	Enable the CDR Cleaner function.
Clean Time	Enter 0-23 to specify the hour of the day to clean up CDR.

Cleaning Conditions	<p>By Schedule: If the clean interval is 3, cleaning will be performed every 3 days to remove all records that were generated in the past 3 days.</p> <ul style="list-style-type: none"> ◦ Keep Last X Records: If the max number of CDR has been reached, CDR will be deleted starting with the oldest entry at the configured cleaning time. (Note: The amount of records displayed on the page of call queue statistics is not one-to-one with the actual amount of records in the database.) ◦ Keep Last X Days: Delete all entries older than X days.
Clean Interval	Enter 1-30 to specify the day of the month to clean up CDR when By Schedule is selected as Cleaning Conditions .
Max Entries	Set the maximum number of CDR entries to keep when Keep Last X Records is selected as Cleaning Conditions . Default is 50000. Valid range: 10000 – 100000.
Keep Last X Days	Enter the number of days of call log entries to keep when Keep Last X days is selected as Cleaning Conditions . Default is 30. Valid range: 1 – 100.
Queue Statistics Report Cleaner	
Enable Cleaner	Enable scheduled queue log cleaning.
Clean Time	Enter the hour of the day to start the cleaning. The valid range is 0-23.
Cleaning Conditions	<ul style="list-style-type: none"> ◦ By Schedule: If the clean interval is 3, cleaning will be performed every 3 days to remove all records that were generated 3 days ago. ◦ Keep Last X Records: If the max number of Queue Statistics Report entries has been reached, Queue Statistics Report entries will be deleted starting with the oldest entry at the configured cleaning time. (Note: The amount of records displayed on the page of call queue statistics is not one-to-one with the actual amount of records in the database.) ◦ Keep Last X Days: Delete all entries older than X days.
Clean Interval	Enter how often (in days) to clean queue logs when By Schedule is selected as Cleaning Conditions . The valid range is 1-30.
Max Entries	Set the maximum number of Queue Statistics Report entries to keep when Keep Last X Records is selected as Cleaning Conditions . Default is 50000. Valid range: 10000 – 100000.
Keep Last X Days	Enter the number of days of Queue Statistics Report entries to keep when Keep Last X days is selected as Cleaning Conditions . Default is 30. Valid range: 1 – 100.
Conference Call Statistics Report Cleaner	
Enable Cleaner	Enable scheduled conference log cleaning.

Clean time	Enter the hour of the day to start the cleaning. The valid range is 0-23.
Cleaning Conditions	<ul style="list-style-type: none"> ◦ By Schedule: If the clean interval is 3, cleaning will be performed every 3 days to remove all records that were generated 3 days ago. ◦ Keep Last X Records: If the max number of Conference Call Statistics Report has been reached, Conference Call Statistics Report will be deleted starting with the oldest entry at the configured cleaning time. (Note: The amount of records displayed on the page of call queue statistics is not one-to-one with the actual amount of records in the database.) ◦ Keep Last X Days: Delete all entries older than X days.
Clean Interval	Enter how often (in days) to clean queue logs when By Schedule is selected as Cleaning Conditions . The valid range is 1-30.
Max Entries	<p>Set the maximum number of CDR Conference Call Statistics Report entries to keep when Keep Last X Records is selected as Cleaning Conditions.</p> <p>Default is 50000. Valid range: 10000 – 100000.</p>
Keep Last X Days	<p>Enter the number of days of Conference Call Statistics Report entries to keep when Keep Last X days is selected as Cleaning Conditions.</p> <p>Default is 30. Valid range: 1 – 100.</p>
File Cleaner	
Enable Cleaner	Enables file cleaning
Clean Files in External Device	If enabled the files in external device (USB/SD card) will be automatically cleaned up as configured.
Choose Cleaner File	<p>Select the files for system automatic clean.</p> <ul style="list-style-type: none"> ◦ Basic Call Recording Files. ◦ Conference Recording Files. ◦ Call Queue Recording Files. ◦ Voicemail Files. ◦ Emergency Calls Recording Files. ◦ Fax. ◦ Backup Files. ◦ SCA Recording Files.
Clean Time	Enter the hour of the day to start the cleaning. The valid range is 0-23.

Cleaning Conditions	<ul style="list-style-type: none"> ◦ By Schedule: If the clean interval is 3, cleaning will be performed every 3 days to delete all files. ◦ By Threshold: Check at the configured cleaning time every day to see if the storage threshold has been exceeded and perform cleaning of all files if it has. ◦ Keep Last X Days: Delete all files older than X days.
File Clean Interval	Enter 1-30 to specify the day of the month to clean up the files.
File Clean Threshold	Enter the internal storage disk usage threshold (in percent). Once this threshold is exceeded, the file cleanup will proceed as scheduled. Valid range is 0-99.
Keep Last X Days	Automatically delete all recordings older than this x days when the threshold is reached. If not set, all data is cleared. Valid range: 1 – 100.
Cleaner Log	
Cleaner Log	Clicking on the Clean button will clear the cleaner log.

All the cleaner logs will be listed on the bottom of the page.

USB Disk/SD Card File Management

From this page, users can view, download, and delete files on USB disks and SD cards.

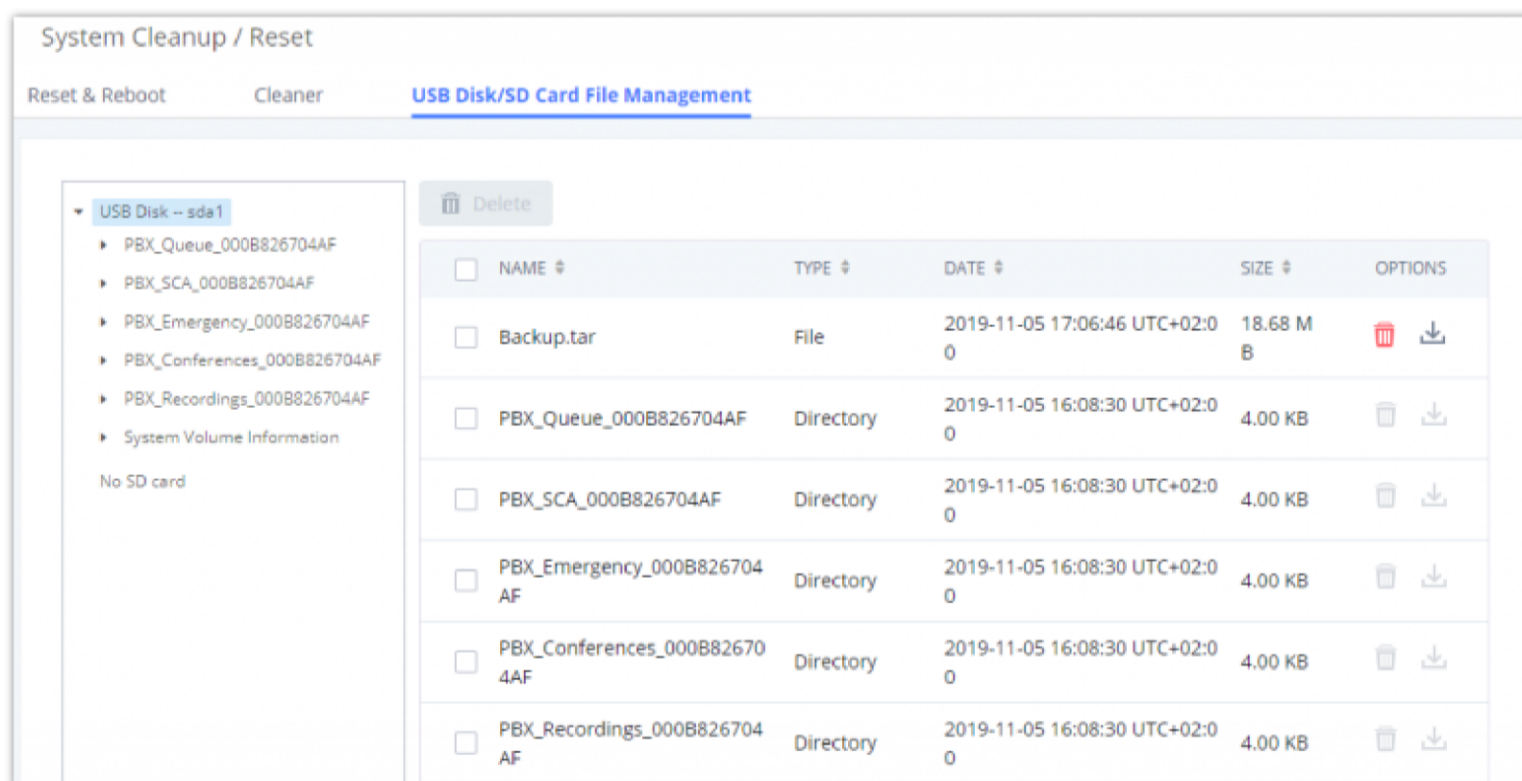


Figure 340: USB/SD Card Files Cleanup

Table 148: USB/SD Card Files Cleanup

Current Path	Displays the current path.
Directory	Select the directory user want to clean.
Delete Selected File	Select multiple entries to delete from USB or SD card.

System Recovery

In the scenario where the UCM cannot be accessed via web or SSH, users can try to recover the system by resetting the system or upgrading system firmware via the UCM's recovery mode.

To access recovery mode, follow these steps:

1. Disconnect the power cable from the UCM and keep the network cable connected.
2. Press and hold the reset button located on the back of the UCM.
3. Reconnect the power cable while holding the reset button.
4. Keep holding until a click sound is heard. Release the reset button.

The UCM's LCD should now display "Recovery Mode" and an IP address.

Once at this stage, the administrator can access the recovery mode web portal by typing in either the IP0 address (typically WAN) or IP1 address (typically LAN) into a browser address bar. The following page should appear:



The screenshot shows a web page titled "Recover" for "UCM6202 V1.3A". It features a login form with the following elements:

- Username:
- Password:
- Login:

Figure 341: UCM6202 Recovery Web Page

Enter the super admin's login credentials and click on the Login button.

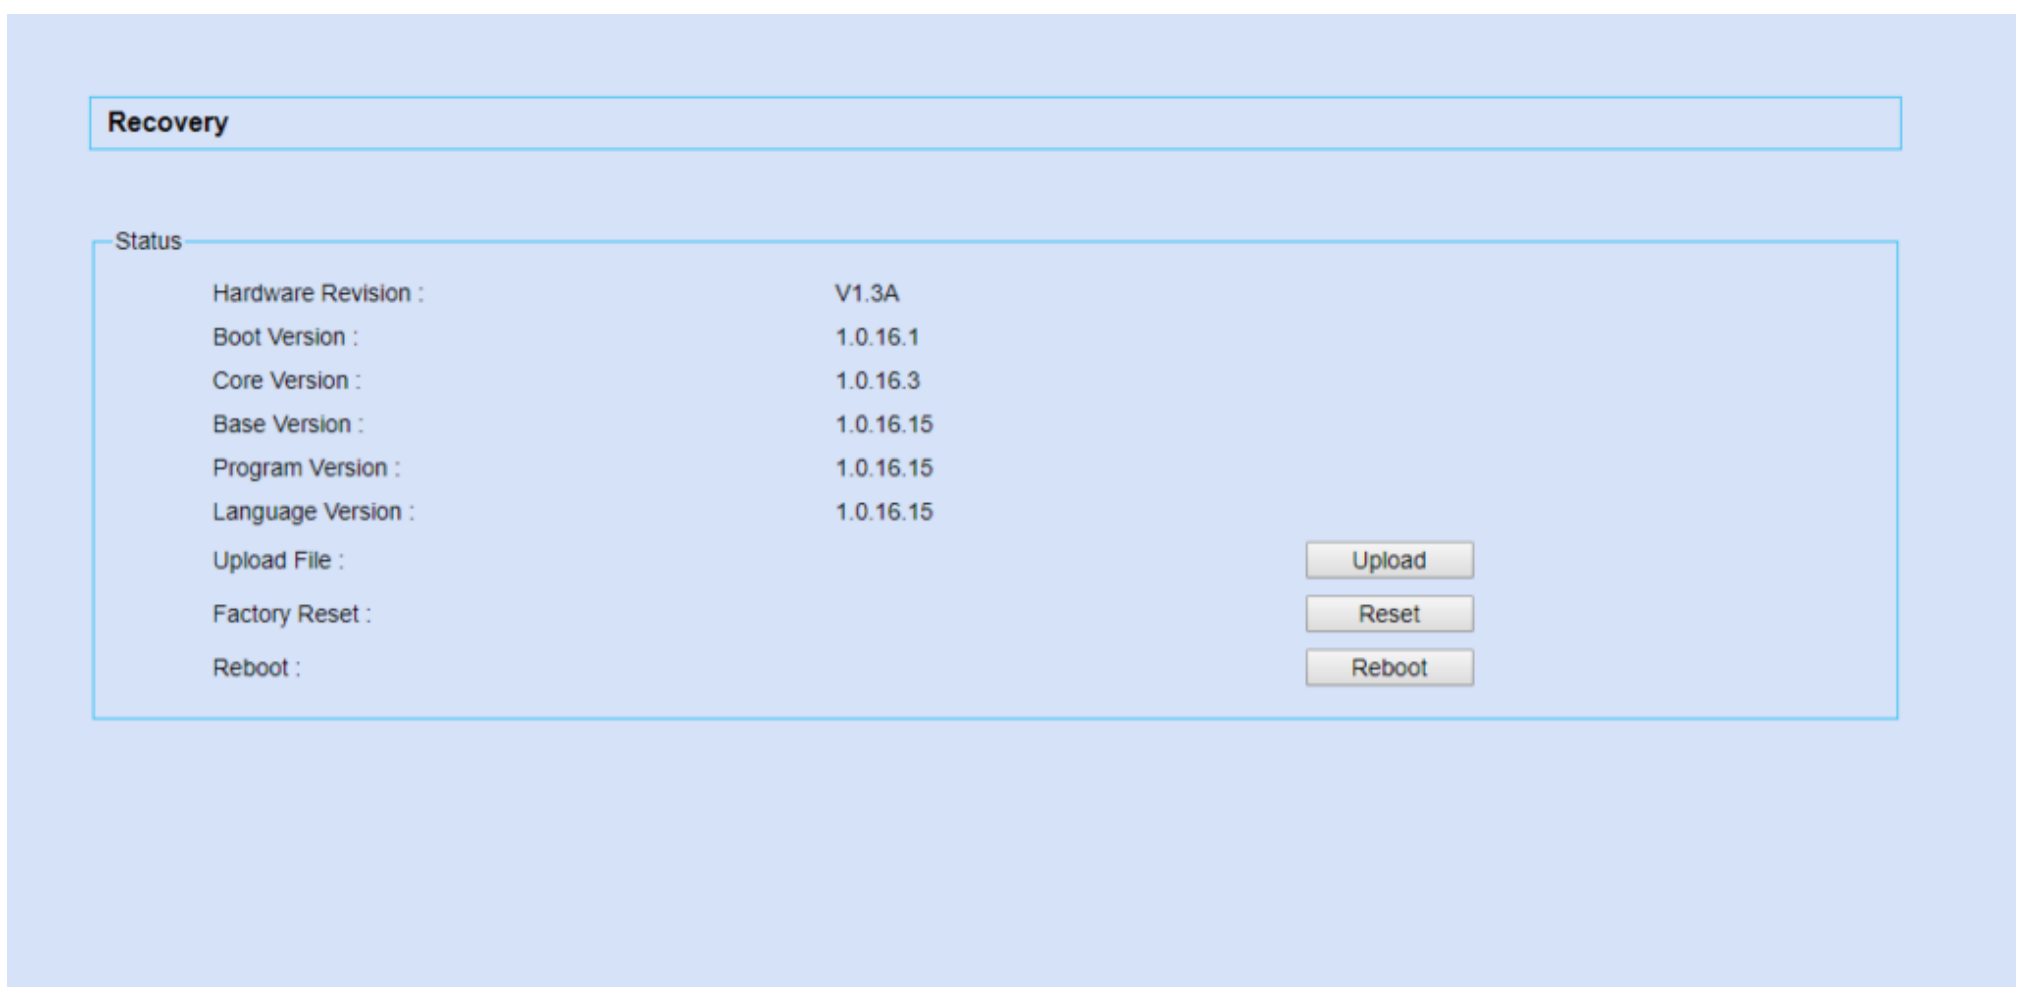


Figure 342: Recovery Mode

From here, the user can either upload a firmware file, factory reset or just reboot the device.

Syslog

On the **Maintenance->Syslog** page, users can configure the UCM to send syslog to a remote server, to do so, please refer to below options:

Syslog server	The URL/IP address for the syslog server.
Write Syslog Into Cache	If enabled, syslog will be sent to and cached in system memory until it is written to internal storage at the specified time interval. Enabling this helps to improve the lifespan of the UCM's flash storage
Time Interval(seconds)	Configures the period of time that must pass before writing the cached syslog to internal storage. Setting the time interval too high may result in lost syslog data due to the low saving frequency.

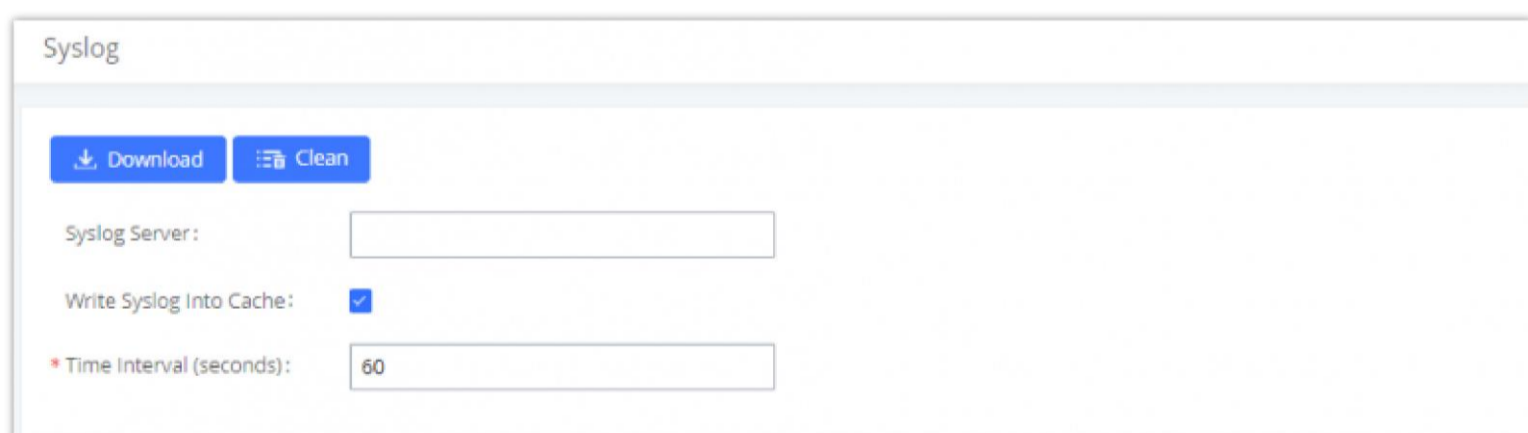


Figure 343: Syslog Server

By default, ERROR logs are enabled for all PBX modules. Additional syslog levels are WARN, NOTICE, DEBUG, and VERBOSE.

- **pbx**: This module is related to general PBX functions.
- **chan_sip**: This module is related to SIP calls.
- **chan_dahdi**: This module is related to analog calls (FXO/FXS).

- **app_meetme**: This module is related to conference room.

Note:

Syslogs are for debugging and troubleshooting. It is not recommended to enable syslog for all modules and levels, as it can cause excessive resource usage and network load.

UCM reserves a 50MB cache for syslog. Once the syslog has reached 50MB in file size, 2MB of syslog will be deleted, starting from the oldest syslogs. This ensures that the system can continue logging.

Network Troubleshooting

The **Network Troubleshooting** page under **Maintenance** allows users to start network captures and ping/traceroute remote hosts.

Ethernet Capture

Captured traces can be downloaded for analysis.

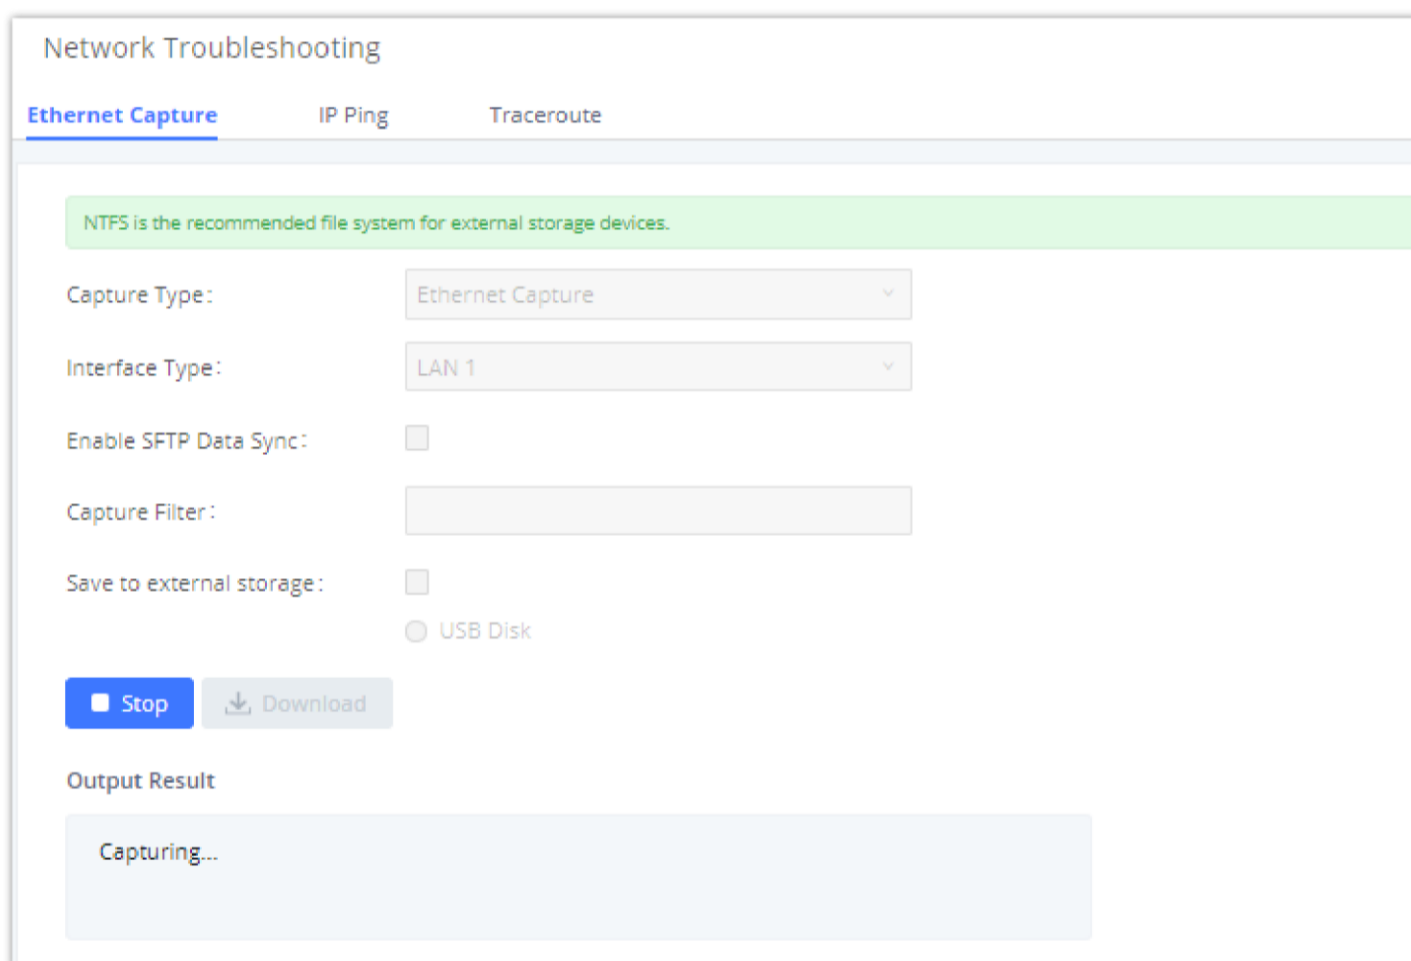


Figure 344: Ethernet Capture

Table 149: Ethernet Capture

Interface Type	Select the network interface to monitor.
Enable SFTP Data Sync	Check this box to save the capture files in the SFTP server. Please make sure the configuration of data synchronization works before.
Capture Filter	Enter the filter to obtain the specific types of traffic, such as (host, src, dst, net, proto...).
Save to External Storage	Check this box to activate storage of the capture either on the USB or SD Card.
Start	Click to start the trace.

Stop	Click to stop the trace.
Download	Click to download the trace if trace is stored locally.

The output result is in .tgz format, and users will need to use a compression tool such as WinRAR or 7-zip to unzip the .pcap file.

Users could specify the capture filter as used in general network traffic capture tool (host, src, dst, net, protocol, port, port range) before starting to capture the trace.

Note: Capture files saved on external devices will now have “capture” prepended to file names.

IP Ping

Enter the hostname or IP address and click on the **Start** button. The ping process can be viewed from the **Output Result** window at the bottom of the page.

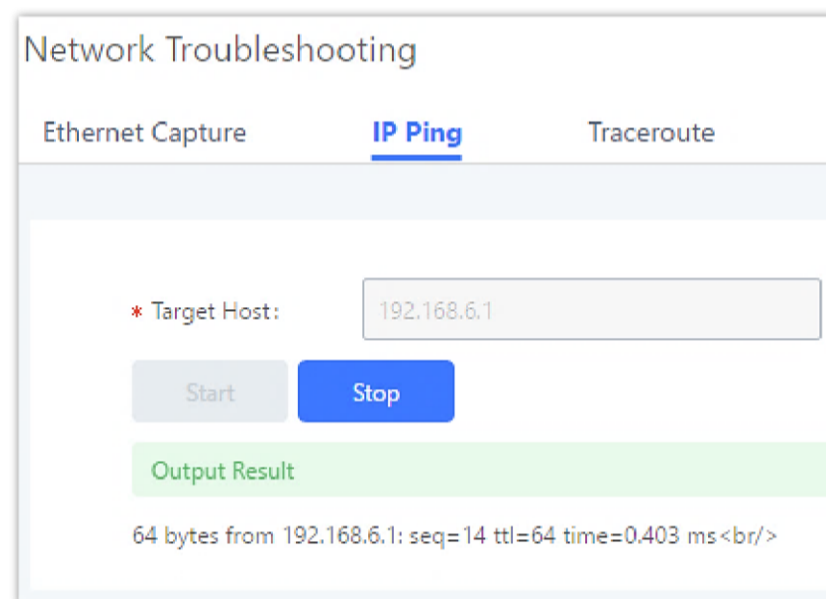


Figure 345: Ping

Traceroute

Enter the hostname or IP address and click on the **Start** button. The ping process can be viewed from the **Output Result** window at the bottom of the page.

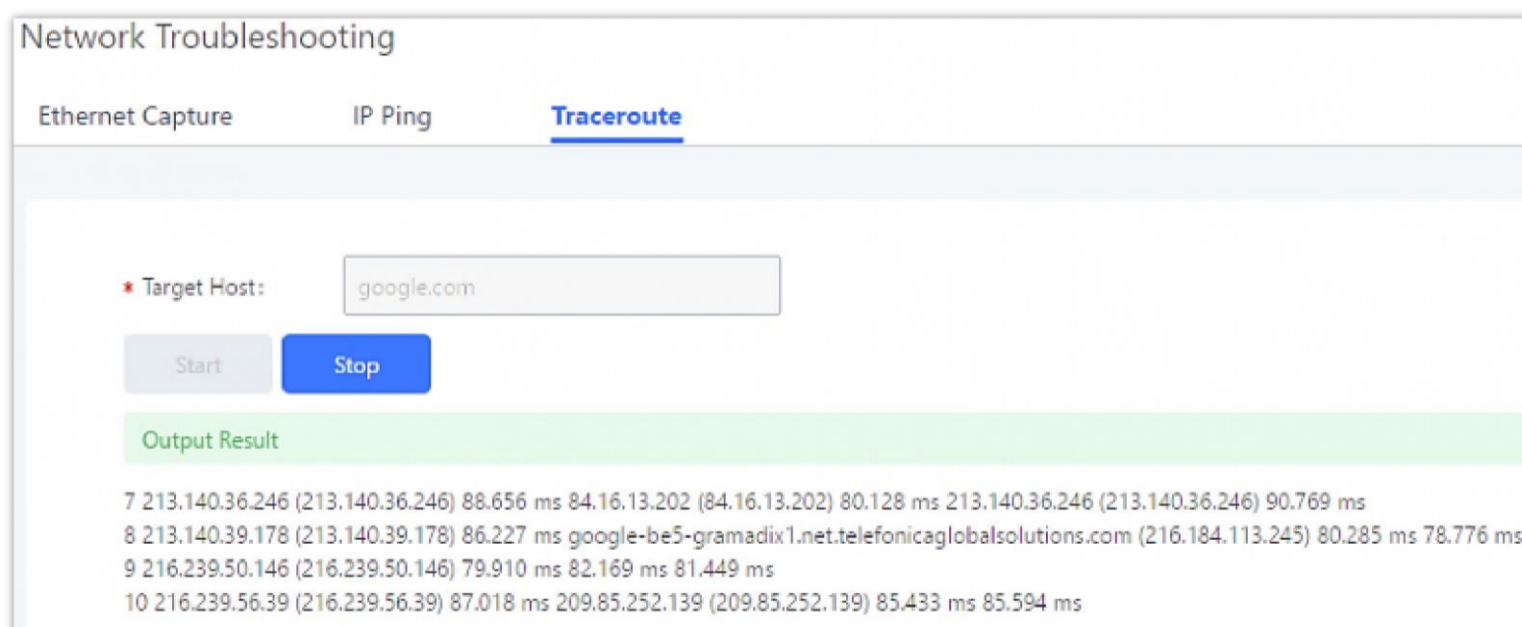


Figure 346: Traceroute

Signaling Troubleshooting

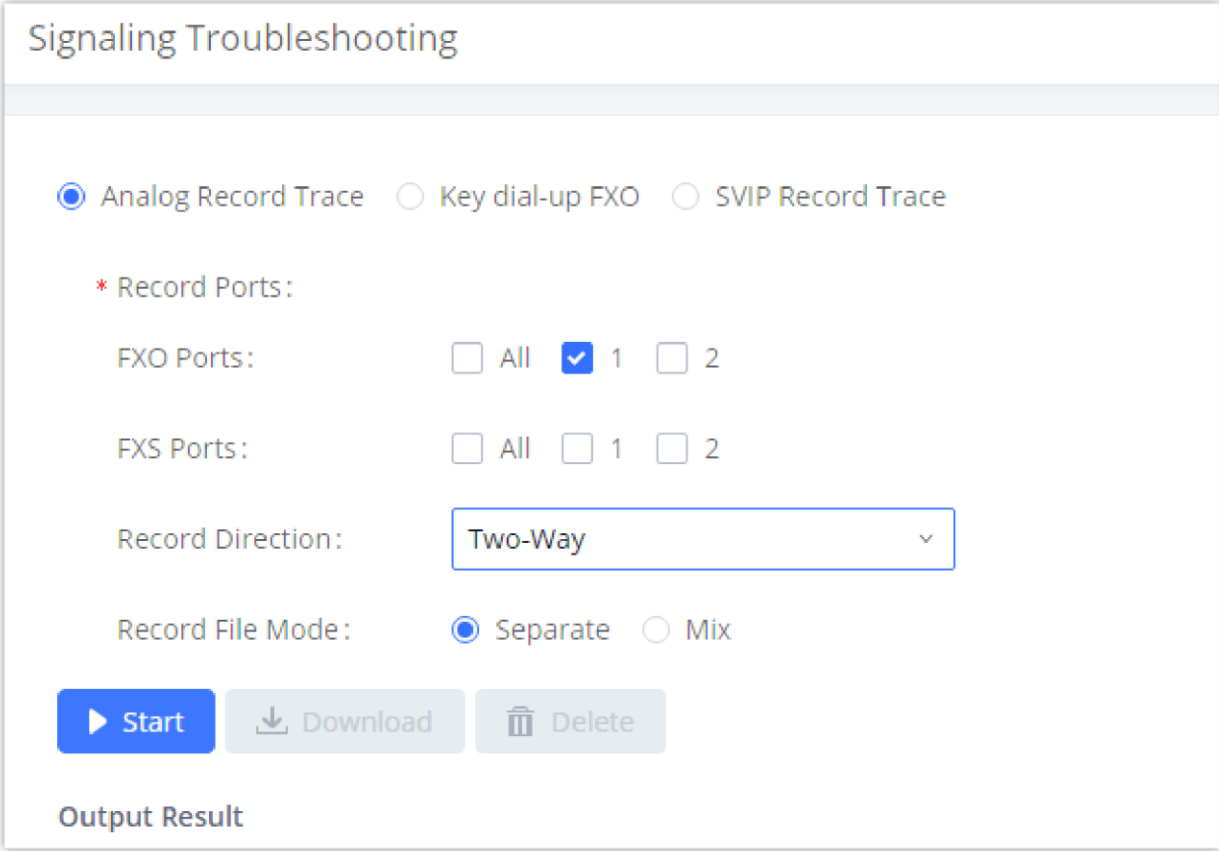
Analog Record Trace

- **Analog Record Trace**

Analog record traces are used to troubleshoot analog trunk issues (e.g., CID detection for incoming calls from an analog trunk).

To capture analog record traces:

1. Select FXO or FXS for “Record Ports”. If the issue happens on FXO 1, select FXO port 1 to record the trace.
2. Select “Record Direction”.
3. Select “Record File Mode” to separate the record per direction or mix.
4. Click on “Start”.
5. Make a call via the analog port that has the issue.
6. Once done, click on “Stop”.
7. Click on “Download” to download the analog record trace.



The screenshot shows a web interface titled "Signaling Troubleshooting". It features three radio buttons for selection: "Analog Record Trace" (selected), "Key dial-up FXO", and "SVIP Record Trace". Below this, there is a section for "Record Ports" with two sub-sections: "FXO Ports" and "FXS Ports". Under "FXO Ports", there are three checkboxes: "All", "1" (checked), and "2". Under "FXS Ports", there are three checkboxes: "All", "1", and "2". The "Record Direction" is set to "Two-Way" in a dropdown menu. The "Record File Mode" has two radio buttons: "Separate" (selected) and "Mix". At the bottom, there are three buttons: "Start" (blue with a play icon), "Download" (grey with a download icon), and "Delete" (grey with a trash icon). Below the buttons, the text "Output Result" is visible.


Figure 347: Troubleshooting Analog Trunks

◦ key Dial-up FXO

Users can configure a PSTN number in the **External Number** field to send test calls to and troubleshoot issues related to the used analog trunk. To use this:

1. Configure analog trunk on UCM, including outbound route.
2. Enter a reachable external number in “**External Extension**”.
3. Press “**Start**” button. The call will be initiated to the external number.
4. Answer and finish the call before pressing “**Stop**” button.

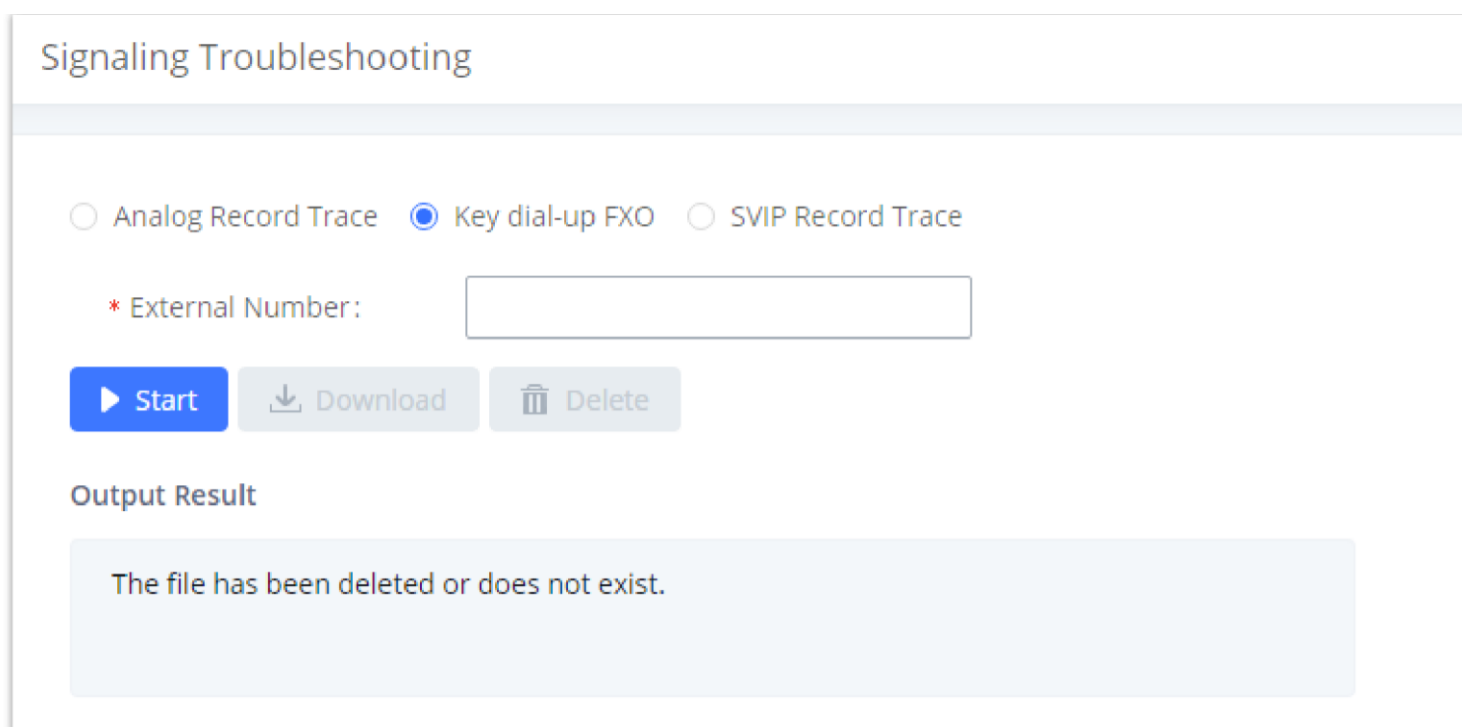The trace will be available for analysis to download after output result shows “Done! Click on Download to download the captured packets”.



Signaling Troubleshooting

Analog Record Trace
 Key dial-up FXO
 SVIP Record Trace

* External Number:

Output Result

The file has been deleted or does not exist.


Figure 348: A Key Dial-up FXO

Note

To use Key dial-up FXO troubleshooting, the outbound route for the analog trunk must have permission set to “Internal” and must have the highest priority for the external number used for troubleshooting. After capturing the trace, users can download it for basic analysis. If further assistance is necessary, please contact Grandstream Technical Support using the following link: <https://www.grandstream.com/index.php/support>

◦ **SVIP Record Trace**

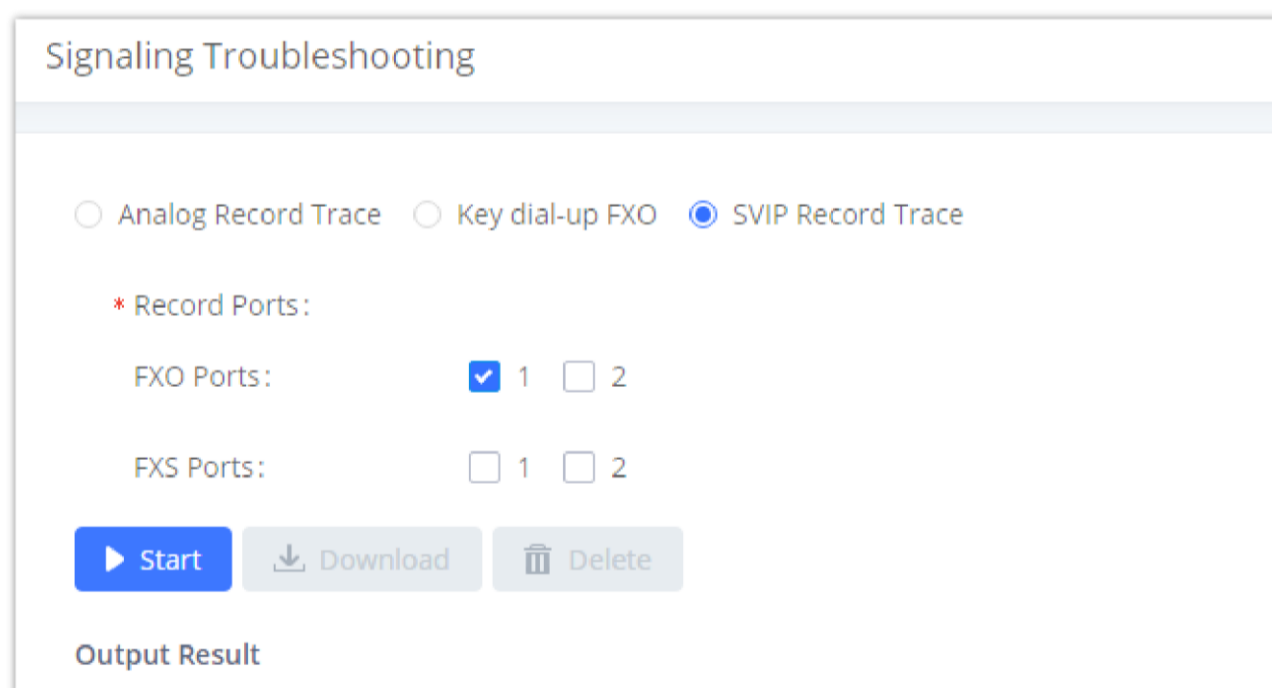Users can capture an SVIP record trace for specific FXO/FXS ports.



Signaling Troubleshooting

Analog Record Trace
 Key dial-up FXO
 SVIP Record Trace

* Record Ports:

FXO Ports: 1 2

FXS Ports: 1 2

Output Result

Figure 349: SVIP Record Trace

Service Check

Service Check will cause the UCM to periodically send SIP OPTIONS to the Asterisk server to check on functionality.

Check Cycle is the frequency (in seconds) at which to check the Asterisk server for issues.

Check Times is the maximum number of failed checks that can occur before the UCM is restart, and a coredump file is generated.

Generated coredump files can be sent to Grandstream Technical Support for analysis and troubleshooting.

Service Check

Enable Server Check :

* Check Cycle :

* Check times :

Figure 350: Service Check

Network Status

Users can navigate to **System Status->Network Status** to view the UCM's active network connections. If users are experiencing connection issues to specific services, they can view this page for troubleshooting.

Network Status

Active Internet Connections (Servers And Established)

Proto	Recv-Q	Send-Q	Local-Address	Foreign-Address	State
tcp	0	0	0.0.0.0:7681	0.0.0.0:*	LISTEN
tcp	0	0	0.0.0.0:7777	0.0.0.0:*	LISTEN
tcp	0	0	0.0.0.0:389	0.0.0.0:*	LISTEN
tcp	0	0	0.0.0.0:2000	0.0.0.0:*	LISTEN
tcp	0	0	0.0.0.0:8888	0.0.0.0:*	LISTEN

Active Unix Domain Sockets (Servers And Established)

Proto	RefCnt	Flags	Type	State	I-Node
unix	2	[ACC]	STREAM	LISTENING	8487
unix	2	[ACC]	STREAM	LISTENING	8491
unix	2	[ACC]	STREAM	LISTENING	8494
unix	2	[ACC]	STREAM	LISTENING	8498
unix	2	[ACC]	STREAM	LISTENING	8501

Figure 351: Network Status

CHANGELOG

This section documents significant changes from previous versions of the UCM6200 user manuals. Only major new features or major document updates are listed here. Minor updates for corrections or editing are not documented here.

Firmware Version 1.0.20.49

- Several system optimizations.
- Added the ability to filter CDR by extension number. [[CDR](#)]
- Added “Send Voicemail Email Notification” option to extension settings. [[Create New SIP Extension](#)]
- Increased the input timeout period of transferring via feature code from 3 seconds to 6 seconds. [[Feature Codes](#)]
- Added agent name information to the User Portal queue page. [[Switchboard](#)]
- Improved security processes.
- Added the “Ignore 180 Response” option. If enabled, 180 ringing will be ignored if a 183 response is received. [[SIP Settings/Misc](#)]

- Added the Colombia/Panama/Ecuador time zone.
- Added support for importing account info into GRP endpoints via CSV. [[Uploading Devices List](#)]
- Increased firmware file upload size limit to 1 GB. [[Upgrading Via Local Upload](#)]

Firmware Version 1.0.20.48

- Added support for batch editing extension options *Send Voicemail to Email* and *Keep Voicemail after Emailing*.
- The contact header in outgoing calls via register trunks will now use the *Username* value instead of the *From User* value.

Firmware Version 1.0.20.47

- BLF color will now change to red if the monitored extension enables DND.
- Added ability to configure DOD for outbound routes.
- Diversion header will now include public IP information.
- Added *Enable Remote SSH* via GDMS option
- Added the “None” option to the extension board setting *Mode* dropdown list.

Firmware Version 1.0.20.44

- Added support for E.164 format in the Emergency Calls CID field.

Firmware Version 1.0.20.43

- Added option “Enable T.38 UDPTL” to VoIP trunk settings page to toggle T.38 support for individual trunks. [[Enable T.38 UDPTL](#)]
- Added option to play a Satisfaction Survey prompt after a call to measure customer service satisfaction. [[Satisfaction Survey Prompt](#)]
- Added ability to customize the virtual queue callback keys that will be prompted. [[Virtual Queue Callback Key settings](#)]

Firmware Version 1.0.20.41

- No Major changes.

Firmware Version 1.0.20.38

- Added support for FQDN and IP address format in the Realm for Digest Authentication field. [[Realm For Digest Authentication](#)]
- Added Enable Record Feature Code option to queue settings. [[Enable Record Feature Code](#)]

Firmware Version 1.0.20.34

- Added the ability to restrict calls between extensions. [[RESTRICT CALLS](#)]
- Added the option to select the transport method information displayed in extension information emails in the System Settings→Email Settings→Email Template→Edit Extension Template page. [[Email Templates](#)]
- Added configuration options User Information in Fax Header and Fax Header Information to the Call Features Fax/T.38Fax Settings page. This will give users the option to send a special header in SIP fax messages. [[User Information in Fax Header](#)][[Fax Header Information](#)]
- Added command to delete call recordings after downloading them. [[recapi](#)]
- Added DTMF Start Threshold and DTMF End Threshold options to the PBX Settings Interface Settings DAHDI Settings page. [[DAHDI Settings](#)]
- Added External Disk Status alert event for monitoring external storage connection status. [[System Events](#)]

- The language of column titles in exported CDR reports and statistics reports will now be based on the UCM's display language. [Downloaded CDR File]
- Added 3 more room statuses and corresponding prompts: Room Cleared, Room Not Cleaned, and Room Closed. [Room Status]
- Updated Hmobile Mini Bar request. [HMobile PMS Connector]
- Added the Ringback Tone option for inbound calls. [Special ringing tone]
- The value configured in the Server User Agent Value field will now replace the whole User-Agent header value instead of just the "UCM6xxx" part. [Server User Agent]
- Added the ability to import/export a CSV file of the configured DODs for a specified trunk. [DOD Import/Export]

Firmware Version 1.0.20.31

- Added parameters x-gscall-type and x-gs-group-name to the ACK From header sent by the UCM for calls made to ring groups and queues to improve compatibility with non-Grandstream endpoints.
- Added GMT-4:00 (Atlantic Standard Time) and GMT+1:00 (Casablanca) to Time Settings [Time Zone]
- To improve UCM flash storage lifespan, syslog will no longer be written to UCM internal storage if a syslog server is configured. [Syslog]

Firmware Version 1.0.20.28

- Added HTTPS API commands to list, add, remove, and update analog trunks, SLA trunks, and digital trunks. [HTTPS API (New)]
- Added HTTP/HTTPS protocol option for sending real-time CDR output. [Delivery Method]
- Hidden the option "Allow Guest Calls".

Firmware Version 1.0.20.23

- No major changes.

Firmware Version 1.0.20.22

- No major changes.

Firmware Version 1.0.20.20

- Increased the maximum limit of IVR entries to 500 and inbound routes to 5000. [IVR] [Inbound Routes]
- Added support for full compliance with Kari's law and Ray Baum's act. [EMERGENCY]
- Increased the maximum number of outbound routes to 500. [Outbound Routes]
- Increased the maximum limit of SIP trunks to 200. [VoIP trunks]

Firmware Version 1.0.20.17

Major Enhancements

- **[Announcement]**
 - Added Announcement feature. [Announcement]
- **[Backup/Restore]**
 - Added NAS as a backup/restore location. [Backup/Restore]
- **[Conference]**
 - Added conference contact groups. [Contact Group]

- Added conference call statistics and reports. [Conference Call Statistics]
- **[CRM]**
 - Added support for Zoho CRM v2 API. [ZohoCRM]
- **[GDMS]**
 - Added GDMS SIP account syncing. [GDMS SETTINGS]
- **[HTTPS API]**
 - Add a new HTTPS API. [HTTPS API (New)]
- **[Maintenance]**
 - Added the ability to download files on external storage from the USB Disk/SD Card File Management page. [USB Disk/SD Card File Management]
 - Added several more conditions for cleaning files and CDR. [Cleaner]
- **[Queue]**
 - Added the ability to customize the keys used for virtual queue. [Virtual Queue Callback Key Settings]
 - Improved queue statistics page. [Queue Statistics]
 - Added a Welcome Prompt option to the Edit Queue page. [Welcome Prompt]
 - Added QueueMetrics support. [QUEUEMETRICS INTEGRATION]
- **[Paging]**
 - Added Private Intercom paging type (GSC3510 only). [Configure Private Intercom]
- **[PMS]**
 - Added the ability to backup voicemail recordings upon guest check-out. [Connecting to PMS]
- **[Call Routing]**
 - Added Outbound Route CID option to the Extensions/Trunk→Outbound Routes page. [Outbound Route CID]
- **[VoIP Trunks]**
 - Users can now dial into IPVT meeting rooms via peer trunks. [IPVIDEOTALK MEETINGS]
 - Added support for DOD to be assigned to UCM's Fax Sending feature. [Direct Outward Dialing (DOD)]
- **[Zero Config]**
 - Auto Discover can now search for devices located on subnets added to the Subnet Whitelist. [Discovery]

Other Enhancements

- **[Active Calls]**
 - Updated Parked calls which will now be displayed in the Active Calls page. [Active Calls Status]
- **[AMI]**
 - AMI username can no longer exceed 64 characters. [ASTERISK MANAGER INTERFACE (RESTRICTED ACCESS)]
- **[Announcement Center]**
 - Announcement Center group name and numbers now have a character limit of 64. [Group Settings]
- **[Basic Calls]**
 - Added International Call Prefix. [PBX SETTINGS]

- After an attended transfer is completed, endpoints will now be updated with the CID of the other party instead of keeping the transferor's CID.
- Added Block collect calls option in SIP settings → General settings. [Block Collect Calls]
- **[Backup/Restore]**
 - Added event logs and email notifications for scheduled SFTP backup and data sync results. [Alert Events List]
- **[Call Completion]**
 - Updated the number of CC agents to be limited by the extensions allowed number of concurrent registrations. [CC Mode] [BUSY CAMP-ON]
- **[CDR]**
 - Added Extension Groups as a CDR filter. [Table 139: CDR Filter Criteria]
- **[Conference]**
 - Added a field to configure the Kick Prompt Interval. [Kick Warning Interval]
 - Added support for Conference participant names to be announced when joining/leaving the conference even when the conference is on hold. [Announce Callers]
 - Extended the Meeting duration to be scheduled up to 8 hours. [Meeting Duration]
 - Conference extension number can no longer be used as the conference password if Strong Password is enabled. [Password]
- **[CRM]**
 - Added "Add Unknown Number" option for ACT! CRM. [ACT! CRM]
 - Added https://www.zohoapis.eu to the ZohoCRM Server Address dropdown list. [ZohoCRM]
- **[Dial by Name]**
 - Added the ability to upload a custom Dial by Name prompt. [Custom Prompt]
- **[DOD]**
 - Added DOD names and numbers character limit to 32. [Direct Outward Dialing (DOD)]
- **[Email Settings]**
 - Added new variable `${CONFR_MEMBERS}`, which shows conference participant details. [Email Templates]
 - Added the following email type filters to the Email Send Log page: Send Fax, Call Queue Statistics, Conference Report. [Email Send Log]
- **[Emergency Calls]**
 - Users can now strip the same amount of numbers as the emergency number length itself. [Strip]
- **[Eventlist]**
 - Added a search bar for eventlists. [Event List]
- **[Extensions]**
 - The Extension and Auth ID fields now support plus signs (+). [Extension] [Auth ID]
 - Enable CC option added as batch edit extension option. [Enable CC]
 - Subnet mask can now be specified when configuring subnets that can register to the extension. [ACL Policy] [Local Network Address]
- **[GS Wave Web]**
 - A conference participant's CID number will now be displayed instead of extension number if configured. [Wave WebRTC Video Calling & Conferencing]
 - Improved extension searching when transferring. [Wave WebRTC Video Calling & Conferencing]

- An error message will now appear when the maximum number of allowed registrations has been reached. [Wave WebRTC Video Calling & Conferencing]
- Hosts can now generate a link that can be used to invite others to the conference. [Wave WebRTC Video Calling & Conferencing]
- **[IVR]**
 - Added support to upload more than one welcome prompt for IVR. [Welcome Prompt]
- **[LDAP]**
 - Plus signs (+) is now supported when creating contacts and receiving calls with “+” in the CID. [LDAP Phonebook]
 - LDAP Client CA Cert field no longer supports .ca file uploads. The following file types are supported: .crt .der .pem. [LDAP Client CA cert]
 - The Username field will no longer require “cn=” to precede username. [Username]
 - Character limit changed for the following fields:
 - LDAP Server→Root Password: 32 [LDAP Server Configurations]
 - LDAP Server→Root DN: 64 [LDAP Server Configurations]
 - Phonebook Download Configurations→Username: 64 [Username]
 - LDAP now supports downloading phonebooks from domains. [Server Address]
 - Added space support to the LDAP Client Username. [Username]
- **[Maintenance]**
 - Added Conference Call Statistics Report Cleaner. [Conference Call Statistics Report Cleaner]
- **[OpenVPN®]**
 - Added option Allow Weak SSL Ciphers. [Allow Weak SSL Ciphers]
- **[Paging]**
 - Added an option to allow scheduled paging to play during holidays. [Include Holidays]
 - “=” is no longer supported in the Alert-Info Header field. [Paging/Intercom Group Settings]
- **[Parking]**
 - Ring All Callback on Timeout will not be available if Forward to Destination on Timeout is enabled. [Ring All Callback on Timeout]
 - The Failover Destination field now has a character limit of 32. [Failover Destination]
- **[PMS]**
 - The Username and Guest Category Code columns in the Room Status page can now be sorted. [Room Status]
- **[Queue]**
 - Agents can now view recordings of their calls in their user portal. [USER PORTAL]
 - A queue can now have 3 chairmen to manage it. [Queue Chairman]
 - Callers can no longer use feature codes in established callbacks. [Enable Feature Codes]
- **[Ring Group]**
 - The character limit of the email address fields for ring group voicemail boxes has been changed from 256 to 128. [Enable Destination]
 - Added the option to skip busy members when receiving an incoming call. [Skip Busy Agent]
- **[SIP Settings]**
 - The TLS Self-signed CA field no longer supports .ca file uploads. The following file types are supported: .ca .crt .der .pem. [TLS Self-Signed CA]

- **[Recording]**
 - MoH will now be recorded when a party is on hold. [Call Recording]
- **[Routing]**
 - Users can now add patterns to the blacklist to restrict calls from several numbers. [Outbound Blacklist]
 - Inbound route imports/exports now have the following columns: Fax Detection, Fax Intelligent Routing, and Fax Destination. [Inbound Route: Import/Export Inbound Route]
 - Users can now export PIN Groups. [PIN Groups]
 - The PIN Groups with Privilege Level option has been added to allow PIN groups to work alongside Privilege Level and Filter on Source Caller ID settings. [PIN Groups with Privilege Level]
- **[System Information]**
 - Added duplex type and network port connection speed information to System Information → Network page. [Speed] [Duplex Mode]
- **[Time Settings]**
 - Users can now configure holidays for the next 4 years. [Year]
 - Added time condition Office Time and Out of Holiday. [Time Condition]
 - Default NTP server is now pool.ntp.org. [Remote NTP Server]
- **[User Management]**
 - Added the following custom privileges [Custom Privilege]:
 - CDR Records
 - CDR Statistics
 - CDR Recordings
 - Voice Prompt
 - Inbound Routes
 - Outbound Routes
 - Added the option to change Super Administrator username in the Change Information page. [**Change Username**]
 - Regular users will now be logged out automatically if an admin resets their extension. [USER PORTAL]
- **[Voicemail]**
 - Voicemail group member limit increased from 16 to 27. [Member]
 - The voicemail system will now mention if a voicemail is from a ring group. [Enable Destination]
- **[Voice Prompt]**
 - Voice prompt package upload file size limit increased to 50MB. [Upload Language Package]
 - Custom voice prompt file name character limits for the Voice Prompt and Announcement Center pages have been changed to 100. [Upload Custom Prompt] [ANNOUNCEMENTS CENTER] [Announcement]
- **[VoIP Trunks]**
 - PAI headers now have a character limit of 64 and can only contain alphanumeric characters and/or special characters #*-_+. [PAI Header]
 - When editing a register trunk or trunk group and TLS is selected in the Transport field, users can now select between SIP and SIPS URI scheme. [SIP URI Scheme When Using TLS]
 - Domain names can now be sent in the request URL by configuring the From Domain field. [From Domain]

- [Security]
 - Added support to specify minimum/maximum TLS version. [TLS Security]

Firmware Version 1.0.19.29

- Updated extension DND response. [General Call Failure Tone]
- Added feature codes for remote management of extension call forwarding. [Remote Call Forward Enable]
- The wakeup service prompt now has an option to set a wakeup for the next day. [Wakeup Service]

Firmware Version 1.0.19.27

- Added new option Email-to-Fax Subject Format to allow email subjects to consist of only the fax number. [Email-to-Fax Subject]
- Added new options Auto Record to automatically record emergency calls and Send Recording File to send these recordings to a configured email address. [Auto Record]
- Increased concurrent registration limit to 300 for UCM62xx's wave web interface. [Wave WebRTC Video Calling & Conferencing]
- Added Emergency Recordings page to display recordings of emergency calls. [EMERGENCY]
- Added a toggle checkbox to enable/disable Announcement Paging. [Enable]
- Queue position will now be announced to the caller upon entering the queue. [Enable Position Announcement]
- Added new option Enable Hold time Announcement to announce estimated wait times to caller. [Enable Hold time Announcement]
- Added a new option "Block the Backward Collect Call" to automatically block collect calls/reverse charge calls. [Block]
- Added Chile time zone. [Automatic Date and Time]
- Added IPVT Mode option to VoIP Peer Trunk [IPVT Mode].

Firmware Version 1.0.19.21

- Optimized system performance for UCM6202 and UCM6204 models, which now support up to 50 and 75 concurrent calls, respectively. [Maximum Call Capacity]
- Added ACT! CRM support. [ACT! CRM]
- Added Email-to-Fax Blacklist/Whitelist. [Email-to-Fax Blacklist/Whitelist]
- Added digit prepending and stripping support for Emergency calls. [EMERGENCY]
- Added new functionalities to Grandstream Wave Web. [Wave WebRTC Video Calling & Conferencing]
- Added LDAPS protocol support. [Technical Specifications] [LDAP Server]
- Added support for .conf and .ovpn files for OpenVPN. [OpenVPN®]
- Added Announcement Paging type. [Configure Announcement Paging]
- Added PMS API as a PMS options. [PMS API]
- Added ability to clear agents call counters. [Reset Agent Call Counter – Enable]
- Added Set CallerID option. [Set Caller ID Info]
- Added ability to monitor and change the inbound mode of individual inbound routes and toggle/monitor them via BLF. [Inbound Mode] [Inbound Route: Route-Level Mode] [Inbound Route: Inbound Mode BLF Monitoring]
- Added search functionality to the web portal to quickly find settings. [Web GUI Search Bar]
- Added HT818 model template to Zero Config Models Templates. [PROVISIONING]

- Added the ability to associate differently named OEM models with their original GS models for provisioning purposes. [OEM device models]

Firmware Version 1.0.18.13

- No major changes.

Firmware Version 1.0.18.12

- CDR API configuration page moved from CDR to Value-Added Features.
- Added ability to upload voice prompt files via API.
- Added ability to transfer to custom numbers, not just extensions using Grandstream Wave Web [Wave WebRTC Video Calling & Conferencing]

Firmware Version 1.0.18.9

- Added new AMI commands. [ASTERISK MANAGER INTERFACE (RESTRICTED ACCESS)]
- Added ability to customize the data columns included in exported CDR reports. [CDR Export Customization]
- Added ability to view a specified extension's membership in Call Queues/Ring Groups and other details. [Extension Details]
- Added ability to disable audio files for Music on Hold. [MUSIC ON HOLD]
- Added Timeout Destination and Ring-All Callback on Timeout options to Parking Lot page. [Parking Lot]
- Added inbound rule importing/exporting functionality. [Inbound Route: Import/Export Inbound Route]
- Added GS Wave WebRTC video calling and video conferencing functionality. [Wave WebRTC Video Calling & Conferencing]

Firmware Version 1.0.17.16

- Added RTX codec support. [Technical Specifications] [Codec Preference]
- Emergency calls will no longer be logged into CRM servers. [CRM INTEGRATION]
- Added batch extension resetting functionality. [Batch Extension Resetting Functionality]
- Added FAX Resend Support. [Enable Fax Resend] [Max Resend Attempts]
- Fail2ban now supports up to 20 whitelist entries. [Fail2Ban Whitelist]
- Added FXO Frequency Tolerance option to Analog Hardware page. [FXO Frequency Tolerance]
- Added NAS support for call recording backup. [NAS]
- Added paging/intercom scheduling functionality. [Configure a Scheduled Paging/Intercom]
- Added Multicast Paging support.
- Added Failover Destination under call parking options. [Failover Destination]
- Added Timeout Callback Ringing All options under call parking options. [Ring All Callback on Timeout]
- Added ability to view CID of parked calls on VPKs/MPKs configured as monitored call park. [Monitor Call Park CID Name Information (GXP21xx Phones Only)]
- Added support for endpoint call forwarding under ring group. [Endpoint Call Forwarding Support]
- Added batch operations and searching functionality to the Inbound/Outbound Blacklist pages. Operations include deleting rules and importing/exporting entire blacklists. [Outbound Blacklist][Blacklist Configurations]
- Added ability to monitor and toggle inbound routing modes via BLF. [Inbound Mode BLF Monitoring]
- Added Shared Call Appearance functionality. [Shared Call Appearance]

- Added Forward HOLD Requests option under Misc page. [Forward HOLD Requests]
- Added support for Trunk Groups. [Trunk Groups]
- Added Forward Voicemail to Peered UCMs option. [Forward Voicemail to Peered UCMs]
- Added a new Voicemail Password field under Voicemail settings. [Voicemail Password]
- Added Catalan language support under voice prompt. [VOICE PROMPT]
- Added DOD Name field under VoIP trunk settings. [Direct Outward Dialing (DOD)]
- Changed the default value of Max Wait Time to 60. [Max Wait Time]
- Added “SCA” action type to filtering CDR options. [Action Type]
- Added a prompt asking whether to delete all recording files or not on CDR. [CDR]
- Added a 64-character limit to Conference → Extension field. [Extension]
- Added a 3-character limit to Extension Incrementation field. [Extension Incrementation]
- Added a maximum limit of 500 entries to the IVR blacklist and whitelist. [IVR]
- Added character restrictions to LDAP Number Attributes field to ensure correct input. [LDAP Client Configurations]
- Added maximum limit of 99,999 to parking timeout. [Parking Timeout]
- Added a 63-character limit to the Room Number field. [Room Number]
- Editing an already executed wakeup service will automatically change the service’s status to “Programmed”. [Action Status]
- Adding UCM disconnection when an SSH client changes the password for the connected user.
- LCD display will show “Recovery Mode” instead of “No Provision” when the UCM is in recovery mode. [System Recovery]
- Capture files saved on external devices will have “capture” prepended to file names.
- Added dashes and + characters to Fax, Home Number, and Mobile Phone Number fields.
- Updated external number to accept only letters, numbers and special characters. [External Number]
- Added a 64-character limit to Custom Presence Status field. [Custom Presence Status]
- Increased the character limit for provider name field to 64 characters during creation. [Provider Name]
- Updated From Domain field to accept special characters. [From Domain]
- Username Prompt filename character limit changed to 18. [Username Prompt Customization]
- Increased the character limit for the wakeup service name field to 64 characters. [Wakeup Service]
- Users can now upload custom prompts directly to pages without having to get redirected to the Voice Prompt → Custom Prompt page. [Custom Prompt]
- Added character restrictions to device firmware file names. [firmware file name]
- Added Email-to-Fax support. [Email-to-Fax]

Firmware Version 1.0.16.20

- Added an option to enable/disable remote voicemail access function. [Voicemail Remote Access]

Firmware Version 1.0.16.18

- Added support for emergency calls. [EMERGENCY]
- Added support for VtigerCRM [VtigerCRM]
- Added support for ZohoCRM [ZohoCRM v2]

- Added support for HSC PMS [HSC PMS]
- Added support for Direct Callback. [Direct Callback] [Direct Callback] [Direct Callback]
- Added option to disable call waiting under extensions. [Enable Call Waiting]
- Added option to passthrough SIP PAI Header. [Passthrough PAI Header]
- Added option to copy device settings in zero config. [Managing discovered devices]
- Added support for call failure prompts customization. [General Call Failure Tone]
- Added option to automatically request HTTP server certificate. [Certificate Options]
- Added support to include more menus on user custom privilege. [Custom Privilege]
- Added possibility to delete CDR records based on search result. [CDR]
- Added option to send caller to specific destination when queue is empty. [CALL QUEUE]
- Added XML file type support for importing phonebooks. [LDAP Phonebook]
- Added ability to customize the LDAP name and number attributes in the Phonebook Download Configurations page [LDAP Client Configurations]
- Added option to download Call Queue Statistics. [Queue Statistics]
- Added option to choose DNS mode during calls. [DNS mode]
- Added ability to batch add devices by importing a CSV file [PROVISIONING]
- Added a Copy Device Configuration option that allows users to copy the configuration of one device to another device [PROVISIONING]
- Added ability to divide a parking lot extension into multiple lots [Parking Lot]
- Added option to reset extension settings. [Reset single extension]

Firmware Version 1.0.15.16

- Added support to announce name in Dial By Name feature. [DIAL BY NAME]
- Increased maximum number of call queue static agents. [Static Agents limitation]
- Added Queue Log Cleaner. [Cleaner]
- Added operation logs details and remarks. [Operation Log]
- Added extension level voicemail-to-Email setting. [Send Voicemail to Email] [Keep Voicemail after Emailing]
- Added support for reset certificate. [Reset Certificates]
- Added support for GXP21xx color phone queue login/logout softkey. [Enable Agent Login]
- Added support to add comments to inbound/outbound route patterns. [Pattern] [Pattern]
- Added PPI mode option under SIP trunk advanced settings [PPI Mode]
- Added ability to import PIN groups from CSV files. [Importing PIN Groups from CSV files]
- Added support for wakeup groups. [WAKEUP SERVICE]
- Added support for SYN Flood defense. [SYN-Flood Defense Enable]
- Added Queue Log option to Backup/Restore page. [Backup/Restore]
- Modified Switchboard UI to offer easier access to call Options. [Switchboard]
- Further optimized Call Queue Statistics page to provide a more user-friendly experience and improve performance. [Queue Statistics]
- Added image uploading support to Email templates [Email Templates]

- Added IPv6 gateway support. [Static Routes]
- Improved Voice Message Responses for failed SIP trunk calls. [voice message responses]
- Added Fail2Ban to support TCP/TLS beside the already-supported UDP. [Fail2ban]
- Restored ability to sort the ringing order of Follow Me numbers. [FOLLOW ME]
- Added option to restrict users from changing their SIP credentials through user portal [Consumer]
- Added option to enable or disable fax-to-mail feature on extension level. [Fax to Email]
- Added IP address whitelist to web GUI configuration. [Enable IP Whitelist]
- Added CDR records separation [CDR separation]

Firmware Version 1.0.14.24

- Added protection to prevent HTTP rogue login.

Firmware Version 1.0.14.23

- Restored ability to view voicemail count in the Extension/Trunk overview.
- Restored the ability to set custom numbers for call forwarding settings. [Call Forward Unconditional]

[Call Forward No Answer] [Call Forward Busy]

- Restored previous format for entering multiple dial plans (one pattern per line) for inbound/outbound rules.

[Pattern] [Pattern]

- Restored Zero Config's sorting by column and introduced a search bar. [Managing discovered devices]

Firmware Version 1.0.14.21

- Added support for SIP Presence. [PRESENCE]
- Added support for Call Center feature/Virtual Call Queue. [Call Center Settings and Enhancements]
- Added support for Call Queue position announcement. [Call Center Settings and Enhancements]
- Added support for Call Queue Statistics. [Queue Statistics]
- Added support for Call Queue Auto-Fill. [Queue Auto fill enhancement]
- Added switchboard for call queue monitoring. [Switchboard]
- Added ability to restore blind transfer call to transferrer. [Allow callback when blind transfer fails]
- Added support for external disk cleaner. [System Cleanup/Reset]
- Added option to enable DOD when call is being diverted/forwarded. [Use callee DOD on FWD or Ring Simultaneously]
- Change follow me settings to extension level settings. [FOLLOW ME]
- Added support for call forward whitelist. [FWD Whitelist]
- Added Fail2Ban defense from web login attack. [Login Attack Defense]
- Added limitation for maximum number of call queue static agents. [Static Agents limitation]
- Added support for wakeup service module in Custom privilege. [Custom Privilege]
- Added IPv6 support for T.38.

- Added DAHDI settings. [DAHDI Settings]
- Added ability to pass through SIP Call-Info header to support GXP phone JPEG_Over_HTTP with encryption and authentication to open door for GDS3710. [Transparent Call-Info header]

Firmware Version 1.0.13.14

- Added extension whitelist/blacklist for IVR dialing[IVR]
- Added ability to include DOD in PPI Header for SIP trunk. [PPI Mode]
- Added advanced IPv6 support including IPv6-to-IPv4 SIP calls, IPv6 router, IPv6 iptables/Static defense.
- Added ability to customize PAI Header. [PAI Header]
- Added blacklist for outbound calls. [Outbound Blacklist]
- Added support to upload/download MOH package from Web GUI. [Music On Hold]
- Added support to download custom prompts from Web GUI. [Download All Custom Prompt]
- Added option to configure prompt timeout in Dial By Name. [DIAL BY NAME]
- Added description field in ZeroConfig settings to configure Softkey/Line/MPK for GXP series phones. [PROVISIONING]
- Improved seamless transfer privilege control. [Seamless transfer privilege control]
- Added RTP Keep-alive support. [RTP Keep-alive]
- Added Email Send Log. [Email Send Log]
- Added support for Mitel simulation/protocol interfaces for PMS module. [PMS]
- Added support for up to 10 failover trunks. [Use Failover Trunk]

Firmware Version 1.0.12.19

- Added support for binding a mobile phone number to extension. [Mobile Phone Number]
- Added support OPUS codec.
- Added support call-barging privilege settings based on extensions. [Monitor privilege control]
- Added support for Seamless Transfer. [Seamless Transfer]
- Added support for Custom Call-Info for Auto Answer. [Custom Call-info for Auto Answer]
- Added support for DND Whitelist. [Do Not Disturb]
- Add the Field Description on Softkey, Line keys and MPK from Zero Config.
- Added support to select interval for numbers on Batch add extension. [Extension Incrementation]
- Added support for Batch Add CallerID Number. [CallerID Number]
- Added support for Search Extensions Using CallerID Name.
- Added support to Enable/Disable Inbound and Outbound Route. [Disable This Route/Disable This Route]
- Added support for Outbound Route Time Condition. [Time Condition]
- Added support for IPv6. [IPv6 Address]
- Added Support for MTU configurable. [MTU]
- Added support of CRM. [CRM]
- Added support for Custom Privilege in User Management. [Custom Privilege]

- Added Hotline support for FXS Extension. [Hotline]
- Added support for Separate Wakeup Service. [WAKEUP SERVICE]
- Added ability to provision phones from different network subnets using zero config. [Subnet Whitelist]
- One-key-dial is replaced by Speed Dial to support more than one digit. [SPEED DIAL]
- Added Append extension number in the end of DOD. [Direct Outward Dialing (DOD)]
- Support Japan CID NTT Detect.
- Added support for Ethernet Capture Auto Sync to SFTP Server. [Enable SFTP Data Sync]
- Added support for Ethernet Capture saved to External Storage Device. [Save to External Storage]
- Added support for Disable Extension Range on the Setup Wizard. [Setup Wizard]
- Added more support for Port Forwarding. [Port Forwarding]
- Added support for USB/SD Card Files Cleanup. [USB Disk/SD Card File Management]
- Added support for A Key Dial-up FXO. [key Dial-up FXO]
- Added support for ACIM Detect Option for FXO. [INTERFACE SETTINGS]
- Added support for some special character on the file name of FW. [Upgrading Via Local Upload]
- Added more search criteria of CDR. [CDR]
- Added support of “Allow outgoing calls if registration failure” for register trunks. [Allow outgoing calls if registration failure]
- Added support for music on hold playback from webGUI. [Music On Hold]
- Added support to enable delete recording files for user privilege. [Consumer]
- Added support disk Inode usage in “Storage Usage” page. [Space Usage]
- Added support for Ring Group/Call Queue/IVR Display Option for Caller ID. [Replace Display Name | Replace | Replace Caller ID]
- Added support for compatibility between backup package from UCM61xx and UCM62xx. [Backup/Restore]
- Added support to Detect talking users in conference. [CONFERENCE]
- Added Support of Mini Bar for PMS. [Mini Bar]

Firmware Version 1.0.11.27

- Added ability to sort extension status on Web GUI.
- Added one click enable / disable feature code. [Feature Codes]
- Added Uruguay time zone support. [Auto]
- Added distinctive ring tone support. [Configure Call Queue] [Configure IVR] [Create New SIP Extension]
- Added special character support for SFTP client account. [Data Sync]
- Added destination directory support for data sync. [Data Sync]
- Added ring group music on hold. [Configure Ring Group]
- Added CDR multi-email / time condition support. [CDR]
- Added blacklist anonymous call block. [Blacklist Configurations]
- Added ability to sort selected extension in Eventlist. [Event List]
- Added Banned User list for Web GUI login attempts. [Login Se]

- Added Email template support. [Email Templates]
- Added outbound route country restriction.
- Added external disk usage alert option. [Alert Events List]
- Added range IP input support for dynamic defense white list. [Dynamic Defense]
- Added blacklist support for Fail2ban. [Fail2ban]
- Added ability to reboot device from zero config page. [Discovery]
- Added GXP1628B template for zero config. [Model Update]
- Added PIN group support. [PIN Groups]
- Added PMS support. [PMS]
- Added call queue custom prompt support. [Configure Call Queue]
- Added call queue retry time support. [Configure Call Queue]
- Added Support for DHCP Client List. [DHCP Client List]

Firmware Version 1.0.0.7

- This is the initial version.

** Asterisk is a Registered Trademark of Digium, Inc*